

# DPU for Convolutional Neural Network v1.1

## *DPU IP Product Guide*

PG338 (v1.1) March 8, 2019



## Revision History

The following table shows the revision history for this document.

Section	Revision Summary
<b>03/08/2019 Version 1.1</b>	
<a href="#">Table 6: Reg_dpu_base_addr</a>	Updated description.
<a href="#">Figure 10: DPU Configuration</a>	Updated figure.
<a href="#">Build the PetaLinux Project</a>	Updated code.
<a href="#">Build the Demo</a>	Updated description.
<b>03/05/2019 Version 1.1</b>	
<a href="#">Chapter 6: Example Design</a>	Added chapter regarding the DPU targeted reference design.
<b>02/28/2019 Version 1.0</b>	
Initial release	N/A

# Table of Contents

Revision History .....	2
IP Facts .....	5
Introduction .....	5
Chapter 1: Overview .....	6
Introduction .....	6
Development Tools.....	7
Example System with DPU.....	8
DNNDK .....	8
Licensing and Ordering Information .....	9
Chapter 2: Product Specification.....	10
Hardware Architecture.....	10
DSP with Enhanced Utilization (DPU_EU) .....	11
Register Space.....	13
Interrupts.....	17
Chapter 3: DPU Configuration.....	18
Introduction .....	18
Configuration Options .....	19
DPU Performance on Different Devices .....	22
Performance of Different Models .....	22
I/O Bandwidth Requirements .....	23
Chapter 4: Clocking and Resets .....	24
Introduction .....	24
Clock Domain .....	24
Reference Clock Generation .....	25
Reset .....	27
Chapter 5: Development Flow .....	28
Customizing and Generating the Core in MPSoC .....	28
Chapter 6: Example Design.....	33

Introduction .....	33
Hardware Design Flow .....	36
Software Design Flow .....	39
Appendix A: Legal Notices .....	42
References .....	42
Please Read: Important Legal Notices .....	42

## Introduction

The Xilinx® Deep Learning Processor Unit (DPU) is a configurable engine dedicated for convolutional neural network. The computing parallelism can be configured according to the selected device and application. It includes a set of efficiently optimized instructions. It can support most convolutional neural networks, such as VGG, ResNet, GoogLeNet, YOLO, SSD, MobileNet, FPN, etc.

## Features

- One slave AXI interface for accessing configuration and status registers.
- One master interface for accessing instructions.
- Supports configurable AXI master interface with 64 or 128 bits for accessing data.
- Supports individual configuration of each channel.
- Supports optional interrupt request generation.
- Some highlights of DPU functionality include:
  - Configurable hardware architecture includes: B512, B800, B1024, B1152, B1600, B2304, B3136, and B4096
  - Configurable core number up to three
  - Convolution and deconvolution
  - Max pooling
  - ReLu and Leaky ReLu
  - Concat
  - Elementwise
  - Dilation
  - Reorg
  - Fully connected layer
  - Batch Normalization
  - Split

DPU IP Facts Table	
Core Specifics	
Supported Device Family	Zynq®-7000 SoC and UltraScale+™ MPSoC Family
Supported User Interfaces	Memory-mapped AXI interfaces
Resources	See <a href="#">Chapter 3: DPU Configuration</a>
Provided with Core	
Design Files	Encrypted RTL
Example Design	Verilog
Constraint File	Xilinx Design Constraints (XDC)
Supported S/W Driver	Included in PetaLinux
Tested Design Flows	
Design Entry	Vivado® Design Suite
Simulation	N/A
Synthesis	Vivado Synthesis
Supported	
Provided by Xilinx at the <a href="#">Xilinx Support web page</a>	

### Notes:


1. Linux OS and driver support information are available from DPU TRD or DNNDK.
2. If the requirement is on Zynq-7000 SoC, contact your local FAE.
3. For the supported versions of the tools, see the *Vivado Design Suite User Guide: Release Notes Installation, and Licensing (UG973)*.

## Introduction

The Xilinx® Deep Learning Processor Unit (DPU) is a programmable engine dedicated for convolutional neural network. The unit contains register configure module, data controller module, and convolution computing module. There is a specialized instruction set for DPU, which enables DPU to work efficiently for many convolutional neural networks. The deployed convolutional neural network in DPU includes VGG, ResNet, GoogLeNet, YOLO, SSD, MobileNet, FPN, etc.

The DPU IP can be integrated as a block in the programmable logic (PL) of the selected Zynq®-7000 SoC and Zynq UltraScale™+ MPSoC devices with direct connections to the processing system (PS). To use DPU, you should prepare the instructions and input image data in the specific memory address that DPU can access. The DPU operation also requires the application processing unit (APU) to service interrupts to coordinate data transfer.

The top-level block diagram of DPU is shown in Figure 1.

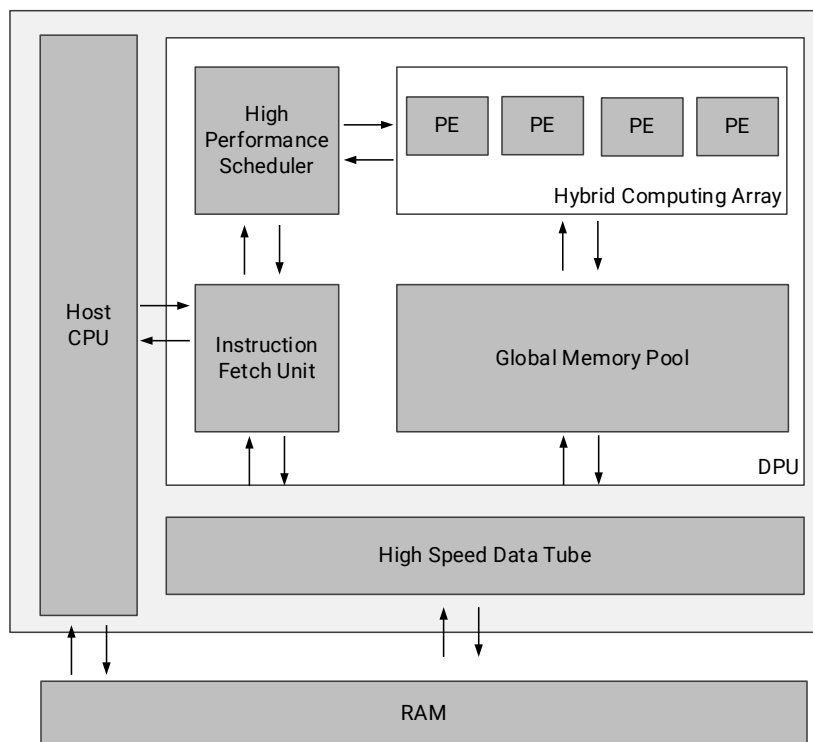

X22327-022019

**Figure 1: Top-Level Block Diagram**

## Development Tools

Use the Xilinx Vivado Design Suite to integrate DPU into your own project. Vivado Design Suite 2018.2 or later version is recommended. Previous versions of Vivado can also be supported. For requests, contact your sales representative.

### Device Resources

The DPU logic resource is optimized and scalable across Xilinx UltraScale+ MPSoC and Zynq-7000 devices. For the detailed resource utilization, refer to Chapter 3: DPU Configuration.


### How to Run DPU

The DPU operation depends on the driver which is included in the Xilinx Deep Neural Network Development Kit (DNNDK) toolchain.

You can download the free developer resources from the Xilinx website:

<https://www.xilinx.com/products/design-tools/ai-inference/ai-developer-hub.html#edge>

Refer to the *DNNDK User Guide* (UG1327) to obtain an essential guide on how to run a DPU with DNNDK tools. The basic development flow is shown in the following figure. First, use Vivado to generate the bitstream. Then, download the bitstream to the target board and install the DPU driver. For instructions on how to install the DPU driver and dependent libraries, refer to the *DNNDK User Guide* (UG1327).

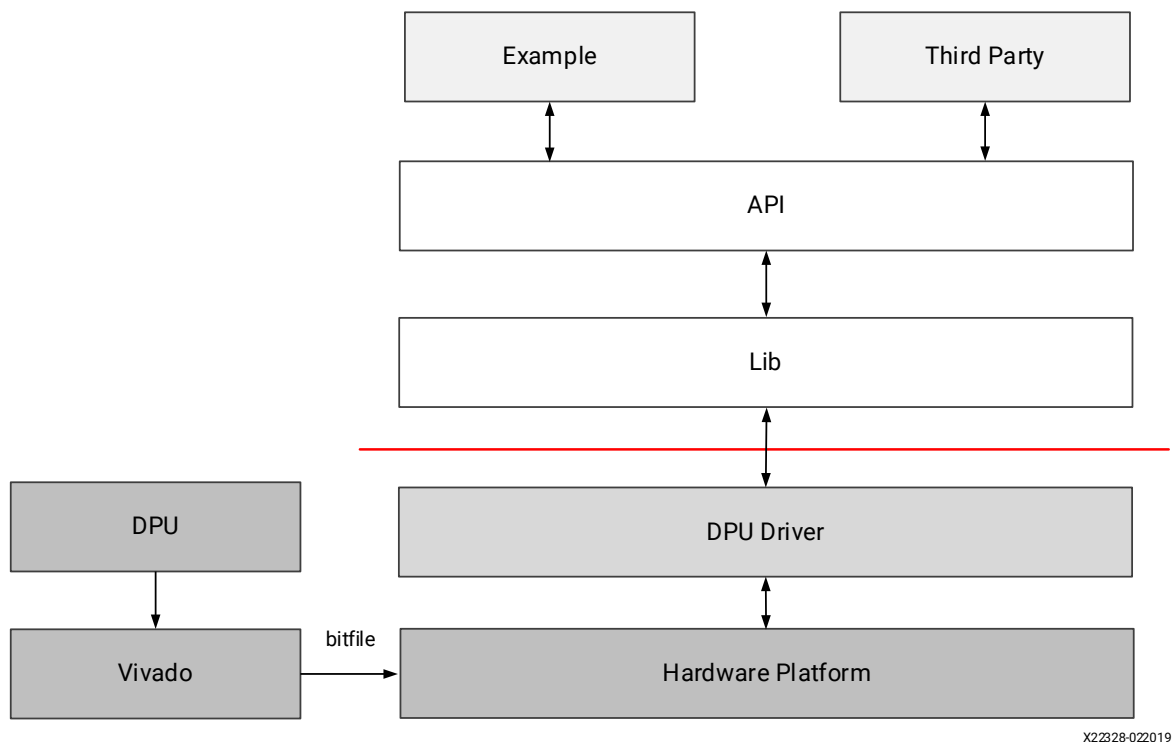


X2328-02019

Figure 2: Basic Development Flow

## Example System with DPU

The figure below shows an example system block diagram with the Xilinx UltraScale+ MPSoC using a camera input. DPU is integrated into the system through AXI interconnect to perform deep learning inference tasks such as image classification, object detection, and semantic segmentation.

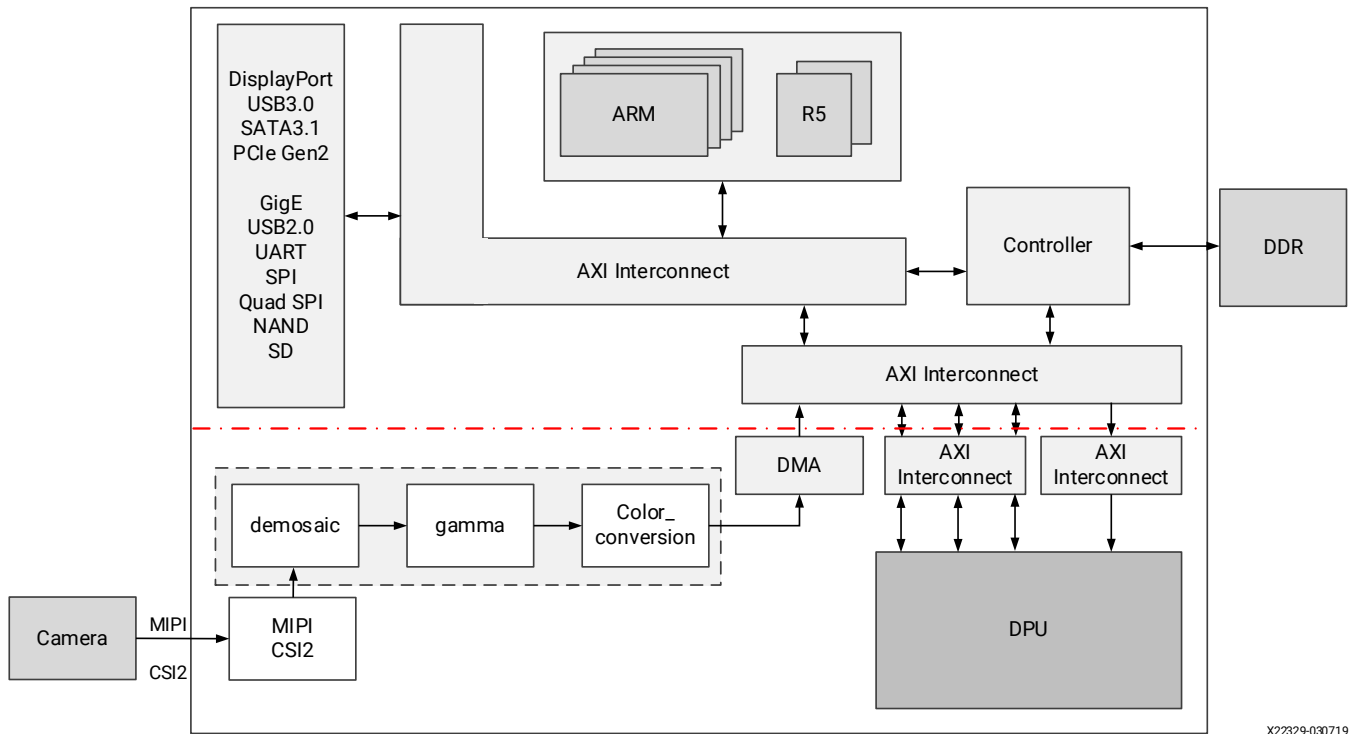

X22329-030719


**Figure 3: Example System with Integrated DPU**

## DNNDK

Deep Neural Network Development Kit (DNNDK) is a full-stack deep learning toolchain for inference with the DPU.


As shown in Figure 4, DNNDK is composed of Deep Compression Tool (DECENT), Deep Neural Network Compiler (DNNC), Neural Network Runtime (N2Cube), and DPU Profiler.



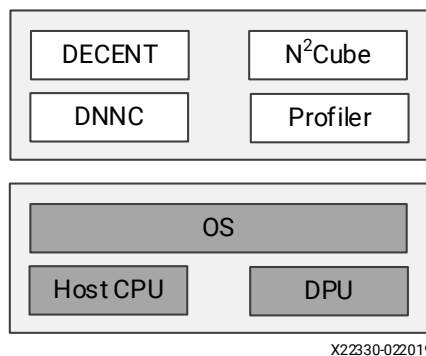

**Figure 4: DNNDK Toolchain**

The instructions of DPU are generated offline with DNNDK. Figure 5 illustrates the hierarchy of executing deep learning applications on the target hardware platform with DPU.

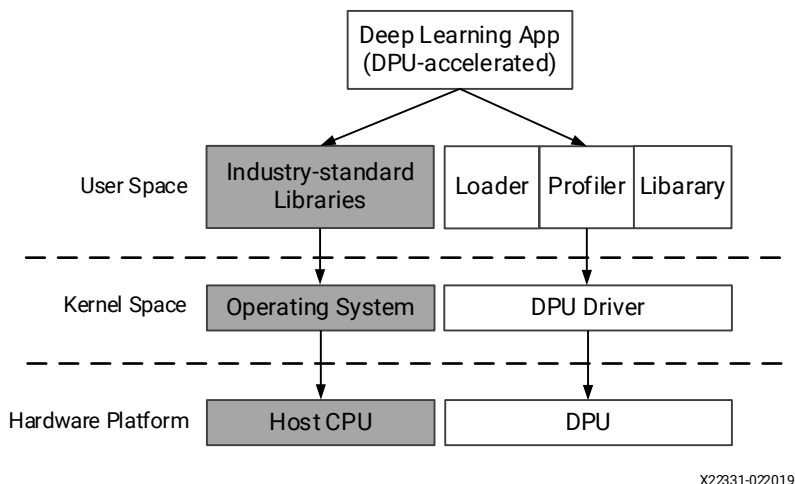

**Figure 5: Application Execution Hierarchy**

## Licensing and Ordering Information


This IP module is provided at no additional cost under the terms of the [Xilinx End User License](#).

Information about this and other IP modules is available at the [Xilinx Intellectual Property](#) page. For information on pricing and availability of other Xilinx IP modules and tools, contact your [local Xilinx sales representative](#).

### Hardware Architecture

The detailed hardware architecture of DPU is shown in Figure 6. After start-up, DPU fetches instructions from the off-chip memory and parses instructions to operate the computing engine. The instructions are generated by the DNNDK compiler where substantial optimizations have been performed.

To improve the efficiency, abundant on-chip memory in Xilinx® devices is used to buffer the intermediate data, input, and output data. The data is reused as much as possible to reduce the memory bandwidth. Deep pipelined design is used for the computing engine. Like other accelerators, the computational arrays (PE) take full advantage of the fine-grained building blocks, which includes multiplier, adder, accumulator, etc. in Xilinx devices.

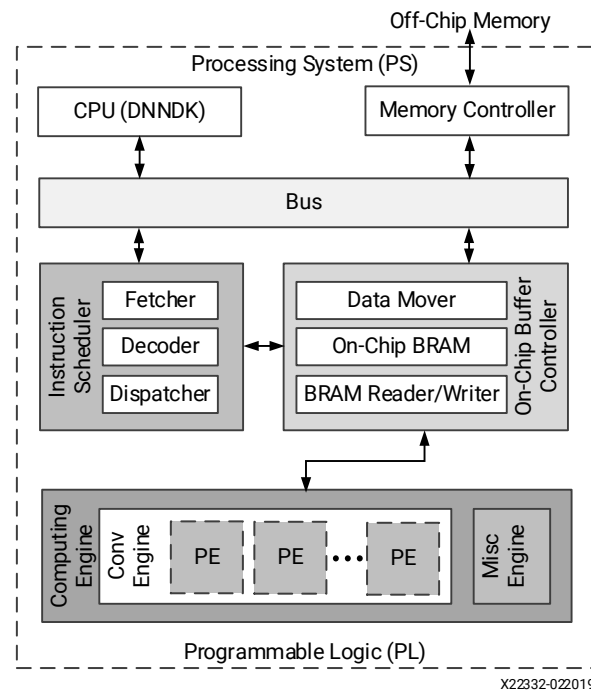

**Figure 6: DPU Hardware Architecture**

## DSP with Enhanced Utilization (DPU\_EU)

In the previous DPU version, the general logic and DSP slices work in the same clock domain, though technically the latter can run at a higher frequency. To enhance the utilization of DSP slices in DPU, the advanced DPU\_EU version was designed.

The EU in “DPU\_EU” means enhanced utilization of DSP slices. DSP Double Data Rate (DDR) technique is used to improve the performance achieved with the device. Therefore, two input clocks for DPU is needed, one for general logic, and the other for DSP slices. The difference between DPU and DPU\_EU is shown in Figure 7.

All DPU mentioned in this document refer to DPU\_EU, unless otherwise specified.

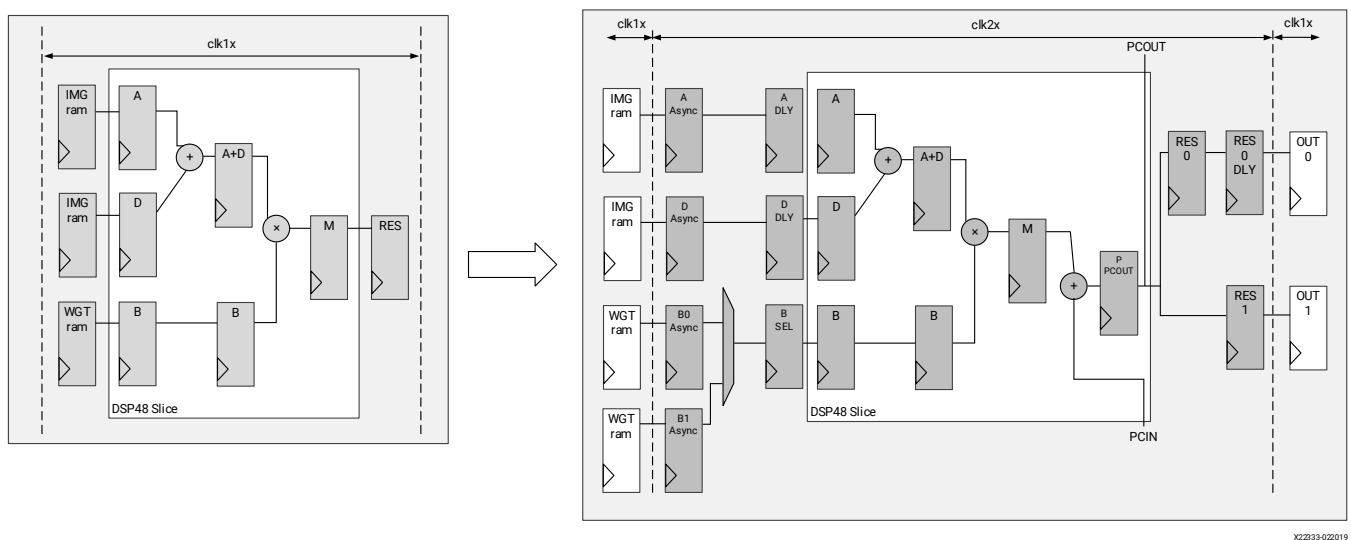


Figure 7: Difference between DPU and DPU\_EU

## Port Descriptions

The DPU top-level interfaces are shown in the following figure.

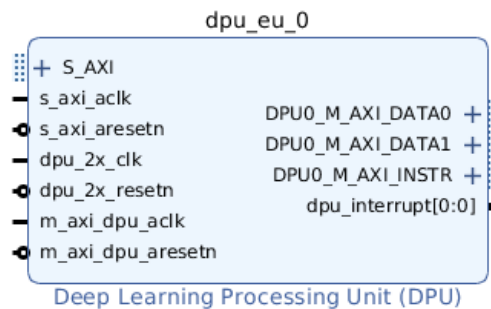


Figure 8: DPU\_EU IP Port

The DPU I/O signals are listed and described in Table 1.

**Table 1: DPU Signal Description**

Signal Name	Interface Type	Width	I/O	Description
S_AXI	Memory mapped AXI slave interface	32	I/O	32-bit Memory mapped AXI interface for registers.
s_axi_aclk	Clock	1	I	AXI clock input for S_AXI
s_axi_aresetn	Reset	1	I	Active-Low reset for S_AXI
dpu_2x_clk	Clock	1	I	Input clock used for DSP unit in DPU. The frequency is two times of m_axi_dpu_aclk.
dpu_2x_resetn	Reset	1	I	Active-Low reset for DSP unit
m_axi_dpu_aclk	Clock	1	I	Input clock used for DPU general logic.
m_axi_dpu_aresetn	Reset	1	I	Active-Low reset for DPU general logic
DPUx_M_AXI_INSTR	Memory mapped AXI master interface	32	I/O	32-bit Memory mapped AXI interface for instruction of DPU.
DPUx_M_AXI_DATA0	Memory mapped AXI master interface	128	I/O	128-bit Memory mapped AXI interface for DPU data fetch.
DPUx_M_AXI_DATA1	Memory mapped AXI master interface	128	I/O	128-bit Memory mapped AXI interface for DPU data fetch.
dpu_interrupt	Interrupt	1~3	O	Active-High interrupt output from DPU. The data width is decided by the DPU number.

**Notes:**

1. If only input ports are needed, you can edit the ports in the block diagram and declare at the port interface level.

## Register Space

The DPU IP implements registers in the programmable logic. Table 2 shows the DPU IP registers. These registers are accessible from the host CPU through the S\_AXI interface.

### *Reg\_dpu\_reset*

The reg\_dpu\_reset register controls the resets of all DPU cores integrated in the DPU IP. The lower three bits of this register control the reset of up to three DPU cores respectively. All the reset signals are active-High. The details of reg\_dpu\_reset is shown in Table 2.

**Table 2: Reg\_dpu\_reset**

Register	Address Offset	Width	Type	Description
Reg_dpu_reset	0x004	32	R/W	[0] – reset of DPU core 0 [1] – reset of DPU core 1 [2] – reset of DPU core 2

### *Reg\_dpu\_isr*

The reg\_dpu\_isr register represents the interrupt status of all DPU cores integrated in the DPU IP. The lower three bits of this register shows the interrupt status of up to three DPU cores respectively. The details of reg\_dpu\_irq is shown in Table 3.

**Table 3: Reg\_dpu\_isr**

Register	Address Offset	Width	Type	Description
Reg_dpu_isr	0x608	32	R	[0] – interrupt status of DPU core 0 [1] – interrupt status of DPU core 1 [2] – interrupt status of DPU core 2

## Reg\_dpu\_start

The reg\_dpu\_start register is the start signal for DPU core. There is one start register for each DPU core. The details of reg\_dpu\_start is shown in Table 4.

**Table 4: Reg\_dpu\_start**

Register	Address Offset	Width	Type	Description
Reg_dpu0_start	0x220	32	R/W	Control the start-up of DPU core0.
Reg_dpu1_start	0x320	32	R/W	Control the start-up of DPU core1.
Reg_dpu2_start	0x420	32	R/W	Control the start-up of DPU core2.

## Reg\_dpu\_instr\_addr

The reg\_dpu\_instr\_addr register is used to indicate the instruction address of DPU core. There are three registers which are reg\_dpu0\_instr\_addr, reg\_dpu1\_instr\_addr, and reg\_dpu2\_instr\_addr. The details of reg\_dpu\_instr\_addr are shown in Table 5.

**Table 5: Reg\_dpu\_instr\_addr**

Register	Address Offset	Width	Type	Description
Reg_dpu0_instr_addr	0x20c	32	R/W	[0] –The instruction start address in external memory for DPU core0.
Reg_dpu1_instr_addr	0x30c	32	R/W	[0] –The instruction start address in external memory for DPU core1.
Reg_dpu2_instr_addr	0x40c	32	R/W	[0] –The instruction start address in external memory for DPU core2.

## Reg\_dpu\_base\_addr

The reg\_dpu\_base\_addr register is used to indicate the address of input image and parameters for DPU calculation in the external memory. The width of dpu\_base\_addr is 40 bits so it can support an address space up to 1 TB. All registers are 32 bits wide, so two registers are required to represent a 40-bit wide dpu\_base\_addr. The reg\_dpu0\_base\_addr0\_l represents the lower 32 bits of the base address0 in DPU core0, and the reg\_dpu0\_base\_addr0\_h represents the upper eight bits of the base address0 in DPU core0.

There are eight groups of DPU base address for each DPU core and in total 24 groups of DPU base address for up to three DPU cores. The details of reg\_dpu\_base\_addr are shown in Table 6.

**Table 6: Reg\_dpu\_base\_addr**

Register	Address Offset	Width	Type	Description
Reg_dpu0_base_addr0_l	0x224	32	R/W	The lower 32 bits of the base address0 of DPU core0.
Reg_dpu0_base_addr0_h	0x228	32	R/W	The lower 8 bits in the register represent the upper 8 bits of the base address0 of DPU core0.
Reg_dpu0_base_addr1_l	0x22C	32	R/W	The lower 32 bits of the base address1 of DPU core0.
Reg_dpu0_base_addr1_h	0x230	32	R/W	The lower 8 bits in the register represent the upper 8 bits of the base address1 of DPU core0.
Reg_dpu0_base_addr2_l	0x234	32	R/W	The lower 32 bits of the base address2 of DPU core0.
Reg_dpu0_base_addr2_h	0x238	32	R/W	The lower 8 bits in the register represent the upper 8 bits of the base address2 of DPU core0.
Reg_dpu0_base_addr3_l	0x23C	32	R/W	The lower 32 bits of the base address3 of DPU core0.
Reg_dpu0_base_addr3_h	0x240	32	R/W	The lower 8 bits in the register represent the upper 8 bits of the base address3 of DPU core0.
Reg_dpu0_base_addr4_l	0x244	32	R/W	The lower 32 bits of the base address4 of DPU core0.
Reg_dpu0_base_addr4_h	0x248	32	R/W	The lower 8 bits in the register represent the upper 8 bits of the base address4 of DPU core0.
Reg_dpu0_base_addr5_l	0x24C	32	R/W	The lower 32 bits of the base address5 of DPU core0.
Reg_dpu0_base_addr5_h	0x250	32	R/W	The lower 8 bits in the register represent the upper 8 bits of the base address5 of DPU core0.
Reg_dpu0_base_addr6_l	0x254	32	R/W	The lower 32 bits of the base address6 of DPU core0.
Reg_dpu0_base_addr6_h	0x258	32	R/W	The lower 8 bits in the register represent the upper 8 bits of the base address6 of DPU core0.
Reg_dpu0_base_addr7_l	0x25C	32	R/W	The lower 32 bits of the base address7 of DPU core0.
Reg_dpu0_base_addr7_h	0x260	32	R/W	The lower 8 bits in the register represent the upper 8 bits of the base address7 of DPU core0.
Reg_dpu1_base_addr0_l	0x324	32	R/W	The lower 32 bits of the base address0 of DPU core1.
Reg_dpu1_base_addr0_h	0x328	32	R/W	The lower 8 bits in the register represent the upper 8 bits of the base address0 of DPU core1.
Reg_dpu1_base_addr1_l	0x32C	32	R/W	The lower 32 bits of the base address1 of DPU core1.
Reg_dpu1_base_addr1_h	0x330	32	R/W	The lower 8 bits in the register represent the upper 8 bits of the base address1 of DPU core1.
Reg_dpu1_base_addr2_l	0x334	32	R/W	The lower 32 bits of the base address2 of DPU core1.
Reg_dpu1_base_addr2_h	0x338	32	R/W	The lower 8 bits in the register represent the upper 8 bits of the base address2 of DPU core1.
Reg_dpu1_base_addr3_l	0x33C	32	R/W	The lower 32 bits of the base address3 of DPU core1.

Reg_dpu1_base_addr3_h	0x340	32	R/W	The lower 8 bits in the register represent the upper 8 bits of the base address3 of DPU core1.
Reg_dpu1_base_addr4_l	0x344	32	R/W	The lower 32 bits of the base address4 of DPU core1.
Reg_dpu1_base_addr4_h	0x348	32	R/W	The lower 8 bits in the register represent the upper 8 bits of the base address4 of DPU core1.
Reg_dpu1_base_addr5_l	0x34C	32	R/W	The lower 32 bits of the base address5 of DPU core1.
Reg_dpu1_base_addr5_h	0x350	32	R/W	The lower 8 bits in the register represent the upper 8 bits of the base address5 of DPU core1.
Reg_dpu1_base_addr6_l	0x354	32	R/W	The lower 32 bits of the base address6 of DPU core1.
Reg_dpu1_base_addr6_h	0x358	32	R/W	The lower 8 bits in the register represent the upper 8 bits of the base address6 of DPU core1.
Reg_dpu1_base_addr7_l	0x35C	32	R/W	The lower 32 bits of the base address7 of DPU core1.
Reg_dpu1_base_addr7_h	0x360	32	R/W	The lower 8 bits in the register represent the upper 8 bits of the base address7 of DPU core1.
Reg_dpu2_base_addr1_l	0x42C	32	R/W	The lower 32 bits of the base address1 of DPU core2.
Reg_dpu2_base_addr1_h	0x430	32	R/W	The lower 8 bits in the register represent the upper 8 bits of the base address1 of DPU core2.
Reg_dpu2_base_addr2_l	0x434	32	R/W	The lower 32 bits of the base address2 of DPU core2.
Reg_dpu2_base_addr2_h	0x438	32	R/W	The lower 8 bits in the register represent the upper 8 bits of the base address2 of DPU core2.
Reg_dpu2_base_addr3_l	0x43C	32	R/W	The lower 32 bits of the base address3 of DPU core2.
Reg_dpu2_base_addr3_h	0x440	32	R/W	The lower 8 bits in the register represent the upper 8 bits of the base address3 of DPU core2.
Reg_dpu2_base_addr4_l	0x444	32	R/W	The lower 32 bits of the base address4 of DPU core2.
Reg_dpu2_base_addr4_h	0x448	32	R/W	The lower 8 bits in the register represent the upper 8 bits of the base address4 of DPU core2.
Reg_dpu2_base_addr5_l	0x44C	32	R/W	The lower 32 bits of the base address5 of DPU core2.
Reg_dpu2_base_addr5_h	0x450	32	R/W	The lower 8 bits in the register represent the upper 8 bits of the base address5 of DPU core2.
Reg_dpu2_base_addr6_l	0x454	32	R/W	The lower 32 bits of the base address6 of DPU core2.
Reg_dpu2_base_addr6_h	0x458	32	R/W	The lower 8 bits in the register represent the upper 8 bits of the base address6 of DPU core2.
Reg_dpu2_base_addr7_l	0x45C	32	R/W	The lower 32 bits of the base address7 of DPU core2.
Reg_dpu2_base_addr7_h	0x460	32	R/W	The lower 8 bits in the register represent the upper 8 bits of the base address7 of DPU core2.




## Interrupts

Upon the completion of one DPU task, an interrupt from DPU occurs to signal the completion of the task. The active-High of the `Reg_dpu0_start` means the start of a DPU task for DPU core0. At the end of the DPU task, DPU sends an interrupt and one bit in the register `Reg_dpu_isr` is set to 1. The position of the active bit in the `Reg_dpu_isr` depends on the number of DPU cores. For example, when the DPU core1 finishes a task while the DPU core 0 is still working, the `Reg_dpu_isr` is set as 2, the lowest bit is 0, and the lower bit is 1.

The data width of `dpu_interrupt` is determined by the number of DPU cores. When the parameter of `DPU_NUM` is set to 2, it means the DPU IP is integrated with two DPU cores, and the data width of the `dpu_interrupt` signal is two bits. The lower bit represents the DPU core 0 interrupt and the higher bit represents the DPU core1 interrupt.

The interrupt connection between the DPU and PS is described in the Device Tree file, which indicates the interrupt number of DPU connected to the PS. The reference connection is shown as Figure 9.

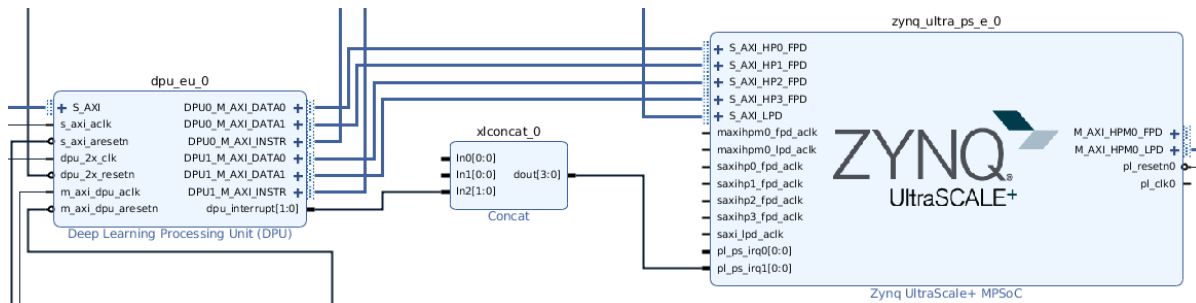

**Figure 9: Reference Connection for DPU Interrupt**

### Notes:

1. If DPU is working with the DNNDK package, you should connect the `dpu_interrupt` at the 10th bit in the `irq` signal of PS. For example, if the `DPU_NUM` is set as 2, the 2-bit `dpu_interrupt` should connect with `irq10` and `irq11` of PS.
2. `irq7~irq0` corresponds to `pl_ps_irq0[7:0]`.
3. `irq15~irq8` corresponds to `pl_ps_irq1[7:0]`.

### Introduction

The DPU IP provides some user-configurable parameters to optimize the resources or the support of different features. You can select different configurations to use on the preferred DSP slices, LUT, block RAM, and UltraRAM utilization based on the programmable logic resources that are allowed. There is also an option to determine how many DPU cores will be used.

The deep neural network features and the associated parameters supported by DPU is shown here.

**Table 7: Deep Neural Network Features and Parameters Supported by DPU**

Features	Description	
Convolution	Kernel Sizes	W: 1-16 H: 1-16
	Strides	W: 1-4 H:1-4
	Padding_w	1: kernel_w-1
	Padding_h	1: kernel_h-1
	Input Size	Arbitrary
	Input Channel	1 – 256*channel_parallel
	Output Channel	1 – 256*channel_parallel
	Activation	ReLU & LeakyReLU
	Dilation	dilation * input_channel <= 256 * channel_parallel && stride_w == 1 && stride_h == 1
Deconvolution	Kernel Sizes	W: 1-16 H: 1-16
	Stride_w	stride_w * output_channel <= 256 * channel_parallel
	Stride_h	Arbitrary
	Padding_w	1: kernel_w-1
	Padding_h	1: kernel_h-1
	Input Size	Arbitrary
	Input Channel	1 – 256 * channel_parallel
	Output Channel	1 – 256 * channel_parallel
	Activation	ReLU & LeakyReLU
Max Pooling	Kernel Sizes	W: 1-16 H: 1-16
	Strides	W: 1-4 H:1-4
	Padding	W: 1-4 H: 1-4

Element Wise	Input channel	1 – 256*channel_parallel
	Input size	arbitrary
Concat	Output channel	1 – 256*channel_parallel
Reorg	Strides	stride * stride * input_channel <= 256 * channel_parallel
FC	Input_channel	Input_channel <= 2048*channel_parallel
	Output_channel	Arbitrary


**Notes:**

1. The parameter channel\_parallel is determined by the DPU configuration. For example, the channel\_parallel of DPU-B1152 is 12, the channel\_parallel of DPU-B4096 is 16.

## Configuration Options

You can configure the DPU with some predefined options which includes DPU core number, DPU convolution architecture, DSP cascade, DSP usage, and UltraRAM usage. These options enable the DPU IP configurable in terms of DSP slice, LUT, block RAM, and UltraRAM utilization. Figure 10 shows the DPU configuration.

### Deep Learning Processing Unit (DPU)

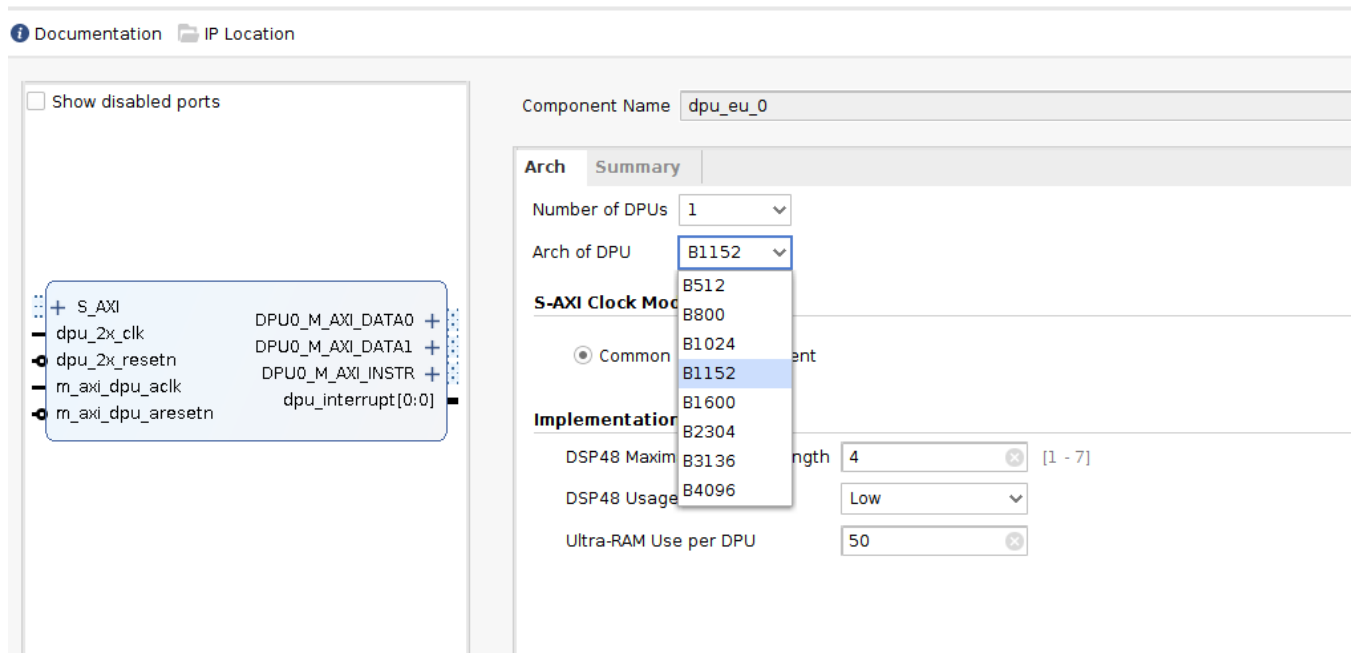

**Figure 10: DPU Configuration**

## DPU Core Number

You can use up to three DPU cores can be included in one IP. Multiple DPU cores can be used to achieve higher performance. Consequently, it consumes more programmable logic resource.

If the requirement is to integrate more than three cores, send the request to a Xilinx sales representative.

## DPU Convolution Architecture

The DPU IP can be configured with different convolution architectures which is related to the parallelism of the convolution unit. The optional architecture for DPU IP includes B512, B800, B1024, B1152, B1600, B2304, B3136, and B4096.

There are three dimensions of parallelism in the DPU convolution architecture - pixel parallelism, input channel parallelism, and output channel parallelism. The input channel parallelism is always equal to the output channel parallelism. The different convolution architecture requires different programmable logic resource. The larger convolution architecture can achieve higher performance with more resources. The parallelism for different convolution architecture is listed in Table 8.

**Table 8: Parallelism for Different Convolution Architecture**

Convolution Architecture	Pixel Parallelism (PP)	Input Channel Parallelism (ICP)	Output Channel Parallelism (OCP)	Peak Ops (operations/per clk)
B512	4	8	8	512
B800	4	10	10	800
B1024	8	8	8	1024
B1152	4	12	12	1150
B1600	8	10	10	1600
B2304	8	12	12	2304
B3136	8	14	14	3136
B4096	8	16	16	4096

### Notes:

1. In each clock cycle, the convolution array finishes a multiplication and an accumulation, which are two operations. So, the peak operations per cycle is equal to  $PP \times ICP \times OCP \times 2$ .

## DSP Cascade

You can select the maximal length of DSP48E slice cascade chain. Typically, the larger cascade length indicates less logic resources, but it might lead to worse timing. The smaller cascade length might use more fabric resources which is not economical for small devices. Xilinx recommends selecting the mid-value, which is 4, in the first iteration and adjust the value if the timing is not met.

## DSP Usage


You can select whether DSP48E slices are used for the accumulation in the DPU convolution module. If the low DSP usage is selected, the DPU IP will use DSP slices for multiplication only in the convolution. In the high DSP usage mode, the DSP slice will be used for both multiplication and accumulation. As a result, the high DSP usage consumes more DSP slices and less LUT. The difference of logic utilization between high and low DSP usage is shown in Table 9. The data is tested on the Xilinx ZCU102 platform without Depthwise Conv, Average Pooling, Relu6, and Leaky Relu features.

**Table 9: Resources of Different DSP Usage**

High DSP Usage					Low DSP Usage				
Arch	LUT	Register	BRAM	DSP	Arch	LUT	Register	BRAM	DSP
B512	20177	31782	69.5	98	B512	20759	33572	69.5	66
B800	20617	35065	87	142	B800	21050	33752	87	102
B1024	27377	46241	101.5	194	B1024	29155	49823	101.5	130
B1152	28698	46906	117.5	194	B1152	30043	49588	117.5	146
B1600	30877	56267	123	282	B1600	33130	60739	123	202
B2304	34379	67481	161.5	386	B2304	37055	72850	161.5	290
B3136	38555	79867	203.5	506	B3136	41714	86132	203.5	394
B4096	40865	92630	249.5	642	B4096	44583	99791	249.5	514

## UltraRAM

Some Zynq MPSoC devices have both block RAM (BRAM) and UltraRAM as the on-chip memory. The DPU IP uses BRAM by default, however, you can use UltraRAM to replace BRAM according to the available memory resources. Note the number filled in the UltraRAM row in Figure 10 might not be the actual utilization, because the minimum cache unit in DPU needs two or three UltraRAM depending on the different DPU architecture. The final utilization is shown in Figure 11.

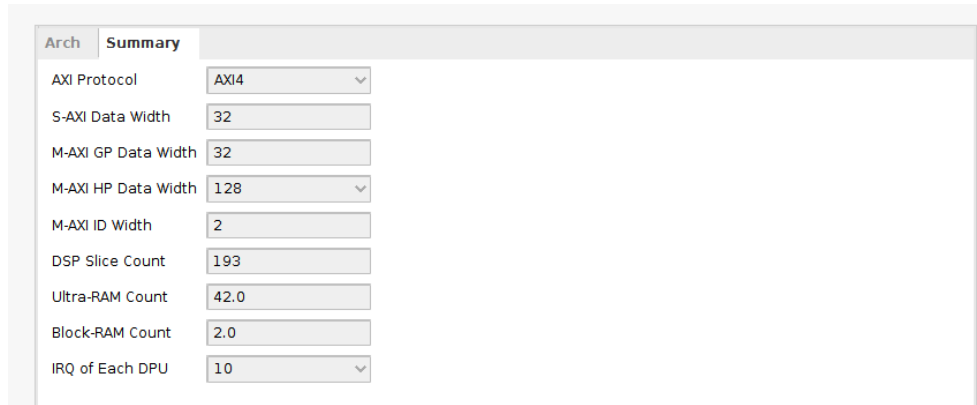

Arch	Summary
AXI Protocol	AXI4
S-AXI Data Width	32
M-AXI GP Data Width	32
M-AXI HP Data Width	128
M-AXI ID Width	2
DSP Slice Count	193
Ultra-RAM Count	42.0
Block-RAM Count	2.0
IRQ of Each DPU	10

**Figure 11: Summary Page of DPU Configuration**

## DPU Performance on Different Devices

Table 10 shows the peak performance of the DPU on different devices.

**Table 10: DPU\_EU Performance (GOPs) on Different Device**

Device	DPU Configuration	Frequency (MHz)	Peak Performance
Z7020	B1152x1	200	230 Gops
ZU2	B1152x1	370	426 Gops
ZU3	B2304x1	370	852 Gops
ZU5	B4096x1	350	1.4 Tops
ZU7EV	B4096x2	330	2.7 Tops
ZU9	B4096x3	333	4.1 Tops

## Performance of Different Models

In this section, the performance of several models is given for reference. The result was measured on the Xilinx ZCU102 board with 3x B4096\_EU cores at 333 MHz (DSP slices ran at 666 MHz) and DNNDK v2.08, shown in Table 11.

**Table 11: Performance of Different Models**

Network Model	Workload (Gops per image)	Input Image Resolution	Frame per second (FPS)
Inception-v1	3.2	224*224	405
ResNet50	7.7	224*224	175
SqueezeNet	0.698	224*224	1048
Tiny-YOLO	6.97	448*448	220
YOLO-V2	82.5	640*640	24
Pruned YOLO-V2	18.4	640*640	120
YOLO-V3	53.7	512*256	43
Pruned YOLO-V3-	4	512*256	115

**Notes:**

1. The pruned models were generated by the Xilinx pruning tool.

## I/O Bandwidth Requirements

When different neural networks run in the DPU, the I/O bandwidth requirement is different. Even the I/O bandwidth requirement of different layers in one neural network are different. The I/O bandwidth requirements for some neural networks, averaged by layer have been tested with one DPU core running at full speed. The peak and average I/O bandwidth requirements of three different neural networks are shown in Table 12. The table only shows the number of two commonly used DPU (B1152 and B4096). Note that when multiple DPU cores run in parallel, each core might not be able to run at full speed due to the limitation of I/O bandwidth.

**Table 12: I/O Bandwidth Requirements for DPU-B1152 and DPU-B4096**

Network Model	DPU-B1152		DPU-4096	
	Peak (MB/s)	Average (MB/s)	Peak (MB/s)	Average (MB/s)
Inception-v1	1704	890	4626	2474
Resnet50	2052	1017	5298	3132
SSD	1516	684	5724	2049
Pruned YOLO-V3	2076	986	6453	3290


If one DPU core needs to run at full speed, the peak I/O bandwidth required shall be met. The I/O bandwidth is mainly used for accessing data though the AXI master interfaces (Dpu0\_M\_AXI\_DATA0 and Dpu0\_M\_AXI\_DATA1).

### Introduction

There are three clock domains in the DPU IP: the register, the data controller, and the computation unit. The three input clocks can be configured by you depending on the requirements. Therefore, the corresponding reset for the three input clocks shall be configured correctly.

### Clock Domain

Figure 12 shows the three clock domains.

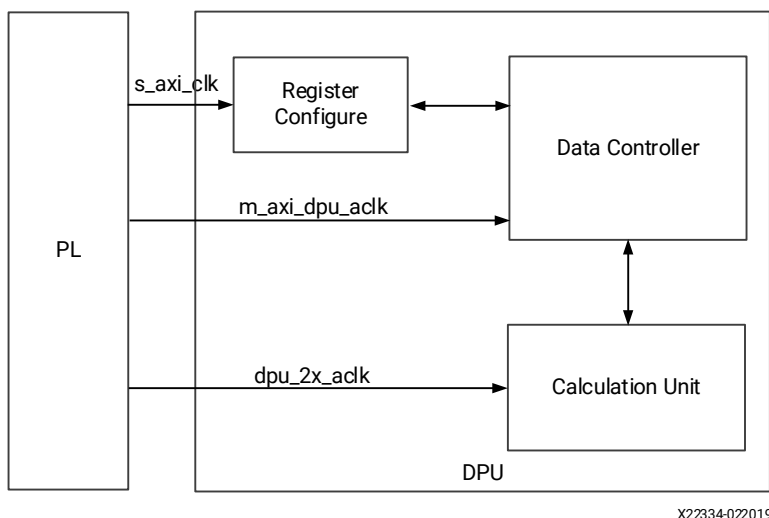

**Figure 12: Clock Domain in DPU**

### Register Clock

The input `s_axi_clk` is used for the register configure module. This module receives the DPU configure data through the S\_AXI interface and the related clock of S\_AXI is `s_axi_clock`. The register for DPU configure is updated at a very low frequency and most of those registers are configured at the start of a task. Xilinx recommends that the frequency of the `s_axi_clock` is set as 100 MHz.



## Data Controller Clock


The primary function of the data controller module is to schedule the data flow in the DPU IP. The data controller module works with `m_axi_dpu_aclk`. The data transfer between DPU and external memory happens in the data controller clock domain, so `m_axi_dpu_aclk` is also the AXI clock for the AXI\_MM master interface in the DPU IP. You should connect `m_axi_dpu_aclk` with the AXI\_MM master clock.

## Computation Clock

The DSP slides in the computation unit module are in the `dpu_2x_clk` domain, which doubles the clock frequency of the data controller module. Therefore, the frequency of the `dpu_2x_clk` should be twice the `m_axi_dpu_aclk`. Furthermore, the two related clocks must be edge-aligned.

## Reference Clock Generation

There are three input clocks for the DPU in which the frequency of the `dpu_2x_clk` should be two times the `m_axi_dpu_aclk` and the two clocks must be synchronous to meet the timing closure. The recommended circuit design is shown in Figure 13.

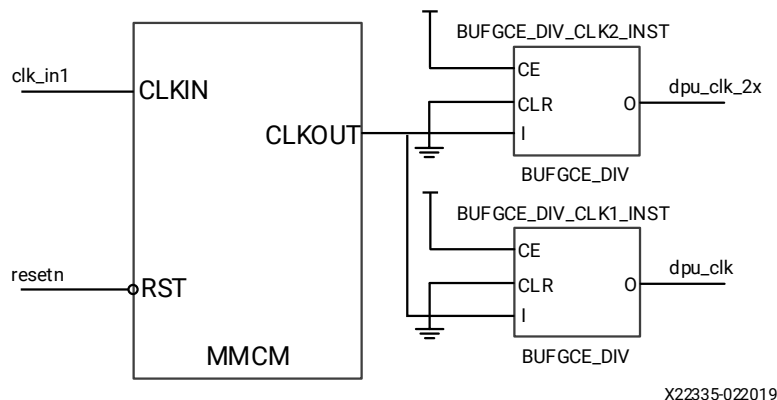

**Figure 13: Reference Circuit**

You can instantiate an MMCM and two BUFGCE\_DIV to design this circuit. The frequency of `clk_in1` is arbitrary and the frequency of output clock `CLKOUT` in the MMCM should be the frequency of `dpu_clk_2x`. The BUFGCE\_DIV\_CLK1\_INST obtains the clock of whichever frequency is half of the `dpu_clk_2x`. The `dpu_clk` and `dpu_clk_2x` are generated by the same clock, so they are synchronous. The two BUFGCE\_DIVs enable the skew between the two clocks to significantly decrease, which helps with timing closure.

## Using Clock Wizard

You can instantiate a clock wizard IP to generate the above circuit. In this reference design, the frequency of `s_axi_aclk` is set to 100 MHz and `m_axi_dpu_aclk` is set to 333 MHz, which is also the maximum frequency of AXI-HP interfaces in Xilinx UltraScale+ MPSoC devices. Therefore, the frequency

of the dpu\_2x\_clk should be set to 666 MHz. The recommended configuration of the Clocking Options tab is shown in Figure 14. Note that the parameter of the Primitive must be set to Auto.

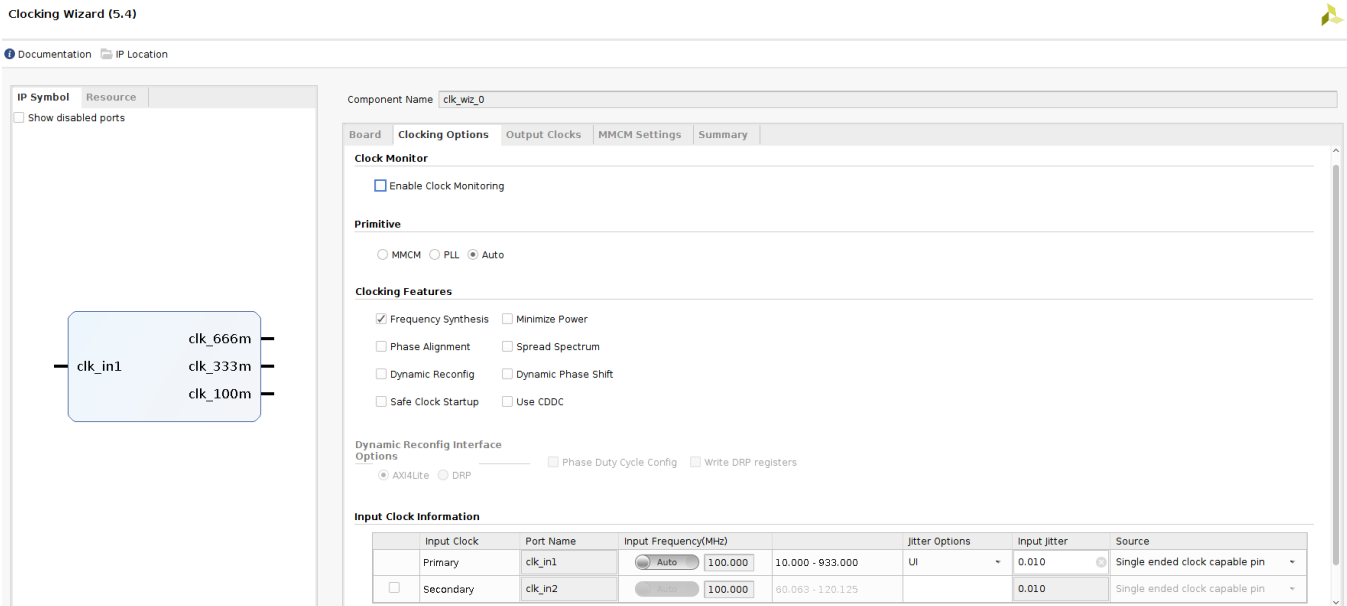


Figure 14: Recommended Clocking Options of Clock Wizard

## Matched Routing

Select the Matched Routing for the m\_axi\_dpu\_aclk and dpu\_2x\_clk in the Output Clocks tab of the Clock Wizard IP. When the Matched Routing setting enables the two clocks that are both generated through a BUFGCE\_DIV, the skew between the two clocks has significantly decreased. The related configuration is shown in Figure 15.


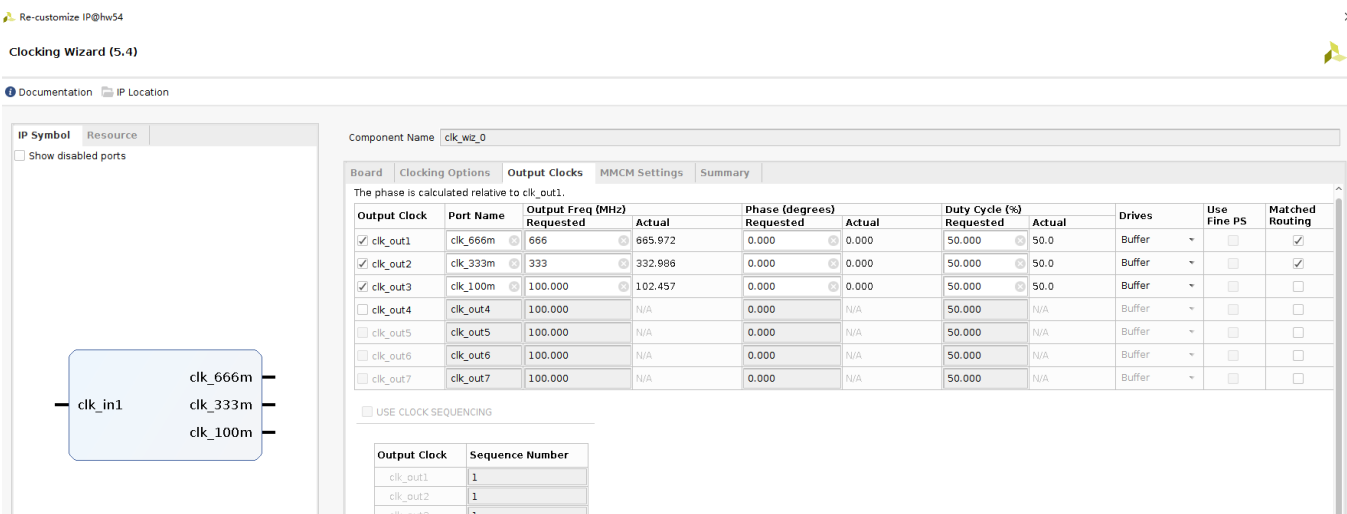


Figure 15: Matched Routing in Clock Wizard

## Reset

There are three input clocks for the DPU IP, each of which has a corresponding reset. You must guarantee each pair of clocks and resets is generated in a synchronous clock domain. If the related clocks and resets are not matched, the DPU might not work properly. A recommended solution is to instantiate a Processor System Reset IP to generate a matched reset for each clock. The reference design is shown in Figure 16.

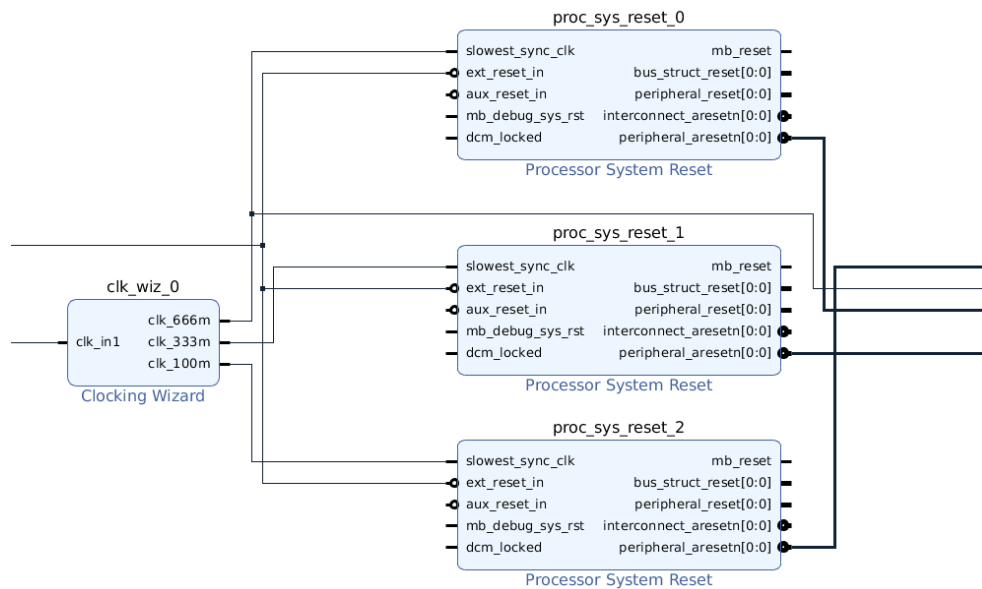

**Figure 16: Reference Design for Resets**


### Customizing and Generating the Core in MPSoC

The following sections describe the development flow on how to use the DPU IP with the Vivado® Design Suite:

- [Add DPU IP into Repository](#)
- [Add DPU IP into Block Design](#)
- [Configure DPU Parameters](#)
- [Connect DPU with a Processing System in the Xilinx SoC](#)
- [Assign Register Address for DPU](#)
- [Generate Bitstream](#)
- [Generate BOOT.BIN](#)

#### Add DPU IP into Repository

In the Vivado GUI, click **Project Manager > IP Catalog**. In the IP Catalog tab, right-click and select **Add Repository** (Figure 17), then select the location of the DPU IP. This will appear in the IP Catalog page (Figure 18).

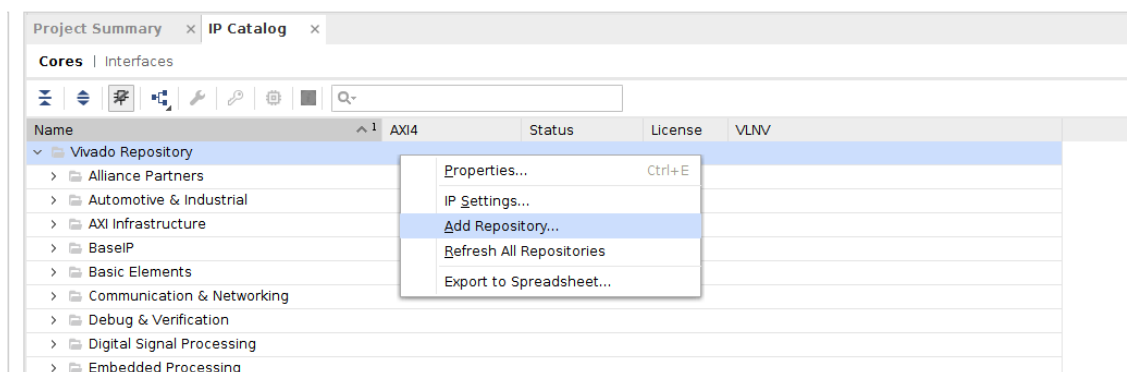

**Figure 17: Add Repository**

Project Summary x IP Catalog x				
Cores   Interfaces				
Name	AXI4	Status	License	VLNV
User Repository (/home/wud/0pxj/dpu_eu_v0_0_53_6)				
Deep Learning Processing Unit (DPU)				
Vivado Repository				
Alliance Partners				
Automotive & Industrial				
AXI Infrastructure				
BaseIP				
Basic Elements				
Communication & Networking				
Debug & Verification				
Digital Signal Processing				

Figure 18: DPU IP in Repository

## Add DPU IP into Block Design

Search DPU IP in the block design interface and add DPU IP into the block design. The procedure is shown in Figure 19 and Figure 20.

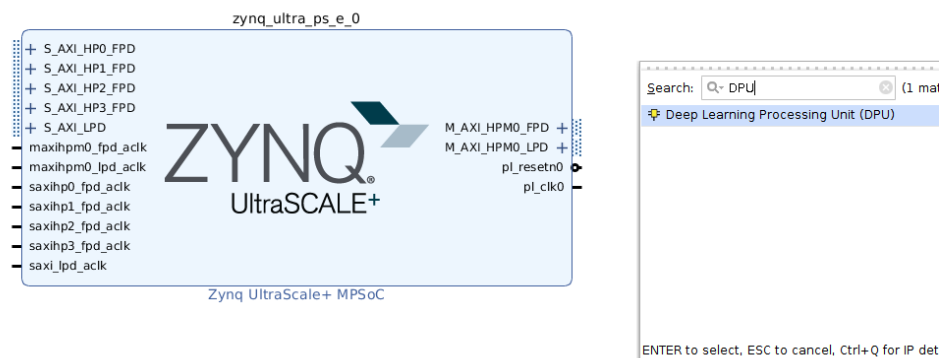


Figure 19: Search DPU IP

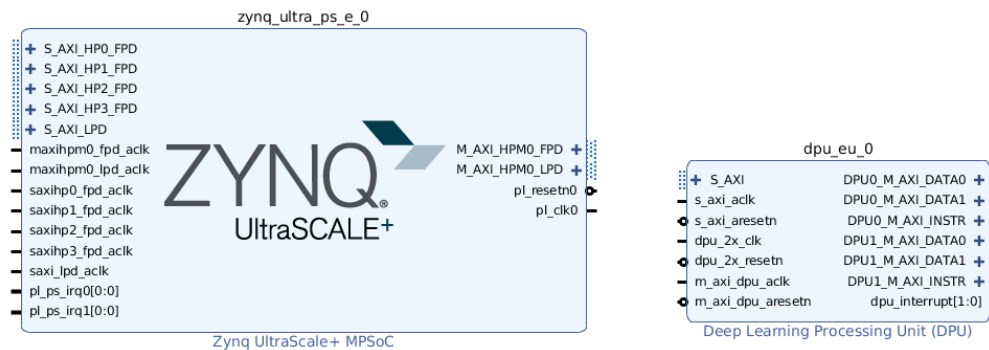


Figure 20: Add DPU IP into Block Design

## Configure DPU Parameters

You can configure the DPU IP as shown in Figure 21. The details about these parameters can be found in Chapter 3: DPU Configuration.

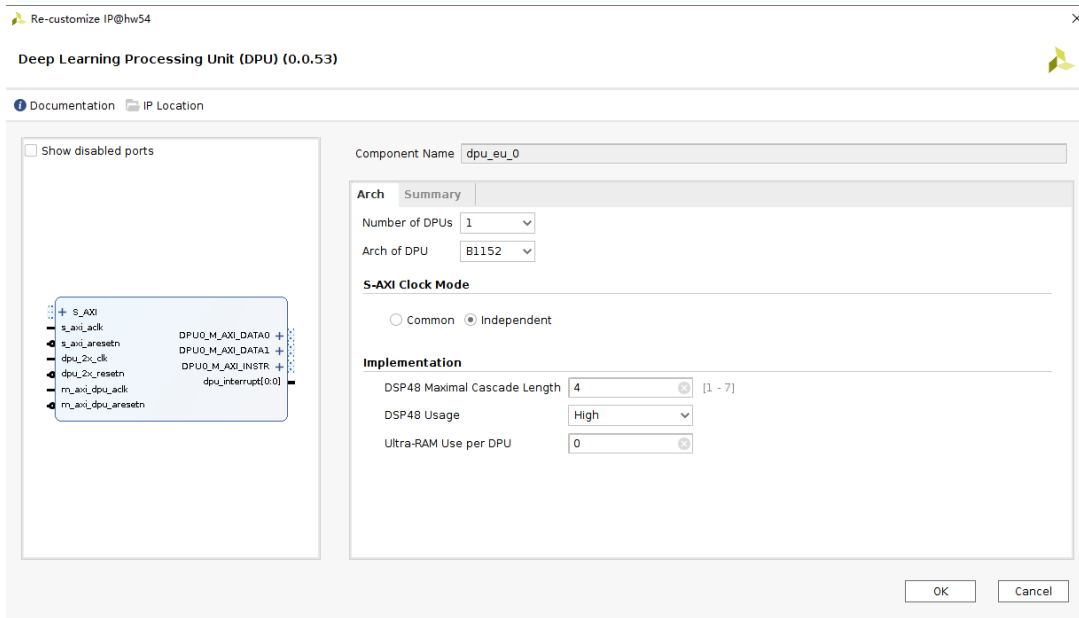


Figure 21: Configure DPU

## Connect DPU with a Processing System in the Xilinx SoC

No matter how many DPU cores are configured, there is only one slave interface in the DPU IP. Each DPU core has three master interfaces, one for instruction fetch and the other two for data fetch. The number of master interfaces in the DPU IP depends on the DPU\_NUM parameter.

You can connect the DPU to a processing system (PS) with any kind of interconnections. You must ensure the DPU can correctly access the DDR memory space. Generally, an AXI data transaction passes an Interconnect IP, the delay of data transaction will increase. The delay of the data transmission between the DPU and the Interconnect will reduce the DPU performance. Therefore, Xilinx recommends that each data fetch master interface in the DPU connects to the PS through a direct connection rather than through an AXI Interconnect IP. The reference connection between the DPU and PS in the Xilinx UltraScale+ MPSoC is shown as Figure 22.

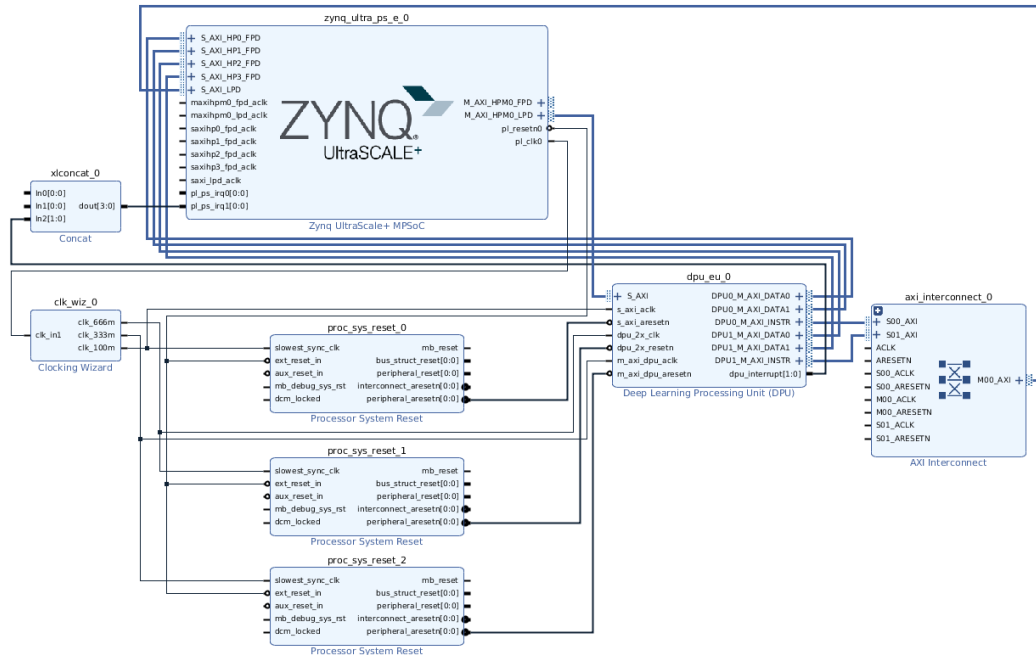


Figure 22: Connect DPU with PS of MPSoC

## Assign Register Address for DPU

When the DPU connection is complete, the next step is to assign the register address of the AXI slave interface. The minimum space needed for the DPU is 16 MB. The DPU slave interface can be assigned to any starting address accessible by the host CPU.

**Note:** When building a custom system with the pre-built Linux environment in the DNNDK package, the DPU slave interface must be connected to the M\_AXI\_HP0\_LPD PS Master and the DPU base address must be set to 0x8F00\_000 with a range of 16 MB. The DPU register address in the driver and device tree file in the DNNDK package is fixed at 0x8F00\_0000. If the address in the driver and device tree file is the same as the address assigned in Vivado, you can connect the DPU slave interface to any master interface in the PS and allocate any address for the DPU.

The reference address assignments of the DPU with the DNNDK package are shown in Figure 23.

Cell	Slave Interface	Base Name	Offset Address	Range	High Address
zynq_ultra_ps_e_0					
Data (40 address bits : 0x00A0000000 [ 256M ] ,0x0400000000 [ 4G ] ,0x1000000000 [ 224G ] ,0x0080000000 [ 512M ] )					
dpu_eu_0	S_AXI	reg0	0x00_8F00_0000	16M	0x00_8FFF_FFFF
dpu_eu_0					
DPU0_M_AXI_GP0 (40 address bits : 1T)					
zynq_ultra_ps_e_0	S_AXI_LPD	LPD_DDR_LOW	0x00_0000_0000	2G	0x00_7FFF_FFFF
zynq_ultra_ps_e_0	S_AXI_LPD	LPD_LPS_OCM	0x00_FF00_0000	16M	0x00_FFFF_FFFF
DPU0_M_AXI_HP0 (40 address bits : 1T)					
zynq_ultra_ps_e_0	S_AXI_HP0_FPD	HP0_DDR_LOW	0x00_0000_0000	2G	0x00_7FFF_FFFF
zynq_ultra_ps_e_0	S_AXI_HP0_FPD	HP0_LPS_OCM	0x00_FF00_0000	16M	0x00_FFFF_FFFF
DPU0_M_AXI_HP1 (40 address bits : 1T)					
zynq_ultra_ps_e_0	S_AXI_HP1_FPD	HP1_DDR_LOW	0x00_0000_0000	2G	0x00_7FFF_FFFF
zynq_ultra_ps_e_0	S_AXI_HP1_FPD	HP1_LPS_OCM	0x00_FF00_0000	16M	0x00_FFFF_FFFF
DPU1_M_AXI_GP0 (40 address bits : 1T)					
zynq_ultra_ps_e_0	S_AXI_LPD	LPD_DDR_LOW	0x00_0000_0000	2G	0x00_7FFF_FFFF
zynq_ultra_ps_e_0	S_AXI_LPD	LPD_LPS_OCM	0x00_FF00_0000	16M	0x00_FFFF_FFFF
DPU1_M_AXI_HP0 (40 address bits : 1T)					
zynq_ultra_ps_e_0	S_AXI_HP2_FPD	HP2_DDR_LOW	0x00_0000_0000	2G	0x00_7FFF_FFFF
zynq_ultra_ps_e_0	S_AXI_HP2_FPD	HP2_LPS_OCM	0x00_FF00_0000	16M	0x00_FFFF_FFFF
DPU1_M_AXI_HP1 (40 address bits : 1T)					
zynq_ultra_ps_e_0	S_AXI_HP3_FPD	HP3_DDR_LOW	0x00_0000_0000	2G	0x00_7FFF_FFFF
zynq_ultra_ps_e_0	S_AXI_HP3_FPD	HP3_LPS_OCM	0x00_FF00_0000	16M	0x00_FFFF_FFFF

Figure 23: Assign DPU Address

## Generate Bitstream

Click **Generate Bitstream** in Vivado shown in Figure 24.

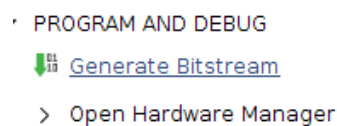


Figure 24: Generate Bitstream

## Generate BOOT.BIN

You can use the Vivado SDK or PetaLinux to generate the BOOT.BIN file. For boot image creation using the Vivado SDK, refer to the *Zynq UltraScale+ MPSoC Embedded Design Tutorial* (UG1209). For PetaLinux, use the *PetaLinux Tools Documentation Reference Guide* (UG1144).



---

### Introduction

The Xilinx<sup>®</sup> DPU targeted reference design (TRD) provides instructions on how to use DPU with a Xilinx SoC platform to build and run deep neural network applications. The TRD uses the Vivado<sup>®</sup> IP integrator flow for building the hardware design and Xilinx Yocto PetaLinux flow for software design. The Zynq<sup>®</sup> UltraScale+<sup>™</sup> MPSoC platform is used to create this TRD. It can also be used for a Zynq-7000 SoC platform with the same flow.


This appendix describes the architecture of the reference design and provides a functional description of its components. It is organized as follows:

- [DPU TRD Overview](#) provides a high-level overview of the Zynq UltraScale+ MPSoC device architecture, the reference design architecture, and a summary of key features.
- [Hardware Design Flow](#) gives an overview of how to use Xilinx Vivado Design Suite to generate the reference hardware design.
- [Software Design Flow](#) describes the design flow of project creation in the PetaLinux environment.
- [Demo Execution](#) describes how to run the application created by the TRD.

### **DPU TRD Overview**

The TRD creates an image classification application running a popular deep neural network model, Resnet50, on a Xilinx UltraScale+ MPSoC device. The overall functionality of the TRD is partitioned between the Processing System (PS) and Programmable Logic (PL), where DPU resides for optimal performance.

The following figure shows the TRD block diagram. The host communicates with the ZCU102 board through Ethernet or UART port. The input images for a TRD are stored in an SD card. When the TRD is running, the input data is loaded into DDR memory, then DPU reads the data from the DDR memory and writes the results back to DDR memory. The result displays on the host screen from the APU through Ethernet or UART port.

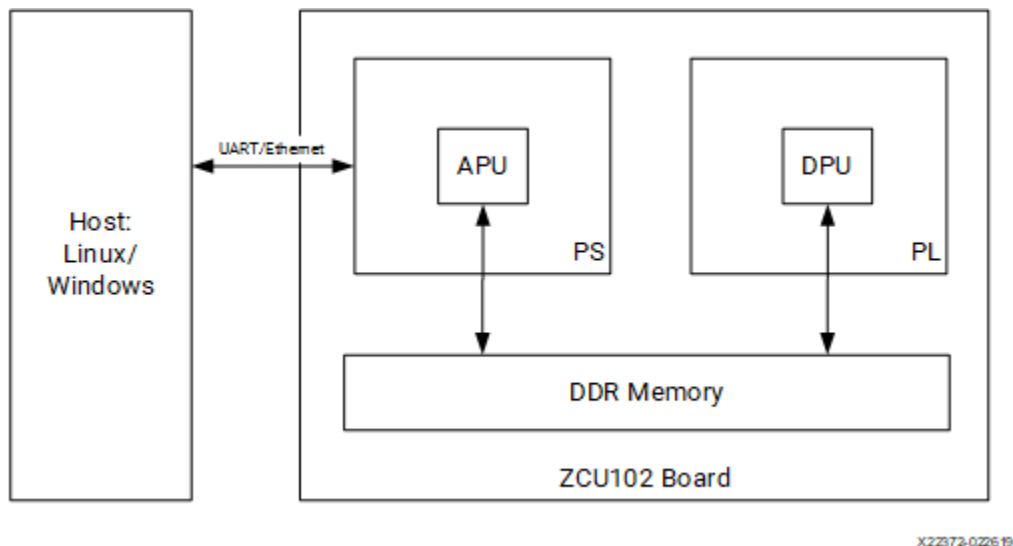

**Figure 25: DPU TRD Overview**

The application code used in the DPU TRD is from `main.cc` in the Resnet50 example in the DNNDK package. For more information about the DNNDK package, refer to the *DNNDK User Guide* ([UG1327](#)).

## Requirements

The following summarizes the requirements of the TRD.

Target platforms:

- ZCU102 evaluation board, production silicon. See *ZCU102 Evaluation Board User Guide* ([UG1182](#)).

Xilinx tools:

- Vivado Design Suite 2018.2
- PetaLinux 2018.2

Hardware peripherals:


- SD
- Ethernet
- UART

Linux or Windows host system:

- Serial terminal
- Network terminal

## Design Files

Design files are in the following directory structure.

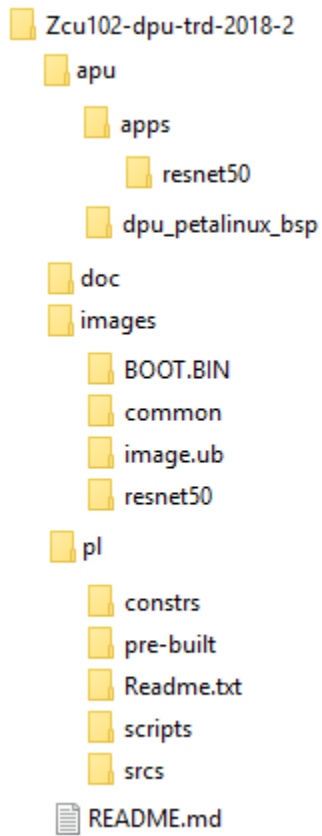

**Figure 26: Directory Structure**

**Note:** DPU\_IP is in the `pl/srcs/dpu_ip/` directory.

## Hardware Design Flow

This section describes how to create the DPU reference design project in the Xilinx Vivado Design Suite and generate the bit file. The parameters of DPU IP in the reference design are configured accordingly. Both the connections of the DPU interrupt and the assignment addresses for DPU in the reference design should not be modified. If those connections or assignment address have been modified, the reference design might not work properly.

### Board Setup

The following figure shows the ZCU102 board with interfaces identified.

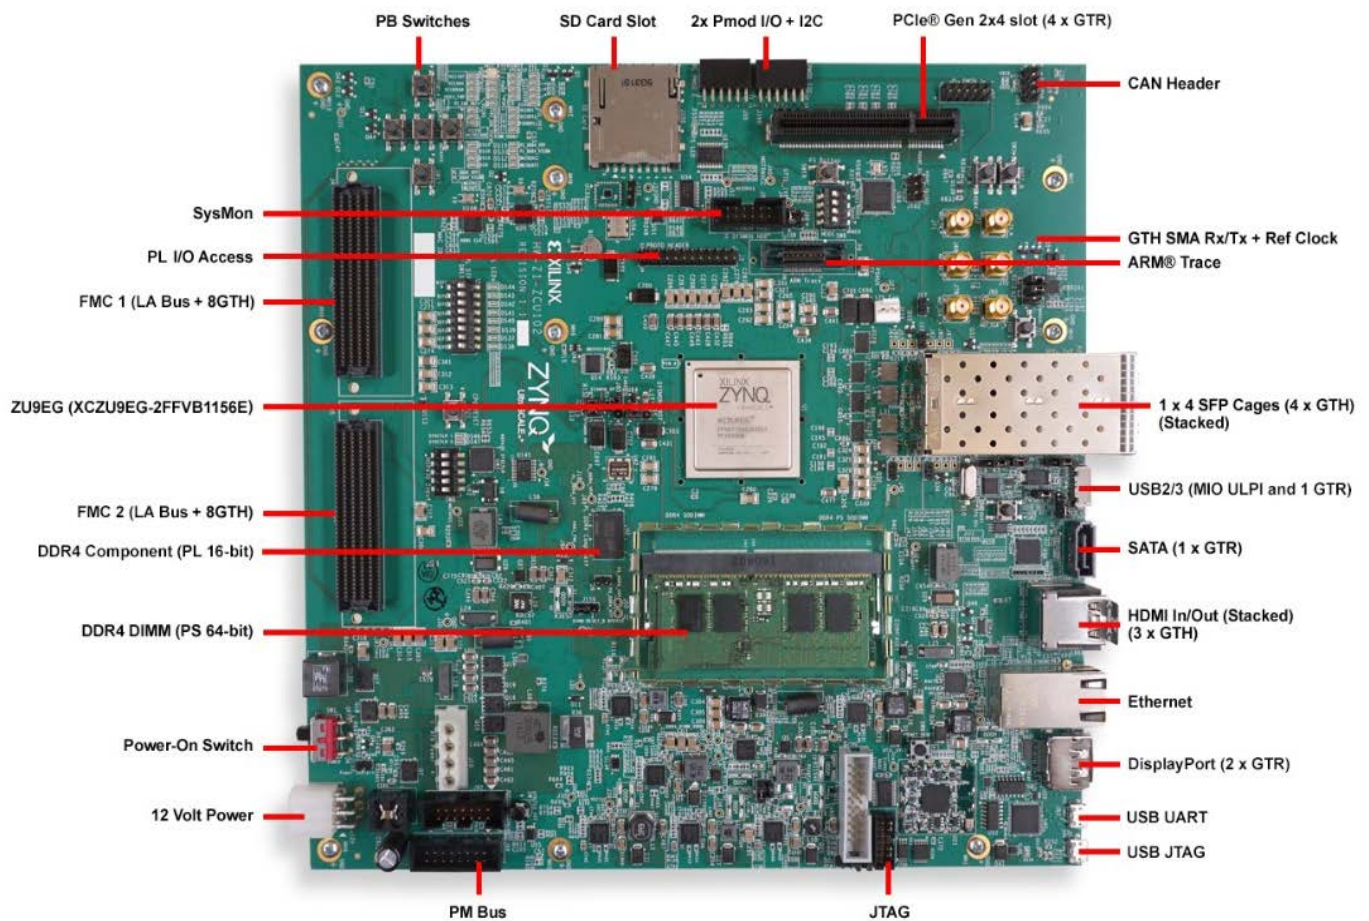


Figure 27: ZCU102 Board

## ZCU102 Board Configuration

1. Connect the Micro USB cable into the ZCU102 Board Micro USB UART (J83) and the other end into an open USB port on the host PC. This cable is used for UART over USB communication.
2. Insert the SD card with the content of image folder into the SD card slot.
3. Set the SW6 switches and configure the boot setting to boot from SD as shown here.



Figure 28: Boot from SD

4. Connect 12V Power to the ZCU102 6-Pin Molex connector.
5. Switch on SW1 to power on the ZCU102 board.

## Project Build Flow

This section is about how to build the reference Vivado project with Vivado 2018.2. For information about setting up your Vivado environment, refer to the *Vivado Design Suite User Guide* (UG910).

Building the hardware design consists of the following steps:

### Building the Hardware Design on Linux

1. Open a Linux terminal.
2. Change the directory to \$TRD\_HOME/pl.
3. Create the Vivado IP integrator project and invoke the GUI by running the following command:  

```
% vivado -source scripts/trd_prj.tcl
```

### Building the Hardware Design on Windows

1. Select **Start > All Programs > Xilinx Design Tools > Vivado 2018.2 > Vivado 2018.2**.
2. On the Quick Start screen, click **Tcl Console**.
3. Type the following command in the Tcl console:

```
cd $TRD_HOME/pl
source scripts/trd_prj.tcl
```

After running the scripts, the Vivado IP integrator block design appears as shown in the following figure.

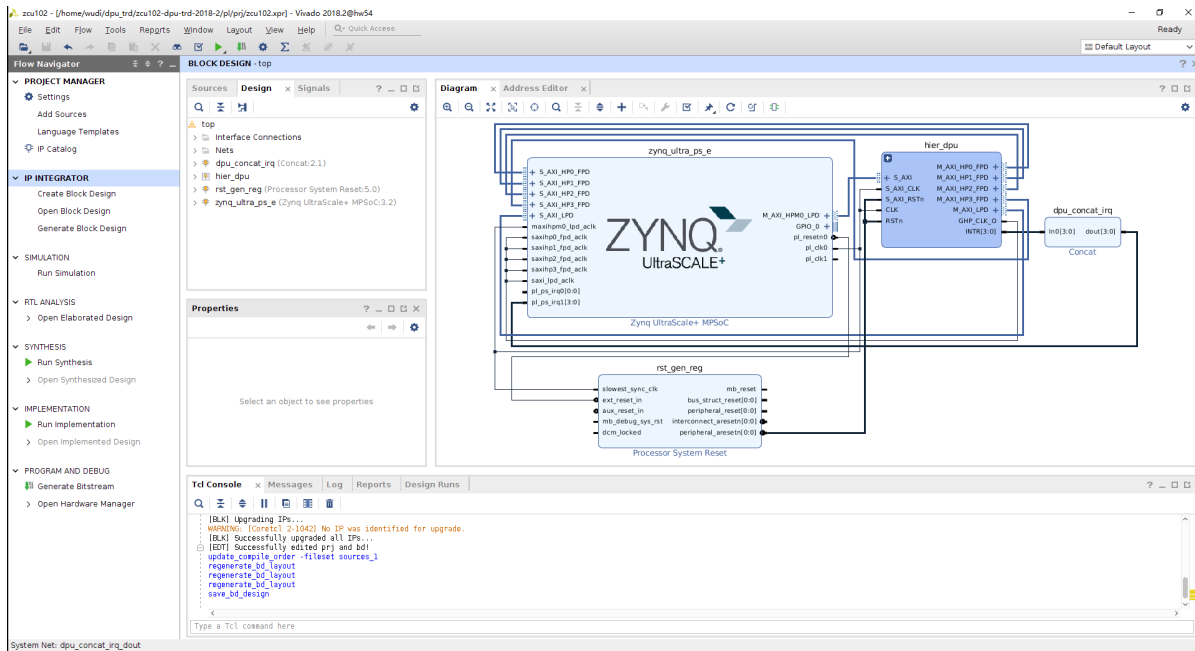


Figure 29: TRD Block Design

4. In the GUI, click **Generate Bitstream** to generate the bit file, as shown in the following figure.


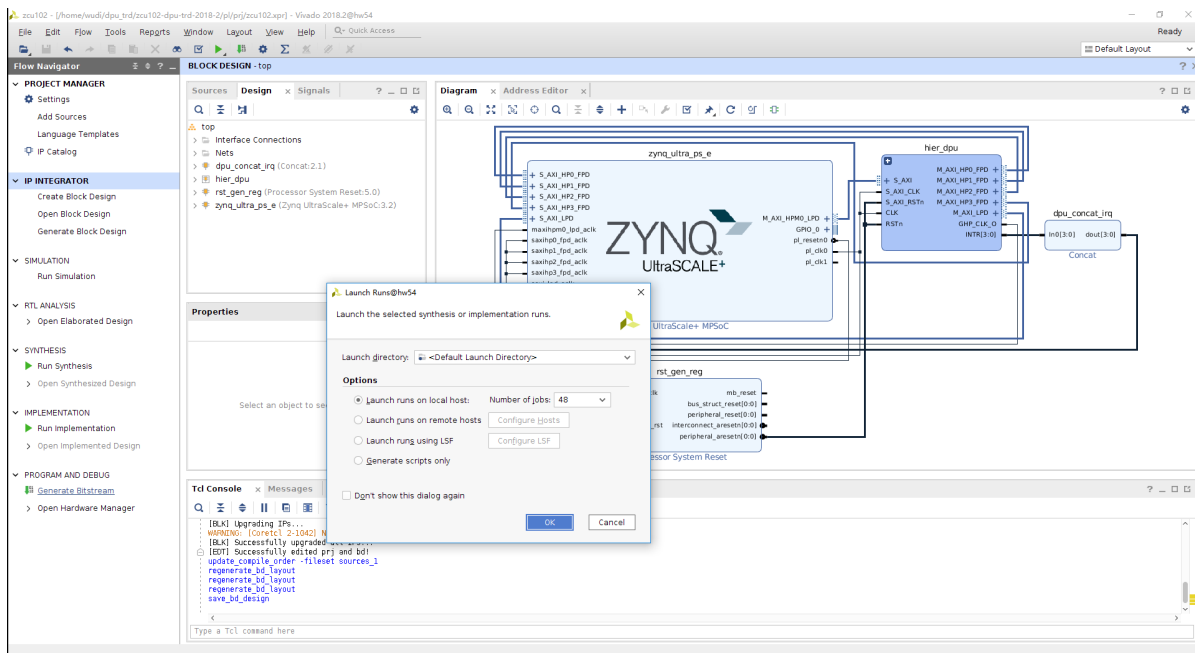


Figure 30: Generate Bitstream

## DPU Configuration

The version of the DPU IP integrated in the TRD is DPU\_v1.3.0. The default parameters of DPU in the reference design project is shown in the following figure.

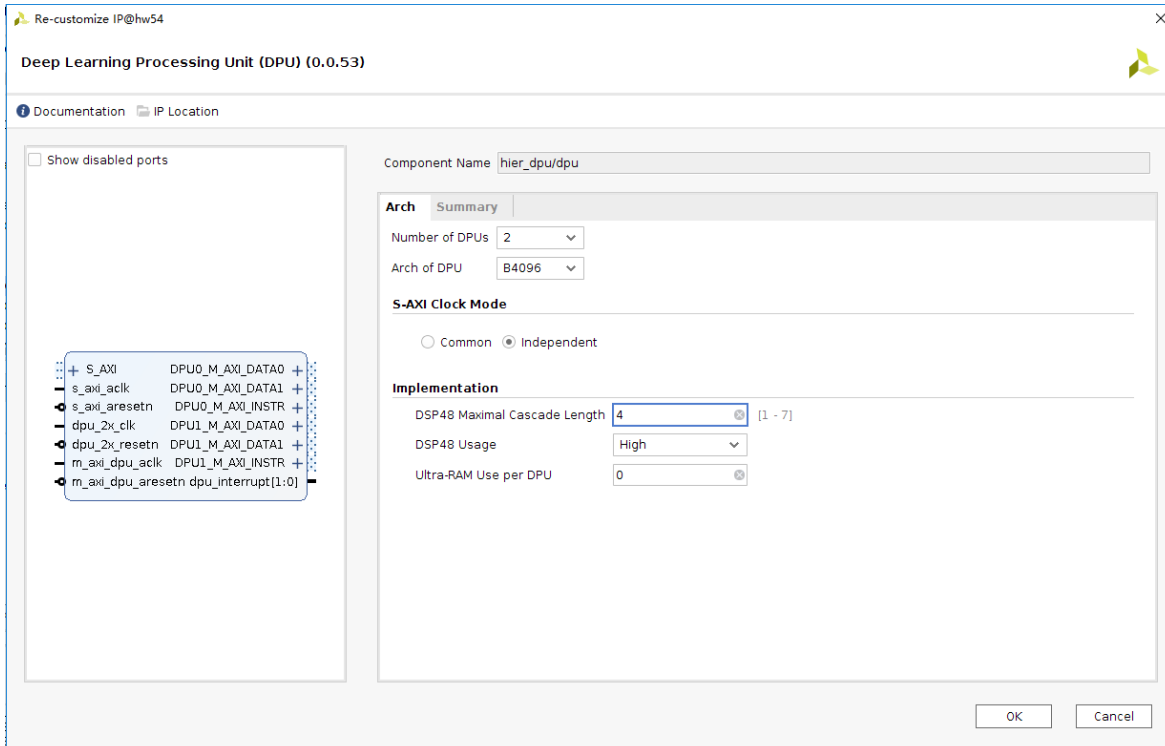

**Figure 31: DPU Configuration Page**

Those parameters of DPU can be configured in case of different resource requirements. For more information about DPU and its parameters, refer to Chapter 3: DPU Configuration.

## Software Design Flow

This section shows how to generate BOOT.BIN using the PetaLinux build.

### PetaLinux Design Flow

#### Install PetaLinux

Install PetaLinux as described in the *PetaLinux Tools Documentation Reference Guide* ([UG1144](#)).

## Set PetaLinux Variable

Set the following PetaLinux environment variable \$PETALINUX:

```
% source <path/to/petalinux-installer>/Petalinux-v2018.2/petalinux-v2018.2-
final/settings.sh
% echo $PETALINUX
% export TRD_HOME=<path/to/downloaded/zipfile>/zcu102-dpu-trd-2018-2
```

## Build the PetaLinux Project

Use the following commands to create the PetaLinux project:

```
% cd $TRD_HOME/apu/dpu_petalinux_bsp
% petalinux-create -t project -s xilinx-dpu-trd-zcu102-v2018.2.bsp
% cd zcu102-dpu-trd-2018-2
% petalinux-config --get-hw-description=$TRD_HOME/pl/pre-built
% petalinux-build
```

## Create BOOT.BIN

Create the BOOT.BIN file:

```
% cd images/linux
% petalinux-package --boot --fsbl zynqmp_fsbl.elf --u-boot u-boot.elf --pmufw
pmufw.elf --fpga system.bit
```

This section describes how to run the executables generated by the TRD. Connect to ZCU102 board through UART or Ethernet. Note the login/password on the ZCU102 board is `root/root`.

## Build the Demo

1. First, extract the SDK:

```
% cd $TRD_HOME/apu/apps
% ./sdk.sh -d ./sdk -y
```

2. Build the Resnet50:

```
% cd $TRD_HOME/apu/apps/resnet50
% make
```

## Demo Execution

To run the demo:

1. After generating the BOOT.BIN file, copy BOOT.BIN and image.ub (which is in `image/linux` folder) to the SD card.
2. Insert the SD card into the SD card slot of ZCU102 board and boot up the system.
3. After board boot up, copy the `resnet50` folder and the common folder of TRD package from host to the board.
4. Go to the `resnet50` folder and run the `resnet50` program, as follows:

```
% scp -r Host:$TRD_PATH/images/common /home/.
% scp -r Host:$TRD_PATH/images/resnet50 /home/.
```



```
% cd /home/resnet50/
% ./resnet50
```

The screenshot is shown in Figure 32.

The input images name is displayed in each line beginning with “Load image”, followed by the expected result of the input image. The predicted results of DPU is below, and the top-5 prediction probability of image classification are printed. If the Top-0 predict results are the same as the expected result, then the DPU is working properly.

```
Load image : 2ILSVRC2012_test_00001131.JPEG, [Saluki, gazelle hound] expected.

Run ResNet50 CONV layers ...
  DPU CONV Execution time: 13366us
  DPU CONV Performance: 576.837GOPS
Run ResNet50 FC layers ...
  DPU FC Execution time: 241us
  DPU FC Performance: 16.5975GOPS
Run ResNet50 expected ...
top[0] prob = 0.995715 name = Saluki, gazelle hound
top[1] prob = 0.002468 name = borzoi, Russian wolfhound
top[2] prob = 0.000908 name = Afghan hound, Afghan
top[3] prob = 0.000551 name = whippet
top[4] prob = 0.000158 name = Ibizan hound, Ibizan Podenco

Load image : ILSVRC2012_test_00057961.JPEG, [candle, taper, wax light] expected.

Run ResNet50 CONV layers ...
  DPU CONV Execution time: 13510us
  DPU CONV Performance: 570.688GOPS
Run ResNet50 FC layers ...
  DPU FC Execution time: 241us
  DPU FC Performance: 16.5975GOPS
Run ResNet50 expected ...
top[0] prob = 0.524847 name = candle, taper, wax light
top[1] prob = 0.408751 name = restaurant, eating house, eating place, eatery
top[2] prob = 0.020351 name = goblet
top[3] prob = 0.007487 name = fountain
top[4] prob = 0.005831 name = dining table, board

Load image : ILSVRC2012_test_00055771.JPEG, [photocopier] expected.

Run ResNet50 CONV layers ...
  DPU CONV Execution time: 13367us
  DPU CONV Performance: 576.794GOPS
Run ResNet50 FC layers ...
  DPU FC Execution time: 245us
  DPU FC Performance: 16.3265GOPS
Run ResNet50 expected ...
top[0] prob = 0.985547 name = photocopier
top[1] prob = 0.014058 name = printer
top[2] prob = 0.000257 name = washer, automatic washer, washing machine
top[3] prob = 0.000027 name = refrigerator, icebox
top[4] prob = 0.000016 name = file, file cabinet, filing cabinet
```

**Figure 32: Running Results**

---

### References

These documents provide supplemental material useful with this product guide:

1. *DNNDK User Guide* ([UG1327](#))
2. *Zynq UltraScale+ MPSoC Embedded Design Tutorial* ([UG1209](#))
3. *PetaLinux Tools Documentation Reference Guide* ([UG1144](#))
4. *ZCU102 Evaluation Board User Guide* ([UG1182](#))

---

### Please Read: Important Legal Notices

The information disclosed to you hereunder (the "Materials") is provided solely for the selection and use of Xilinx products. To the maximum extent permitted by applicable law: (1) Materials are made available "AS IS" and with all faults, Xilinx hereby DISCLAIMS ALL WARRANTIES AND CONDITIONS, EXPRESS, IMPLIED, OR STATUTORY, INCLUDING BUT NOT LIMITED TO WARRANTIES OF MERCHANTABILITY, NON-INFRINGEMENT, OR FITNESS FOR ANY PARTICULAR PURPOSE; and (2) Xilinx shall not be liable (whether in contract or tort, including negligence, or under any other theory of liability) for any loss or damage of any kind or nature related to, arising under, or in connection with, the Materials (including your use of the Materials), including for any direct, indirect, special, incidental, or consequential loss or damage (including loss of data, profits, goodwill, or any type of loss or damage suffered as a result of any action brought by a third party) even if such damage or loss was reasonably foreseeable or Xilinx had been advised of the possibility of the same. Xilinx assumes no obligation to correct any errors contained in the Materials or to notify you of updates to the Materials or to product specifications. You may not reproduce, modify, distribute, or publicly display the Materials without prior written consent. Certain products are subject to the terms and conditions of Xilinx's limited warranty, please refer to Xilinx's Terms of Sale which can be viewed at <https://www.xilinx.com/legal.htm#tos>; IP cores may be subject to warranty and support terms contained in a license issued to you by Xilinx. Xilinx products are not designed or intended to be fail-safe or for use in any application requiring fail-safe performance; you assume sole risk and liability for use of Xilinx products in such critical applications, please refer to Xilinx's Terms of Sale which can be viewed at <https://www.xilinx.com/legal.htm#tos>.

#### AUTOMOTIVE APPLICATIONS DISCLAIMER

AUTOMOTIVE PRODUCTS (IDENTIFIED AS "XA" IN THE PART NUMBER) ARE NOT WARRANTED FOR USE IN THE DEPLOYMENT OF AIRBAGS OR FOR USE IN APPLICATIONS THAT AFFECT CONTROL OF A VEHICLE ("SAFETY APPLICATION") UNLESS THERE IS A SAFETY CONCEPT OR REDUNDANCY FEATURE CONSISTENT WITH THE ISO 26262 AUTOMOTIVE SAFETY STANDARD ("SAFETY DESIGN"). CUSTOMER SHALL, PRIOR TO USING OR DISTRIBUTING ANY SYSTEMS THAT INCORPORATE PRODUCTS, THOROUGHLY TEST SUCH SYSTEMS FOR SAFETY PURPOSES. USE OF PRODUCTS IN A SAFETY APPLICATION WITHOUT A SAFETY DESIGN IS FULLY AT THE RISK OF CUSTOMER, SUBJECT ONLY TO APPLICABLE LAWS AND REGULATIONS GOVERNING LIMITATIONS ON PRODUCT LIABILITY.

© Copyright 2019 Xilinx, Inc. Xilinx, the Xilinx logo, Artix, ISE, Kintex, Spartan, Virtex, Zynq, and other designated brands included herein are trademarks of Xilinx in the United States and other countries. AMBA, AMBA Designer, Arm, ARM1176JZ-S, CoreSight, Cortex, PrimeCell, Mali, and MPCore are trademarks of Arm Limited in the EU and other countries. PCI, PCIe, and PCI Express are trademarks of PCI-SIG and used under license. All other trademarks are the property of their respective owners.