

Zynq-7000 AP SoC and 7 Series Devices Memory Interface Solutions v4.0

User Guide

UG586 June 8, 2016

Date	Version	Revision
06/08/2016	4.0	DDR3 and DDR2 <ul style="list-style-type: none"> Updated Memory Part description in Controller Option section. Added app_ecc_single_err[7:0] in Table 1-17: User Interface table. Added app_ecc_single_err[7:0] and note in Table 1-56: User Interface for ECC Operation. Updated description in dbg_pi_phase_locked_phy4lanes and dbg_pi_dqs_found_lanes_phy4lanes in Table 1-74: DDR2/DDR3 Debug Signals.
04/06/2016	3.0	<ul style="list-style-type: none"> Updated to core version 3.0. Updated Termination for all sections. Updated 1.0 μF capacitor in General Memory Routing Guideline chapter. DDR3 and DDR2 <ul style="list-style-type: none"> Added note in FPGA Options section. Added note in Interfacing to the Core section. Updated sys_rst descriptions in DDR3 and DD2 Configuration sections. Added note in Debug Signals section. Updated reset description in General Checks section.
11/18/2015	2.4	<ul style="list-style-type: none"> Added asynchronous to sys_rst in all sections. Added note to RELAXED mode in DDR3/DDR2 and LDDR2 sections. Updated code in all Configuration sections Added Important jitter note in Pinout Requirements in all sections. DDR3 and DDR2 <ul style="list-style-type: none"> Added Synplify Pro Black Box Testing section. QDR II+ <ul style="list-style-type: none"> Updated DEBUG_PORT Signal Descriptions, Write Init Debug Signal Map, and Read Stage 1 Debug Signal Map tables. Updated Calibration of Read Clock and Data description. Updated Write Calibration description. RLDRAM II/ RLDRAM 3 <ul style="list-style-type: none"> Updated Read Stage 1 Debug Signal Map table. Updated Calibration of Read Clock and Data description.

Date	Version	Revision
09/30/2015	2.4	<ul style="list-style-type: none"> Added CLOCK_DEDICATED_ROUTE Constraints in all sections. DDR3 and DDR2 <ul style="list-style-type: none"> Updated Trace Lengths section. QDR II+ <ul style="list-style-type: none"> Added Termination section. RLDRAM II/ RLDRAM 3 <ul style="list-style-type: none"> Added Termination section. Updated Margin Check section. Updated Automatic Margin Check section. Updated Table 3-33: Debug Port Signals. LPDDR2 <ul style="list-style-type: none"> Updated Trace Lengths section. Appendix <ul style="list-style-type: none"> Added General Memory Routing Guidelines.
06/24/2015	2.3	<ul style="list-style-type: none"> Added Simulation Flow Using VCS and IES to all sections. Added Clocking sections to QDR II+, RLDRAM II/RLDRAM 3, and LPDDR2 chapters. RLDRAM II/ RLDRAM 3 <ul style="list-style-type: none"> Added address/control signal and SSI descriptions in Pinout Requirements section. Updated Input Clock Guidelines section.

Date	Version	Revision
04/01/2015	2.3	<ul style="list-style-type: none"> Updated description in all Configuration sections. Updated SIM_BYPASS_INIT_CAL. Chapter 1 <ul style="list-style-type: none"> Added description in Setting DDR3 Memory Parameter Option section. Added Note to Answer Record: 54025 in Controller Options section. Added description to app_rd_data_end in Table 1-17: User Interface. Updated Table 1-19: AXI4 Slave Interface Parameters. Updated description in AXI4 Slave Interface Signals section. Updated Time Division Multiplexing (TDM), Round-Robin, and Read Priority (RD_PRI_REG) sections. Updated GES description in Calibration Times section. Updated Fig. 1-50: Clocking Architecture. Updated Table 1-87: Memory Controller to Calibration Logic Interface Signals. Updated AXI Addressing section. Updated Write Path section. Updated Fig. 1-84: Command Processing. Updated Physical Layer Interface (Non-Memory Controller Design) section. Updated CK signal description in Trace Length section. Updated Fig. 1-93: Calibration Stages. Updated description in Determine the Failing Calibration Stage section. Updated Table 1-100: DDR2/DDR3 Debug Signals. Updated Table 1-102: Debug Signals of Interest for Write Leveling Calibration. Updated Table 1-103: Debug Signals of Interest for MPR Read Leveling Calibration. Updated calibration overview in Debugging OCLKDELAYED Calibration Failures section. Updated Debug bullets in Debugging OCLKDELAYED Calibration Failures section. Updated Table 1-104: Debug Signals of Interest for OCLKDELAYED Calibration to Table 1-106: Debug Signals of Interest for Read Leveling Stage 1 Calibration. Updated Table 1-108: Calibration Time in Hardware. Updated Checking and Varying Read Timing to Manual Window Check sections. Updated Calibration Times section. Chapter 2 <ul style="list-style-type: none"> Updated Fig. 2-43: High-Level PHY Block Diagram for a 36-Bit QDR II+ Interface. Updated Margin Check and Automated Margin Check sections.
		Chapter 3 <ul style="list-style-type: none"> Updated description in Interfacing with the Core through the Client Interface section. Chapter 4 <ul style="list-style-type: none"> Corrected app_wdf_data[APP_DATA_WIDTH – 1:0] and app_wdf_mask[APP_MASK_WIDTH – 1:0] sections. Updated Fig. 4-43: Clocking Architecture. Updated Read Path section.

Date	Version	Revision
11/19/2014	2.3	Chapter 1 <ul style="list-style-type: none"> Updated description in Round-Robin section. Updated RTT_WR in Table 1-92: 7 Series FPGA Memory Solution Configuration Parameters. Updated description in Debugging OCLKDELAYED Calibration Failures section. Updated Table 1-106: Debug Signals of Interest for OCLKDELAYED Calibration. Updated GES time in Calibration Times section. Updated bits in left_loss_pb and right_gain_pb in Table 1-109: Debug Signals of Interest for PRBS Read Leveling Calibration.
10/01/2014	2.2	<ul style="list-style-type: none"> Global update to example design link in Files in example_design/sim Directory tables, updated links in Simulation Flow Using IES and VCS Script Files section, updated Simulation Flow Using Vivado Simulator section, and updated Simulation Flow Using QuestaSim section. Chapter 1 <ul style="list-style-type: none"> Updated Reference Clock description in FPGA Option section. Updated C_S_AXI_DATA_WIDTH description in Table 1-19: AXI4 Slave Interface Parameters. Updated Fig. 1-50: Clocking Architecture. Updated OCLKDELAYED Calibration section. Updated Write Path section. Added REF_CLK_MMCM_IODELAY_CTRL in Table 1-92: 7 Series FPGA Memory Solution Configuration Parameters. Added note for nBANK_MACHS in Table 1-93: Embedded 7 Series FPGAs Memory Solution Configuration Parameters. Added row and updated Table 1-94: DDR2/DDR3 SDRAM Memory Interface Solution Pinout Parameters Updated CK/CK# bullet in Trace Length section. Updated Table 1-102: DDR2/DDR3 Debug Signals. Updated debug signals in Table 1-112: Debug Signals Used for Checking and Varying Read/Write Timing.
Continued		Chapter 2 <ul style="list-style-type: none"> Added Bank Sharing Among Controllers section in Design Guideline section. Chapter 3 <ul style="list-style-type: none"> Added Bank Sharing Among Controllers section in Design Guideline section. Chapter 4 <ul style="list-style-type: none"> Updated Figs. 4-57 to 4-59 and Figs. 4-62 to 4-63. Updated 2:1 description in Write Path section. Updated rules in Termination section.

Date	Version	Revision
06/04/2014	2.1	<p>Chapter 1</p> <ul style="list-style-type: none"> Added reference to data sheet in Features section. Added Important note about Data Mask in Controller Options section. Added note in Precharge Policy section. Added PRBS_SADDR_MASK)POS to Table 1-11: Traffic Generator Parameters Set in the example_top Module. Updated IDELAYCTRL frequency in IDELAYCTRL section. Updated IDELAY Reference Clock section. Updated PRBS Read Leveling section. Updated CL description for DDR3 in Table 1-93: Embedded 7 Series FPGAs Memory Solution Configuration Parameters. Updated package length descriptions in Trace Length section. Added simulation description in Note in Debugging DDR3/DDR2 Designs. Updated description in Debugging PRBS Read Leveling Failures section. Updated Table 109: Debug Signals of Interest for PRBS Read Leveling Calibration. <p>Chapter 2</p> <ul style="list-style-type: none"> Added reference to data sheet in Introduction section. Updated package length descriptions in Trace Length Requirements section. Added CPT_CLK_SEL_* row in Table 2-11: QDR II+ SRAM Memory Interface Solution Pinout Parameters. Added simulation description in Note in Debugging QDR II+ Designs. <p>Chapter 3</p> <ul style="list-style-type: none"> Added reference to data sheet in Features section. Added note in Memory Controller section. Added PRBS_SADDR_MASK)POS to Table 3-8: Traffic Generator Parameters Set in the example_top Module. Updated rules and package length descriptions in Trace Length Requirements section. Added simulation description in Note in Debugging RLDRAM II and 3 Designs.
Continued		<p>Chapter 4</p> <ul style="list-style-type: none"> Added note in Precharge Policy section. Added PRBS_SADDR_MASK)POS to Table 4-11: Traffic Generator Parameters Set in the example_top Module. Updated package length descriptions in Trace Length Requirements section. Added simulation description in Note in Read Path section.

Date	Version	Revision
04/02/2014	2.0	<p>Chapter 1</p> <ul style="list-style-type: none"> • Updated book to DQS. • Updated Table 1-4: Files in example_design/sim Directory. • Updated file description in Simulation Flow Using IES and VCS Script Files section. • Added No Buffer description in the System Clock bullet in FPGA Options section. • Updated mc_data_offset description in Memory Controller to Calibration Logic Interface Signals table. • Added MPR read leveling process in Multi-Purpose Register Read Leveling section. • Updated Temperature Monitor section. • Added tempmon information in Physical Layer Interface (Non-Memory Controller Design) section. • Added description in address and control signals in Termination section for DDR3. • Added description in address and control signals and updated CKE signal bullet in Termination section for DDR2. • Added CK description in Trace Lengths section. • Added new code constraints for DDR3/DDR2 Configuration sections. • Added Clocking section. • Updated ocal signals in Table 1-102: DDR2/DDR3 Debug Signals. <p>Chapter 2</p> <ul style="list-style-type: none"> • Added new code constraints in Configuration section. • Updated Table 2-3: Files in example_design/sim Directory. • Updated file description in Simulation Flow Using IES and VCS Script Files section. <p>Chapter 3</p> <ul style="list-style-type: none"> • Added new code constraints in Configuration section. • Updated Table 3-3: Files in example_design/sim Directory. • Added important note on write and read commands in Interfacing with the Core through the Client Interface section. • Updated option for MRS_RD_LATENCY in RLDRAM II Memory Interface Solution Configurable Parameters table. • Updated file description in Simulation Flow Using IES and VCS Script Files section. <p>Chapter 4</p> <ul style="list-style-type: none"> • Added new code constraints in Configuration section. • Updated Table 4-4: Files in example_design/sim Directory. • Updated file description in Simulation Flow Using IES and VCS Script Files section.

Date	Version	Revision
12/18/2013	2.0	<ul style="list-style-type: none"> • Vivado Design Suite release only for MIG v2.0. <p>Chapter 1</p> <ul style="list-style-type: none"> • Added Out of Context content. • Updated Table 1-4: Modules in example_design/sim Directory. • Updated <component name>/user_design section. • Updated Fig. 1-39: Synthesizable Example Design Block Diagram. • Added simulator flows. • Added Bits[39:32] to Table 1-15: Debug Status for the Write Transaction. • Added Bits[39:32] to Table 1-16: Debug Status for the Read Transaction. • Added OOC description in Customizing the Core section. • Added ILA trigger settings in Vivado Lab Tools section. • Added note on read latency in Debug section. • Updated Chipscope triggers to R in Debug section. <p>Chapter 2</p> <ul style="list-style-type: none"> • Added Out of Context content. • Updated Table 2-3: Modules in example_design/sim Directory. • Updated <component name>/user_design section. • Added OOC description in Customizing the Core section. • Added simulator flows. • Added ILA trigger settings in Vivado Lab Tools section. <p>Chapter 3</p> <ul style="list-style-type: none"> • Added Out of Context content. • Updated Table 3-3: Modules in example_design/sim Directory. • Updated <component name>/user_design section. • Updated Fig. 3-35: Synthesizable Example Design Block Diagram. • Added OOC description in Customizing the Core section. • Added simulator flows. • Added ILA trigger settings in Vivado Lab Tools section. • Updated Fig. 3-48 Write Path Block Diagram of the RLDRAM II Interface Solution. • Added note on read latency in Debug section. <p>Chapter 4</p> <ul style="list-style-type: none"> • Added Out of Context content. • Updated Table 4-4: Modules in example_design/sim Directory. • Updated <component name>/user_design section. • Updated Fig. 4-37: Synthesizable Example Design Block Diagram. • Added OOC description in Customizing the Core section. • Added simulator flows. • Added note on read latency in Debug section. <p>Chapter 5</p> <ul style="list-style-type: none"> • Added Out of Context content.

Date	Version	Revision
10/02/2013	2.0	<ul style="list-style-type: none"> • Vivado Design Suite release only for MIG v2.0. • Removed ISE content throughout book and updated screenshots to v2.0. <p>Chapter 1</p> <ul style="list-style-type: none"> • Updated Memory Part bullet description. • Updated Table 1-4 sim.do description and simulation directory. • Updated Fig. 1-44 7 Series FPGAs MIS. • Added aresetn in Table 1-20 AXI4 Slave Interface Signals. • Added Caution note in Single Error and Double Error Reporting section. • Updated Table 1-77 Memory Interface Commands. • Updated and added stage 3 tap in OCLKDELAYED Calibration section. • Added #4 table note to Table 1-91 7 Series FPGA Memory Solution Configuration Parameters. • Updated description in app_wdf_mask[APP_MASK_WIDTH - 1:0] section. • Added Memory Address Mapping description in User Interface section. • Updated Table 1-106 Debug Signals of Interest for OCLKDELAYED Calibration <p>Chapter 2</p> <ul style="list-style-type: none"> • Updated Table 2-3 sim.do description and simulation directory. • Updated DIFF_HSTL_I in I/O Standards table. • Updated reference clock descriptions in Clocking Architecture section. • Added #1 table note to Table 2-11 7 Series FPGAs QDR II+ SRAM Memory Interface Solution Configurable Parameters. And updated SIM_BYPASS_INIT_CAL. <p>Chapter 3</p> <ul style="list-style-type: none"> • Updated Table 3-3 sim.do description and simulation directory. • Updated reference clock descriptions in Clocking Architecture section. • Added #1 table note to Table 3-13 RLDRAM II Memory Interface Solution Configurable Parameters. And updated SIM_BYPASS_INIT_CAL. <p>Chapter 4</p> <ul style="list-style-type: none"> • Updated Table 4-4 sim.do description and simulation directory. • Updated Fig. 4-37 7 Series FPGAs MIS. • Updated Table 4-14 User Interface. • Added #4 note to Table 4-25 7 Series FPGA Memory Solution Configuration Parameters. • Updated description in app_wdf_mask[APP_MASK_WIDTH - 1:0] section. • Added Memory Address Mapping description in User Interface section.

Date	Version	Revision
06/19/2013	2.0	<ul style="list-style-type: none"> • Vivado Design Suite release only for MIG v2.0. Revision number advanced to 2.0 to align with core version number. <p>Chapter 1</p> <ul style="list-style-type: none"> • Updated ChipScope to Vivado logic analyzer, VIO, and ILA. • Updated ui_clk and ui_clk_sync_rst descriptions in Table 1-17 User Interface. • Updated ui_clk and ui_clk_sync_rst descriptions. • Added Ordering Modes in Reordering section and added modes in Table 1-91. • Updated ECC enable in AXI4 Slave Interface Block section. • Updated Read Priority (RD_PRI) section. • Updated Table 1-19 AXI4 Slave Interface Parameters, C_S_AXI_ADDR_WIDTH value and descriptions. • Added Write Priority description. • Updated PHASER_IN DQSFOUND Calibration section. • Removed Downsizing Option. • Added DM in DQ descriptions. • Added Dynamic Calibration and Periodic Read Behavior section. • Added Vivado Lab Tools section. • Added AR 54025 for Vivado. • Updated Debugging PHASER_IN DQSFOUND Calibration Failures (dbg_pi_dqsfound_err = 1) section. <p>Chapter 2</p> <ul style="list-style-type: none"> • Updated ChipScope to Vivado logic analyzer, VIO, and ILA. • Added Fixed Latency Mode description in Controller Options section. • Removed qdr_qvld in Table 2-12 Physical Interface Signals. • Updated Figure 2-26 Four-Word Burst Length Memory Device Protocol. • Updated Output Architecture section in Write Path. • Added Write Calibration section. • Removed QVLD. • Updated Table 2-20 Write Init Debug Signal Map. • Updated Tables 2-21 and 2-22 Read Stage 1 and Stage 2 Debug Signal Map tables. <p>Chapter 3</p> <ul style="list-style-type: none"> • Updated ChipScope to Vivado logic analyzer, VIO, and ILA. • Removed rld_qvld in Table 3-13 Physical Interface Signals. • Removed QVLD and QVLD_MAP in Table 3-16 RLDRAM II Memory Interface Solution Pinout Parameters. • Removed QVLD. • Updated descriptions in Manual Pinout Changes section. • Added new calibration description in Calibration section. • Updated Table 3-26 Physical Layer Simple Status Bus Description Defined in the rld_phy_top Module.

Date	Version	Revision
Continued		<ul style="list-style-type: none"> Updated Table 3-27 DEBUG_PORT Signal with dbg_rd_stage1_rtr_error[N_DATA_LANES - 1:0] and dbg_rd_stage1_error[N_DATA_LANES - 1:0]. Updated Tables 3-31 and 3-32 Read Stage 1 and Stage 2 Debug Signal Map tables. Added Fig. 3-36 Calibration Flow Diagram and Fig. 3-37 Read Level Stage 1. Added description to Data Alignment and Valid Generation section. Updated description and added Figs. 3-38 to 3-43 in Write Calibration section. Added Write Calibration Debug Map section. <p>Chapter 4</p> <ul style="list-style-type: none"> Updated ChipScope to Vivado logic analyzer, VIO, and ILA. Updated ui_clk and ui_clk_sync_rst descriptions in Table 4-14 User Interface. Updated ui_clk and ui_clk_sync_rst descriptions. Added Ordering Modes in Reordering section and added modes in Table 4-25. Added DM in DQ descriptions. Added Termination description in LPDDR2 Pinout Examples section. <p>Chapter 6</p> <ul style="list-style-type: none"> Added Upgrading the ISE/CORE Generator MIG Core in Vivado section.
03/20/2013	1.9	<ul style="list-style-type: none"> ISE 14.5 and Vivado Design Suite 2013.1 releases for MIG v1.9 and v1.9a. <p>Chapter 1</p> <ul style="list-style-type: none"> Added Memory Part frequency in Controller Options section. Added No Buffer option description in FPGA Options section. Added pinout description in Verify Pin Changes and Update Design section. Updated Fig. 1-15 Setting Memory Mode Options. Updated Fig. 1-16 FPGA Options. Updated Fig. 1-30 7 Series FPGAs Memory Interface Solution to User's FPGA Logic Added ECC description in AXI4 Slave Interface Block section. Updated Table 1-91 7 Series FPGA Memory Solution Configuration Parameters. Updated Table 1-92 Embedded 7 Series FPGAs Memory Solution Configuration Parameters. Updated Table 1-93 DDR2/DDR3 SDRAM Memory Interface Solution Pinout Parameters. Added description in Verifying the Simulation Using the Example Design section. Reworked Design Guidelines DDR3 SDRAM section. Added new debug section.

Date	Version	Revision
Continued		Chapter 2 <ul style="list-style-type: none"> Added No Buffer option description in FPGA Options section. Added pinout description in Verify Pin Changes and Update Design section. Updated Fig. 2-15 FPGA Options. Updated REFCLK_FREQ and RST_ACT_LOW in Table 2-13 7 Series FPGAs QDR II+ SRAM Memory Interface Solution Configurable Parameters Updated Table 2-14 QDR II+ SRAM Memory Interface Solution Pinout Parameters. Added description in Verifying the Simulation Using the Example Design section.
		Chapter 3 <ul style="list-style-type: none"> Added No Buffer option description in FPGA Options section. Updated Fig. 3-14 FPGA Options. Added Verify Pin Changes and Update Design section. Updated nCK_PER_CLK in Table 3-10 Traffic Generator Parameters Set in the example_top Module Updated Table 3-15 RLDRAM II Memory Interface Solution Configurable Parameters. Updated Table 3-16 RLDRAM II Memory Interface Solution Pinout Parameters. Added description in Verifying the Simulation Using the Example Design section.
		Chapter 4 <ul style="list-style-type: none"> Added new LPDDR2 SDRAM section.
		Chapter 6 <ul style="list-style-type: none"> Updated to new GUIs.

Date	Version	Revision
12/18/2012	1.8	<ul style="list-style-type: none"> • ISE 14.4 and Vivado 2012.4 Design Suite releases for MIG v1.8. Chapter 1 <ul style="list-style-type: none"> • Updated Table 1-2 to 1-9 with new table note and.v name. • Updated Fig. 1-16 FPGA Options GUI. • Added XADC Instantiation bullet. • Added description to sim.do in Table 1-4. • Updated Table 1-11 DATA_PATTERN to 0xA. • Updated Table 1-13 vio_data_mode_value[3:0] to 0xA. • Updated description in Setting Up for Simulation. • Added description to EDK Clocking. • Updated ui_clk and ui_clk_sync_rst in Table 1-17. • Added description in Internal (FPGA) Logic Clock. • Added TEMP_MON_CONTROL to Table 1-91. • Added DATA_IO_IDLE_PWRDWN and CA_MIRROR to Table 1-92. • Added HP bank description in Bank and Pin Selection Guides for DDR3 Designs. • Added DDR3 SDRAM interface description to Configuration. • Added HP bank description in Bank and Pin Selection Guides for DDR2 Designs. • Added DDR2 SDRAM interface description to Configuration. Chapter 2 <ul style="list-style-type: none"> • Updated Table 2-2 and 2-7 to 2-8 with new table note and.v name. • Added description to sim.do in Table 2-3. • Updated descriptions and added Fig 2-26 to Clocking Architecture. • Updated description in Write Path Output Architecture. • Updated descriptions in Trace Length Requirements. • Added QDRII description in Configuration. • Added description to Verifying the Simulation Using the Example Design. • Added Margin Check and Automated Margin Check sections. Chapter 3 <ul style="list-style-type: none"> • Updated Table 3-2 and 3-6 to 3-8 with new table note and.v name. • Added description to sim.do in Table 3-3. • Updated Table 3-10 DATA_PATTERN to 0xA. • Updated descriptions and added Fig 3-30 to Clocking Architecture. • Updated descriptions in Trace Length Requirements. • Added descriptions in RLDRAM II. • Added RLDRAM II description in Configuration. • Added description to Verifying the Simulation Using the Example Design. • Added Debug section.

Date	Version	Revision
10/16/2012	1.7	<ul style="list-style-type: none"> • MIG 1.7 release. Updated ISE Design Suite version to 14.3. • Chapter 1: Added AXI4-Lite Slave Control/Status Register Interface Block section. Updated figures (1-32 and 1-37) and added PRBS and Temperature Monitor sections. Added CLKIN_PERIOD to USE_DM_PORT parameters in Table 1-37. Updated Table 1-38 PHY0_BITLANES description. • Chapter 2: Added CLKIN_PERIOD to DIVCLK_DIVIDE parameters in Table 2-13. • Chapter 3: Added RLDRAM 3 content throughout. Updated/added figures (3-10, 3-13, 3-23 to 3-32, 3-36 to 3-37, 3-40 to 3-41, 3-45 to 3-47, and 3-50). Added mem_ck_lock_complete parameter in Table 3-11. Added CLKOUT0_PHASE parameter in Table 3-15. Updated descriptions in Table 3-16 and added Table 3-28. Updated Table 3-29 user_cmd signal. Updated Table 3-31 and 3-34 descriptions. Added Debugging Write Calibration section. • Chapter 4: Added System Clock Sharing section • Chapter 5: Updated figures (5-15, 5-17 to 5-20), updated steps in Getting Started with Vivado – MIG IP Generation
07/25/2012	1.6	<ul style="list-style-type: none"> • MIG 1.6 release. Updated ISE Design Suite version to 14.2. Updated GUI screen captures throughout document. • Chapter 1: Added No Buffer, Use System Clock, and Sample Data Depth in FPGA Options, page 36. Changed the parameters nCK_PER_CLK, tZQI, SYSCLK_TYPE, REFCLK_TYPE, and APP_DATA_WIDTH. Added bulleted item about multiple CK outputs to Bank and Pin Selection Guides for DDR3 Designs, page 186. Updated Trace Lengths, page 191 and Termination, page 200. • Chapter 2: Added No Buffer, Use System Clock, and Sample Data Depth in FPGA Options, page 282. Changed the parameters SYSCLK_TYPE and REFCLK_TYPE. • Chapter 3: Added No Buffer, Use System Clock, and Sample Data Depth in FPGA Options, page 282. Changed the parameters SYSCLK_TYPE and REFCLK_TYPE. • Chapter 6: Added new chapter on migrating to Vivado Design Suite.
06/13/2012	1.5	Revised the recommended total electrical delay on CK/CK# relative to DQS/DQS# on page 191.

Date	Version	Revision
04/24/2012	1.4	<ul style="list-style-type: none"> • MIG 1.5 release. Updated ISE Design Suite version to 14.1. Updated GUI screen captures throughout document. Replaced IODELAYCTRL with IDELAYCTRL throughout. • Chapter 1: Added I/O Power Reduction option to FPGA Options. Revised I/O standards for sys_rst option in Bank Selection. Added Creating ISE Project Navigator Flow for MIG Example Design, Power-Saving Features, Multi-Purpose Register Read Leveling, OCLKDELAYED Calibration, Upsizing, and External Vref sections. Changed bits [16:15] to from Rank Count to Reserved in the PHY Control word. Revised maximum setting of NUM_DQ_PINS in Table 1-11. Revised Figure 1-55 flowchart. Removed RankSel[1:0] from Figure 1-56 and Figure 1-58. Added mc_odt and mc_cke to Table 1-87. Replaced AXI Addressing. Updated REFCLK_FREQ, RANK_WIDTH, and WRLVL in Table 1-92. Added DATA_IO_PRIM_TYPE to Table 1-93. Added bullet about DQS pins to Bank and Pin Selection Guides for DDR3 Designs. Changed DIFF_SSTL_15 to DIFF_SSTL18_II and SSTL15 to SSTL18_II. • Chapter 2: Changed DIFF_SSTL_15 to DIFF_HSTL_I and SSTL15 to HSTL_I. Revised I/O standards for sys_rst option in System Pins Selection. Revised the PHY_BITLANE parameters in Table 2-11. Added System Clock, PLL Location, and Constraints and Configuration sections. • Chapter 3: Changed DIFF_SSTL_15 to DIFF_HSTL_I and SSTL15 to HSTL_I. to Revised I/O standards for sys_rst option in System Pins Selection. Added the Write Calibration, System Clock, PLL Location, and Constraints, and Configuration sections. Revised the PHY_BITLANE parameters in Table 3-15. In Table 3-28, added dbg_wrcal_sel_stg[1:0], dbg_wrcal[63:0], dbg_wrcal_done[2:0], dbg_wrcal_po_first_edge[5:0], dbg_wrcal_po_second_edge[5:0], and dbg_wrcal_po_final[5:0].
01/18/2012	1.3	<ul style="list-style-type: none"> • MIG 1.4 release. Updated ISE Design Suite version to 13.4. Updated GUI screen captures throughout document. • Chapter 1: Added support for DDR2 SDRAM. Added option 3 to MIG Output Options. Added EDK Clocking. Added Replaced Figure 1-41 and Figure 1-69. • Chapter 2: Removed Input Clock Period option from Controller Options. Added Memory Options. Added Reference Clock option to FPGA Options. Updated Debug Signals. • Chapter 3: Removed Input Clock Period option from Controller Options. Added Input Clock Period option to Memory Options. Added Reference Clock option to FPGA Options. Added Debugging RLD RAM II and RLD RAM 3 Designs.

Date	Version	Revision
10/19/2011	1.2	<ul style="list-style-type: none"> • MIG 1.3 release. Updated ISE Design Suite version to 13.3. • Chapter 1: Added step 2 to MIG Output Options, page 26. Added note about optional use of the memory controller to Controller Options, page 30. Added arbitration scheme to AXI Parameter Options, page 33. Added description of DCI Cascade under Figure 1-23. Updated text about devices with SSI technology and SLRs on page 41 and page 187. Changed error to tg_compare_error on page 42. Replaced Table 1-8. Added qdr_wr_cmd_o, vio_fixed_instr_value, vio_fixed_bl_value, vio_pause_traffic, and vio_data_mask_gen signals to Table 1-13. Added signals to the User Interface in Figure 1-49 and Figure 1-51. Added app_sr_req, app_sr_active, app_ref_req, app_ref_ack, app_zq_req, and app_zq_ack signals to Table 1-17. Added app_wdf_rdy, app_ref_req, app_ref_ack, app_zq_req, app_zq_ack, Read Priority with Starve Limit (RD_PRI_REG_STARVE_LIMIT), Native Interface Maintenance Command Signals, User Refresh, and User ZQ sections. Added C_RD_WR_ARB_ALGORITHM to Table 1-19. Updated fields in Table 1-84, changed Hi Index (Rank) to Rank Count, and added CAS slot field. Updated AXI Addressing and Physical Layer Interface (Non-Memory Controller Design). Added Figure 1-75 through Figure 1-77 in Write Path. In Table 1-92, removed DISABLED option from RTT_NOM for DDR3_SDRAM, changed RTT_NOM to RTT_WR in RTT_WR, updated SIM_BYPASS_INIT_CAL, and updated table note 2. In Table 1-93, updated tZQI and added USER_REFRESH. Added Table 1-94. In Configuration, updated constraints example and removed paragraph about SCL and SDA. • Chapter 2: Added step 2 to MIG Output Options, page 275. Added Input Clock Period description in Controller Options, page 279. Added Debug Signals Control and Internal Vref Selection options to FPGA Options, page 282. Added I/O Planning Options, page 285. In System Pins Selection, page 288, changed cal_done signal to init_calib_complete and error signal to tg_compare_error. Replaced Table 2-2. Changed file names in Table 2-5. Updated signal names in Figure 2-38, Figure 2-39, and Figure 2-40. Updated signal names in Table 2-7. Added CPT_CLK_CQ_ONLY and updated value for SIM_BYPASS_INIT_CAL in Table 2-10. Added Table 2-11. Updated pinout rules in Pinout Requirements, page 337. Added paragraph about DCI and IN_TERM after Table 2-12. Added Debugging QDR II+ SRAM Designs, page 340. • Chapter 3: Added step 2 to MIG Output Options, page 375. Added Input Clock Period description in Controller Options. Added Debug Signals Control and Internal Vref Selection options to FPGA Options, page 382. In System Pins Selection, changed cal_done signal to init_calib_complete and error signal to tg_compare_error. Changed file names in Table 3-6. Removed Table 3-12, which contained Reserved signals not used. Added rst_phaser_ref to Table 3-11. Removed PHY-Only Interface section. In Table 3-14, added RLD_ADDR_WIDTH, MEM_TYPE, CLKIN_PERIOD, and SIMULATION, and renamed CLKFBOUT_MULT, CLKOUT0_DIVIDE, CLKOUT1_DIVIDE, CLKOUT2_DIVIDE, and CLKOUT3_DIVIDE. Updated Table 3-15. Added paragraph about DCI and IN_TERM after Table 3-24. • Added Chapter 5, Multicontroller Design.

Date	Version	Revision
06/22/2011	1.1	<ul style="list-style-type: none"> • MIG 1.2 release. Updated ISE Design Suite version to 13.2. Updated GUI screen captures throughout document. • Chapter 1: Added Verify Pin Changes and Update Design, Simulating the Example Design (for Designs with the AXI4 Interface), Error Correcting Code, and DDR3 Pinout Examples sections. Added paragraph about SLRs to Pin Compatible FPGAs, page 27. Added Input Clock Period and PHY to Controller bullets in Controller Options, page 30. To Setting DDR3 Memory Parameter Option, page 35, indicated that DDR3 SDRAM supports burst lengths of 8. Added Internal Termination for High Range Banks option under Figure 1-23. Added bulleted item about Pin/Bank selection mode on page 39. Added notes about chip select and data mask options on page 74. Added app_correct_en_i to Table 1-17. Added three command types to Command Path, page 134. Added phy_mc_ctl_full, phy_mc_cmd_full, and phy_mc_data_full signals to Table 1-87. Added paragraph about FIFOs at the end of Physical Layer Interface (Non-Memory Controller Design), page 168. Updated the description and options for DATA_BUF_ADDR_WIDTH in Table 1-93. Added bullet about SLRs to Bank and Pin Selection Guides for DDR3 Designs, page 186. Added LVCMOS15 and DIFF_SSTL15 I/O standards to Configuration, page 194. Changed resistor values in Figure 1-88, Figure 1-89, and Figure 1-90. Changed resistor values in FPGA DCI or IN_TERM column in Table 1-95. • Chapter 2: Added the Verify Pin Changes and Update Design and Output Path sections. Revised latency mode description on page 280. Added bulleted item about Pin/Bank selection mode on page 285. Added Internal Termination for High Range Banks option under Figure 2-22. Updated Implementation Details, page 324. • Chapter 3: Added new chapter on RLDRAM II.
03/01/2011	1.0	Initial Xilinx release.

Table of Contents

Chapter 1: DDR3 and DDR2 SDRAM Memory Interface Solution

Introduction	20
Features	20
Using MIG in the Vivado Design Suite	21
Synplify Pro Black Box Testing	89
Core Architecture	90
Designing with the Core	162
Interfacing to the Core	163
Customizing the Core	180
Design Guidelines	192
Debugging DDR3/DDR2 Designs	228

Chapter 2: QDR II+ Memory Interface Solution

Introduction	274
Using MIG in the Vivado Design Suite	275
Core Architecture	317
Customizing the Core	337
Design Guidelines	342
Debugging QDR II+ SRAM Designs	351

Chapter 3: RLDRAM II and RLDRAM 3 Memory Interface Solutions

Introduction	379
Using MIG in the Vivado Design Suite	380
Core Architecture	424
Customizing the Core	458
Design Guidelines	466
Debugging RLDRAM II and RLDRAM 3 Designs	481

Chapter 4: LPDDR2 SDRAM Memory Interface Solution

Introduction	516
Features	516
Using MIG in the Vivado Design Suite	517
Core Architecture	575

Designing with the Core	611
Interfacing to the Core.....	611
Customizing the Core.....	621
Design Guidelines.....	631

Chapter 5: Multicontroller Design

Introduction	644
Using MIG in the Vivado Design Suite	645

Chapter 6: Upgrading the ISE/CORE Generator MIG Core in Vivado

Appendix A: General Memory Routing Guidelines

Appendix B: Additional Resources and Legal Notices

Xilinx Resources	677
References	677
Please Read: Important Legal Notices	678

DDR3 and DDR2 SDRAM Memory Interface Solution

Introduction

The Xilinx® 7 series FPGAs Memory Interface Solutions (MIS) core is a combined pre-engineered controller and physical layer (PHY) for interfacing 7 series FPGA user designs and AMBA® Advanced eXtensible Interface (AXI4) slave interfaces to DDR3 and DDR2 SDRAM devices. This user guide provides information about using, customizing, and simulating a LogiCORE™ IP DDR3 or DDR2 SDRAM interface core for 7 series FPGAs. The user guide describes the core architecture and provides details on customizing and interfacing to the core.



IMPORTANT: *Memory Interface Solutions v4.0 only supports the Vivado® Design Suite. The ISE® Design Suite is not supported in this version.*

Features

Enhancements to the Xilinx 7 series FPGA memory interface solutions from earlier memory interface solution device families include:

- Higher performance.
- New hardware blocks used in the physical layer: PHASER_IN and PHASER_OUT, PHY control block, and I/O FIFOs (see [Core Architecture, page 90](#)).
- Pinout rules changed due to the hardware blocks (see [Design Guidelines, page 192](#)).
- Controller and user interface operate at 1/4th the memory clock frequency.

For a full list of supported features, see the *Zynq-7000 AP SoC and 7 Series FPGAs Memory Interface Solutions Data Sheet* (DS176) [[Ref 1](#)].

Using MIG in the Vivado Design Suite

This section provides the steps to generate the Memory Interface Generator (MIG) IP core using the Vivado Design Suite and run implementation.

1. Start the Vivado Design Suite (see [Figure 1-1](#)).

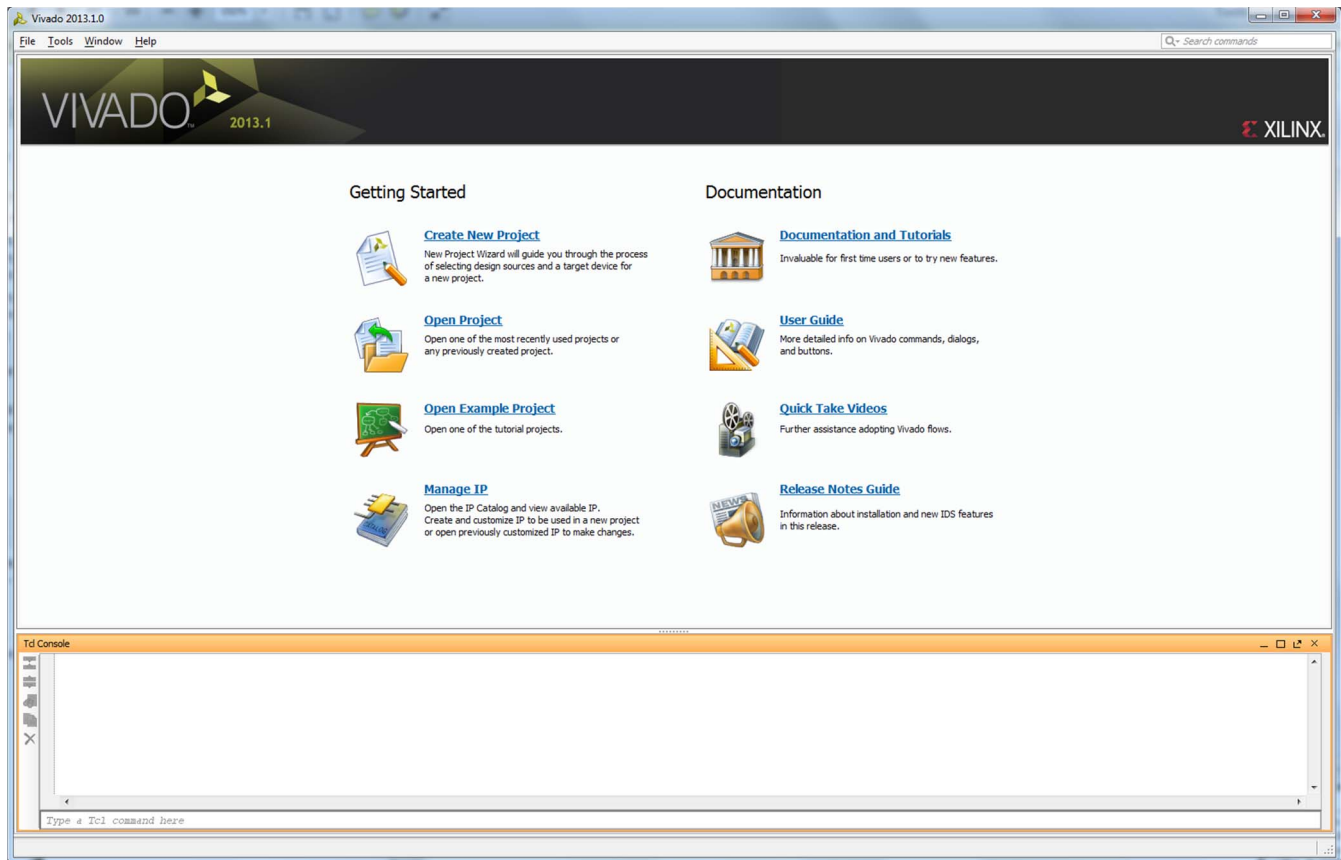


Figure 1-1: Vivado Design Suite

2. To create a new project, click the **Create New Project** option shown in [Figure 1-1](#) to open the page as shown in [Figure 1-2](#).

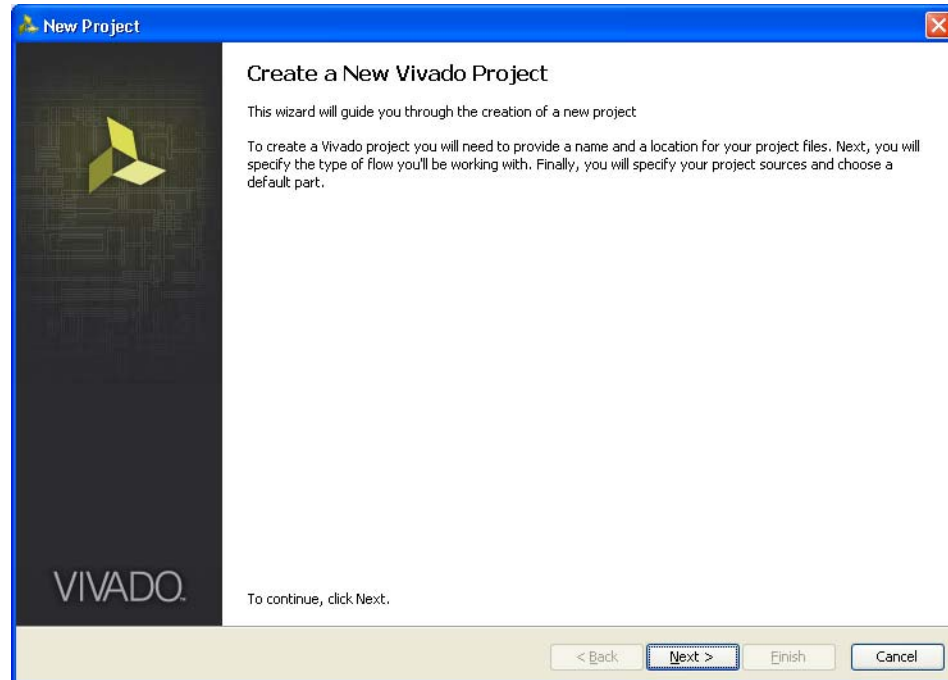


Figure 1-2: Create a New Vivado Tool Project

3. Click **Next** to proceed to the **Project Name** page (Figure 1-3). Enter the **Project Name** and **Project Location**. Based on the details provided, the project is saved in the directory.

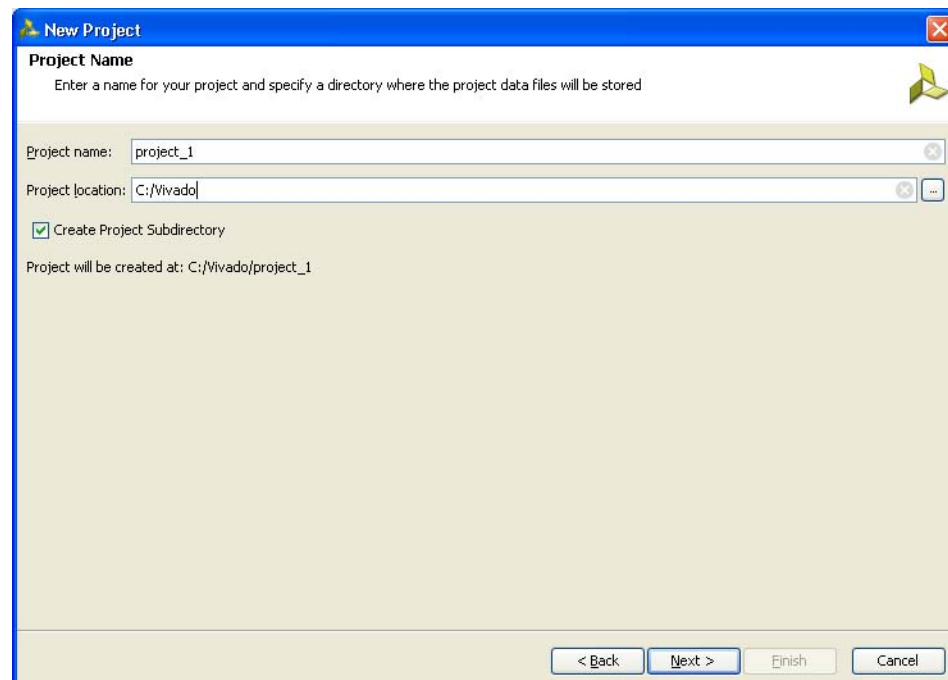


Figure 1-3: Project Name

- Click **Next** to proceed to the **Project Type** page (Figure 1-4). Select the **Project Type** as **RTL Project** because MIG deliverables are RTL files.

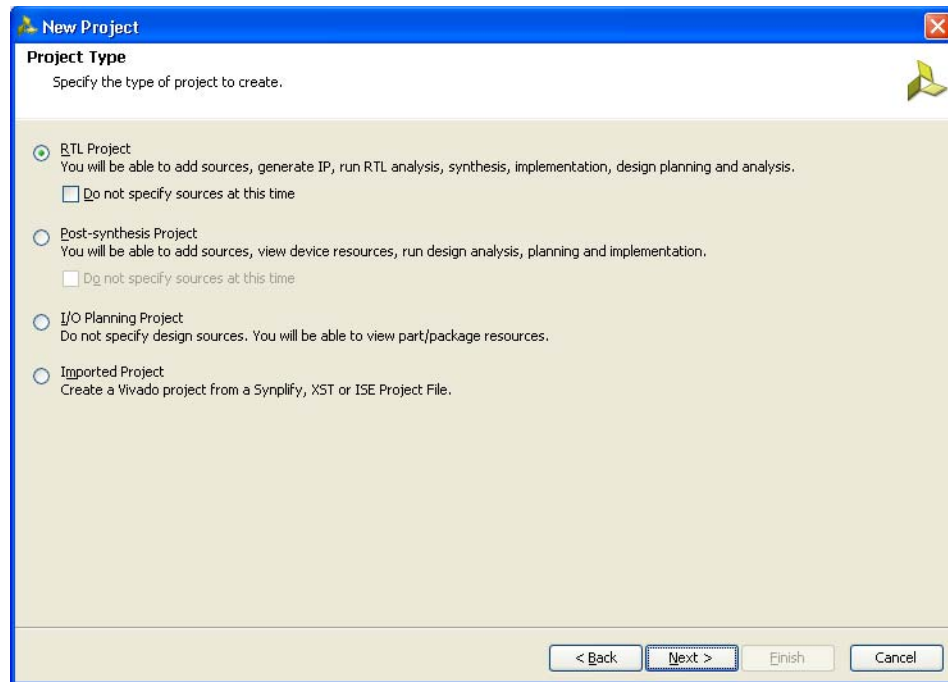


Figure 1-4: Project Type

- Click **Next** to proceed to the **Add Sources** page (Figure 1-5). RTL files can be added to the project in this page. If the project was not created earlier, proceed to the next page.

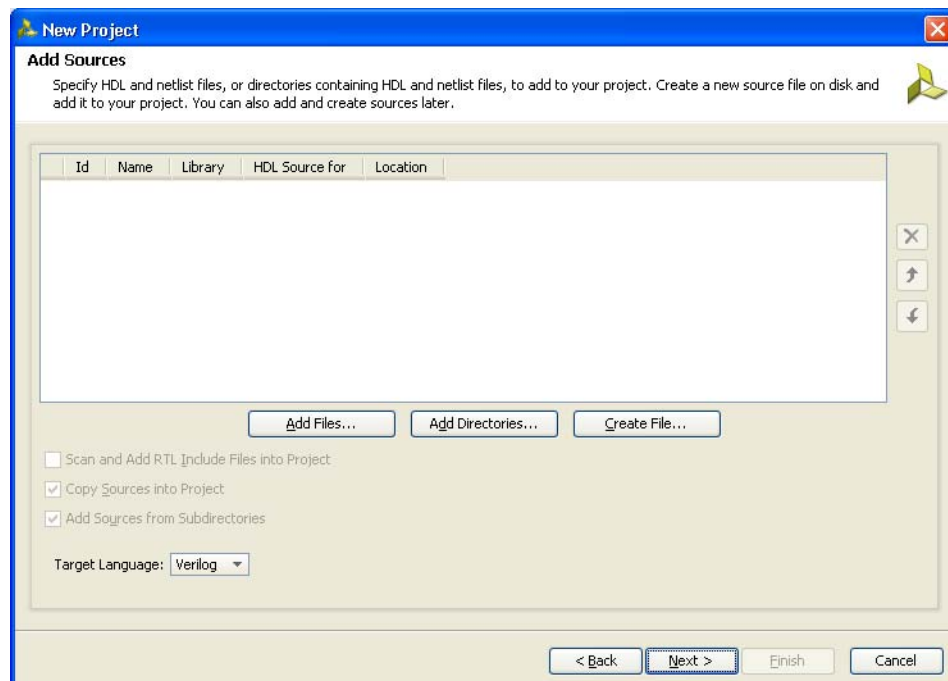


Figure 1-5: Add Sources

6. Click **Next** to open the **Add Existing IP (Optional)** page (Figure 1-6). If the IP is already created, the XCI file generated by the IP can be added to the project and the previous created IP files are automatically added to the project. If the IP was not created earlier, proceed to the next page.

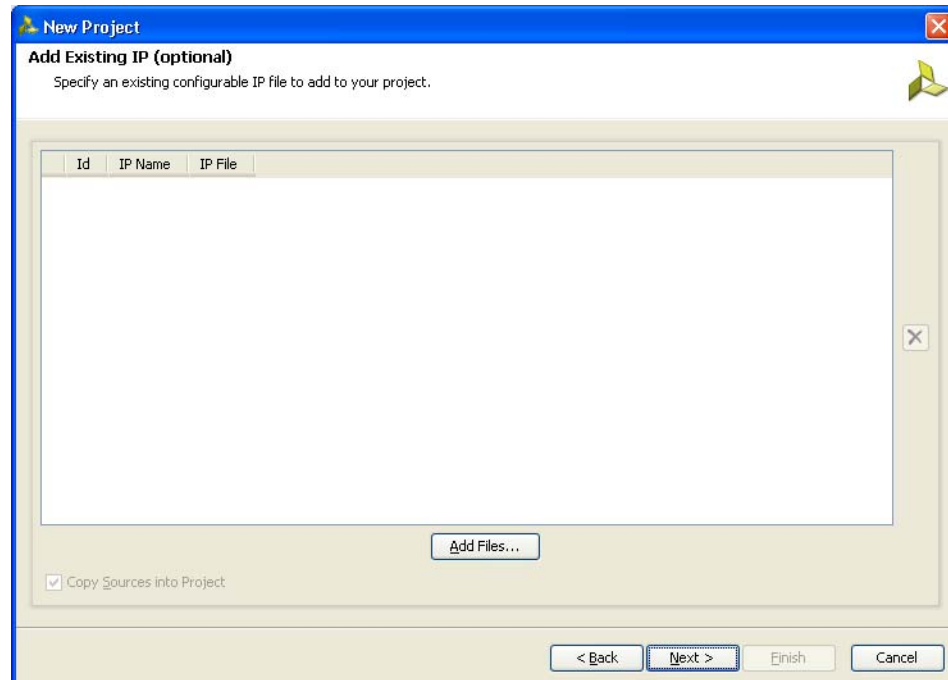


Figure 1-6: Add Existing IP (Optional)

7. Click **Next** to open the **Add Constraints (Optional)** page (Figure 1-7). If the constraints file exists in the repository, it can be added to the project. Proceed to the next page if the constraints file does not exist.

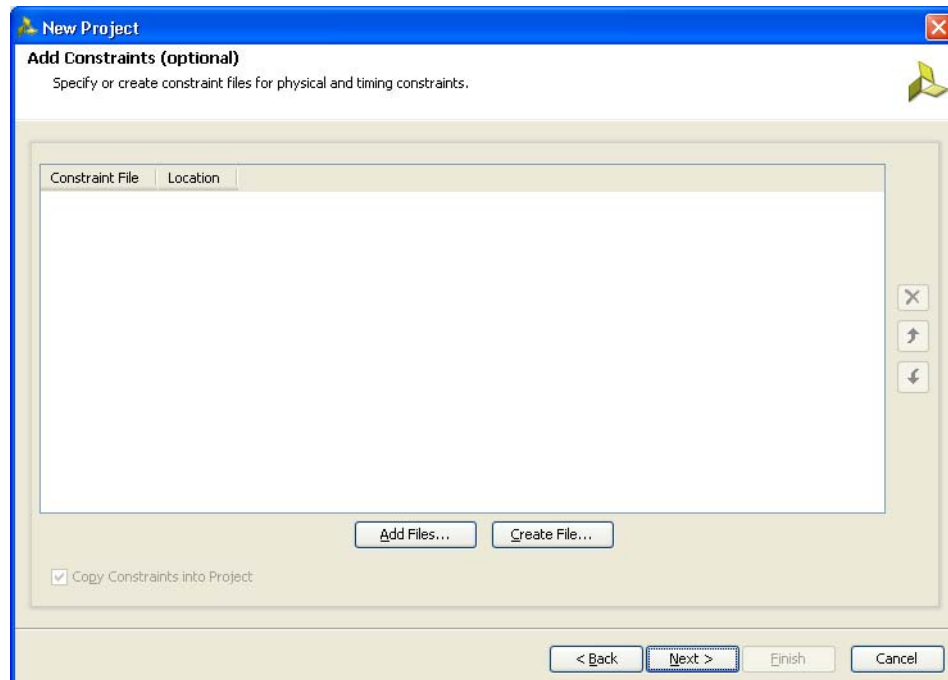


Figure 1-7: Add Constraints (Optional)

8. Click **Next** to proceed to the **Default Part** page (Figure 1-8) where the device that needs to be targeted can be selected. The **Default Part** page appears as shown in Figure 1-8.

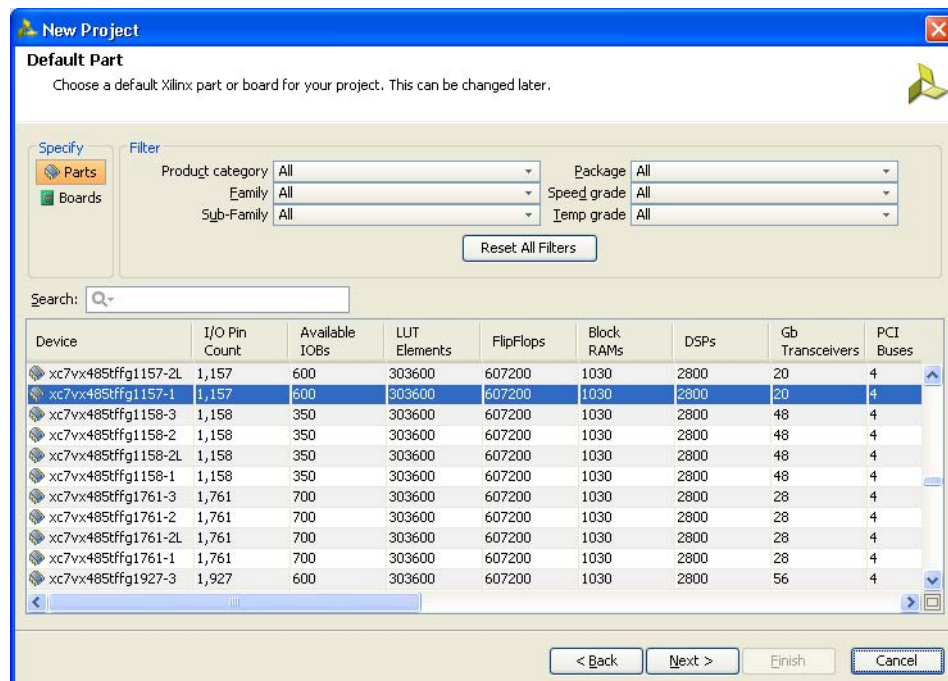


Figure 1-8: Default Part (Default Window)

Select the target **Family**, **Package**, and **Speed Grade**. The valid devices are displayed in the same page, and the device can be selected based on the targeted device (Figure 1-9).

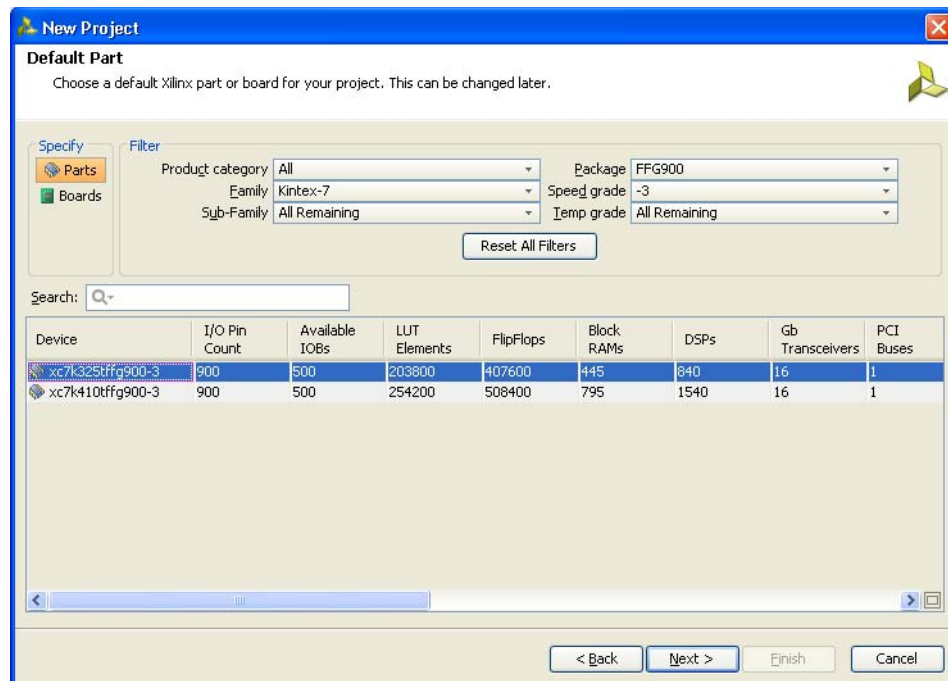


Figure 1-9: Default Part (Customized Window)

Apart from selecting the parts by using **Parts** option, parts can be selected by choosing the **Boards** option, which brings up the evaluation boards supported by Xilinx (Figure 1-10). With this option, design can be targeted for the various evaluation boards. If the XCI file of an existing IP was selected in an earlier step, the same part should be selected here.

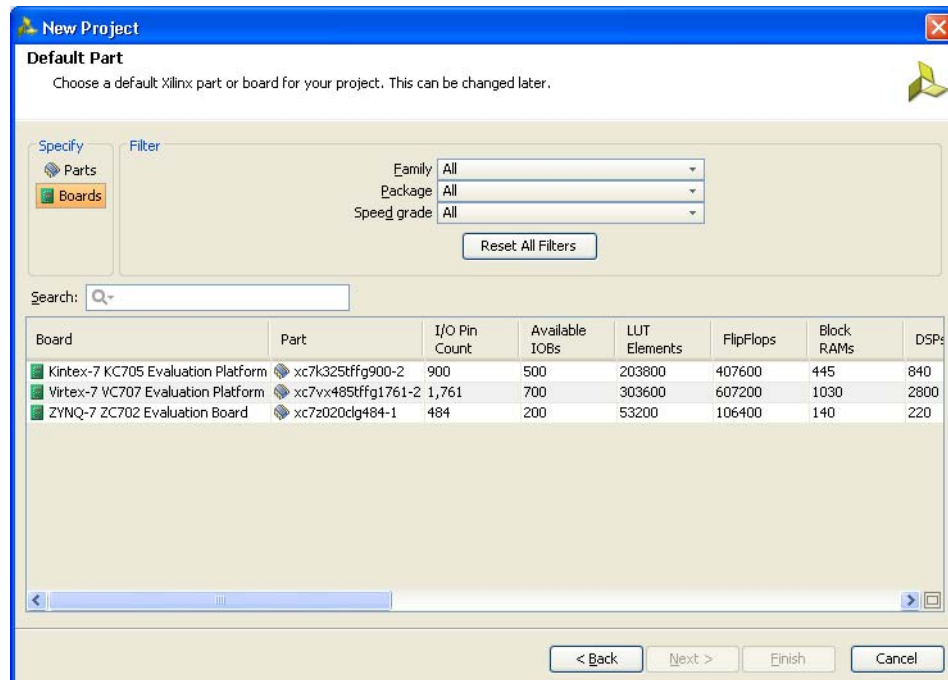


Figure 1-10: Default Part Boards Option

- Click **Next** to open the **New Project Summary** page (Figure 1-11). This includes the summary of selected project details.

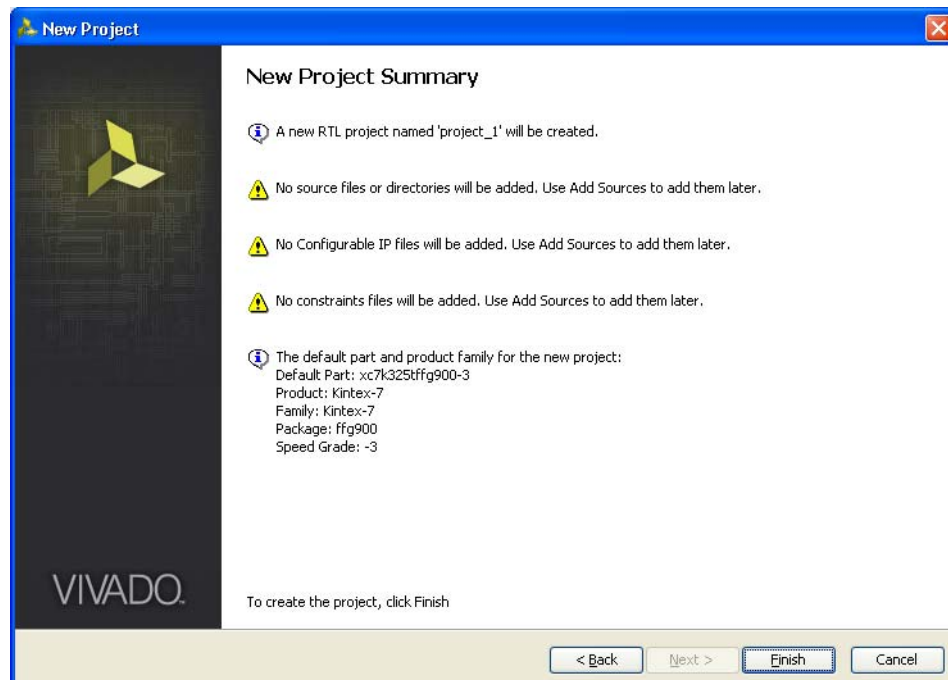


Figure 1-11: New Project Summary

- Click **Finish** to complete the project creation.

11. Click **IP Catalog** on the **Project Manager** window to open the IP catalog window. The Vivado IP catalog window appears on the right side panel (see [Figure 1-12](#), highlighted in a red circle).
12. The MIG tool exists in the **Memories & Storage Elements > Memory Interface Generators** section of the IP catalog window ([Figure 1-12](#)) or you can search from the Search tool bar for the string "MIG."

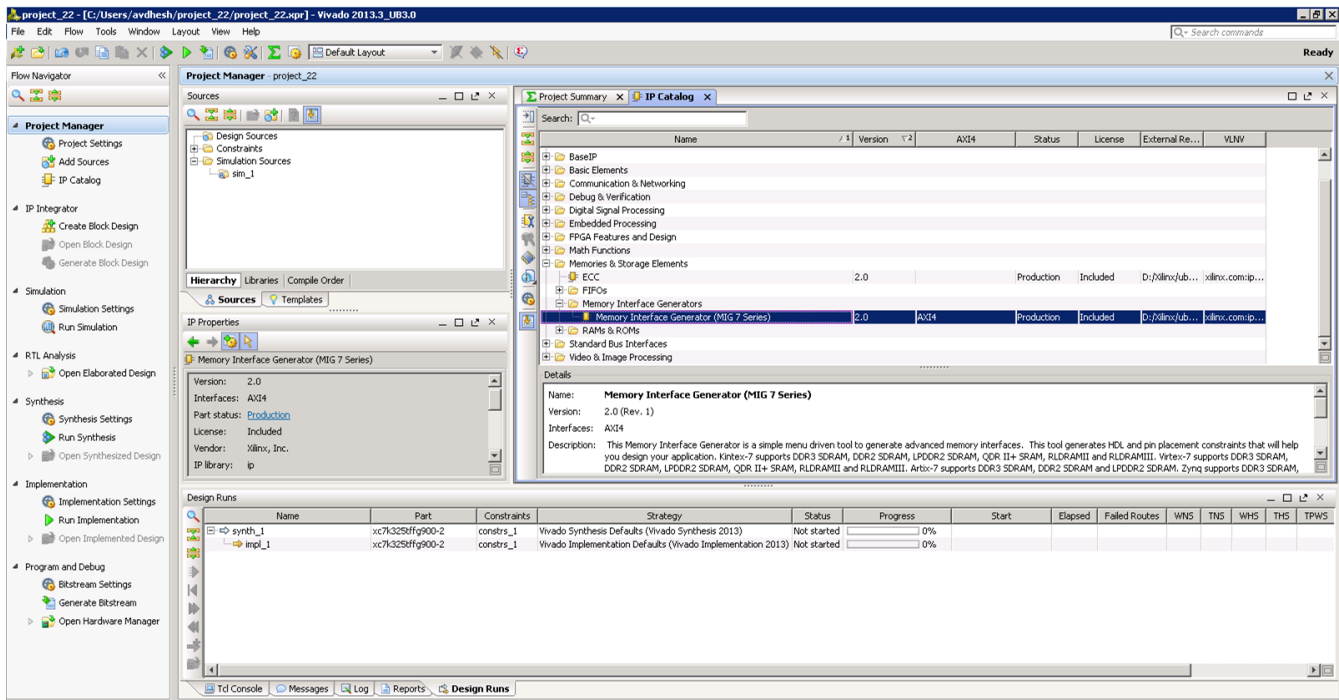


Figure 1-12: IP Catalog Window – Memory Interface Generator

13. Select **MIG 7 Series** to open the MIG tool (Figure 1-13).

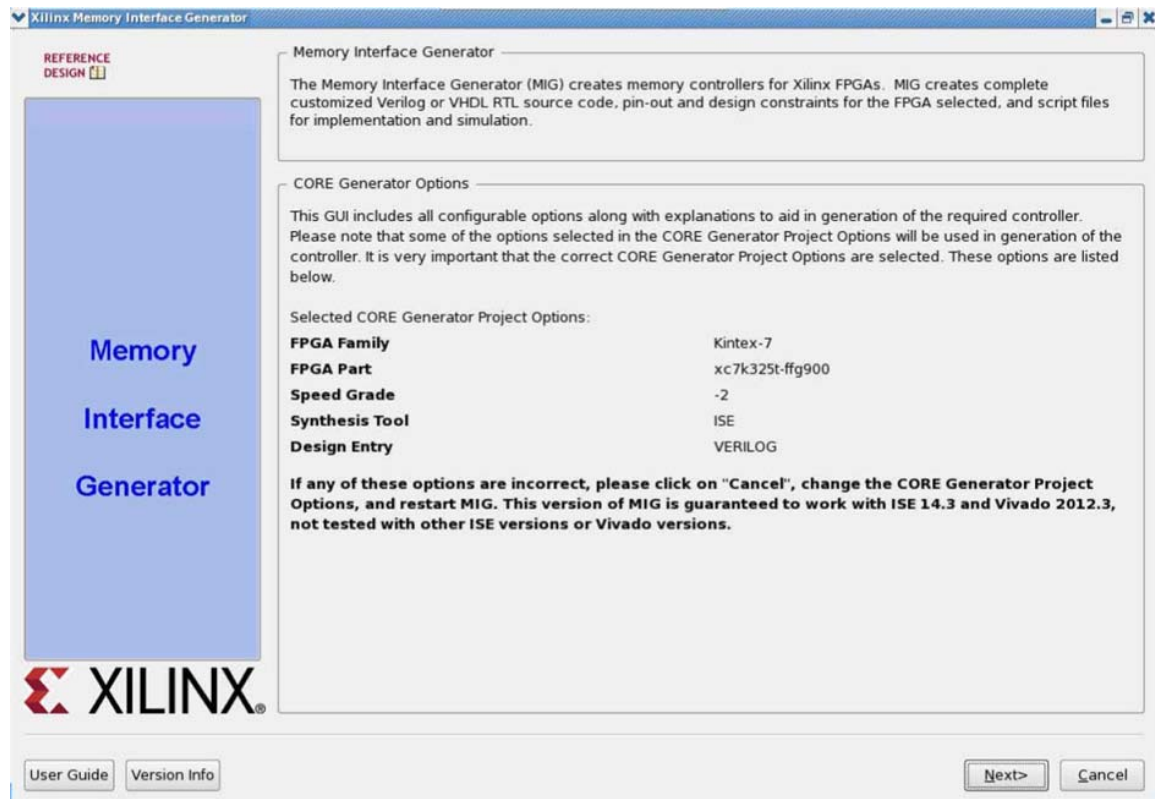


Figure 1-13: 7 Series FPGAs Memory Interface Generator FPGA Front Page

14. Click **Next** to display the **Output Options** page.


Customizing and Generating the Core



CAUTION! The Windows operating system has a 260-character limit for path lengths, which can affect the Vivado tools. To avoid this issue, use the shortest possible names and directory locations when creating projects, defining IP or managed IP projects, and creating block designs.

MIG Output Options

1. Select the **Create Design** to create a new Memory Controller design. Enter a component name in the **Component Name** field (Figure 1-14).
2. Choose the number of controllers to be generated. This option determines the replication of further pages.
3. DDR2 and DDR3 SDRAM designs support the memory-mapped AXI4 interface. The AXI4 interface is implemented in Verilog only. If an AXI4 interface is required, select the language as "Verilog" in the Vivado Design Suite before invoking the MIG tool. If the AXI4 interface is not selected, the user interface (UI) is the primary interface.

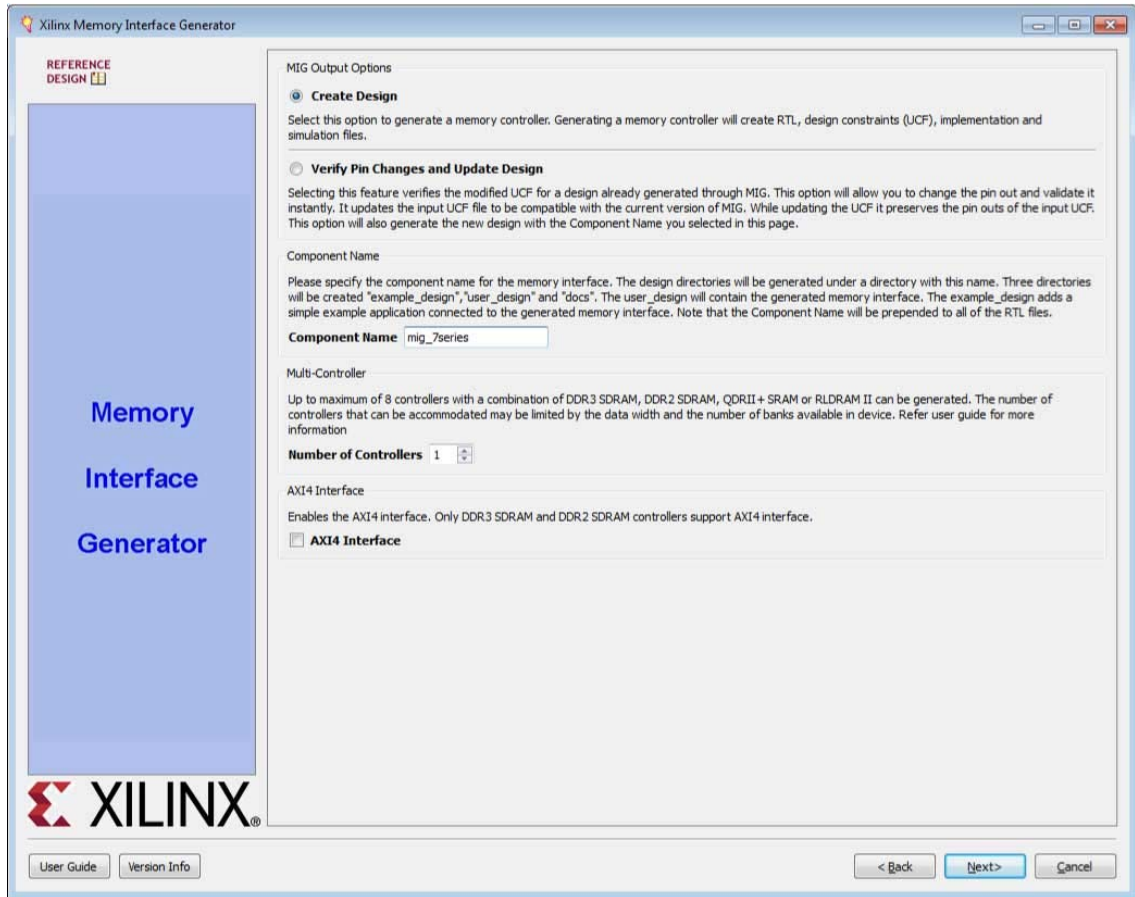

UG586_c1_09_120311

Figure 1-14: MIG Output Options

MIG outputs are generated with the folder name `<component name>`.



IMPORTANT: Only alphanumeric characters can be used for `<component name>`. Special characters cannot be used. This name should always start with an alphabetical character and can end with an alphanumeric character.


When invoked from Xilinx Platform Studio (XPS), the component name is corrected to be the IP instance name from XPS.

4. Click **Next** to display the **Pin Compatible FPGAs** page.

Pin Compatible FPGAs

The **Pin Compatible FPGAs** page lists FPGAs in the selected family having the same package. If the generated pinout from the MIG tool needs to be compatible with any of these other FPGAs, this option should be used to select the FPGAs with which the pinout has to be compatible (Figure 1-15).

Xilinx 7 series devices using stacked silicon interconnect (SSI) technology have super logic regions (SLRs). Memory interfaces cannot span across SLRs. If the device selected or a compatible device that is selected has SLRs, the MIG tool ensures that the interface does not cross SLR boundaries.

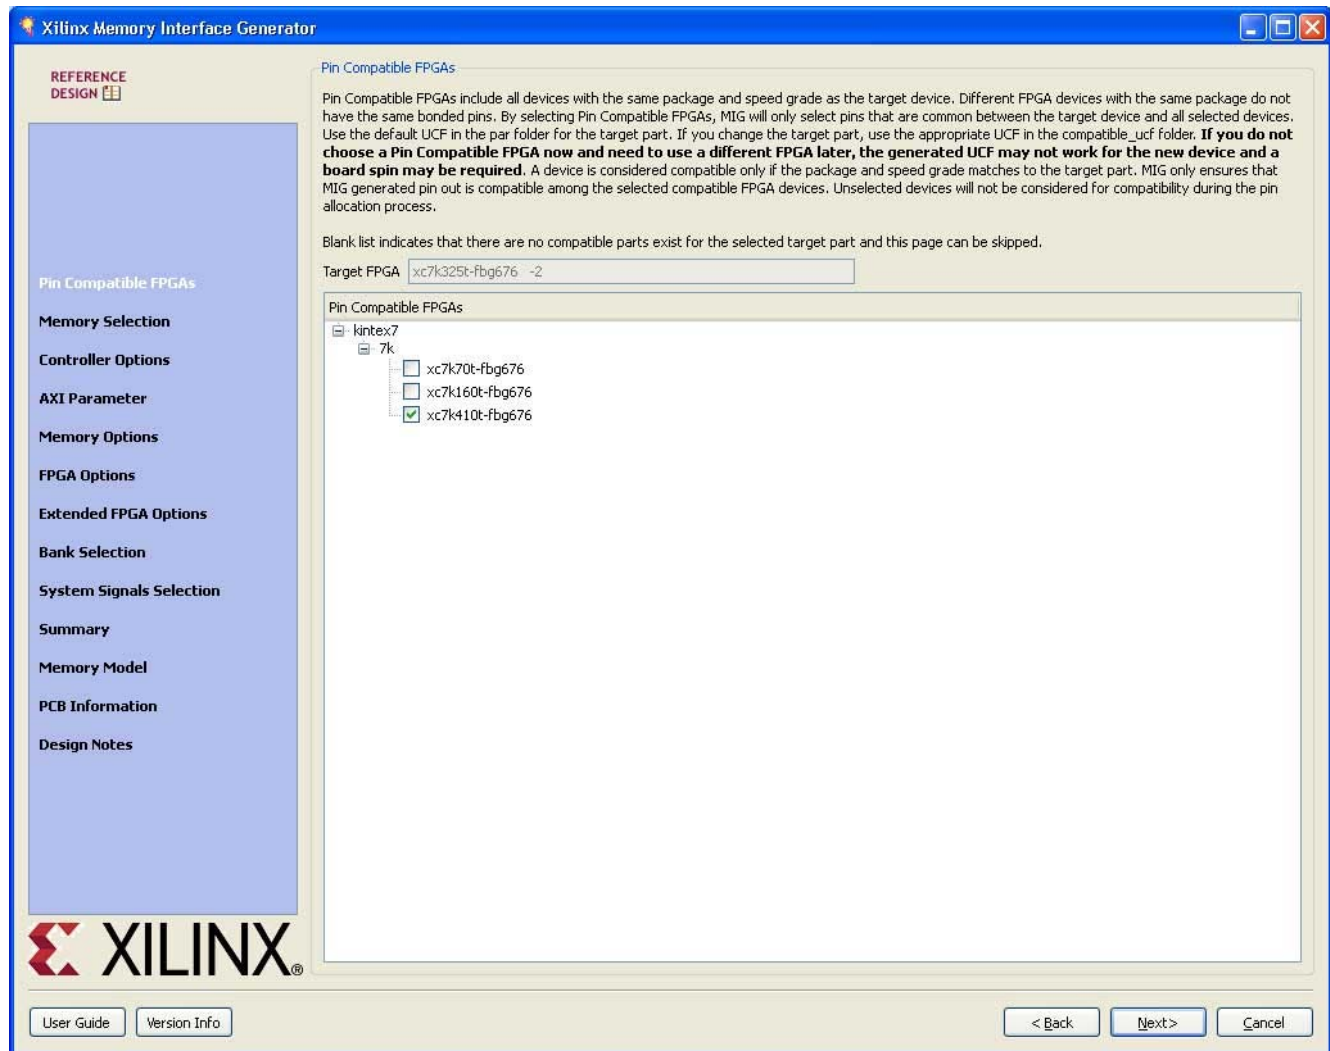

UG586_c1_10_110610

Figure 1-15: Pin-Compatible 7 Series FPGAs


1. Select any of the compatible FPGAs in the list. Only the common pins between the target and selected FPGAs are used by the MIG tool. The name in the text box signifies the target FPGA selected.
2. Click **Next** to display the **Memory Selection** page.

Creating 7 Series FPGA DDR3 Memory Controller Block Design

Memory Selection

This page displays all memory types that are supported by the selected FPGA family.

1. Select the **DDR3 SDRAM** controller type.
2. Click **Next** to display the **Controller Options** page (Figure 1-16).

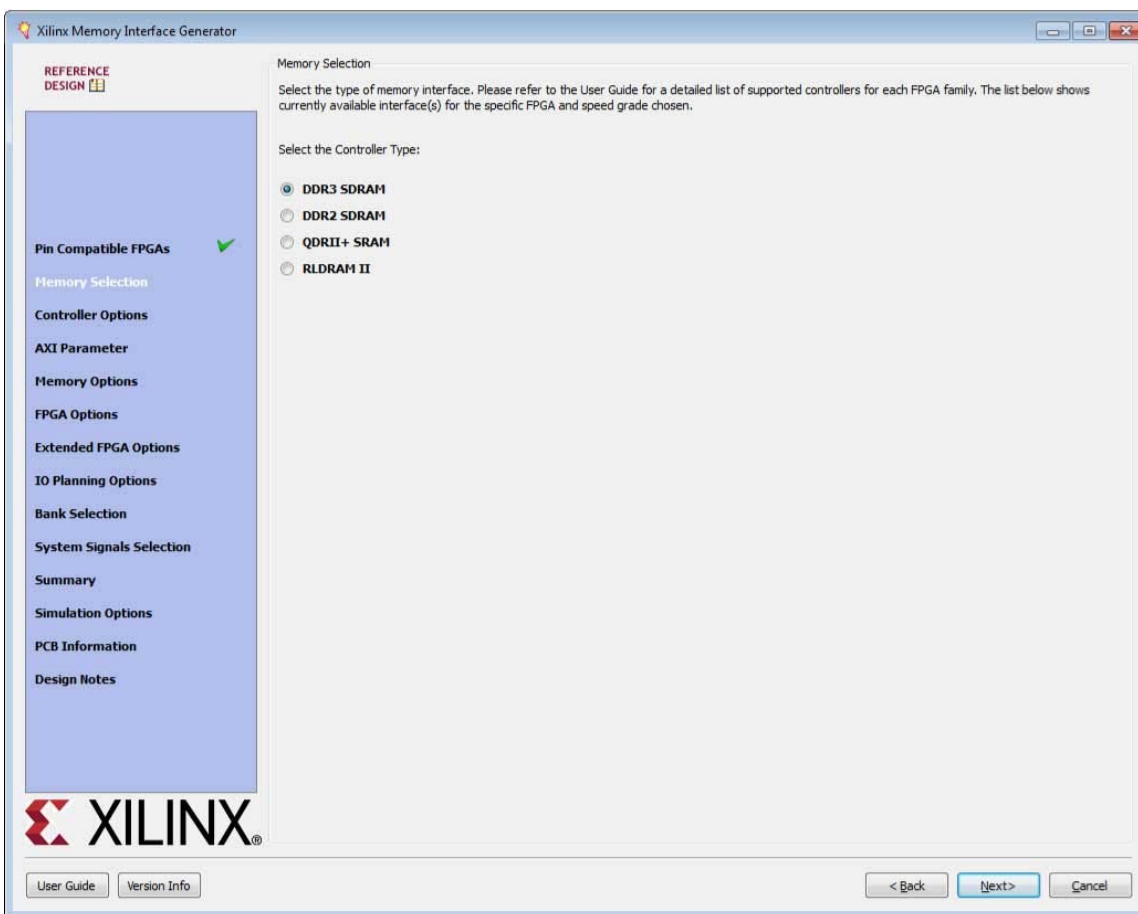

UG586_c1_11_120311


Figure 1-16: Memory Type and Controller Selection

Controller Options

This page shows the various controller options that can be selected (Figure 1-17).



TIP: The use of the Memory Controller is optional. The Physical Layer, or PHY, can be used without the Memory Controller. The Memory Controller RTL is always generated by the MIG tool, but this output need not be used. See [Physical Layer Interface \(Non-Memory Controller Design\)](#), page 174 for more information. Controller-only settings such as ORDERING are not needed in this case, and the defaults can be used. Settings pertaining to the PHY, such as the Clock Period, are used to set the PHY parameters appropriately.

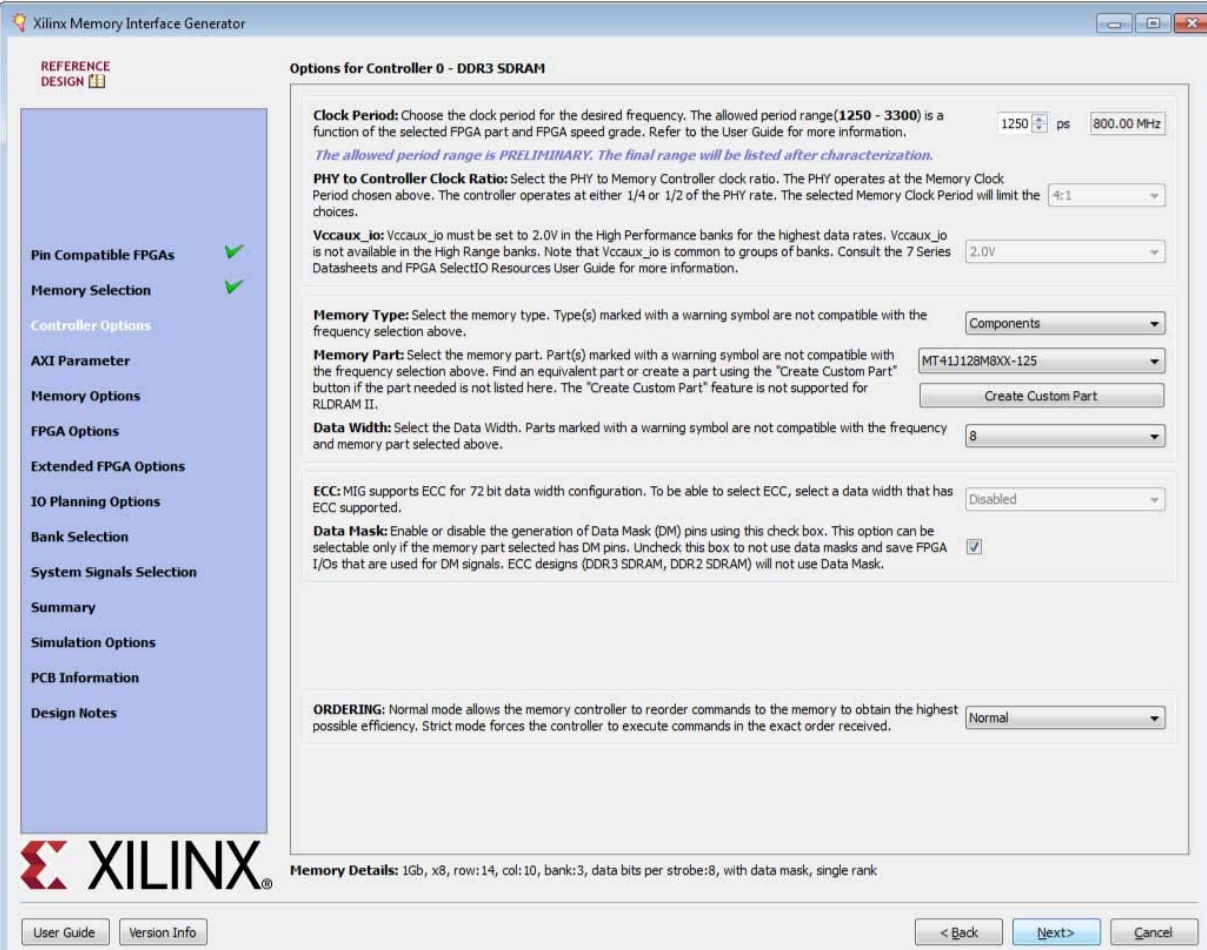

REFERENCE DESIGN

- Pin Compatible FPGAs ✓
- Memory Selection ✓
- Controller Options**
- AXI Parameter
- Memory Options
- FPGA Options
- Extended FPGA Options
- IO Planning Options
- Bank Selection
- System Signals Selection
- Summary
- Simulation Options
- PCB Information
- Design Notes

Options for Controller 0 - DDR3 SDRAM

Clock Period: Choose the clock period for the desired frequency. The allowed period range(1250 - 3300) is a function of the selected FPGA part and FPGA speed grade. Refer to the User Guide for more information.
 1250 ps 800.00 MHz
The allowed period range is PRELIMINARY. The final range will be listed after characterization.

PHY to Controller Clock Ratio: Select the PHY to Memory Controller clock ratio. The PHY operates at the Memory Clock Period chosen above. The controller operates at either 1/4 or 1/2 of the PHY rate. The selected Memory Clock Period will limit the choices.
 4:1

Vccaux_io: Vccaux_io must be set to 2.0V in the High Performance banks for the highest data rates. Vccaux_io is not available in the High Range banks. Note that Vccaux_io is common to groups of banks. Consult the 7 Series Datasheets and FPGA SelectIO Resources User Guide for more information.
 2.0V

Memory Type: Select the memory type. Type(s) marked with a warning symbol are not compatible with the frequency selection above.
 Components

Memory Part: Select the memory part. Part(s) marked with a warning symbol are not compatible with the frequency selection above. Find an equivalent part or create a part using the "Create Custom Part" button if the part needed is not listed here. The "Create Custom Part" feature is not supported for RDRAM II.
 MT41J128M8XX-125
 Create Custom Part

Data Width: Select the Data Width. Parts marked with a warning symbol are not compatible with the frequency and memory part selected above.
 8

ECC: MIG supports ECC for 72 bit data width configuration. To be able to select ECC, select a data width that has ECC supported.
 Disabled

Data Mask: Enable or disable the generation of Data Mask (DM) pins using this check box. This option can be selectable only if the memory part selected has DM pins. Uncheck this box to not use data masks and save FPGA I/Os that are used for DM signals. ECC designs (DDR3 SDRAM, DDR2 SDRAM) will not use Data Mask.
☒

ORDERING: Normal mode allows the memory controller to reorder commands to the memory to obtain the highest possible efficiency. Strict mode forces the controller to execute commands in the exact order received.
 Normal

Memory Details: 1Gb, x8, row:14, col:10, bank:3, data bits per strobe:8, with data mask, single bank

User Guide Version Info < Back Next> Cancel

UG586_c1_12_120311

Figure 1-17: Controller Options Page

If the design has multiple controllers, the controller options page is repeated for each of the controllers. This page is partitioned into a maximum of nine sections. The number of partitions depends on the type of memory selected. The controller options page also contains these pull-down menus to modify different features of the design:

- **Frequency** – This feature indicates the operating frequency for all of the controllers. The frequency block is limited by factors such as the selected FPGA and device speed grade.
- **PHY to Controller Clock Ratio** – This feature determines the ratio of the physical layer (memory) clock frequency to the controller and user interface clock frequency. The 2:1 ratio lowers the maximum memory interface frequency due to FPGA logic timing limitations. The user interface data bus width of the 2:1 ratio is four times the width of the physical memory interface width, while the bus width of the 4:1 ratio is eight times the physical memory interface width. The 2:1 ratio has lower latency. The 4:1 ratio is necessary for the highest data rates.
- **VCCAUX_IO** – Set based on the period/frequency setting. 2.0V is required at the highest frequency settings in the High Performance column. The MIG tool automatically selects 2.0V when required. Either 1.8 or 2.0V can be used at lower frequencies. Groups of banks share the VCCAUX_IO supply. For more information, see the *7 Series FPGAs SelectIO™ Resources User Guide* (UG471) [Ref 2] and the *7 Series FPGAs Packaging and Pinout Specification* (UG475) [Ref 3].
- **Memory Type** – This feature selects the type of memory parts used in the design.
- **Memory Part** – This option selects a memory part for the design. Selections can be made from the list or a new part can be created.

Note: For a complete list of memory parts available, see Answer Record: [54025](#).

- **Data Width** – The data width value can be selected here based on the memory type selected earlier. The list shows all supported data widths for the selected part. One of the data widths can be selected. These values are generally multiples of the individual device data widths. In some cases, the width might not be an exact multiple. For example, 16 bits is the default data width for x16 components, but eight bits is also a valid value.
- **Data Mask** – This option allocates data mask pins when selected. This should be deselected to deallocate data mask pins and increase pin efficiency. Also, this is disabled for memory parts that do not support data mask.



IMPORTANT: *The Data Mask (DM) option is always selected for AXI designs and is grayed out (you cannot select it). For AXI interfaces, Read Modify Write (RMW) is supported and for RMW to mask certain bytes of Data Mask bits should be present. Therefore, the DM is always enabled for AXI interface designs. This is the case for all data widths except 72-bit.*

For 72-bit interfaces, Error Correcting Code (ECC) is enabled and DM is deselected and grayed out. If DM is enabled for 72-bit designs, computing ECC is not compatible, therefore DM is disabled for 72-bit designs.

- **Ordering** – This feature allows the Memory Controller to reorder commands to improve the memory bus efficiency.
- **Memory Details** – The bottom of the **Controller Options** page ([Figure 1-17](#)) displays the details for the selected memory configuration ([Figure 1-18](#)).


Memory Details: 1Gb, x8, row:14, col:10, bank:3, data bits per strobe:8, with data mask

UG586_c1_20_091410

Figure 1-18: Memory Details

Create Custom Part

1. On the **Controller Options** page select the appropriate frequency. Either use the spin box or enter a valid value using the keyboard. Values entered are restricted based on the minimum and maximum frequencies supported.
2. Select the appropriate memory part from the list. If the required part or its equivalent is unavailable, a new memory part can be created. To create a custom part, click the **Create Custom Part** below the **Memory Part** pull-down menu. A new page appears, as shown in [Figure 1-19](#).

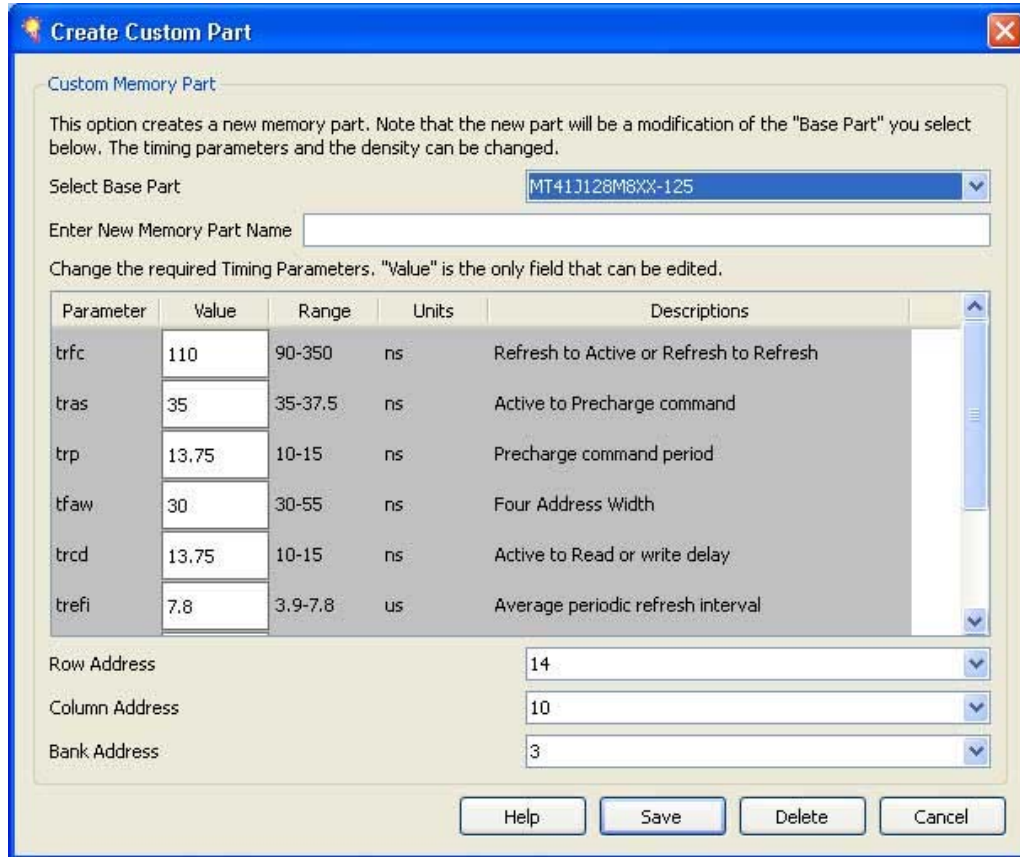

Create Custom Part

Custom Memory Part

This option creates a new memory part. Note that the new part will be a modification of the "Base Part" you select below. The timing parameters and the density can be changed.

Select Base Part: **MT41J128M8XX-125**

Enter New Memory Part Name:

Change the required Timing Parameters. "Value" is the only field that can be edited.

Parameter	Value	Range	Units	Descriptions
trfc	110	90-350	ns	Refresh to Active or Refresh to Refresh
tras	35	35-37.5	ns	Active to Precharge command
trp	13.75	10-15	ns	Precharge command period
tfaw	30	30-55	ns	Four Address Width
trcd	13.75	10-15	ns	Active to Read or write delay
trefi	7.8	3.9-7.8	us	Average periodic refresh interval

Row Address: **14**

Column Address: **10**

Bank Address: **3**

Buttons: Help, Save, Delete, Cancel

UG586_c1_21_110610

Figure 1-19: Create Custom Part

The **Create Custom Part** page includes all the specifications of the memory component selected in the **Select Base Part** pull-down menu.


- Enter the appropriate memory part name in the text box.
- Select the suitable base part from the **Select Base Part** list.
- Edit the value column as needed.
- Select the suitable values from the **Row**, **Column**, and **Bank** options as per the requirements.
- After editing the required fields, click **Save**. The new part is saved with the selected name. This new part is added in the Memory Parts list on the **Controller Options** page. It is also saved into the database for reuse and to produce the design.
- Click **Next** to display the **Memory Options** page (or the **AXI Parameter Options** page if AXI Enable is checked on the **Memory Type** selection page).

AXI Parameter Options

This feature allows the selection of AXI parameters for the controller (Figure 1-20). These are standard AXI parameters or parameters specific to the AXI4 interface. Details are available in the ARM® AMBA® specifications [Ref 4].

These parameters specific to the AXI4 interface logic can be configured:

- **Address Width** and **AXI ID Width** – When invoked from XPS, address width and ID width settings are automatically set by XPS so the options are not shown.
- **Base** and **High Address** – Sets the system address space allocated to the Memory Controller. These values must be a power of 2 with a size of at least 4 KB, and the base address must be aligned to the size of the memory space.
- **Narrow Burst Support** – Deselecting this option allows the AXI4 interface to remove logic to handle AXI narrow bursts to save resources and improving timing. XPS normally auto-calculates whether narrow burst support can be disabled based on the known behavior of connected AXI masters.
- **Arbitration Scheme** – Selects the arbitration scheme between read and write address channels.

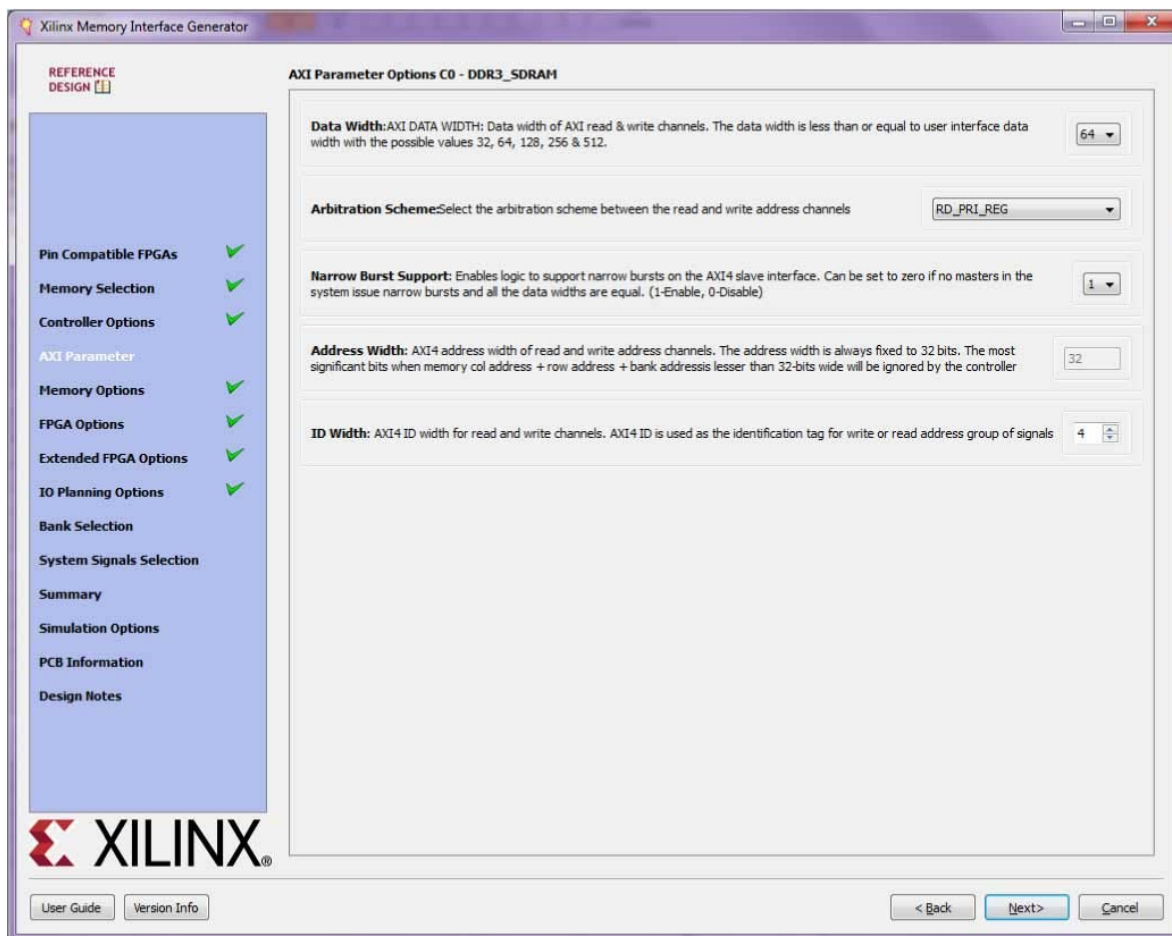


UG586_c1_22_090511

Figure 1-20: Setting AXI Parameter Options

Setting DDR3 Memory Parameter Option

This feature allows the selection of various memory mode register values, as supported by the controller specification (Figure 1-21).

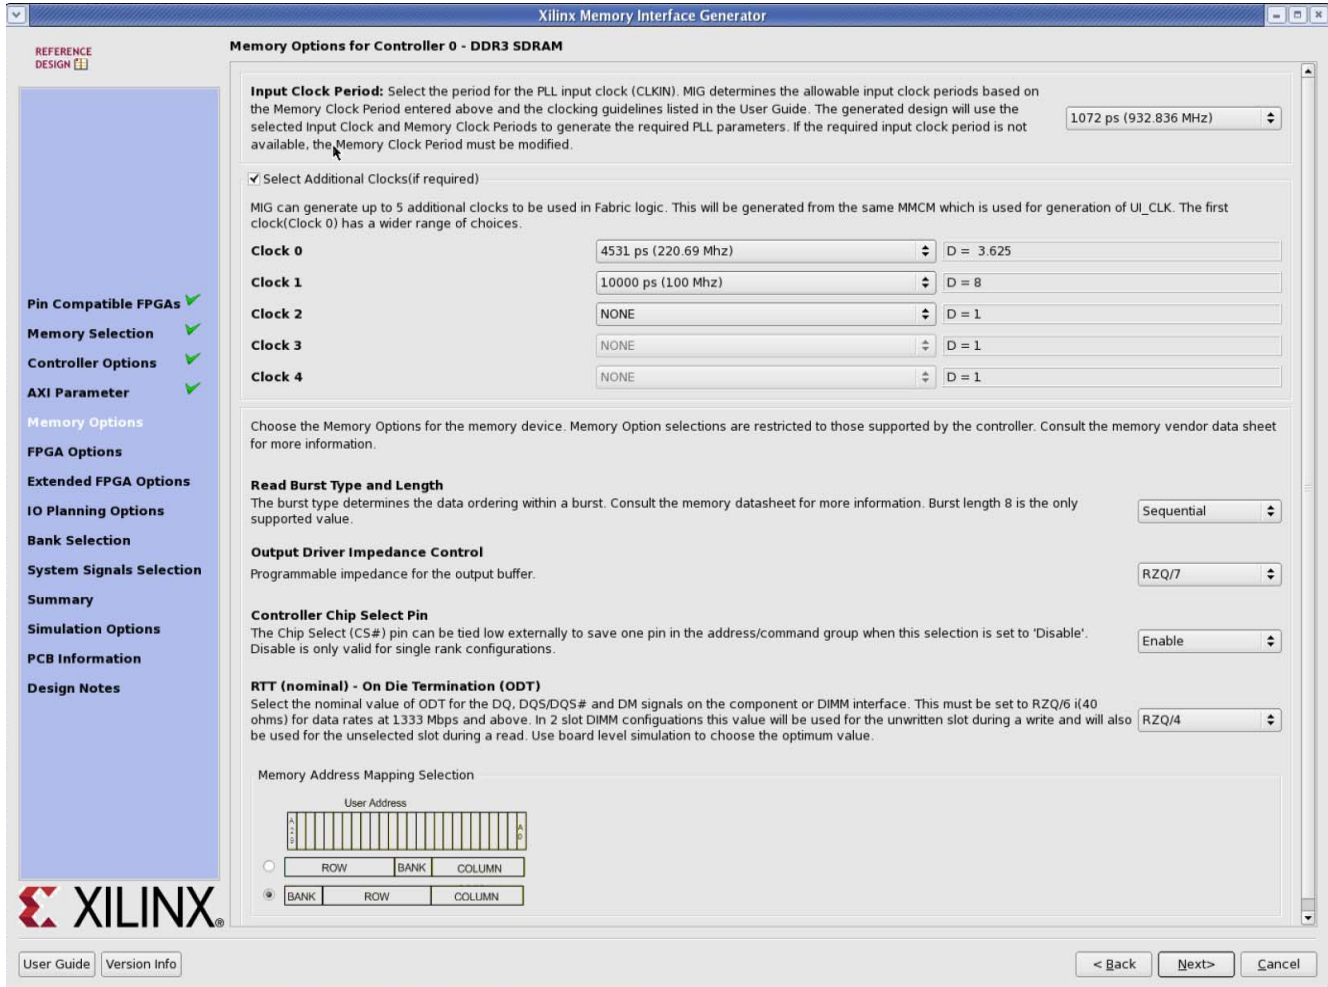

Memory Options for Controller 0 - DDR3 SDRAM

Input Clock Period: Select the period for the PLL input clock (CLKIN). MIG determines the allowable input clock periods based on the Memory Clock Period entered above and the clocking guidelines listed in the User Guide. The generated design will use the selected Input Clock and Memory Clock Periods to generate the required PLL parameters. If the required input clock period is not available, the Memory Clock Period must be modified.

1072 ps (932.836 MHz)

☒ Select Additional Clocks(if required)

MIG can generate up to 5 additional clocks to be used in Fabric logic. This will be generated from the same MMCM which is used for generation of UI_CLK. The first clock(Clock 0) has a wider range of choices.

Clock	Period	D
Clock 0	4531 ps (220.69 Mhz)	D = 3.625
Clock 1	10000 ps (100 Mhz)	D = 8
Clock 2	NONE	D = 1
Clock 3	NONE	D = 1
Clock 4	NONE	D = 1

Choose the Memory Options for the memory device. Memory Option selections are restricted to those supported by the controller. Consult the memory vendor data sheet for more information.

Read Burst Type and Length
The burst type determines the data ordering within a burst. Consult the memory datasheet for more information. Burst length 8 is the only supported value.

Sequential

Output Driver Impedance Control
Programmable impedance for the output buffer.

RZQ/7

Controller Chip Select Pin
The Chip Select (CS#) pin can be tied low externally to save one pin in the address/command group when this selection is set to 'Disable'. Disable is only valid for single rank configurations.

Enable

RTT (nominal) - On Die Termination (ODT)
Select the nominal value of ODT for the DQ, DQS/DQS# and DM signals on the component or DIMM interface. This must be set to RZQ/6 (40 ohms) for data rates at 1333 Mbps and above. In 2 slot DIMM configurations this value will be used for the unwritten slot during a write and will also be used for the unselected slot during a read. Use board level simulation to choose the optimum value.

RZQ/4

Memory Address Mapping Selection

User Address

☐ ROW BANK COLUMN

☒ BANK ROW COLUMN

Figure 1-21: Setting Memory Mode Options

The mode register value is loaded into the load mode register during initialization. Only burst length 8 (BL8) is supported for DDR2 and DDR3 SDRAM.

The **Output Driver Impedance Control** sets the output driver impedance on the DRAM. The selections listed are determined by specific DRAM chosen. RZQ is 240Ω. For example, if RZQ/6 is chosen, the output drive impedance is 40Ω. For more information, consult the memory vendor data sheet.

The DDR2 SDRAM interface has a separate option to select the number of memory clocks called **Memory Clock Selection**. Each component has a **Number of Memory Clocks** setting, and the maximum number of clocks allowed is four.

The desired input clock period is selected from the list. These values are determined by the memory clock period chosen and the allowable limits of the parameters. See [Design Guidelines, page 192](#) for more information on the PLL parameter limits.

Select Additional Clocks option appears for AXI interface designs only. Selection is allowed for up to five additional clocks which are generated from the same MMCM that generates UI_CLK.




IMPORTANT: The **Select Additional Clocks** option appears in Vivado IP integrator flow only.

Click **Next** to display the **FPGA Options** page.

FPGA Options

Figure 1-22 shows the **FPGA Options** page.

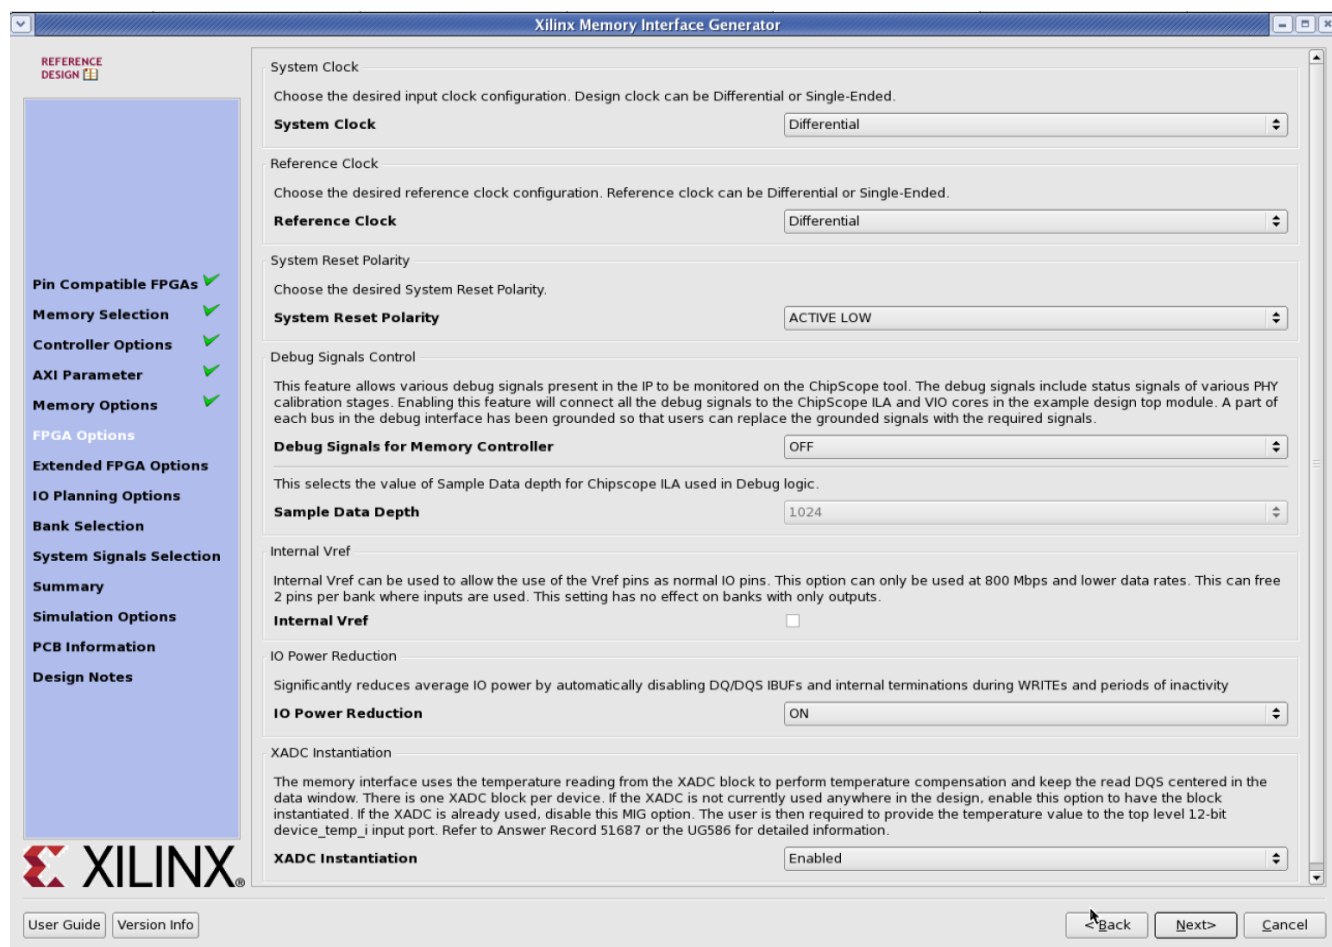

The screenshot shows the 'Xilinx Memory Interface Generator' window with the 'FPGA Options' tab selected. The left sidebar contains a list of options: Pin Compatible FPGAs, Memory Selection, Controller Options, AXI Parameter, Memory Options, FPGA Options (selected), Extended FPGA Options, IO Planning Options, Bank Selection, System Signals Selection, Summary, Simulation Options, PCB Information, and Design Notes. The main area displays various configuration options for the FPGA interface.

Option	Value
System Clock	Differential
Reference Clock	Differential
System Reset Polarity	ACTIVE LOW
Debug Signals Control	OFF
Sample Data Depth	1024
Internal Vref	<input type="checkbox"/>
IO Power Reduction	ON
XADC Instantiation	Enabled

At the bottom right, there are buttons for '<Back', 'Next>', and 'Cancel'. At the bottom left, there are links for 'User Guide' and 'Version Info'.

Figure 1-22: FPGA Options

- **System Clock** – This option selects the clock type (Single-Ended, Differential, or No Buffer) for the `sys_clk` signal pair. When the **No Buffer** option is selected, IBUF primitives are not instantiated in RTL code and pins are not allocated for the system clock.

If the designs generated from MIG for the **No Buffer** option are implemented without performing changes, designs can fail in implementation due to IBUFs not instantiated for the `sys_clk_i` signal. So for **No Buffer** scenarios, `sys_clk_i` signal needs to be connected to an internal clock.

The **No Buffer** option must only be selected for designs that already have a system input clock assigned that meets all rules specified in the [Clocking, page 210](#).

- **Reference Clock** – This option selects the clock type (Single-Ended, Differential, No Buffer, or Use System Clock) for the `clk_ref` signal pair. The **Use System Clock** option appears when the input frequency is between 199 and 201 MHz (that is, the Input Clock Period is between 5,025 ps (199 MHz) and 4,975 ps (201 MHz). The reference clock frequency is based on the data rate and note that an MMCM is added to create the appropriate `ref_clk` frequency above 1,333 Mb/s. When the **No Buffer** option is selected, IBUF primitives are not instantiated in RTL code and pins are not allocated for the reference clock.

If the designs generated from MIG for the **No Buffer** option are implemented without performing changes, designs can fail in implementation due to IBUFs not instantiated for the `ref_clk_i` signal. So for **No Buffer** scenarios, `ref_clk_i` signal needs to be connected to an internal clock.


- **System Reset Polarity** – The polarity for system reset (`sys_rst`) can be selected. If the option is selected as active-Low, the parameter `RST_ACT_LOW` is set to 1 and if set to active-High the parameter `RST_ACT_LOW` is set to 0.
- **Debug Signals Control** – Selecting this option enables calibration status and user port signals to be port mapped to the ILA and VIO in the `example_top` module. This helps in monitoring traffic on the user interface port with the Vivado Design Suite debug feature. Deselecting the **Debug Signals Control** option leaves the debug signals unconnected in the `example_top` module and no ILA/VIO modules are generated by the IP catalog. Additionally, the debug port is always disabled for functional simulations.

Note: This option is not available in the Vivado IP integrator flow.

- **Sample Data Depth** – This option selects the Sample Data depth for the ILA module used in the Vivado debug logic. This option can be selected when the **Debug Signals for Memory Controller** option is ON.
- **Internal V_{REF} Selection** – Internal V_{REF} can be used for data group bytes to allow the use of the V_{REF} pins for normal I/O usage. Internal V_{REF} should only be used for data rates of 800 Mb/s or below.

- **I/O Power Reduction** – This option reduces the average I/O power by disabling DQ and DQS IBUFs automatically whenever the controller is in the idle state.
- **XADC Instantiation** – When enabled, this option directs MIG core to instantiate the XADC and a temperature polling circuit for the Temperature Monitor feature (see [Temperature Monitor](#)). This option can be disabled if the XADC is already used elsewhere in the design. In this case, the device temperature must be periodically sampled and driven onto the `device_temp_i` bus in the memory interface top-level user design module. If the `device_temp_i` signal is left unconnected, then the XADC is instantiated. Otherwise the XADC is not instantiated.

Click **Next** to display the **DCI Description** page ([Figure 1-23](#)).

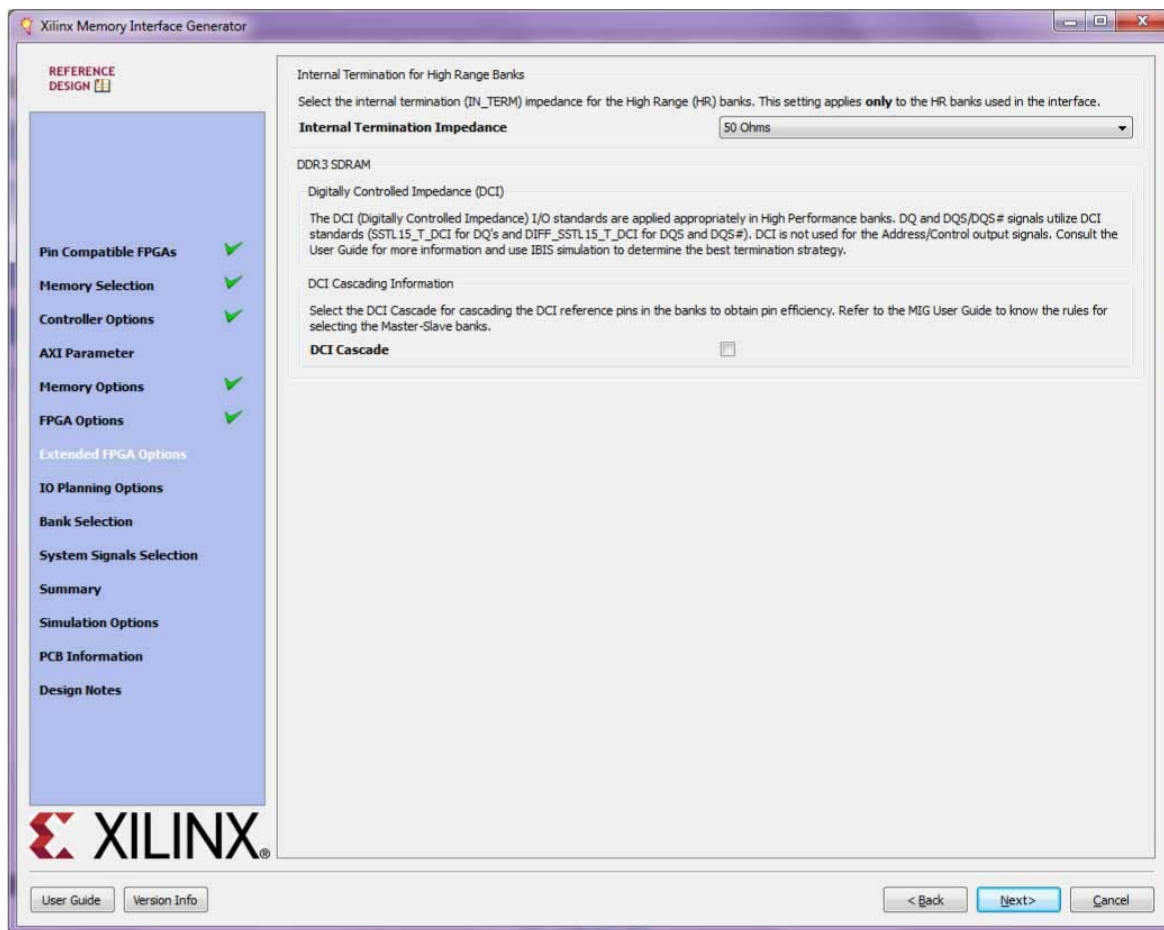


UG586_c1_29_090511

Figure 1-23: DCI Description

- **Digitally Controlled Impedance (DCI)** – The DCI option allows the use of the FPGA on-chip internal resistors for termination. DCI must be used for DQ and DQS/DQS# signals. DCI cascade might have to be used, depending on the pinout and bank selection. DCI is available in the High Performance Banks.
- **Internal Termination for High Range Banks** – The internal termination option can be set to 40, 50, or 60Ω or disabled. This selection is only for High Range banks.

- **DCI Cascade** – This selection enables the VRN/VRP pins that are available in High Performance banks to allocate for the address/control and `reset_n` ports.
- **Pin/Bank Selection Mode** – This allows you to specify an existing pinout and generate the RTL for this pinout, or pick banks for a new design. Figure 1-24 shows the options for using an existing pinout. You must assign the appropriate pins for each signal. A choice of each bank is available to narrow down the list of pins. It is not mandatory to select the banks prior to selection of the pins. Click **Validate** to check against the MIG pinout rules. You cannot proceed until the MIG DRC has been validated by clicking **Validate**.

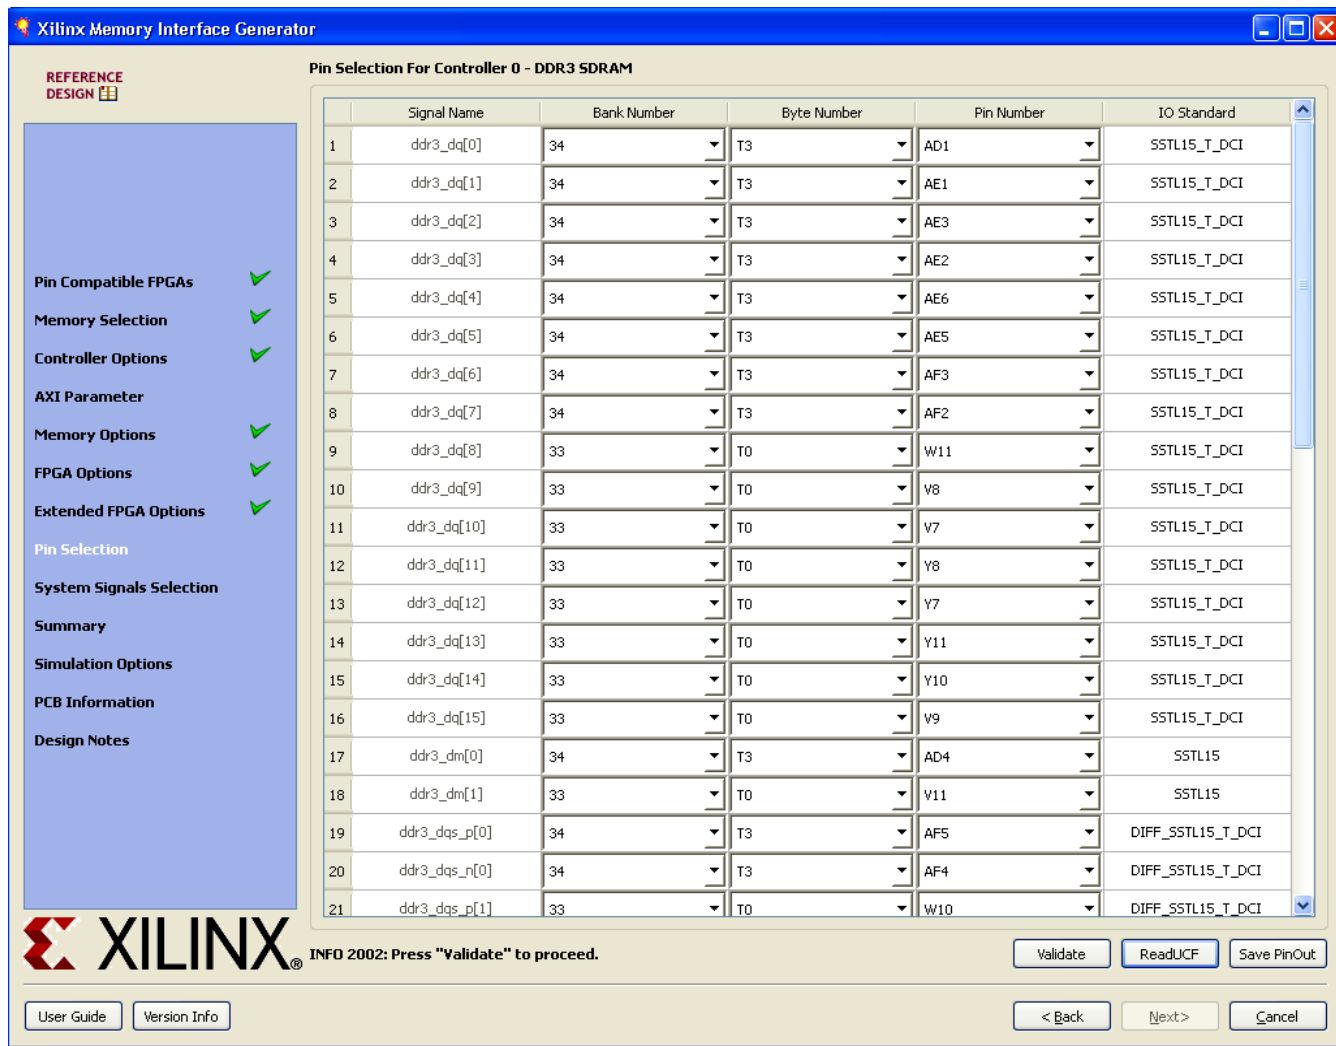

Xilinx Memory Interface Generator

REFERENCE DESIGN

Pin Selection For Controller 0 - DDR3 SDRAM

	Signal Name	Bank Number	Byte Number	Pin Number	IO Standard
1	ddr3_dq[0]	34	T3	AD1	SSTL15_T_DCI
2	ddr3_dq[1]	34	T3	AE1	SSTL15_T_DCI
3	ddr3_dq[2]	34	T3	AE3	SSTL15_T_DCI
4	ddr3_dq[3]	34	T3	AE2	SSTL15_T_DCI
5	ddr3_dq[4]	34	T3	AE6	SSTL15_T_DCI
6	ddr3_dq[5]	34	T3	AE5	SSTL15_T_DCI
7	ddr3_dq[6]	34	T3	AF3	SSTL15_T_DCI
8	ddr3_dq[7]	34	T3	AF2	SSTL15_T_DCI
9	ddr3_dq[8]	33	T0	W11	SSTL15_T_DCI
10	ddr3_dq[9]	33	T0	V8	SSTL15_T_DCI
11	ddr3_dq[10]	33	T0	V7	SSTL15_T_DCI
12	ddr3_dq[11]	33	T0	V8	SSTL15_T_DCI
13	ddr3_dq[12]	33	T0	V7	SSTL15_T_DCI
14	ddr3_dq[13]	33	T0	V11	SSTL15_T_DCI
15	ddr3_dq[14]	33	T0	V10	SSTL15_T_DCI
16	ddr3_dq[15]	33	T0	V9	SSTL15_T_DCI
17	ddr3_dm[0]	34	T3	AD4	SSTL15
18	ddr3_dm[1]	33	T0	V11	SSTL15
19	ddr3_dqs_p[0]	34	T3	AF5	DIFF_SSTL15_T_DCI
20	ddr3_dqs_n[0]	34	T3	AF4	DIFF_SSTL15_T_DCI
21	ddr3_dqs_p[1]	33	T0	W10	DIFF_SSTL15_T_DCI

Pin Compatible FPGAs ✓
 Memory Selection ✓
 Controller Options ✓
 AXI Parameter
 Memory Options ✓
 FPGA Options ✓
 Extended FPGA Options ✓
 Pin Selection
 System Signals Selection
 Summary
 Simulation Options
 PCB Information
 Design Notes

XILINX INFO 2002: Press "Validate" to proceed.

Validate ReadUCF Save PinOut

User Guide Version Info < Back Next > Cancel

Figure 1-24: Pin/Bank Selection Mode

Bank Selection

This feature allows the selection of bytes for the memory interface. Bytes can be selected for different classes of memory signals, such as:

- Address and control signals
- Data signals

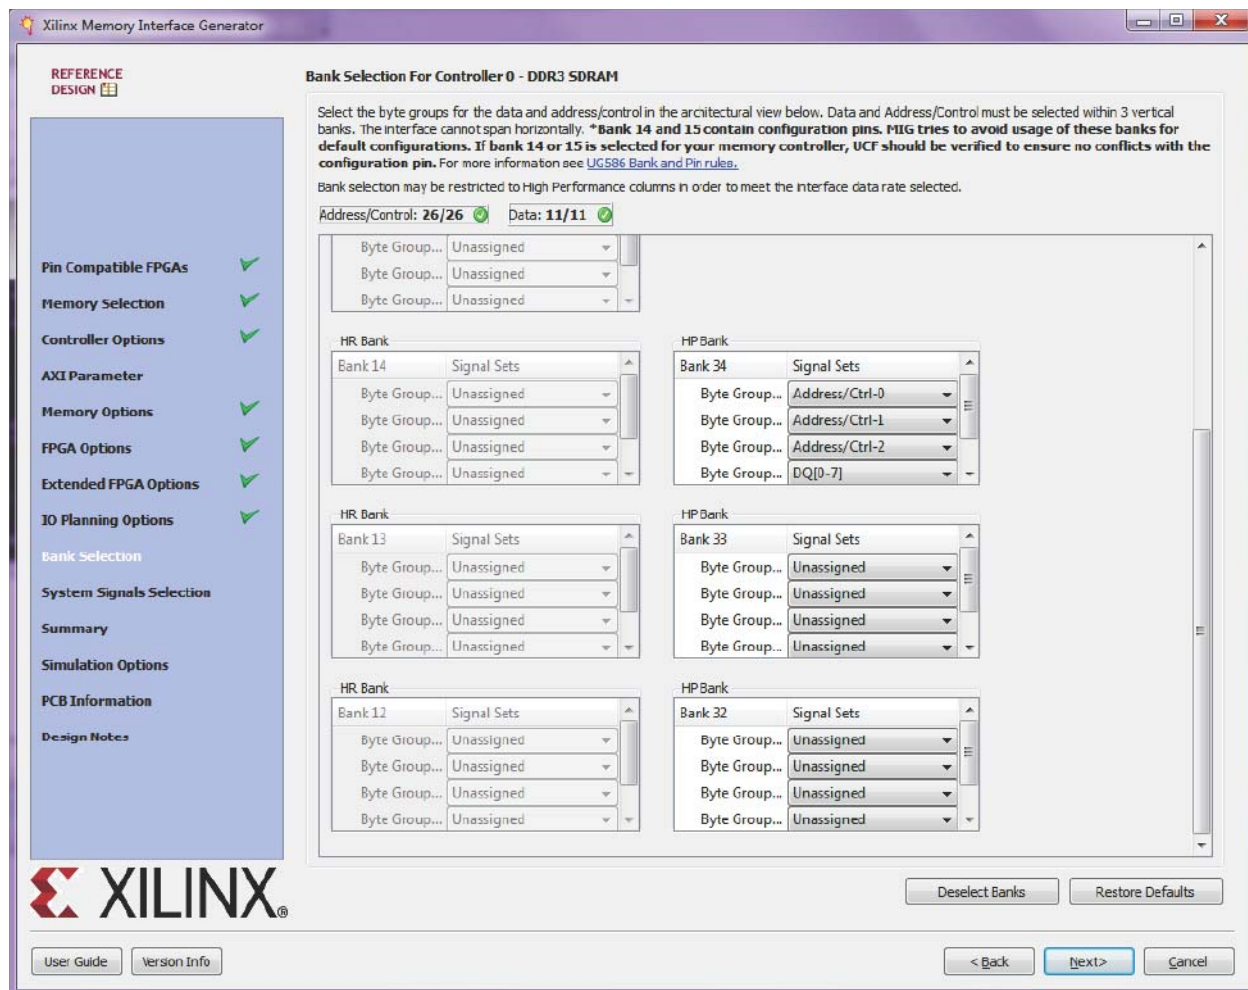


Figure 1-25: Bank Selection


For customized settings, click **Deselect Banks** and select the appropriate bank and memory signals. Click **Next** to move to the next page if the default setting is used.

To unselect the banks that are selected, click **Deselect Banks**. To restore the defaults, click **Restore Defaults**.

VCCAUX_IO groups are shown for HP banks in devices with these groups using dashed lines. VCCAUX_IO is common to all banks in these groups. The memory interface must have the same VCCAUX_IO for all banks used in the interface. The MIG core automatically sets the VCCAUX_IO constraint appropriately for the data rate requested.

For devices implemented with SSI technology, the SLRs are indicated by a number in the header in each bank, for example, SLR 1. Interfaces cannot span across Super Logic Regions.

Select the pins for the system signals on this page (Figure 1-26). The MIG tool allows the selection of either external pins or internal connections, as desired.

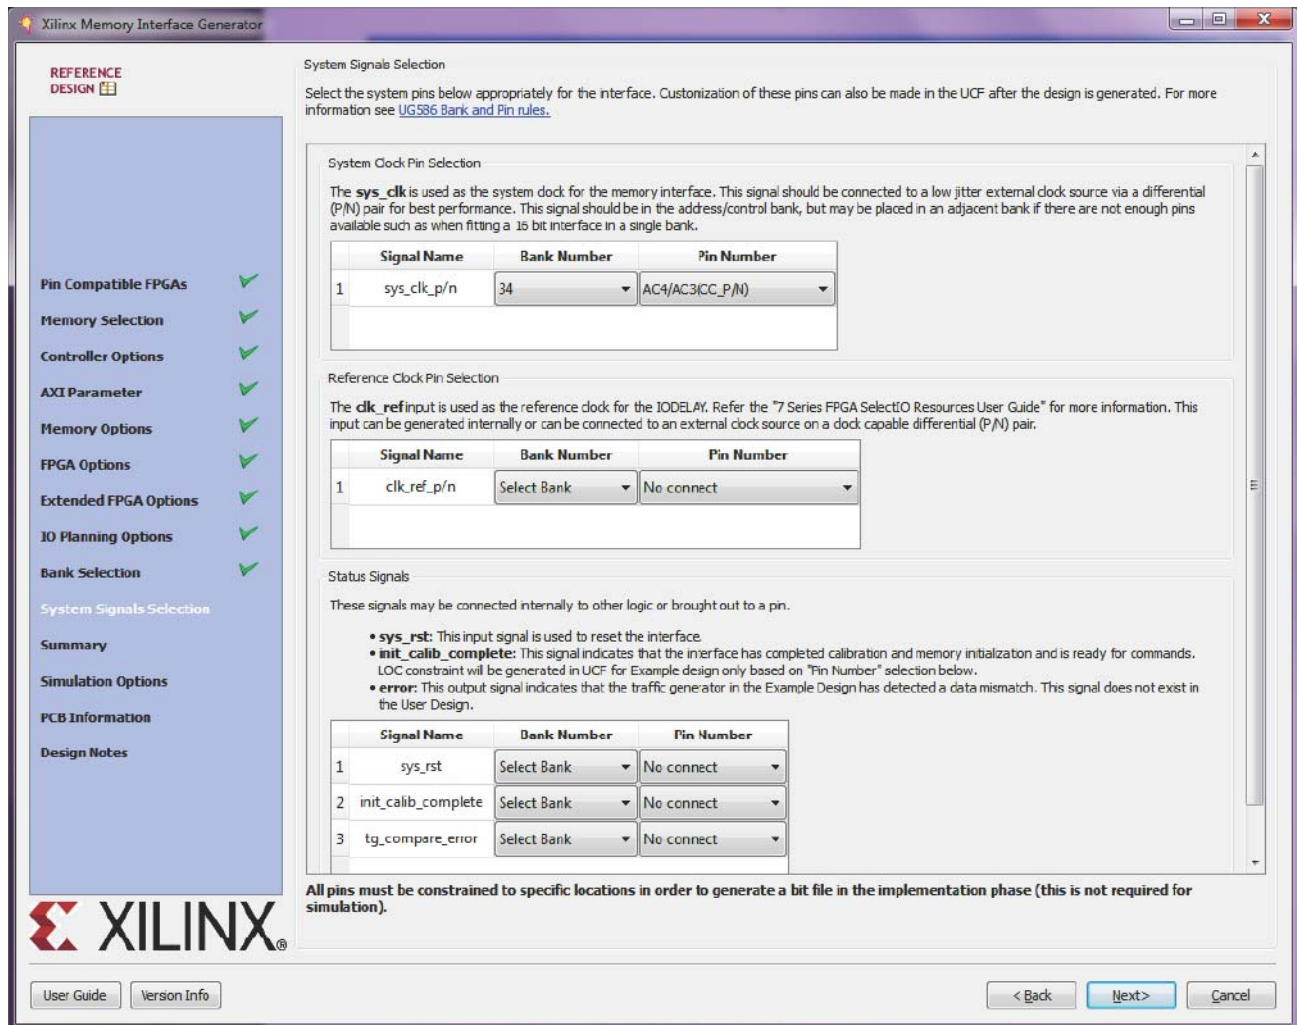

REFERENCE DESIGN

System Signals Selection

Select the system pins below appropriately for the interface. Customization of these pins can also be made in the UCF after the design is generated. For more information see [UG586 Bank and Pin rules](#).

System Clock Pin Selection

The **sys_clk** is used as the system clock for the memory interface. This signal should be connected to a low jitter external clock source via a differential (P/N) pair for best performance. This signal should be in the address/control bank, but may be placed in an adjacent bank if there are not enough pins available such as when fitting a 16 bit interface in a single bank.

Signal Name	Bank Number	Pin Number
1 sys_clk_p/n	34	AC4/AC3(CC_P/N)

Reference Clock Pin Selection

The **clk_refinput** is used as the reference clock for the IODELAY. Refer the "7 Series FPGA SelectIO Resources User Guide" for more information. This input can be generated internally or can be connected to an external clock source on a clock capable differential (P/N) pair.

Signal Name	Bank Number	Pin Number
1 clk_ref_p/n	Select Bank	No connect

Status Signals

These signals may be connected internally to other logic or brought out to a pin.

- sys_rst**: This input signal is used to reset the interface.
- init_calib_complete**: This signal indicates that the interface has completed calibration and memory initialization and is ready for commands. LOC constraint will be generated in UCF for Example design only based on "Pin Number" selection below.
- error**: This output signal indicates that the traffic generator in the Example Design has detected a data mismatch. This signal does not exist in the User Design.

Signal Name	Bank Number	Pin Number
1 sys_rst	Select Bank	No connect
2 init_calib_complete	Select Bank	No connect
3 tg_compare_error	Select Bank	No connect

All pins must be constrained to specific locations in order to generate a bit file in the implementation phase (this is not required for simulation).

User Guide Version Info < Back Next> Cancel

Figure 1-26: System Pins

- sys_clk** – This is the system clock input for the memory interface and is typically connected to a low-jitter external clock source. Either a single input or a differential pair can be selected based on the **System Clock** selection in the **FPGA Options** page (Figure 1-22). The **sys_clk** input must be in the same column as the memory interface. If this pin is connected in the same banks as the memory interface, the MIG tool selects an I/O standard compatible with the interface, such as DIFF_SSTL15 or SSTL15. If **sys_clk** is not connected in a memory interface bank, the MIG tool selects an appropriate standard such as LVCMOS18 or LVDS. The XDC can be modified as desired after generation.

- **clk_ref** – This is the reference frequency input for the IDELAY control. The `clk_ref` input can be generated internally or connected to an external source. A single input or a differential pair can be selected based on the **System Clock** selection in the **FPGA Options** page (Figure 1-22). The I/O standard is selected in a similar way as `sys_clk`.
- **sys_rst** – This is the asynchronous system reset input that can be generated internally or driven from a pin. The MIG tool selects an appropriate I/O standard for the input such as LVCMOS18 and LVCMOS25 for HP and HR banks, respectively. The default polarity of `sys_rst` pin is active-Low. The polarity of `sys_rst` pin varies based on the **System Reset Polarity** option chosen in **FPGA Options** page (Figure 1-22).
- **init_calib_complete** – This output indicates that the memory initialization and calibration is complete and that the interface is ready to use. The `init_calib_complete` signal is normally only used internally, but can be brought out to a pin if desired.
- **tg_compare_error** – This output indicates that the traffic generator in the example design has detected a data compare error. This signal is only generated in the example design and is not part of the user design. This signal is not typically brought out to a pin but can be, if desired.

Click **Next** to display the **Summary** page.

Summary

This page provides the complete details about the 7 series FPGA memory core selection, interface parameters, IP catalog options, and FPGA options of the active project (Figure 1-27).

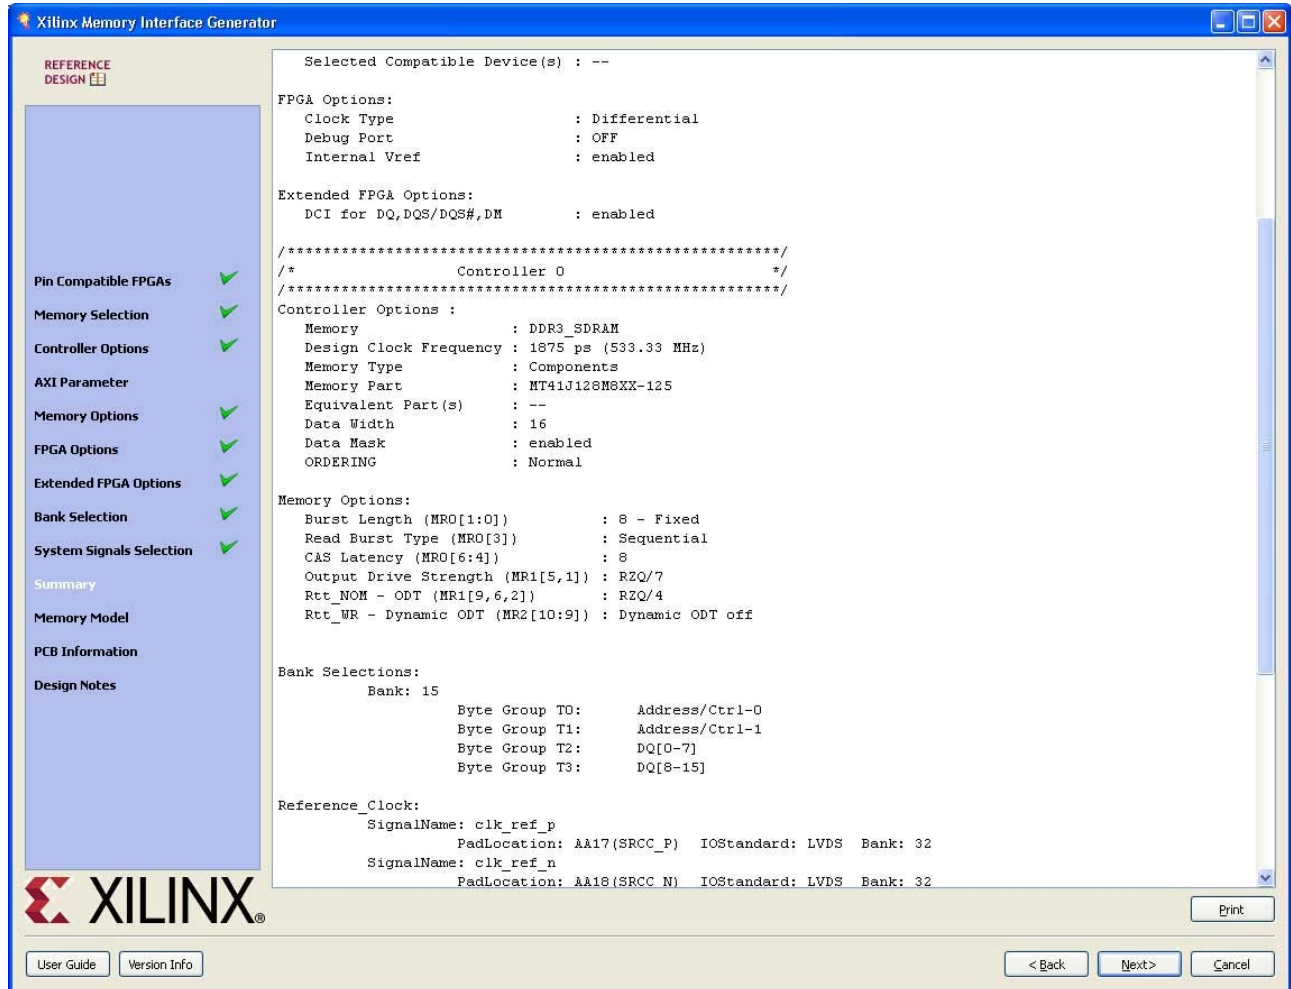


Figure 1-27: Summary

Memory Model License

The MIG tool can output a chosen vendor's memory model for simulation purposes for memories such as DDR2 or DDR3 SDRAMs. To access the models in the output `sim` folder, click the license agreement (Figure 1-28). Read the license agreement and check the **Accept License Agreement** box to accept it. If the license agreement is not agreed to, the memory model is not made available. A memory model is necessary to simulate the design.



UG586_c1_39_110610

Figure 1-28: License Agreement

 Click **Next** to move to **PCB Information** page.

PCB Information

 This page displays the PCB-related information to be considered while designing the board that uses the MIG tool generated designs. Click **Next** to move to the **Design Notes** page.

Design Notes

 Click **Generate** to generate the design files. The MIG tool generates two output directories: `example_design` and `user_design`. After generating the design, the MIG GUI closes.

Vivado Integrated Design Flow for MIG

1. After clicking **Generate**, the **Generate Output Products** window appears. This window has the **Out-of-Context Settings** as shown in [Figure 1-29](#).

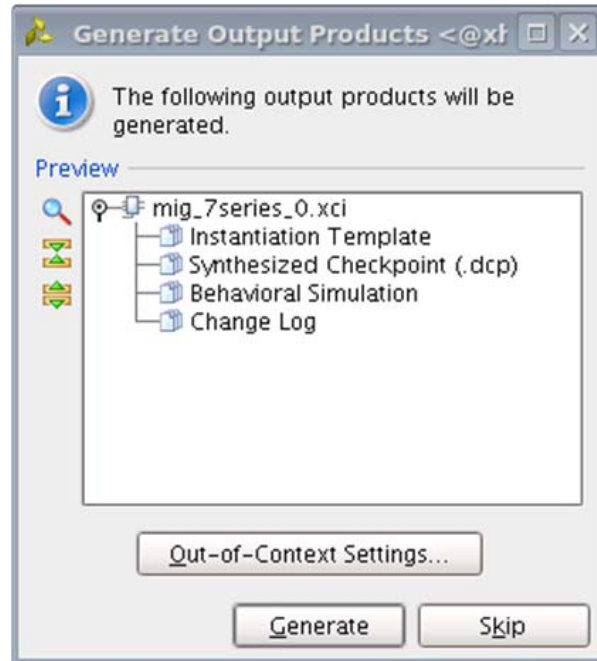


Figure 1-29: **Generate Output Products Window**

2. Click **Out-of-Context Settings** to configure generation of synthesized checkpoints. To enable the **Out-of-Context** flow, enable the check box. To disable the **Out-of-Context** flow, disable the check box. The default option is "enable" as shown in [Figure 1-30](#).

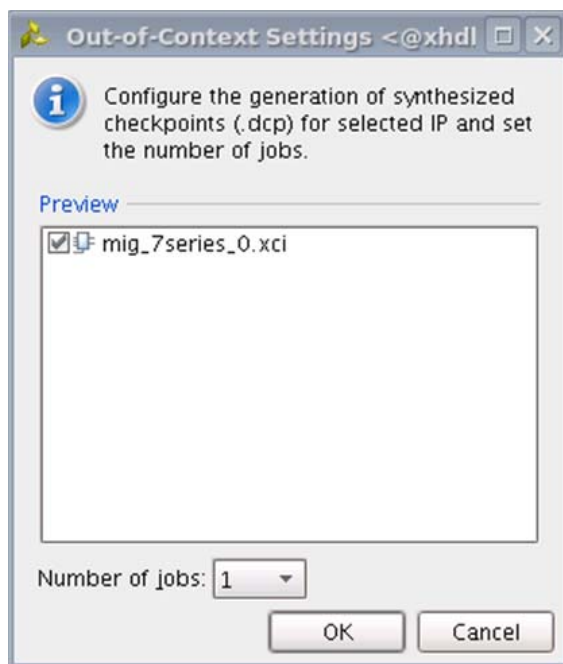


Figure 1-30: Out-of-Context Settings Window

3. MIG core designs comply with "Hierarchical Design" flow in Vivado. For more information, see the *Vivado Design Suite User Guide: Hierarchical Design* (UG905) [\[Ref 5\]](#) and the *Vivado Design Suite Tutorial: Hierarchical Design* (UG946) [\[Ref 6\]](#).

4. After generating the MIG core design, the project window appears as shown in Figure 1-31.

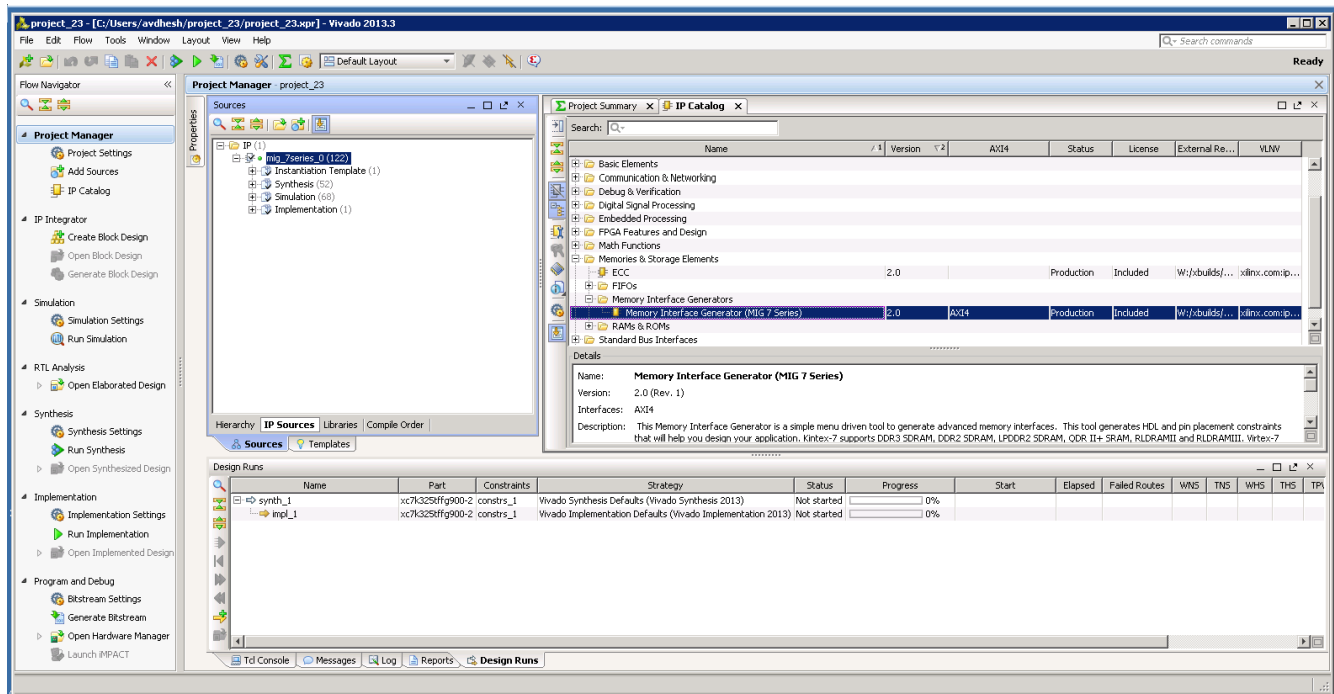


Figure 1-31: Vivado Tool Project Window (After IP Generation)

5. After project creation, the XCI file is added to the Project Hierarchy. The same view also displays the module hierarchies of the user design. The list of HDL and XDC files is available in the **IP Sources** view in the **Sources** window. Double-clicking on any module or file opens the file in the Vivado Editor. These files are read only.

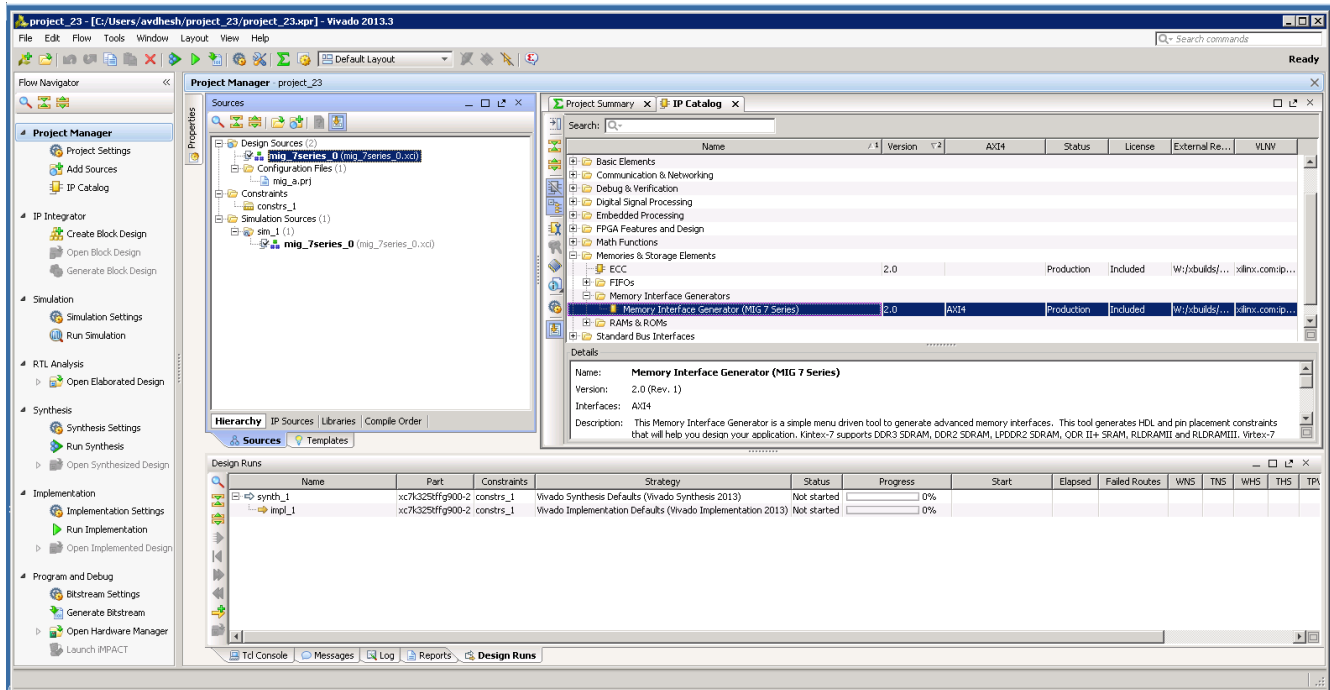


Figure 1-32: Vivado Tool Project Sources Window

Design generation from the MIG tool can be generated using the **Create Design** flow or the **Verify Pin Changes** and **Update Design** flows. There is no difference between the flow when generating the design from the MIG tool. Irrespective of the flow by which designs are generated from the MIG tool, the XCI file is added to the Vivado tool project. The implementation flow is the same for all scenarios because the flow depends on the XCI file added to the project.

- All MIG generated user design RTL and XDC files are automatically added to the project. If files are modified and you wish to regenerate them, right-click the XCI file and select **Generate Output Products** (Figure 1-33).

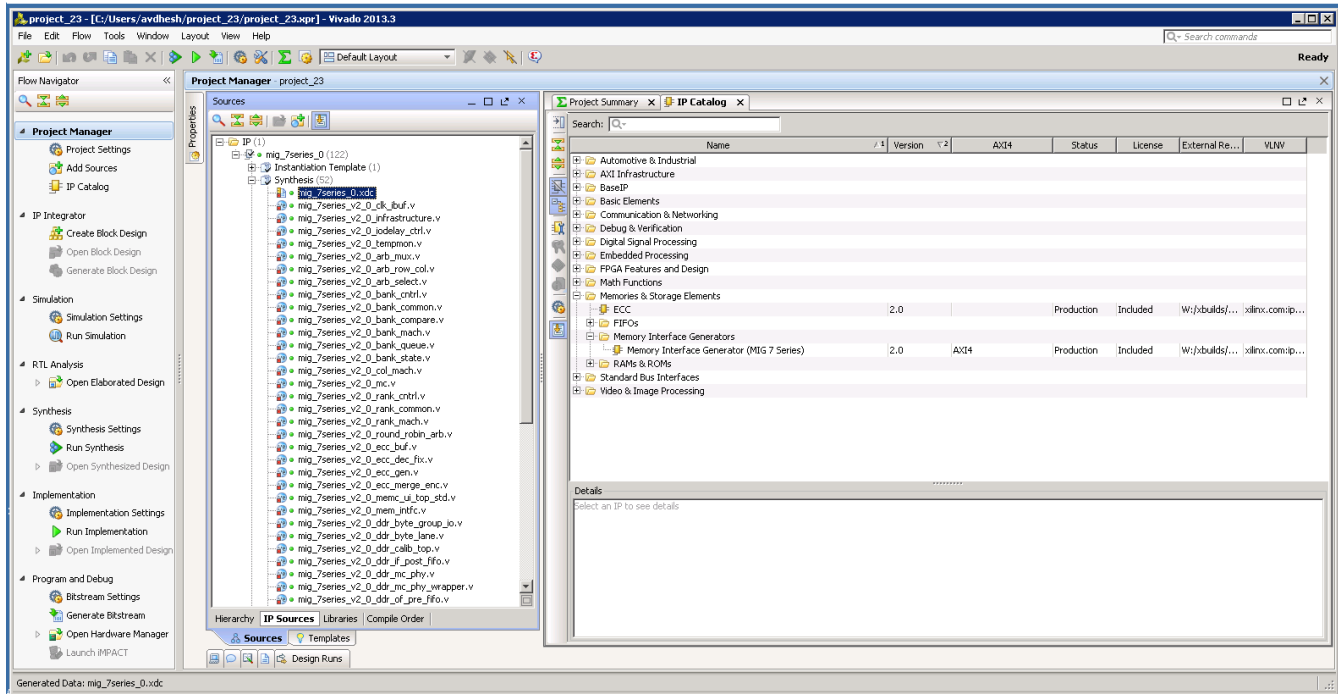


Figure 1-33: Generate RTL and Constraints

- Clicking the **Generate Output Products** option brings up the **Manage Outputs** window (Figure 1-34).

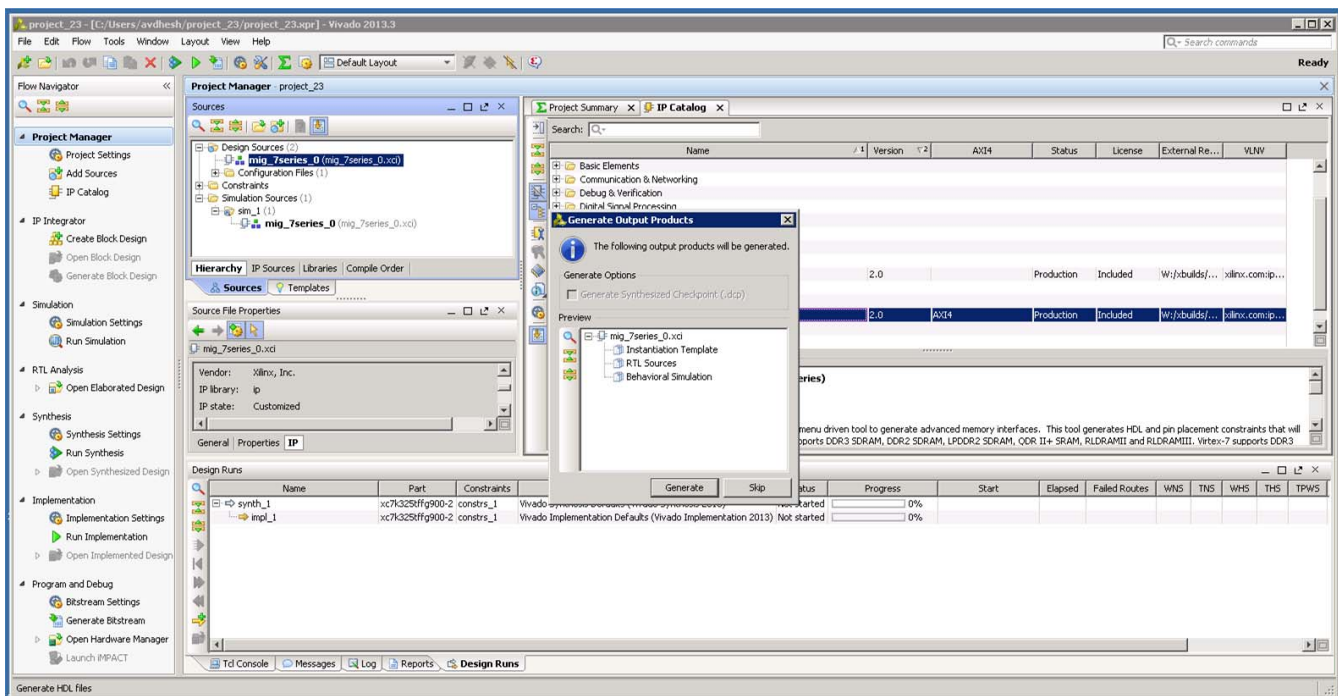


Figure 1-34: Generate Window

8. All user-design RTL files and constraints files (XDC files) can be viewed in the **Sources > Libraries** tab (Figure 1-35).

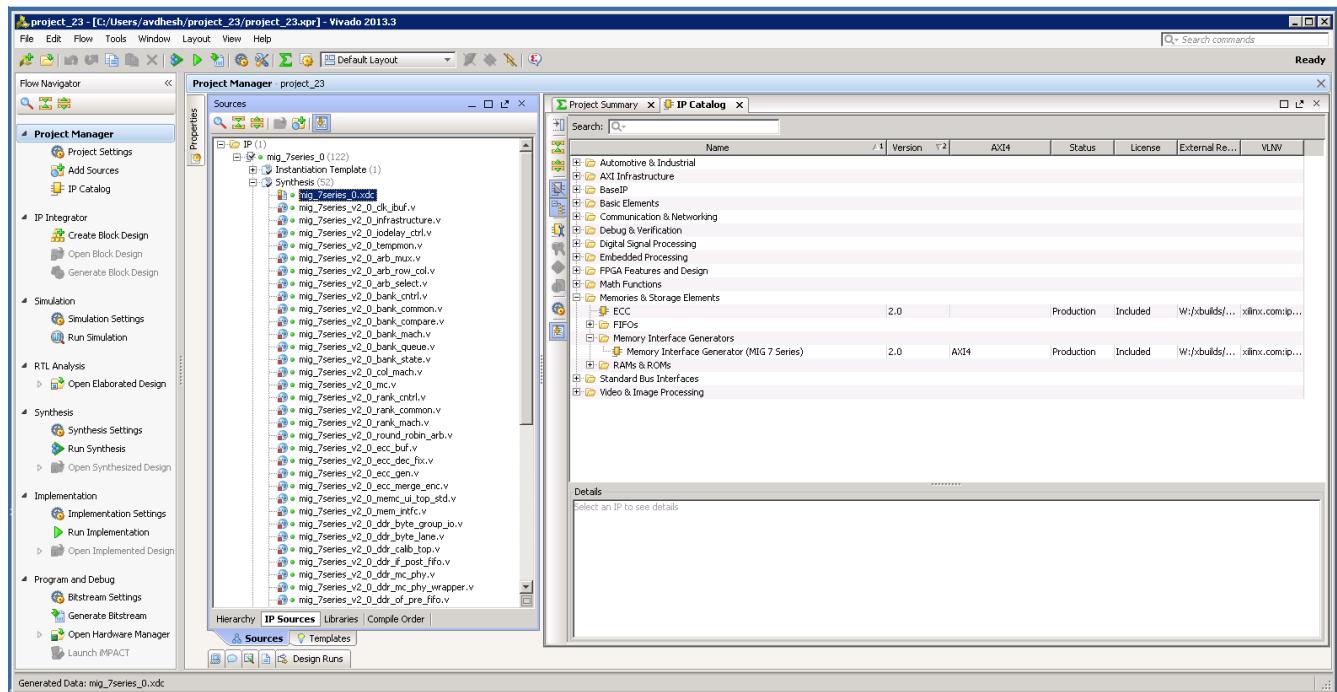


Figure 1-35: Vivado Project – RTL and Constraints Files

9. The Vivado Design Suite supports **Open IP Example Design** flow. To create the example design using this flow right-click the IP in the **Source Window**, as shown in Figure 1-36 and select.

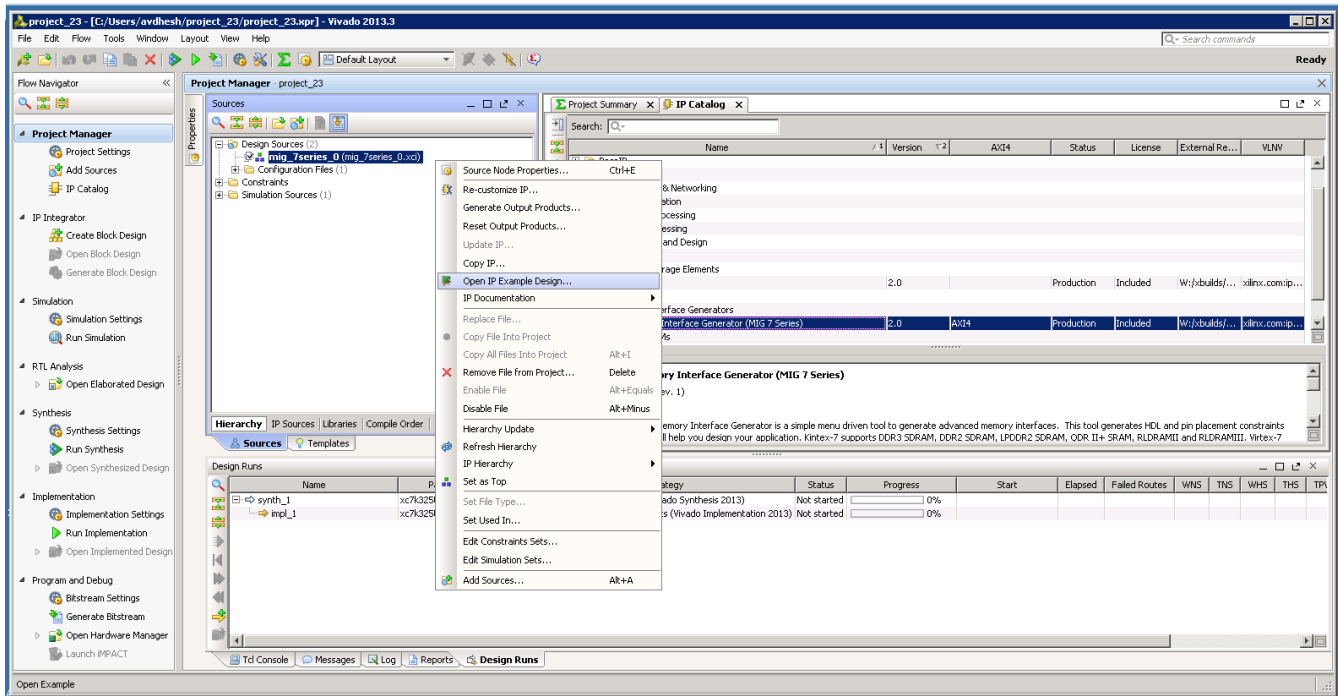


Figure 1-36: Open IP Example Design

10. This option creates a new Vivado project. Selecting the menu brings up a dialog box, which guides you to the directory for a new design project. Select a directory (or use the defaults) and click **OK**.

This launches a new Vivado project with all example design files and a copy of the IP. This project has `example_top` as the Implementation top directory, and `sim_tb_top` as the Simulation top directory, as shown in Figure 1-37.

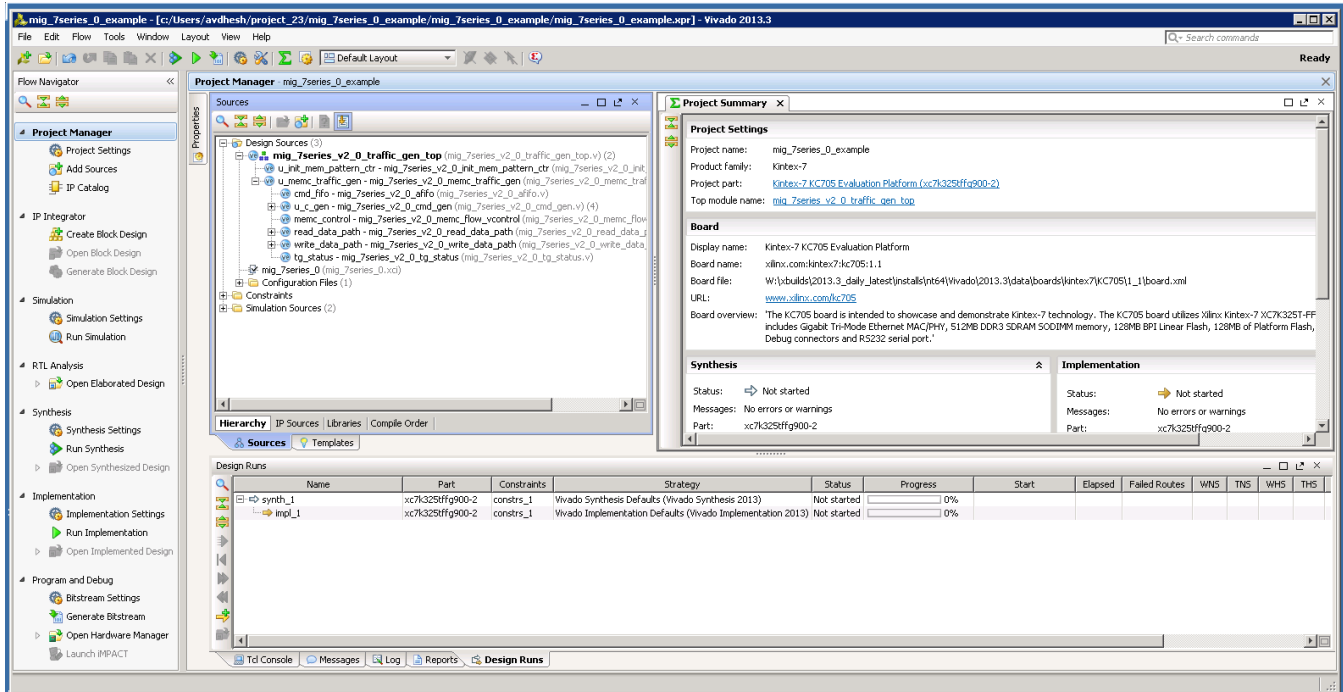


Figure 1-37: Example Design Project

11. Click **Generate Bitstream** under **Project Manager > Program and Debug** to generate the BIT file for the generated design.

The <project directory>/<project directory>.runs/ impl_1 directory includes all report files generated for the project after running the implementation. It is also possible to run the simulation in this project.

12. Recustomization of the MIG IP core can be done by using the **Recustomize IP** option. It is not recommended to recustomize the IP in the example_design project. The correct solution is to close the example_design project, go back to original project and customize there. Right-click the XCI file and click **Recustomize IP** (Figure 1-38) to open the MIG GUI and regenerate the design with the preferred options.

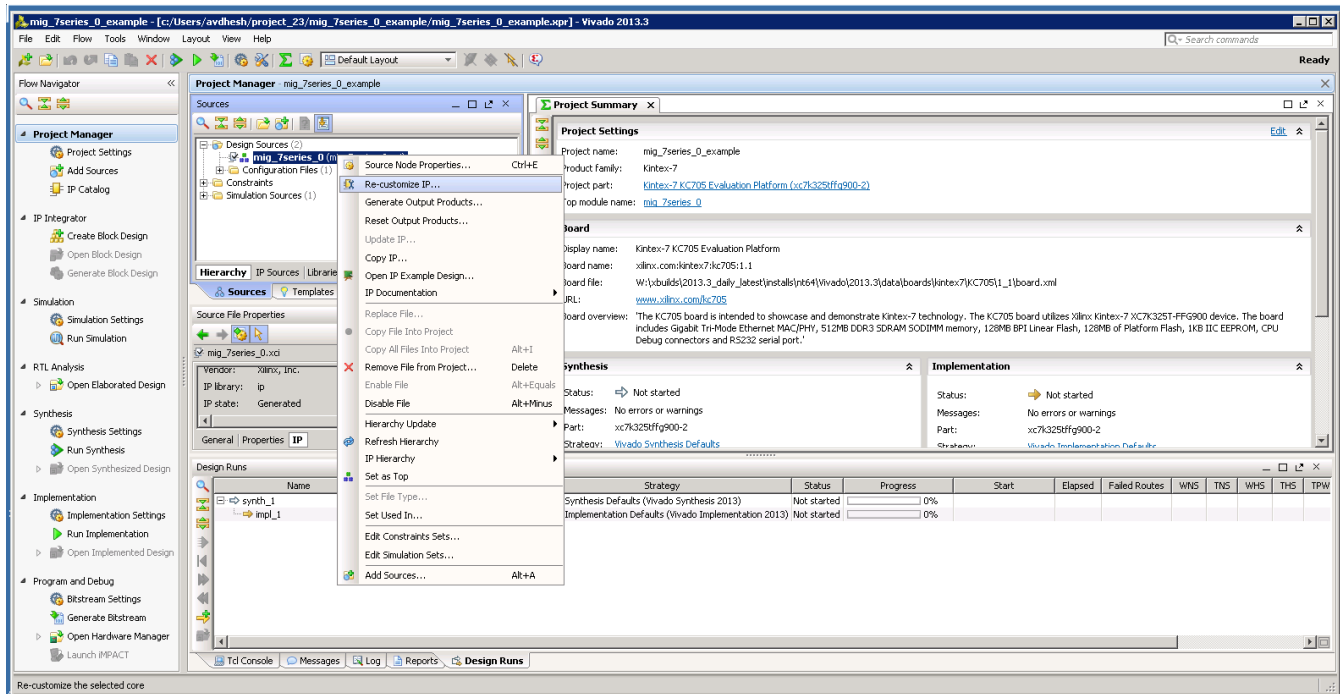



Figure 1-38: Recustomize IP

Directory Structure and File Descriptions

Output Directory Structure

The output directory structure of the selected Memory Controller (MC) design from the MIG tool is shown here. In the <component name> directory, three folders are created:

- docs
- example_design
- user_design

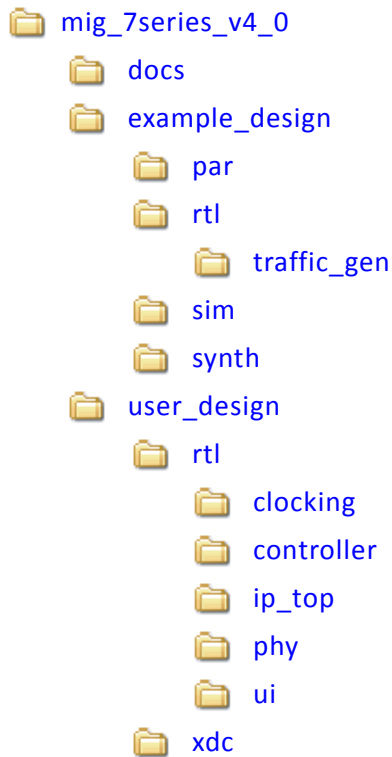

Directory and File Contents

The 7 series FPGAs core directories and their associated files are listed in this section for Vivado implementations.

<component name>/example_design/

The example_design folder contains four folders, namely, par, rtl, sim, and synth.

example_design/rtl

This directory contains the example design ([Table 1-1](#)).

Table 1-1: Files in example_design/rtl Directory

Name	Description
example_top.v/vhd	This top-level module serves as an example for connecting the user design to the 7 series FPGAs memory interface core.

example_design/rtl/traffic_gen

This directory contains the traffic generator that provides the stimulus to the 7 series FPGAs Memory Controller (Table 1-2).

Table 1-2: Files in example_design/rtl/traffic_gen Directory

Name ⁽¹⁾	Description
memc_traffic_gen.v	This is the top-level of the traffic generator.
cmd_gen.v	This is the command generator. This module provides independent control of generating the types of commands, addresses, and burst lengths.
cmd_prbs_gen.v	This is a pseudo-random binary sequence (PRBS) generator for generating PRBS commands, addresses, and burst lengths.
memc_flow_vcontrol.v	This module generates flow control logic between the Memory Controller core and the cmd_gen, read_data_path, and write_data_path modules.
read_data_path.v	This is the top-level for the read datapath.
read_posted_fifo.v	This module stores the read command that is sent to the Memory Controller, and its FIFO output is used to generate expect data for read data comparisons.
rd_data_gen.v	This module generates timing control for reads and ready signals to memc_flow_vcontrol.v.
write_data_path.v	This is the top-level for the write datapath.
wr_data_g.v	This module generates timing control for writes and ready signals to memc_flow_vcontrol.v.
s7ven_data_gen.v	This module generates different data patterns.
a_fifo.v	This is a synchronous FIFO using LUT RAMs.
data_prbs_gen.v	This is a 32-bit linear feedback shift register (LFSR) for generating PRBS data patterns.
init_mem_pattern_ctr.v	This module generates flow control logic for the traffic generator.
traffic_gen_top.v	This module is the top-level of the traffic generator and comprises the memc_traffic_gen and init_mem_pattern_ctr modules.

Notes:

1. All file names are prefixed with the MIG core version number. For example, the MIG 4.0 release module name of cmd_gen in generated output is now mig_7series_v4_0_cmd_gen.

<component name>/example_design/par

Table 1-3 lists the modules in the example_design/par directory.

Table 1-3: Files in example_design/par Directory

Name	Description
example_top.xdc	This is the XDC for the core and the example design.

<component name>/example_design/sim

Table 1-4 lists the modules in the example_design/sim directory.

Table 1-4: Files in example_design/sim Directory

Name	Description
ddr2_model.v ddr3_model.v	These are the DDR2 and DDR3 SDRAM models.
ddr2_model_parameters.vh ddr3_model_parameters.vh	These files contain the DDR2 and DDR3 SDRAM model parameter setting.
ies_run.sh ⁽¹⁾	Linux Executable file for simulating the design using IES simulator.
vcs_run.sh ⁽¹⁾	Linux Executable file for simulating the design using VCS simulator.
readme.txt ⁽¹⁾	Contains the details and prerequisites for simulating the designs using QuestaSim, IES, and VCS simulators.
sim_tb_top.v	This is the simulation top file.

Notes:

1. The ies_run.sh and vcs_run.sh files are generated in the folder mig_7series_0_example/mig_7series_0_example.srscs/sim_1/imports/sim when the example design is created using **Open IP Example Design** for the design generated with **Component Name** entered in Vivado IDE as mig_7series_0.

<component name>/user_design

The user_design folder contains the following:

- rtl and xdc folders
- Top-level wrapper module <component_name>.v/vhd
- Top-level modules <component_name>_mig.v/vhd and <component_name>_mig_sim.v/vhd

The top-level wrapper file <component_name>.v/vhd has an instantiation of top-level file <component_name>_mig.v/vhd.

Top-level files <component_name>_mig.v/vhd and <component_name>_mig_sim.v/vhd have the same module name as <component_name>_mig. These two files are same in all respects except that the file <component_name>_mig_sim.v/vhd has parameter values set for simulation where calibration is in fast mode viz., SIM_BYPASS_INIT_CAL = "FAST" etc.



IMPORTANT: The top-level file <component_name>_mig.v/vhd is used for design synthesis and implementation, whereas the top-level file <component_name>_mig_sim.v/vhd is used in simulations.

The top-level wrapper file serves as an example for connecting the user_design to the MIG core.

user_design/rtl/clocking

This directory contains the user design (Table 1-5).

Table 1-5: Files in user_design/rtl/clocking Directory

Name ⁽¹⁾	Description
clk_ibuf.v	This module instantiates the input clock buffer.
iodelay_ctrl.v	This module instantiates IDELAYCNTRL primitives needed for IDELAY use.
infrastructure.v	This module helps in clock generation and distribution, and reset synchronization.

Notes:

1. All file names are prefixed with the MIG core version number. For example, for the MIG 4.0 release module name of clk_ibuf in generated output is now mig_7series_v4_0_clk_ibuf.

user_design/rtl/controller

This directory contains the Memory Controller that is instantiated in the example design (Table 1-6).

Table 1-6: Files in user_design/rtl/controller Directory

Name ⁽¹⁾	Description
arb_mux.v	This is the top-level module of arbitration logic.
arb_row_col.v	This block receives requests to send row and column commands from the bank machines and selects one request, if any, for each state.
arb_select.v	This module selects a row and column command from the request information provided by the bank machines.
bank_cntrl.v	This structural block instantiates the three subblocks that comprise the bank machine.
bank_common.v	This module computes various items that cross all of the bank machines.
bank_compare.v	This module stores the request for a bank machine.
bank_mach.v	This is the top-level bank machine block.
bank_queue.v	This is the bank machine queue controller.
bank_state.v	This is the primary bank state machine.
col_mach.v	This module manages the DQ bus.
mc.v	This is the top-level module of the Memory Controller.
mem_intfc.v	This top-level memory interface block instantiates the controller and the PHY.
rank_cntrl.v	This module manages various rank-level timing parameters.
rank_common.v	This module contains logic common to all rank machines. It contains a clock prescaler and arbiters for refresh and periodic read.
rank_mach.v	This is the top-level rank machine structural block.

Table 1-6: Files in user_design/rtl/controller Directory (Cont'd)

Name ⁽¹⁾	Description
round_robin_arb.v	This is a simple round-robin arbiter.

Notes:

1. All file names are prefixed with the MIG core version number. For example, for the MIG 4.0 release module name of arb_mux in generated output is now mig_7series_v4_0_arb_mux.

user_design/rtl/ip_top

This directory contains the user design (Table 1-7).

Table 1-7: Files in user_design/rtl/ip_top Directory

Name ⁽¹⁾	Description
mem_intf.v	This is the top-level memory interface block that instantiates the controller and the PHY.
memc_ui_top.v	This is the top-level Memory Controller module.

Notes:

1. All file names are prefixed with the MIG core version number. For example, for the MIG 4.0 release module name of mem_intf in generated output is now mig_7series_v4_0_mem_intf.

user_design/rtl/phy

This directory contains the 7 series FPGA memory interface PHY implementation (Table 1-8).

Table 1-8: Files in user_design/rtl/phy Directory

Name ⁽¹⁾	Description
ddr_byte_group_io	This module contains the parameterizable I/O logic instantiations and the I/O terminations for a single byte lane.
ddr_byte_lane	This module contains the primitive instantiations required within an output or input byte lane.
ddr_calib_top	This is the top-level module for the memory physical layer interface.
ddr_if_post_fifo	This module extends the depth of a PHASER IN_FIFO up to four entries.
ddr_mc_phy	This module is a parameterizable wrapper instantiating up to three I/O banks, each with 4-lane PHY primitives.
ddr_mc_phy_wrapper	This wrapper file encompasses the MC_PHY module instantiation and handles the vector remapping between the MC_PHY ports and your DDR2 or DDR3 ports.
ddr_of_pre_fifo	This module extends the depth of a PHASER OUT_FIFO up to four entries.
ddr_phy_4lanes	This module is the parameterizable 4-lane PHY in an I/O bank.
ddr_phy_ck_addr_cmd_delay	This module contains the logic to provide the required delay on the address and control signals.
ddr_phy_dqs_delay	This module contains the DQS to DQ phase offset logic.

Table 1-8: Files in user_design/rtl/phy Directory (Cont'd)

Name ⁽¹⁾	Description
ddr_phy_dqs_found_cal	This module contains the Read leveling calibration logic (PHASER_IN DQSFOUND calibration logic).
ddr_phy_init	This module contains the memory initialization and overall master state control during initialization and calibration.
ddr_phy_rdlvl	This module contains the Read leveling Stage1 calibration logic (Window detection with PRBS pattern).
ddr_phy_top	This is the top-level module for the physical layer.
ddr_phy_wrcal	This module contains the write calibration logic.
ddr_phy_wrlvl	This module contains the write leveling logic.
ddr_prbs_gen	This PRBS module uses a many-to-one feedback mechanism for 2n sequence generation.

Notes:

1. All file names are prefixed with the MIG core version number. For example, for the MIG 4.0 release module name of ddr_byte_group_io in generated output is now mig_7series_v4_0_ddr_byte_group_io.

user_design/rtl/ui

This directory contains the user interface code that mediates between the native interface of the Memory Controller and user applications (Table 1-9).

Table 1-9: Files In user_design/rtl/ui Directory

Name ⁽¹⁾	Description
ui_cmd.v	This is the user interface command port.
ui_rd_data.v	This is the user interface read buffer. It reorders read data returned from the Memory Controller back to the request order.
ui_wr_data.v	This is the user interface write buffer.
ui_top.v	This is the top-level of the Memory Controller user interface.

Notes:

1. All file names are prefixed with the MIG core version number. For example, for the MIG 4.0 release module name of ui_cmd in generated output is now mig_7series_v4_0_ui_cmd.

<component name>/user_design/xdc

Table 1-10 lists the modules in the user_design/xdc directory.

Table 1-10: Files in user_design/xdc Directory

Name	Description
<component_name>.xdc	This is the XDC for the core and the user design.

Verify Pin Changes and Update Design

This feature verifies the input XDC for bank selections, byte selections, and pin allocation. It also generates errors and warnings in a separate dialog box when you click **Validate** on the page. This feature is useful to verify the XDC for any pinout changes made after the design is generated from the MIG tool. You must load the MIG tool generated .prj file, the original .prj file without any modifications, and the XDC that needs to be verified. In the Vivado Design Suite, the recustomization option should be selected to reload the project. The design is allowed to generate only when the MIG DRC is met. Ignore warnings about validating the pinout, which is the intent. Just validating the XDC is not sufficient; it is mandatory to proceed with design generation to get the XDC with updated clock and phaser related constraints and RTL top-level module for various updated Map parameters.

The Update Design feature is required in the following scenarios:

- A pinout is generated using an older version of the MIG tool and the design is to be revised to the current version of MIG. In MIG, the pinout allocation algorithms have been changed for certain MIG designs.
- A pinout is generated independent of the MIG tool or is modified after the design is generated. When a design is generated from the MIG tool, the XDC and HDL code are generated with the correct constraints.

Here are the rules verified from the input XDC:

- If a pin is allocated to more than one signal, the tool reports an error. Further verification is not done if the XDC does not adhere to the uniqueness property.
- Verified common rules:
 - The interface can span across a maximum of three consecutive banks.
 - Interface banks should reside in the same column of the FPGA.
 - Interface banks should be either High Performance (HP) or High Range (HR). HP banks are used for the high frequencies.
 - The chosen interface banks should have the same SLR region if the chosen device is of stacked silicon interconnect technology.
 - V_{REF} I/Os should be used as GPIOs when an internal V_{REF} is used or if there are no inout and input ports in a bank.
 - The I/O standard of each signal is verified as per the configuration chosen.
 - The VCCAUX I/O of each signal is verified and provides a warning message if the provided VCCAUX I/O is not valid.
- Verified data pin rules:
 - Pins related to one strobe set should reside in the same byte group.
 - The strobe pair (DQS) should be allocated to the DQS I/O pair.

- An FPGA byte lane should not contain pins related to two different strobe sets.
- V_{REF} I/O can be used only when the internal V_{REF} is chosen.
- Verified address pin rules:
 - Address signals cannot mix with data bytes except for the `ddr3_reset_n` signal for DDR3 SDRAM interfaces.
 - Address signals cannot mix with data bytes except for the `ddr2_reset_n` signal for DDR2 SDRAM interfaces. The `ddr2_reset_n` port exists for RDIMMs only.
 - It can use any number of isolated byte lanes
- Verified system pin rules:
 - System clock:
 - These pins should be allocated to either SR/MR CC I/O pair.
 - These pins must be allocated in the Memory banks column.
 - If the selected system clock type is single-ended, you need to check whether the reference voltage pins are unallocated in the bank or the internal V_{REF} is used.
 - Reference clock:
 - These pins should be allocated to either SR/MR CC I/O pair.
 - If the selected system clock type is single-ended, you need to check whether the reference voltage pins are unallocated in the bank or the internal V_{REF} is used.
 - Status signals:
 - The `sys_rst` signal should be allocated in the bank where the V_{REF} I/O is unallocated or the internal V_{REF} is used.
 - These signals should be allocated in the non-memory banks because the I/O standard is not compatible. The I/O standard type should be LVCMOS with at least 1.8V.
 - These signals can be allocated in any of the columns (there is no hard requirement because these signals should reside in a memory column); however, it is better to allocate closer to the chosen memory banks.

Quick Start Example Design

Overview

After the core is successfully generated, the example design HDL can be processed through the Xilinx implementation toolset.


Implementing the Example Design

For more information on using an IP example design, see the *Vivado Design Suite User Guide: Designing with IP* (UG896) [Ref 7].

Simulating the Example Design (for Designs with the Standard User Interface)

The MIG tool provides a synthesizable test bench to generate various traffic data patterns to the Memory Controller (MC). This test bench consists of a `memc_ui_top` wrapper, a `traffic_generator` that generates traffic patterns through the user interface to a `ui_top` core, and an infrastructure core that provides clock resources to the `memc_ui_top` core. A block diagram of the example design test bench is shown in Figure 1-39.

ddr2_sim_tb_top or ddr3_sim_tb_top

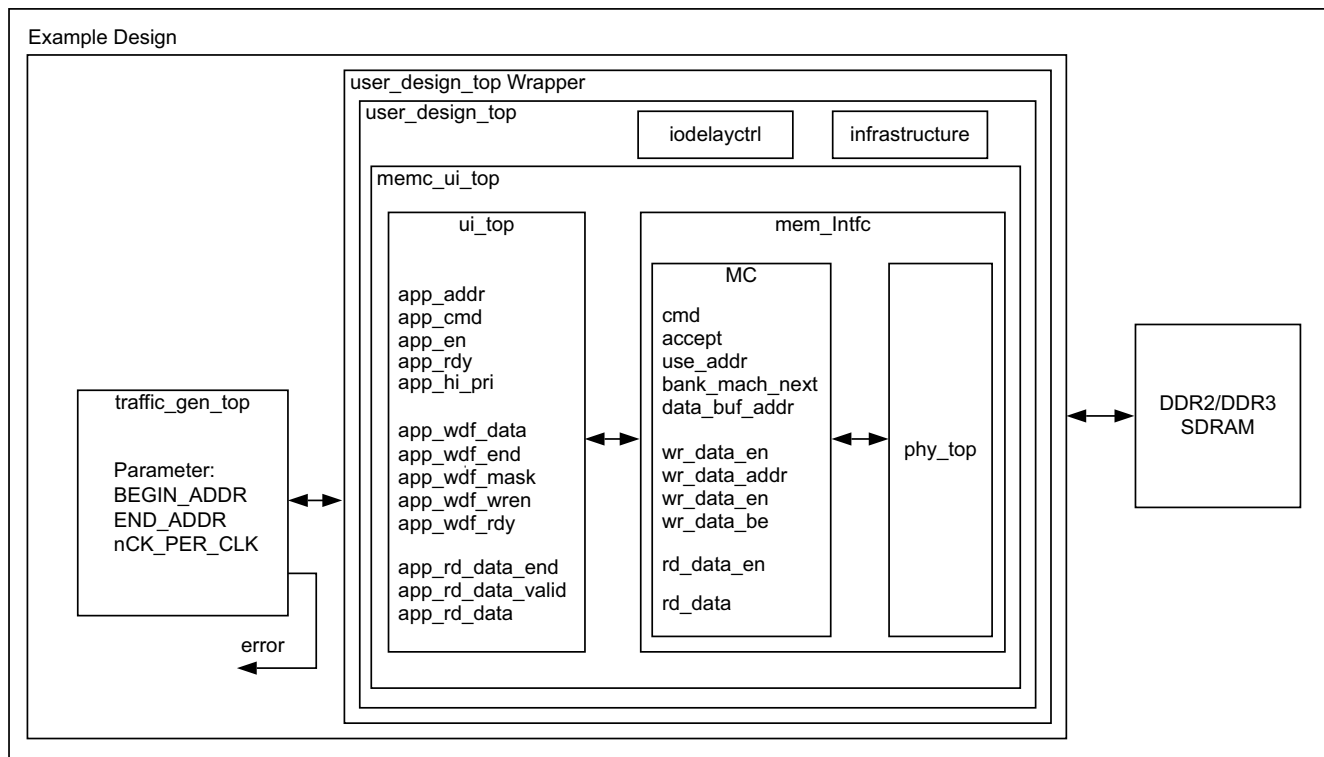

UG586_c1_41_120311

Figure 1-39: Synthesizable Example Design Block Diagram

Figure 1-40 shows the simulation result of a simple read and write transaction between the `tb_top` and `memc_intf` modules.

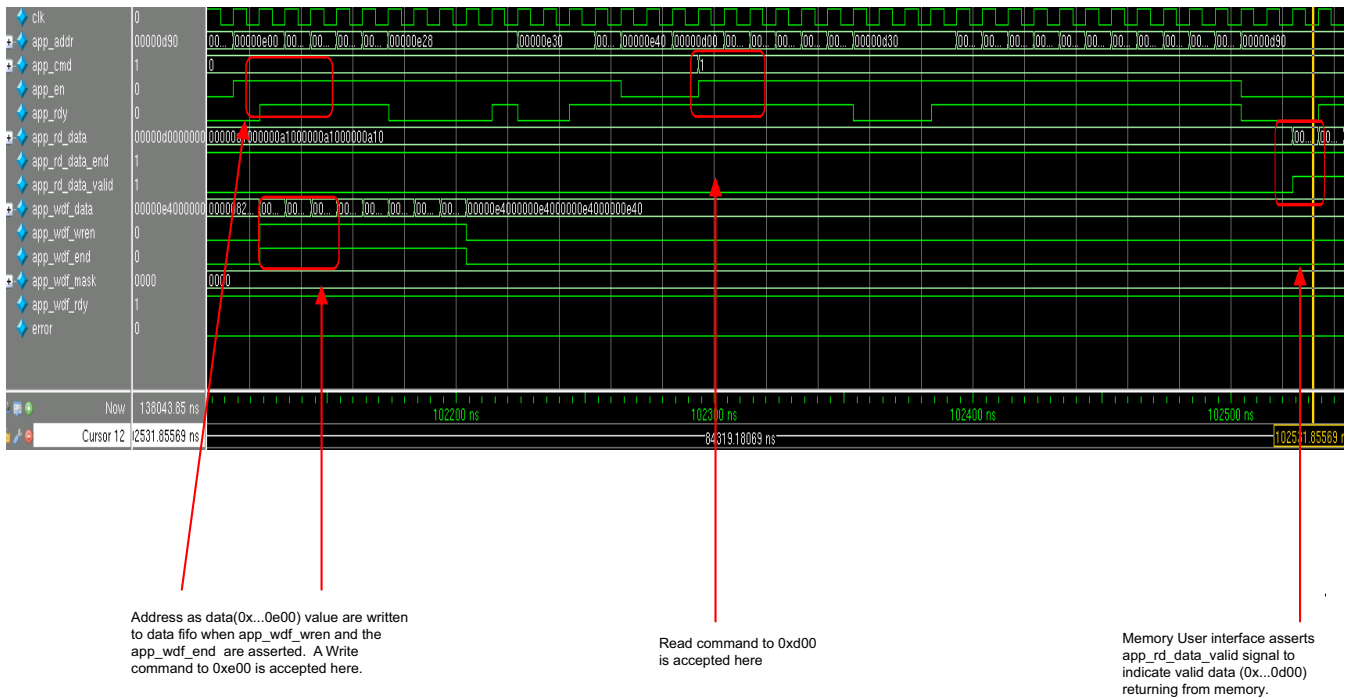


Figure 1-40: User Interface Read and Write Cycle

Traffic Generator Operation

The traffic generator module contained within the synthesizable test bench can be parameterized to create various stimulus patterns for the memory design. It can produce repetitive test patterns for verifying design integrity as well as pseudo-random data streams that model real-world traffic.

You can define the address range through the BEGIN_ADDRESS and END_ADDRESS parameters. The Init Memory Pattern Control block directs the traffic generator to step sequentially through all the addresses in the address space, writing the appropriate data value to each location in the memory device as determined by the selected data pattern. By default, the test bench uses the address as the data pattern, but the data pattern in this example design can be modified using vio_data_mode signals that can be modified within the Vivado logic analyzer feature.

When the memory has been initialized, the traffic generator begins stimulating the user interface port to create traffic to and from the memory device. By default, the traffic generator sends pseudo-random commands to the port, meaning that the instruction sequences (R/W, R, W) and addresses are determined by PRBS generator logic in the traffic generator module.

The read data returning from the memory device is accessed by the traffic generator through the user interface read data port and compared against internally generated “expect” data. If an error is detected (that is, there is a mismatch between the read data and expected data), an error signal is asserted and the readback address, readback data, and expect data are latched into the `error_status` outputs.

Modifying the Example Design

The provided `example_top` design comprises traffic generator modules and can be modified to tailor different command and data patterns. A few high-level parameters can be modified in the `example_top.v/vhd` module. [Table 1-11](#) describes these parameters.

Table 1-11: Traffic Generator Parameters Set in the `example_top` Module

Parameter	Description	Value
FAMILY	Indicates the family type.	“VIRTEX7”
MEMORY_TYPE	Indicate the Memory Controller type.	“DDR2”, “DDR3”
nCK_PER_CLK	This is the Memory Controller clock to DRAM clock ratio.	4, 2 (depends on the PHY to Controller Clock ratio chosen in the GUI)
NUM_DQ_PINS	The is the total memory DQ bus width.	This parameter supports DQ widths from 8 to a maximum of 72 in increments of 8. The available maximum DQ width is frequency dependent on the selected memory device.
MEM_BURST_LEN	This is the memory data burst length.	This must be set to 8.
MEM_COL_WIDTH	This is the number of memory column address bits.	This option is based on the selected memory device.
DATA_WIDTH	This is the user interface data bus width.	For nCK_PER_CLK = 4, DATA_WIDTH = NUM_DQ_PINS × 8.
ADDR_WIDTH	This is the memory address bus width. It is equal to RANK_WIDTH + BANK_WIDTH + ROW_WIDTH + COL_WIDTH.	
MASK_SIZE	This parameter specifies the mask width in the user interface data bus.	
PORT_MODE	Sets the port mode.	BI_MODE: Generate a WRITE data pattern and monitor the READ data for comparison.
BEGIN_ADDRESS	Sets the memory start address boundary.	This parameter defines the start boundary for the port address space. The least-significant Bits[3:0] of this value are ignored.
END_ADDRESS	Sets the memory end address boundary.	This parameter defines the end boundary for the port address space. The least-significant Bits[3:0] of this value are ignored.

Table 1-11: Traffic Generator Parameters Set in the example_top Module (Cont'd)

Parameter	Description	Value
PRBS_EADDR_MASK_POS	Sets the 32-bit AND MASK position.	This parameter is used with the PRBS address generator to shift random addresses down into the port address space. The END_ADDRESS value is ANDed with the PRBS address for bit positions that have a 1 in this mask.
PRBS_SADDR_MASK_POS	Sets the 32-bit OR MASK position.	This parameter is used with the PRBS address generator to shift random addresses up into the port address space. The START_ADDRESS value is ORed with the PRBS address for bit positions that have a 1 in this mask
CMD_PATTERN	This parameter sets the command pattern circuits to be generated. For a larger device, the CMD_PATTERN can be set to "CGEN_ALL." This parameter enables all supported command pattern circuits to be generated. However, it is sometimes necessary to limit a specific command pattern because of limited resources in a smaller device.	Valid settings for this signal are: <ul style="list-style-type: none"> • CGEN_FIXED: The address, burst length, and instruction are taken directly from the fixed_addr_i, fixed_bl_i, and fixed_instr_i inputs. • CGEN_SEQUENTIAL: The address is increased sequentially, and the increment is determined by the data port size. • CGEN_PRBS: A 32-stage Linear Feedback Shift register (LFSR) generates pseudo-random addresses, burst lengths, and instruction sequences. The seed can be set from the 32-bit cmd_seed input. • CGEN_ALL (default): This option turns on all of the options above and allows addr_mode_i, instr_mode_i, and bl_mode_i to select the type of generation during run time.

Table 1-11: Traffic Generator Parameters Set in the example_top Module (Cont'd)

Parameter	Description	Value
DATA_PATTERN	This parameter sets the data pattern circuits to be generated through RTL logic. For larger devices, the DATA_PATTERN can be set to "DGEN_ALL," enabling all supported data pattern circuits to be generated. In hardware, the data pattern is selected and/or changed using vio_data_value_mode. The pattern can only be changed when DATA_PATTERN is set to DGEN_ALL.	<p>Valid settings for this parameter are:</p> <ul style="list-style-type: none"> • ADDR (default): The address is used as a data pattern. • HAMMER: All 1s are on the DQ pins during the rising edge of DQS, and all 0s are on the DQ pins during the falling edge of DQS. • WALKING1: Walking 1s are on the DQ pins and the starting position of 1 depends on the address value. • WALKING0: Walking 0s are on the DQ pins and the starting position of 0 depends on the address value. • NEIGHBOR: The Hammer pattern is on all DQ pins except one. The address determines the exception pin location. • PRBS: A 32-stage LFSR generates random data and is seeded by the starting address. • DGEN_ALL: This option turns on all available options: <ul style="list-style-type: none"> 0x1: FIXED – 32 bits of fixed_data. 0x2: ADDRESS – 32 bits address as data. 0x3: HAMMER 0x4: SIMPLE8 – Simple eight data pattern that repeats every eight words. 0x5: WALKING1s – Walking 1s are on the DQ pins. 0x6: WALKING0s – Walking 0s are on the DQ pins. 0x7: PRBS – A 32-stage LFSR generates random data. 0x9: SLOW HAMMER – This is the slow MHz hammer data pattern. 0xA: PHY_CALIB pattern – 0xFF, 00, AA, 55, 55, AA, 99, 66. This mode only generates READ commands at address zero.
CMDS_GAP_DELAY	This parameter allows pause delay between each user burst command.	Valid values: 0 to 32.
SEL_VICTIM_LINE	Select a victim DQ line whose state is always at logic High.	<p>This parameter only applies to the Hammer pattern. Valid settings for this parameter are 0 to NUM_DQ_PINS.</p> <p>When value = NUM_DQ_PINS, all DQ pins have the same Hammer pattern.</p>

Table 1-11: Traffic Generator Parameters Set in the example_top Module (Cont'd)

Parameter	Description	Value
EYE_TEST	Force the traffic generator to only generate writes to a single location, and no read transactions are generated.	Valid settings for this parameter are "TRUE" and "FALSE." When set to "TRUE," any settings in vio_instr_mode_value are overridden.

Notes:

1. The traffic generator might support more options than are available in the 7 series Memory Controller. The settings must match supported values in the Memory Controller.

The command patterns `instr_mode_i`, `addr_mode_i`, `bl_mode_i`, and `data_mode_i` of the `traffic_gen` module can each be set independently. The provided `init_mem_pattern_ctr` module has interface signals that allow you to modify the command pattern in real-time using the Vivado debug logic core virtual I/O (VIO).

This is the varying command pattern:

1. Set `vio_modify_enable` to 1.
2. Set `vio_addr_mode_value` to:
 - 1: Fixed_address.
 - 2: PRBS address.
 - 3: Sequential address.
3. Set `vio_bl_mode_value` to:
 - 1: Fixed bl.
 - 2: PRBS bl. If `bl_mode` value is set to 2, the `addr_mode` value is forced to 2 to generate the PRBS address.
4. Set `vio_data_mode_value` to:
 - 0: Reserved.
 - 1: FIXED data mode. Data comes from the `fixed_data_i` input bus.
 - 2: DGEN_ADDR (default). The address is used as the data pattern.
 - 3: DGEN_HAMMER. All 1s are on the DQ pins during the rising edge of DQS, and all 0s are on the DQ pins during the falling edge of DQS.
 - 4: DGEN_NEIGHBOR. All 1s are on the DQ pins during the rising edge of DQS except one pin. The address determines the exception pin location.

5: DGEN_WALKING1. Walking 1s are on the DQ pins. The starting position of 1 depends on the address value.

6: DGEN_WALKING0. Walking 0s are on the DQ pins. The starting position of 0 depends on the address value.

7: DGEN_PRBS. A 32-stage LFSR generates random data and is seeded by the starting address. This data mode only works with PRBS address mode or Sequential address mode.

Modifying Port Address Space

The address space for a port can be modified by changing the BEGIN_ADDRESS and END_ADDRESS parameters found in the top-level test bench file. These two values must be set to align to the port data width. The two additional parameters, PRBS_SADDR_MASK_POS and PRBS_EADDR_MASK_POS, are used in the default PRBS address mode to ensure that out-of-range addresses are not sent to the port. PRBS_SADDR_MASK_POS creates an OR mask that shifts PRBS-generated addresses with values below BEGIN_ADDRESS up into the valid address space of the port. PRBS_SADDR_MASK_POS should be set to a 32-bit value equal to the BEGIN_ADDRESS parameter. PRBS_EADDR_MASK_POS creates an AND mask that shifts PRBS-generated addresses with values above END_ADDRESS down into the valid address space of the port. PRBS_EADDR_MASK_POS should be set to a 32-bit value, where all bits above the most-significant address bit of END_ADDRESS are set to 1 and all remaining bits are set to 0. Table 1-12 shows some examples of setting the two mask parameters.

Table 1-12: Example Settings for Address Space and PRBS Masks

SADDR	EADDR	PRBS_SADDR_MASK_POS	PRBS_EADDR_MASK_POS
0x1000	0xFFFF	0x00001000	0xFFFF0000
0x2000	0xFFFF	0x00002000	0xFFFF0000
0x3000	0xFFFF	0x00003000	0xFFFF0000
0x4000	0xFFFF	0x00004000	0xFFFF0000
0x5000	0xFFFF	0x00005000	0xFFFF0000
0x2000	0x1FFF	0x00002000	0xFFFFE000
0x2000	0x2FFF	0x00002000	0xFFFFD000
0x2000	0x3FFF	0x00002000	0xFFFFC000
0x2000	0x4FFF	0x00002000	0xFFFF8000
0x2000	0x5FFF	0x00002000	0xFFFF8000
0x2000	0x6FFF	0x00002000	0xFFFF8000
0x2000	0x7FFF	0x00002000	0xFFFF8000
0x2000	0x8FFF	0x00002000	0xFFFF0000
0x2000	0x9FFF	0x00002000	0xFFFF0000

Table 1-12: Example Settings for Address Space and PRBS Masks (Cont'd)

SADDR	EADDR	PRBS_SADDR_MASK_POS	PRBS_EADDR_MASK_POS
0x2000	0xAFFF	0x00002000	0xFFFF0000
0x2000	0xBFFF	0x00002000	0xFFFF0000
0x2000	0xCFFF	0x00002000	0xFFFF0000
0x2000	0xDFFF	0x00002000	0xFFFF0000
0x2000	0xEFFF	0x00002000	0xFFFF0000
0x2000	0xFFFF	0x00002000	0xFFFF0000

Traffic Generator Signal Description

Traffic generator signals are described in Table 1-13.

Table 1-13: Traffic Generator Signal Descriptions

Signal	Direction	Description
clk_i	Input	This signal is the clock input.
memc_init_done	Input	This is the input status signal from the Memory Controller to indicate that it is ready accept traffic.
manual_clear_error	Input	Input signal to clear error flag.
memc_cmd_addr_o[31:0]	Output	Start address for current transaction.
memc_cmd_en_o	Output	This active-High signal is the write-enable signal for the Command FIFO.
memc_cmd_full_i	Input	This connects to inversion of app_rdy of Memory Controller. When this input signal is asserted, TG continues to assert the memc_cmd_en_o, memc_cmd_addr_o value and memc_cmd_instr until the memc_cmd_full_i is deasserted.
memc_cmd_instr[2:0]	Output	Command code for current instruction. Command Write: 3'b000 Command Read: 3'b001
memc_rd_data_i[DWIDTH – 1:0]	Input	Read data value returning from memory.
memc_rd_empty_i	Input	This active-High signal is the empty flag for the Read Data FIFO in Memory Controller. It indicates there is no valid data in the FIFO.
memc_rd_en_o	Output	This signal is only used in MCB-like interface.
memc_wr_data_o[DWIDTH – 1:0]	Output	Write data value to be loaded into Write Data FIFO in Memory Controller.
memc_wr_en_o	Output	This active-High signal is the write enable for the Write Data FIFO. It indicates that the value on memc_wr_data is valid.
memc_wr_full_i	Input	This active-High signal is the full flag for the Write Data FIFO from Memory Controller. When this signal is High, TG holds the write data value and keeps assertion of memc_wr_en until the memc_wr_full_i goes Low.
qdr_wr_cmd_o	Output	This signal is only used to send write commands to the QDR II+ user interface.

Table 1-13: Traffic Generator Signal Descriptions (Cont'd)

Signal	Direction	Description
vio_modify_enable	Input	Allow vio_xxxx_mode_value to alter traffic pattern.
vio_data_mode_value[3:0]	Input	<p>Valid settings for this signal are:</p> <ul style="list-style-type: none"> • 0x0: Reserved. • 0x1: FIXED – 32 bits of fixed_data as defined through fixed_data_i inputs. • 0x2: ADDRESS – 32 bits address as data. Data is generated based on the logical address space. If a design has a 256-bit user data bus, each write beat in the user bus would have a 256/8 address increment in byte boundary. If the starting address is 1,300, the data is 1,300, followed by 1,320 in the next cycle. To simplify the logic, the user data pattern is a repeat of the increment of the address value Bits[31:0]. • 0x3: HAMMER – All 1s are on DQ pins during the rising edge of DQS, and all 0s are on the DQ pins during the falling edge of DQS, except the VICTIM line as defined in the parameter "SEL_VICTIM_LINE." This option is only valid if parameter DATA_PATTERN = "DGEN_HAMMER" or "DGEN_ALL." • 0x4: SIMPLE8 – Simple 8 data pattern that repeats every 8 words. The patterns can be defined by the "simple_datax" inputs. • 0x5: WALKING1s – Walking 1s are on the DQ pins. The starting position of 1 depends on the address value. This option is only valid if the parameter DATA_PATTERN = "DGEN_WALKING" or "DGEN_ALL." • 0x6: WALKING0s – Walking 0s are on the DQ pins. The starting position of 0 depends on the address value. This option is only valid if the parameter DATA_PATTERN = "DGEN_WALKING0" or "DGEN_ALL." • 0x7: PRBS – A 32-stage LFSR generates random data and is seeded by the starting address. This option is only valid if the parameter DATA_PATTERN = "DGEN_PRBS" or "DGEN_ALL." • 0x9: SLOW HAMMER – This is the slow MHz hammer data pattern. • 0xA: PHY_CALIB pattern – 0xFF, 00, AA, 55, 55, AA, 99, 66. This mode only generates READ commands at address zero. This is only valid in the Virtex®-7 family.
vio_addr_mode_value[2:0]	Input	<p>Valid settings for this signal are:</p> <ul style="list-style-type: none"> • 0x1: FIXED address mode. The address comes from the fixed_addr_i input bus. With FIXED address mode, the data_mode is limited to the fixed_data_input. No PRBS data pattern is generated. • 0x2: PRBS address mode (Default). The address is generated from the internal 32-bit LFSR circuit. The seed can be changed through the cmd_seed input bus. • 0x3: SEQUENTIAL address mode. The address is generated from the internal address counter. The increment is determined by the user interface port width.

Table 1-13: Traffic Generator Signal Descriptions (Cont'd)

Signal	Direction	Description
vio_instr_mode_value[3:0]	Input	Valid settings for this signal are: <ul style="list-style-type: none"> • 0x1: Command type (read/write) as defined by fixed_instr_i. • 0x2: Random read/write commands. • 0xE: Write only at address zero. • 0xF: Read only at address zero.
vio_bl_mode_value[3:0]	Input	Valid settings for this signal are: <ul style="list-style-type: none"> • 0x1: Fixed burst length as defined in the fixed_bl_i inputs. • 0x2: The user burst length is generated from the internal PRBS generator. Each burst value defines the number of back-to-back commands that are generated.
vio_fixed_instr_value	Input	Valid settings are: <ul style="list-style-type: none"> • 0x0: Write instruction • 0x1: Read instruction
vio_fixed_bl_value	Input	Valid settings are 1 to 256.
vio_pause_traffic	Input	Pause traffic generation on-the-fly.
vio_data_mask_gen	Input	This mode is only used if the data mode pattern is <i>address as data</i> . If this is enabled, a random memc_wr_mask is generated after the memory pattern has been filled in memory. The write data byte lane is jammed with 8'hFF if the corresponding memc_write_mask is asserted.
cmp_data[DWIDTH – 1:0]	Output	Expected data to be compared with read back data from memory.
cmp_data_valid	Output	Compare data valid signal.
cmp_error	Output	This compare error flag asserts whenever cmp_data is not the same as the readback data from memory.
error	Output	This signal is asserted when the readback data is not equal to the expected value.
error_status[n:0]	Output	This signal latches these values when the error signal is asserted: <ul style="list-style-type: none"> • [31:0]: Read start address • [37:32]: Read burst length • [39:38]: Reserved • [40]: mcb_cmd_full • [41]: mcb_wr_full • [42]: mcb_rd_empty • [64 + (DWIDTH – 1):64]: expected_cmp_data • [64 + (2 × DWIDTH – 1):64 + DWIDTH]: read_data
simple_data0[31:0]	Input	User-defined simple data 0 for simple 8 repeat data pattern.
simple_data1[31:0]	Input	User-defined simple data 1 for simple 8 repeat data pattern.
simple_data2[31:0]	Input	User-defined simple data 2 for simple 8 repeat data pattern.
simple_data3[31:0]	Input	User-defined simple data 3 for simple 8 repeat data pattern.

Table 1-13: Traffic Generator Signal Descriptions (Cont'd)

Signal	Direction	Description
simple_data4[31:0]	Input	User-defined simple data 4 for simple 8 repeat data pattern.
simple_data5[31:0]	Input	User-defined simple data 5 for simple 8 repeat data pattern.
simple_data6[31:0]	Input	User-defined simple data 6 for simple 8 repeat data pattern.
simple_data7[31:0]	Input	User-defined simple data 7 for simple 8 repeat data pattern.
fixed_data_i[31:0]	Input	User-defined fixed data pattern.
fixed_instr_i[2:0]	Input	User-defined fixed command pattern. 000: Write command 001: Read command
fixed_bl_i[5:0]	Input	User-defined fixed burst length. Each burst value defines the number of back to back commands that are generated.

Memory Initialization and Traffic Test Flow

After power-up, the Init Memory Control block directs the traffic generator to initialize the memory with the selected data pattern through the memory initialization procedure.

Memory Initialization

1. The `data_mode_i` input is set to select the data pattern (for example, `data_mode_i[3:0] = 0010` for the address as the data pattern).
2. The `start_addr_i` input is set to define the lower address boundary.
3. The `end_addr_i` input is set to define the upper address boundary.
4. The `bl_mode_i` is set to 01 to get the burst length from the `fixed_bl_i` input.
5. The `fixed_bl_i` input is set to either 16 or 32.
6. The `instr_mode_i` is set to 0001 to get the instruction from the `fixed_instr_i` input.
7. The `fixed_instr_i` input is set to the "WR" command value of the memory device.
8. The `addr_mode_i` is set to 11 for the sequential address mode to fill up the memory space.
9. The `mode_load_i` is asserted for one clock cycle.

When the memory space is initialized with the selected data pattern, the Init Memory Control block instructs the traffic generator to begin running traffic through the traffic test flow procedure (by default, the `addr_mode_i`, `instr_mode_i`, and `bl_mode_i` inputs are set to select PRBS mode).

Traffic Test Flow

1. The `addr_mode_i` input is set to the desired mode (PRBS is the default).

2. The `cmd_seed_i` and `data_seed_i` input values are set for the internal PRBS generator. This step is not required for other patterns.
3. The `instr_mode_i` input is set to the desired mode (PRBS is the default).
4. The `bl_mode_i` input is set to the desired mode (PRBS is the default).
5. The `data_mode_i` input should have the same value as in the memory pattern initialization stage detailed in [Memory Initialization](#).
6. The `run_traffic_i` input is asserted to start running traffic.
7. If an error occurs during testing (for example, the read data does not match the expected data), the error bit is set until reset is applied.
8. Upon receiving an error, the `error_status` bus latches the values defined in [Table 1-13, page 73](#).

With some modifications, the example design can be changed to allow `addr_mode_i`, `instr_mode_i`, and `bl_mode_i` to be changed dynamically when `run_traffic_i` is deasserted. However, after changing the setting, the memory initialization steps need to be repeated to ensure that the proper pattern is loaded into the memory space.

Note:

- When the chip select option is disabled, the simulation test bench always ties the memory model chip select bit(s) to zero for proper operation.
- When the data mask option is disabled, the simulation test bench always ties the memory model data mask bit(s) to zero for proper operation.

Simulating the Example Design (for Designs with the AXI4 Interface)

The MIG tool provides a synthesizable AXI4 test bench to generate various traffic patterns to the Memory Controller. This test bench consists of an instance of user design (Memory Controller) with AXI4 interface, a traffic_generator (`axi4_tg`) that generates traffic patterns through the AXI4 interface of the controller as shown in [Figure 1-41](#). The infrastructure block inside the user design provides clock resources to both the controller and the traffic generator. [Figure 1-41](#) shows a block diagram of the example design test bench. The details of the clocks in [Figure 1-41](#) are provided in [Clocking Architecture, page 119](#).

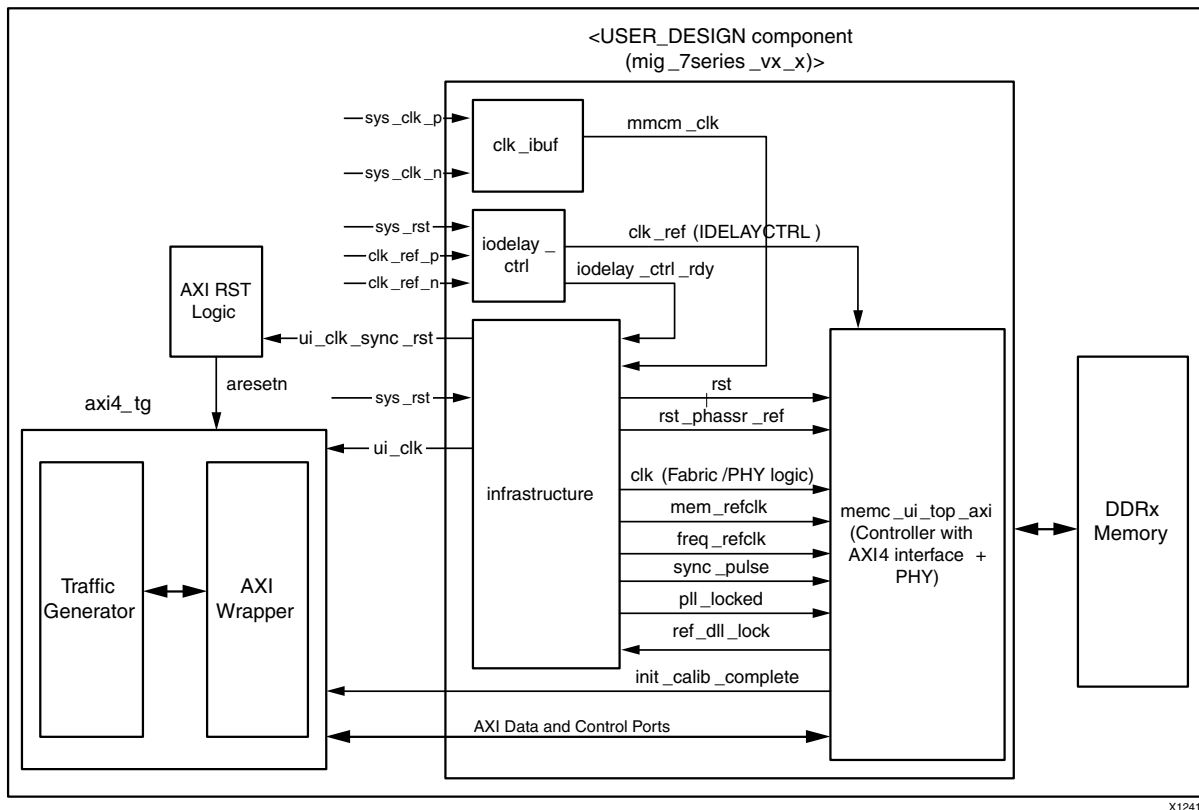


Figure 1-41: Synthesizable Example Design Block for AXI4 Interface

Figure 1-42 shows the simple write transaction being performed on the AXI4 interface. This transaction consists of a command phase, a data phase, and a response phase. This follows the standard AXI4 protocol.

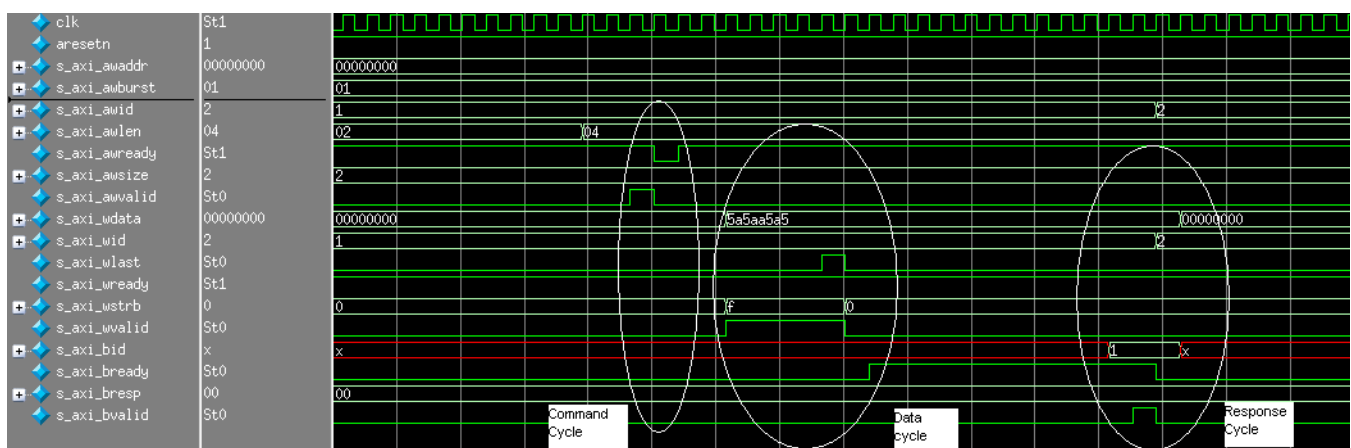


Figure 1-42: AXI4 Interface Write Cycle

Figure 1-43 shows a simple read transaction being performed on the AXI4 interface. This transaction consists of a command phase and data phase. This follows the standard AXI4 protocol.

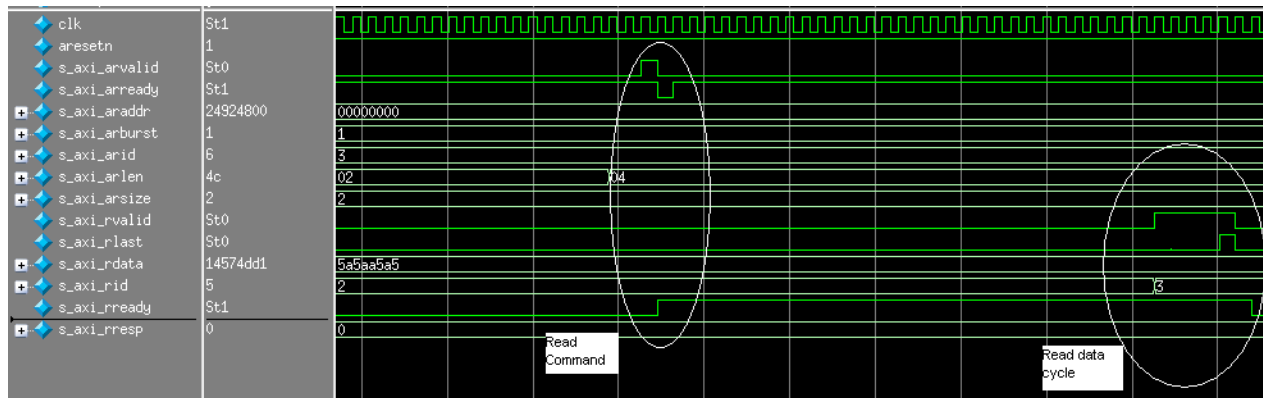


Figure 1-43: AXI4 Interface Read Cycle

The example design generated when the AXI4 interface is selected as the user interface is different compared to the standard traffic generator user interface. The intent of this synthesizable test bench is to verify the basic AXI4 transactions as well as the Memory Controller transactions. However, this test bench does not verify all Memory Controller features and is aimed at verifying the AXI4 SHIM features. Table 1-14 shows the signals of interest during verification of the AXI4 test bench. These signals can be found in the `example_top` module.

Table 1-14: Signals of Interest During Simulation for the AXI4 Test Bench

Signal	Description
test_cmptd	When asserted, this signal indicates that the current round of tests with random reads and writes is completed. This signal is deasserted when a new test starts.
write_cmptd	This signal is asserted for one clock indicating that the current write transaction is completed.
cmd_err	When asserted, this signal indicates that the command phase of the AXI4 transaction (read or write) has an error.
write_err	When asserted, this signal indicates that the write transaction to memory resulted in an error.
dbg_wr_sts_vld	When asserted, this signal indicates a valid status for the write transaction on the <code>dbg_wr_sts</code> bus. This signal is asserted even if the write transaction does not complete.
dbg_wr_sts	This signal has the status of the write transaction. The details of the status are given in Table 1-15.
read_cmptd	This signal is asserted for one clock indicating that the current read transaction is completed.
read_err	When asserted, this signal indicates that the read transaction to the memory resulted in an error.

Table 1-14: Signals of Interest During Simulation for the AXI4 Test Bench

Signal	Description
dbg_rd_sts_vld	When asserted, this signal indicates a valid status for the read transaction on the dbg_rd_sts bus. This signal is asserted even if the read transaction does not complete.
dbg_rd_sts	This signal has the status of the read transaction. The details of the status are given in Table 1-16.

The initialization and the calibration sequence remain the same as that indicated in [Simulating the Example Design \(for Designs with the Standard User Interface\)](#), page 66. The status that is generated for a write transaction can be found in Figure 1-44.

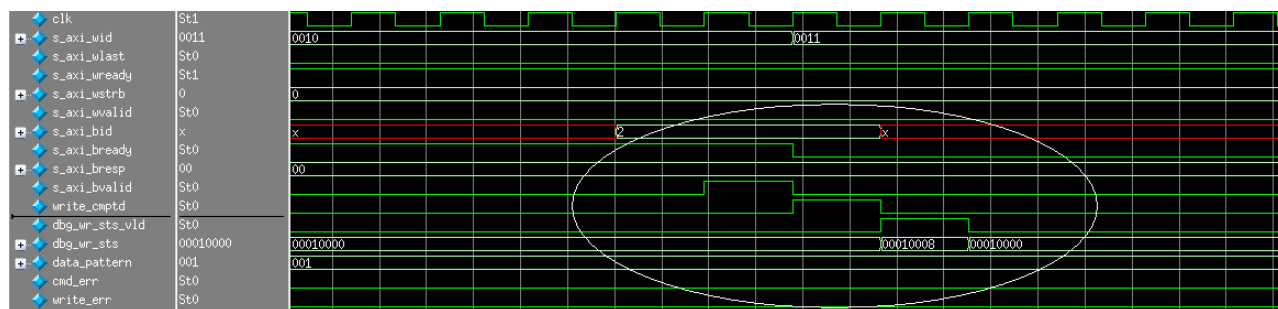


Figure 1-44: Status for the Write Transaction

Table 1-15: Debug Status for the Write Transaction

Bits	Description
39:32	Number of beats/write transfers completed for last burst
31:21	Reserved
20:18	Data pattern used for the current transaction: <ul style="list-style-type: none"> • 000: 5A and A5 • 001: PRBS pattern • 010: Walking zeros • 011: Walking ones • 100: All ones • 101: All zeros
17	Write error occurred. The write transaction could not be completed.
16	Command error occurred during a write transaction.
15:9	Reserved
8:6	AXI wrapper write FSM state when timeout (watchdog timer should be enabled) occurs: <ul style="list-style-type: none"> • 3'b001: Data write transaction • 3'b010: Waiting for acknowledgment for written data • 3'b011: Dummy data write transaction • 3'b100: Waiting for response from the response channel

Table 1-15: Debug Status for the Write Transaction (Cont'd)

Bits	Description
5:2	Response ID for the write response
1:0	Write response received for AXI

The status generated for a read transaction is shown in Figure 1-45.

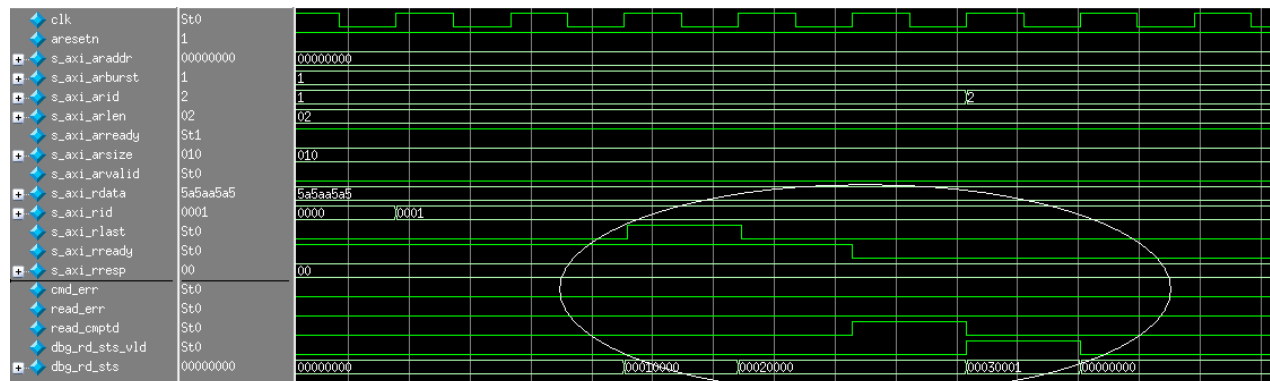


Figure 1-45: Status for the Read Transaction

Table 1-16: Debug Status for the Read Transaction

Bits	Description
39:32	Number of beats/read transfers completed for last burst
31:30	Reserved
29:27	Data pattern used for the current check: <ul style="list-style-type: none"> • 000: 5A and A5 • 001: PRBS pattern • 010: Walking zeros • 011: Walking ones • 100: All ones • 101: All zeros
26:19	Pointer value for which the mismatch occurred
18	Data mismatch occurred between the written data and read data
17	Read error occurred, read transaction could not be completed
16	Command error occurred during read transaction
15:4	Reserved
3:2	AXI wrapper read FSM state when timeout (watchdog timer should be enabled) occurs: <ul style="list-style-type: none"> • 2'b01: Read command transaction • 2'b10: Data read transaction
1	Incorrect response ID presented by the AXI slave
0	Read error response on AXI

Calibration and other DDR data read and write transactions are similar to what is described in [Simulating the Example Design \(for Designs with the Standard User Interface\)](#), page 66. The AXI4 write and read transactions are started only after the `init_calib_complete` signal is asserted.

Setting Up for Simulation



IMPORTANT: *The Xilinx UNISIM library must be mapped into the simulator.*

The test bench provided with the example design supports these pre-implementation simulations:

- The test bench, along with vendor's memory model used in the example design
- The RTL files of the Memory Controller and the PHY core, created by the MIG tool

The QuestaSim, Vivado Simulator, IES, and VCS simulation tools are used for verification of the MIG IP core at each software release. Script files to run simulations with IES and VCS simulators are generated in MIG generated output. Simulations using QuestaSim and Vivado simulators can be done through the Vivado Tcl Console commands or in the Vivado IDE.



IMPORTANT: *Other simulation tools can be used for MIG IP core simulation but are not specifically verified by Xilinx.*

Simulation Flow Using IES and VCS Script Files

To run the simulation, go to this directory:

```
<project_dir>/<Component_Name>_example/<component
name>_example.srscs/sim_1/imports/sim
```

For a project created with the name set as `project_1` and the Component Name entered in Vivado IDE as `mig_7series_0`, go to the directory as follows:

```
project_1/mig_7series_0_example/mig_7series_0_example.srscs/sim_1/im
ports/sim
```

IES and VCS simulation scripts are meant to be executed only in Linux operating systems.

The `ies_run.sh` and `vcs_run.sh` files are the executable files for running simulations using IES and VCS simulators respectively. Library files should be added to the `ies_run.sh` and `vcs_run.sh` files respectively. See the `readme.txt` file for details regarding simulations using IES and VCS.

Simulation Flow Using Vivado Simulator

1. In the **Open IP Example Design** Vivado project, under **Flow Navigator**, select **Simulation Settings** (Figure 1-46).

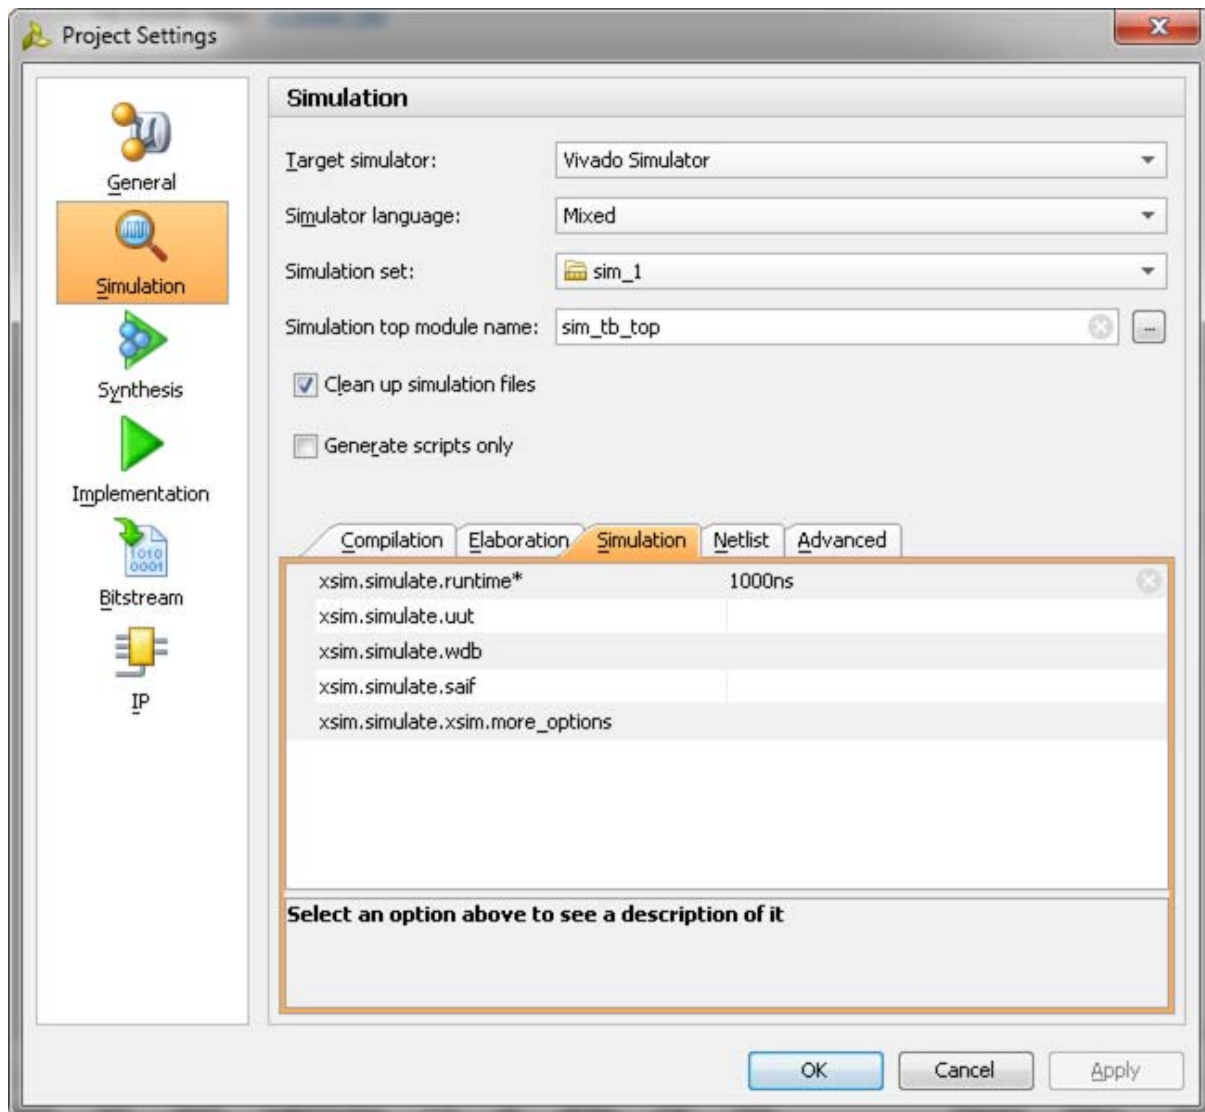


Figure 1-46: Simulation with Vivado Simulator

2. Under the **Simulation** tab as shown in Figure 1-46, set the `xsim.simulate.runtime` as 1 ms (there are simulation RTL directives which stop the simulation after a certain period of time, which is less than 1 ms). Apply the settings and select **OK**.

3. In the **Flow Navigator** window, select **Run Simulation** and select **Run Behavioral Simulation** as shown in Figure 1-47.

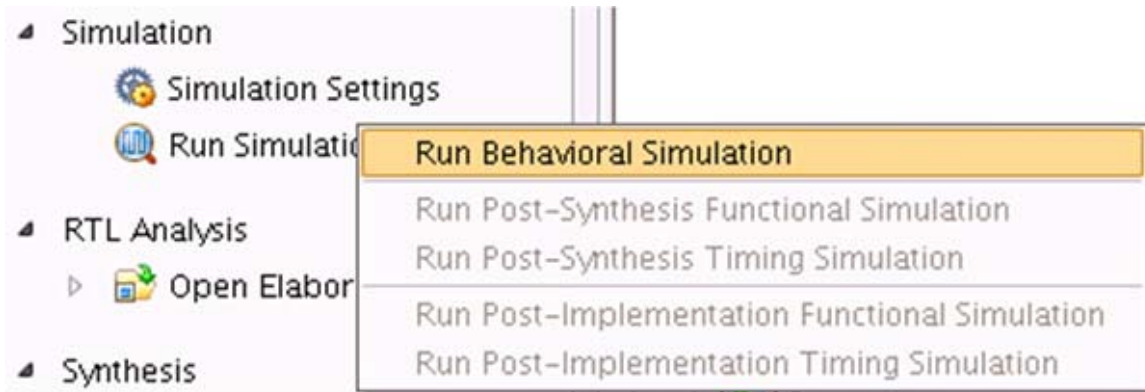


Figure 1-47: Run Behavioral Simulation

Simulation Flow Using QuestaSim

1. In the **Open IP Example Design** Vivado project, under **Flow Navigator** select **Simulation Settings**.
2. Select **Target simulator** as QuestaSim/ModelSim.
 - a. Browse to the **Compiled libraries location** and set the path on **Compiled libraries location** option.
 - b. Under the **Simulation** tab, set the `modelsim.simulate.runtime` to 1 ms (there are simulation RTL directives which stop the simulation after certain period of time, which is less than 1 ms), set `modelsim.simulate.vsim.more_options` to `-novopt` as shown in Figure 1-46.
3. Apply the settings and select **OK**.

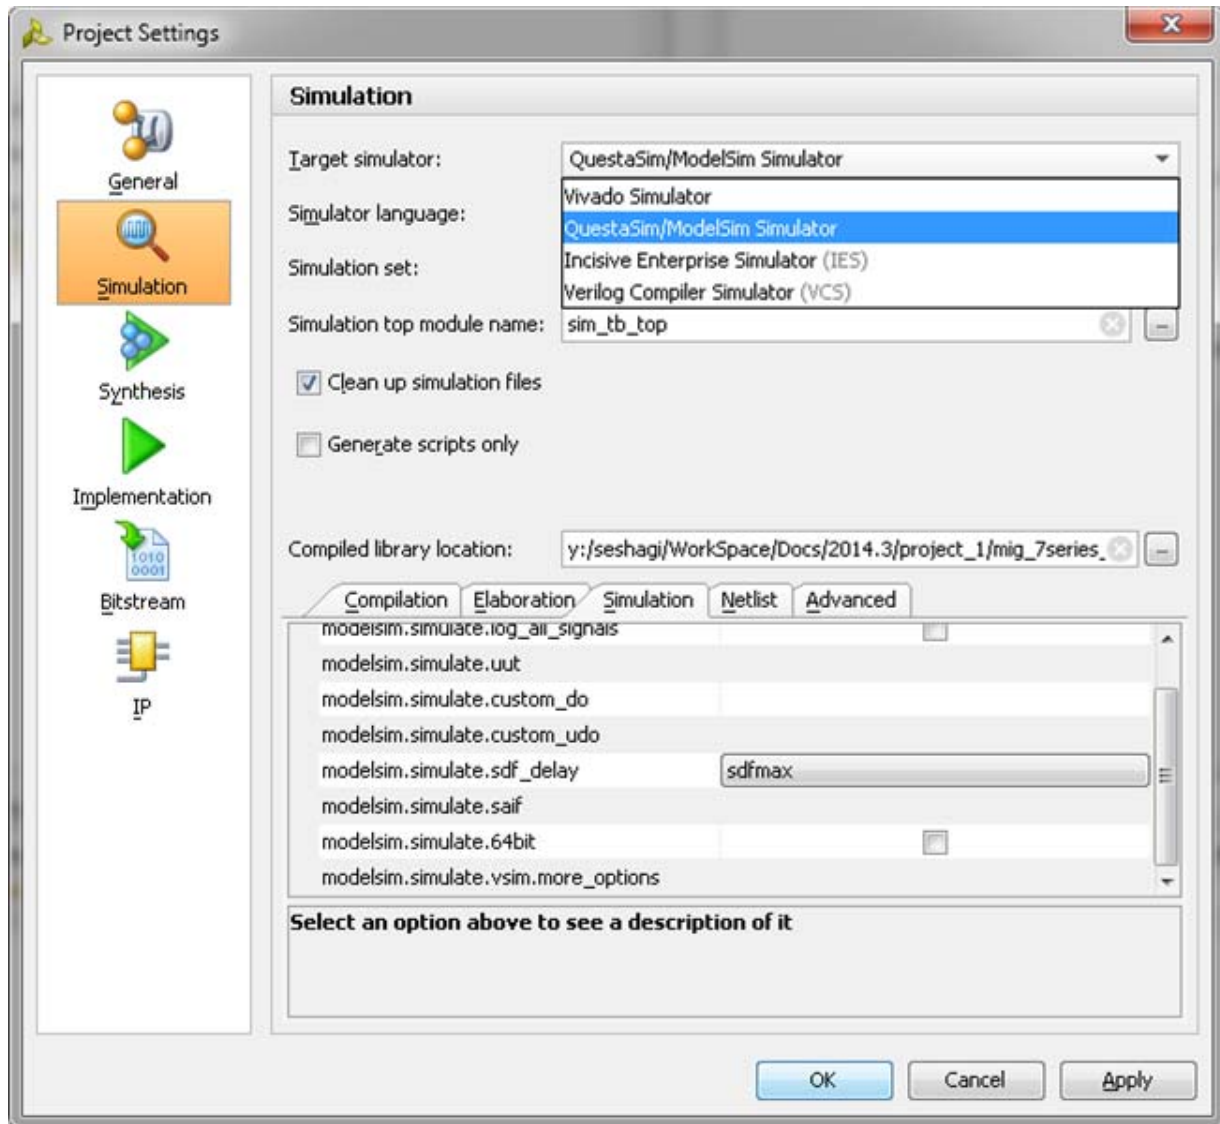


Figure 1-48: Simulation with QuestaSim

4. In the **Flow Navigator** window, select **Run Simulation** and select **Run Behavioral Simulation** as shown in Figure 1-47.
5. Vivado invokes QuestaSim and simulations are run in the QuestaSim tool. For more information, see the *Vivado Design Suite User Guide: Logic Simulation* (UG900) [Ref 8].

Simulation Flow Using VCS

1. In the **Open IP Example Design Vivado** project, under **Flow Navigator** select **Simulation Settings**.
2. Select **Target simulator** as Verilog Compiler Simulator (VCS).
 - a. Browse to the **Compiled libraries location** and set the path on **Compiles libraries location** option.

- b. Under the **Compilation** tab, set the `vcs.compile.vlogan.more_options` to `-sverilog`.
 - c. Under the **Simulation** tab, set the `vcs.simulate.runtime` to 1 ms (there are simulation RTL directives which stop the simulation after a certain period of time which is less than 1 ms) as shown in Figure 1-49.
3. Apply the settings and select **OK**.

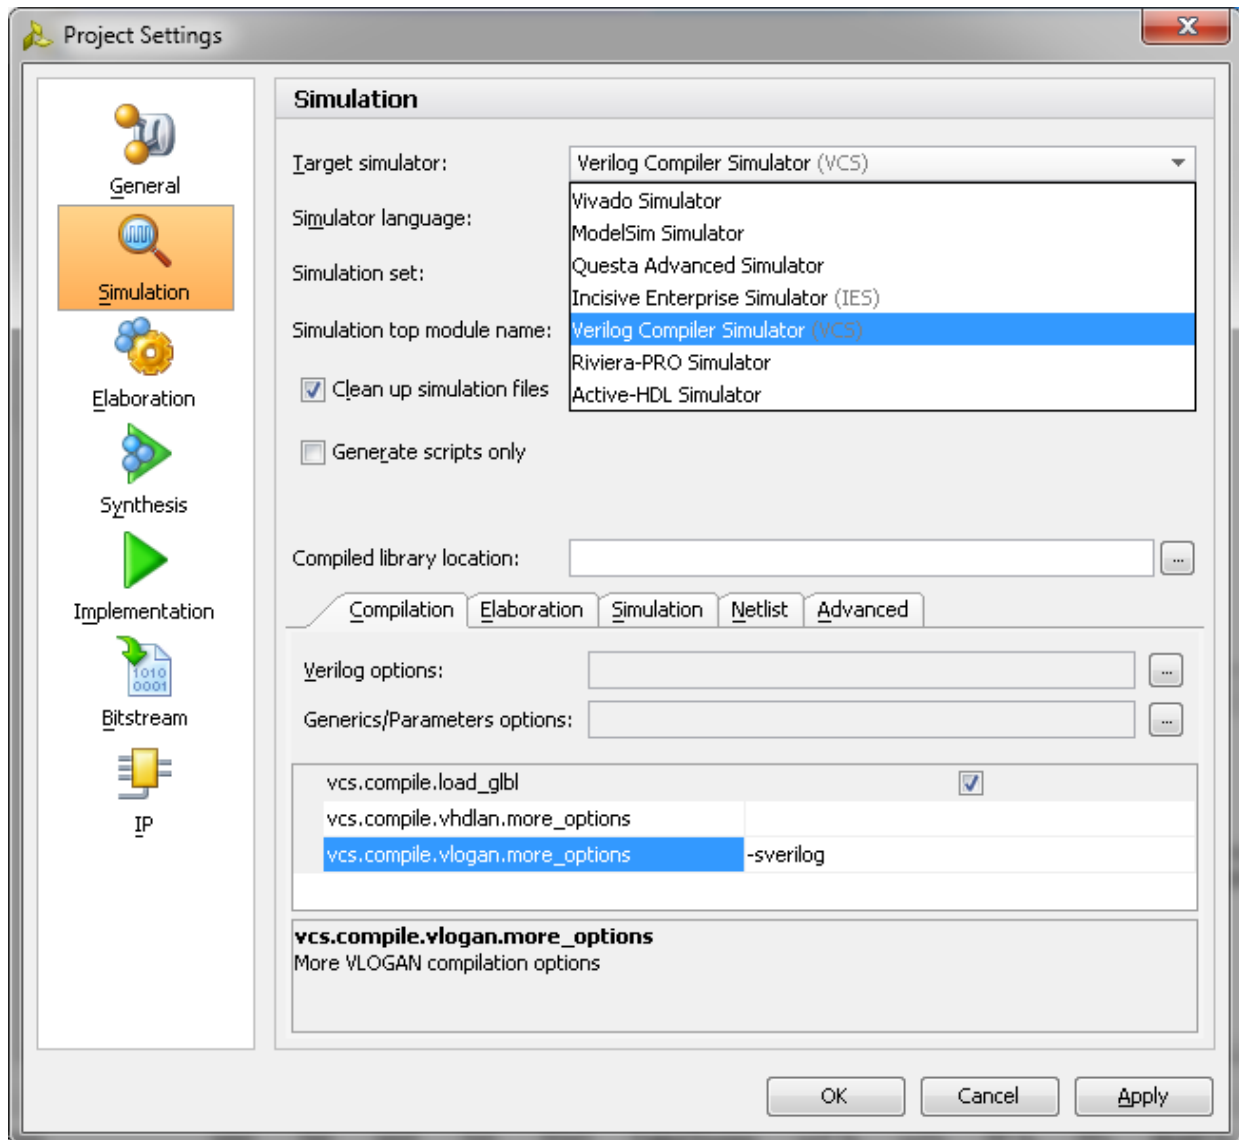


Figure 1-49: Simulation with VCS

4. In the **Flow Navigator** window, select **Run Simulation** and select **Run Behavioral Simulation** as shown in Figure 1-47.
5. Vivado invokes VCS and simulations are run in the VCS tool. For more information, see the *Vivado Design Suite User Guide: Logic Simulation* (UG900) [Ref 8].

Simulation Flow Using IES

1. In the **Open IP Example Design Vivado** project, under **Flow Navigator** select **Simulation Settings**.
2. Select **Target simulator** as Incisive Enterprise Simulator (IES).
 - a. Browse to the **Compiled libraries location** and set the path on **Compiles libraries location** option.
 - b. Under the **Compilation** tab, set the `ies.compile.ncvlog.more_options` to `-sv`.
 - c. Under the **Elaboration** tab, set the `ies.elaborate.ncelab.more_options` to `-namemap_mixgen`.
 - d. Under the **Simulation** tab, set the `ies.simulate.runtime` to 1 ms (there are simulation RTL directives which stop the simulation after certain period of time which is less than 1 ms) as shown in [Figure 1-50](#).

3. Apply the settings and select **OK**.

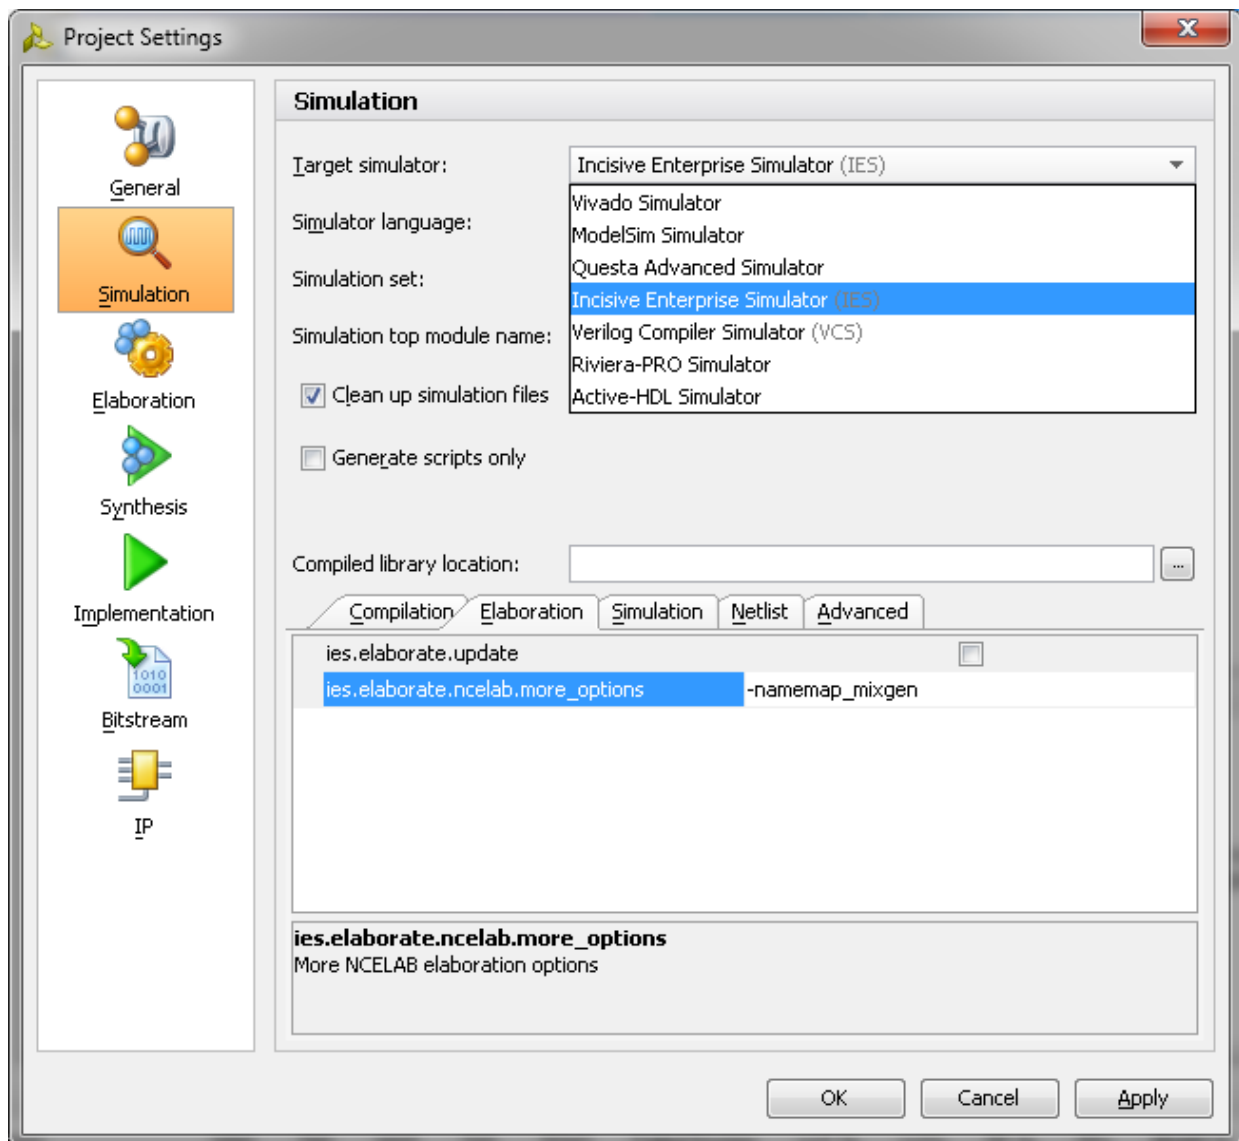


Figure 1-50: Simulation with IES

4. In the **Flow Navigator** window, select **Run Simulation** and select **Run Behavioral Simulation** as shown in [Figure 1-47](#).
5. Vivado invokes IES and simulations are run in the IES tool. For more information, see the *Vivado Design Suite User Guide: Logic Simulation* (UG900) [\[Ref 8\]](#).

Synplify Pro Black Box Testing

Using the Synopsys® Synplify Pro® flow for `example_design`, follow these steps to run black box synthesis with Synplify Pro and implementation with Vivado.

1. Generate the 7 series architecture DDR3 SDRAM IP core with OOC flow to generate the .dcp file for implementation. The **Target Language** for the project can be selected as **Verilog** or **VHDL**.
2. Create the example design for the DDR3 SDRAM IP core using the information provided in the example design section and close the Vivado project.
3. Invoke the Synplify Pro software which supports 7 series FPGA and select the same 7 series FPGA part selected at the time of generating the IP core.
4. Add the following files into Synplify Pro project based on the **Target Language** selected at the time of invoking Vivado:

a. For Verilog:

```
<project_dir>/<Component_Name>_example/  
<Component_Name>_example.srcs/sources_1/ip/<Component_Name>/*stub.v  
<project_dir>/<Component_Name>_example/  
<Component_Name>_example.srcs/sources_1/imports/rtl/example_top.v  
<project_dir>/<Component_Name>_example/  
<Component_Name>_example.srcs/sources_1/imports/rtl/traffic_gen/*.v
```

b. For VHDL:

```
<project_dir>/<Component_Name>_example/  
<Component_Name>_example.srcs/sources_1/ip/<Component_Name>/*stub.vhdl  
<project_dir>/<Component_Name>_example/  
<Component_Name>_example.srcs/sources_1/imports/rtl/example_top.vhd  
<project_dir>/<Component_Name>_example/  
<Component_Name>_example.srcs/sources_1/imports/rtl/traffic_gen/*.v
```

5. Specify top-level module/entity name of the design. In this case it is **example_top**. Run Synplify Pro synthesis to generate the .edf file. Then, close the Synplify Pro project.
6. Open a new Vivado project with Project Type as **Post-synthesis Project** and select the **Target Language**, same as selected at the time of generating the IP core.
7. Add the Synplify Pro generated .edf file to the Vivado project as **Design Source**.
8. Add the DDR3 IP .dcp file present inside the example project in step 2 to this Vivado project as **Design Source**. For example:

```
<project_dir>/<Component_Name>_example/  
<Component_Name>_example.srcs/sources_1/ip/<Component_Name>/<Component_Name>.dcp
```

9. Add the .xdc file generated in step 2 to the Vivado project as a **constraint** file. For example:

```
<project_dir>/<Component_Name>_example/  
<Component_Name>_example.srcs/constrs_1/imports/par/example_top.xdc
```

10. Run implementation flow with the Vivado tool. For details about implementation, see the *Vivado Design Suite User Guide: Designing with IP* (UG896) [Ref 7].


Note: Similar steps can be followed for the user design using appropriate .dcp and .xdc files.

Core Architecture

This section describes the architecture of the 7 series FPGAs memory interface solutions core, providing an overview of the core modules and interfaces.

Overview

The 7 series FPGAs memory interface solutions core is shown in Figure 1-51.

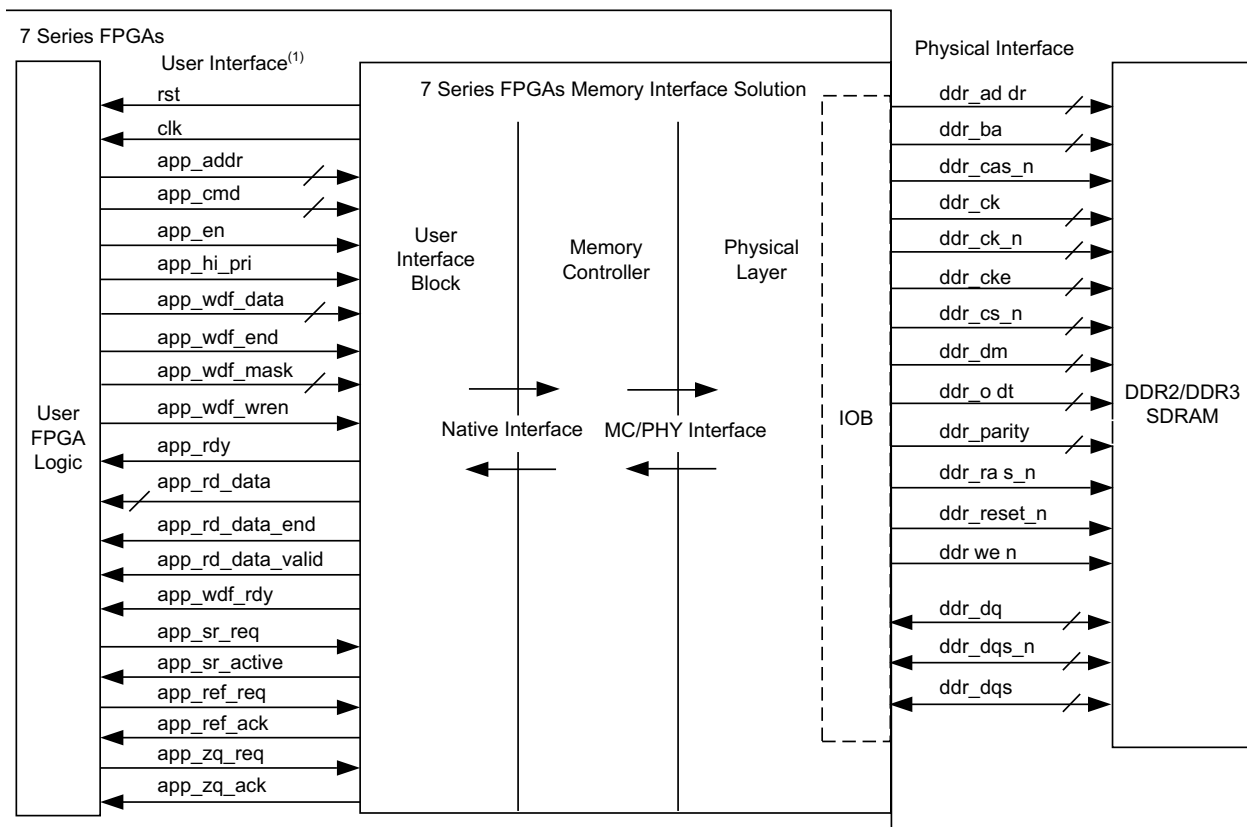

1. System clock (`sys_clk_p` and `sys_clk_n/sys_clk_i`), Reference clock (`clk_ref_p` and `clk_ref_n/clk_ref_i`), and system reset (`sys_rst_n`) port connections are not shown in block diagram.

Figure 1-51: 7 Series FPGAs Memory Interface Solution

User FPGA Logic

The user FPGA logic block shown in [Figure 1-51](#) is any FPGA design that requires to be connected to an external DDR2 or DDR3 SDRAM. The user FPGA logic connects to the Memory Controller through the user interface. An example user FPGA logic is provided with the core.

AXI4 Slave Interface Block

The AXI4 slave interface maps AXI4 transactions to the UI to provide an industry-standard bus protocol interface to the Memory Controller.

User Interface Block and User Interface

The UI block presents the UI to the user FPGA logic block. It provides a simple alternative to the native interface by presenting a flat address space and buffering read and write data.

Memory Controller and Native Interface

The front end of the Memory Controller (MC) presents the native interface to the UI block. The native interface allows the user design to submit memory read and write requests and provides the mechanism to move data from the user design to the external memory device, and vice versa. The backend of the Memory Controller connects to the physical interface and handles all the interface requirements to that module. The Memory Controller also provides a reordering option that reorders received requests to optimize data throughput and latency.

PHY and the Physical Interface

The front end of the PHY connects to the Memory Controller. The backend of the PHY connects to the external memory device. The PHY handles all memory device signal sequencing and timing.

IDELAYCTRL

An IDELAYCTRL is required in any bank that uses IDELAYs. IDELAYs are associated with the data group (DQ). Any bank/clock region that uses these signals require an IDELAYCTRL.

The MIG tool instantiates one IDELAYCTRL and then uses the IODELAY_GROUP attribute (see the `iodelay_ctrl.v` module). Based on this attribute, the Vivado Design Suite properly replicates IDELAYCTRLs as needed within the design.

The IDELAYCTRL reference frequency is set by the MIG tool to either 200 MHz, 300 MHz, or 400 MHz depending on memory interface frequency and speed grade of the FPGA. Based on the IODELAY_GROUP attribute that is set, the Vivado Design Suite replicates the IDELAYCTRLs for each region where the IDELAY blocks exist.

When a user creates a multicontroller design on their own, each MIG output has the component instantiated with the primitive. This violates the rules for IDELAYCTRLs and the usage of the IODELAY_GRP attribute. IDELAYCTRLs need to have only one instantiation of the component with the attribute set properly, and allow the tools to replicate as needed.

User Interface

The UI is shown in [Table 1-17](#) and connects to an FPGA user design to allow access to an external memory device.

Table 1-17: User Interface

Signal	Direction	Description
app_addr[ADDR_WIDTH – 1:0]	Input	This input indicates the address for the current request.
app_cmd[2:0]	Input	This input selects the command for the current request.
app_en	Input	This is the active-High strobe for the app_addr[], app_cmd[2:0], app_sz, and app_hi_pri inputs.
app_rdy	Output	This output indicates that the UI is ready to accept commands. If the signal is deasserted when app_en is enabled, the current app_cmd and app_addr must be retried until app_rdy is asserted.
app_hi_pri	Input	This active-High input elevates the priority of the current request.
app_rd_data [APP_DATA_WIDTH – 1:0]	Output	This provides the output data from read commands.
app_rd_data_end	Output	This active-High output indicates that the current clock cycle is the last cycle of output data on app_rd_data[]. This is valid only when app_rd_data_valid is active-High.
app_rd_data_valid	Output	This active-High output indicates that app_rd_data[] is valid.
app_sz	Input	This input is reserved and should be tied to 0.
app_wdf_data [APP_DATA_WIDTH – 1:0]	Input	This provides the data for write commands.
app_wdf_end	Input	This active-High input indicates that the current clock cycle is the last cycle of input data on app_wdf_data[].
app_wdf_mask [APP_MASK_WIDTH – 1:0]	Input	This provides the mask for app_wdf_data[].
app_wdf_rdy	Output	This output indicates that the write data FIFO is ready to receive data. Write data is accepted when app_wdf_rdy = 1'b1 and app_wdf_wren = 1'b1.
app_wdf_wren	Input	This is the active-High strobe for app_wdf_data[].
app_correct_en_i	Input	When asserted, this active-High signal corrects single bit data errors. This input is valid only when ECC is enabled in the GUI. In the example design, this signal is always tied to 1.
app_sr_req	Input	This input is reserved and should be tied to 0.
app_sr_active	Output	This output is reserved.

Table 1-17: User Interface (Cont'd)

Signal	Direction	Description
app_ref_req	Input	This active-High input requests that a refresh command be issued to the DRAM.
app_ref_ack	Output	This active-High output indicates that the Memory Controller has sent the requested refresh command to the PHY interface.
app_zq_req	Input	This active-High input requests that a ZQ calibration command be issued to the DRAM.
app_zq_ack	Output	This active-High output indicates that the Memory Controller has sent the requested ZQ calibration command to the PHY interface.
ui_clk	Output	This UI clock must be a half or quarter of the DRAM clock.
init_calib_complete	Output	PHY asserts init_calib_complete when calibration is finished.
app_ecc_multiple_err[7:0] ⁽¹⁾	Output	This signal is applicable when ECC is enabled and is valid along with app_rd_data_valid. The app_ecc_multiple_err[3:0] signal is non-zero if the read data from the external memory has two bit errors per beat of the read burst. The SECDED algorithm does not correct the corresponding read data and puts a non-zero value on this signal to notify the corrupted read data at the UI.
ui_clk_sync_rst	Output	This is the active-High UI reset.
app_ecc_single_err[7:0]	Output	This signal is applicable when ECC is enabled and is valid along with app_rd_data_vali. The app_ecc_single_err signal is non-zero if the read data from the external memory has a single bit error per beat of the read burst.

Notes:

1. This signal is brought up to the memc_ui_top module level only. This signal should only be used when ECC is enabled.

app_addr[ADDR_WIDTH – 1:0]

This input indicates the address for the request currently being submitted to the UI. The UI aggregates all the address fields of the external SDRAM and presents a flat address space to you.

app_cmd[2:0]

This input specifies the command for the request currently being submitted to the UI. The available commands are shown in [Table 1-18](#).

Table 1-18: Commands for app_cmd[2:0]

Operation	app_cmd[2:0] Code
Read	001
Write	000

app_en

This input strobes in a request. You must apply the desired values to `app_addr[]`, `app_cmd[2:0]`, and `app_hi_pri`, and then assert `app_en` to submit the request to the UI. This initiates a handshake that the UI acknowledges by asserting `app_rdy`.

app_hi_pri

This input indicates that the current request is a high priority.

app_wdf_data[APP_DATA_WIDTH – 1:0]

This bus provides the data currently being written to the external memory.

app_wdf_end

This input indicates that the data on the `app_wdf_data[]` bus in the current cycle is the last data for the current request.

app_wdf_mask[APP_MASK_WIDTH – 1:0]

This bus indicates which bytes of `app_wdf_data[]` are written to the external memory and which bytes remain in their current state. The bytes are masked by setting a value of 1 to the corresponding bits in `app_wdf_mask`. For example, if the application data width is 256, the mask width takes a value of 32. The least significant byte [7:0] of `app_wdf_data` is masked using Bit[0] of `app_wdf_mask` and the most significant byte [255:248] of `app_wdf_data` is masked using Bit[31] of `app_wdf_mask`. Hence if you have to mask the last DWORD, that is, bytes 0, 1, 2, and 3 of `app_wdf_data`, the `app_wdf_mask` should be set to 32'h0000_000F.

app_wdf_wren

This input indicates that the data on the `app_wdf_data[]` bus is valid.

app_rdy

This output indicates to you whether the request currently being submitted to the UI is accepted. If the UI does not assert this signal after `app_en` is asserted, the current request must be retried. The `app_rdy` output is not asserted if:

- PHY/Memory initialization is not yet completed
- All the bank machines are occupied (can be viewed as the command buffer being full)
 - A read is requested and the read buffer is full

- A write is requested and no write buffer pointers are available
- A periodic read is being inserted

app_rd_data[APP_DATA_WIDTH – 1:0]

This output contains the data read from the external memory.

app_rd_data_end

This output indicates that the data on the `app_rd_data[]` bus in the current cycle is the last data for the current request.

app_rd_data_valid

This output indicates that the data on the `app_rd_data[]` bus is valid.

app_wdf_rdy

This output indicates that the write data FIFO is ready to receive data. Write data is accepted when both `app_wdf_rdy` and `app_wdf_wren` are asserted.

app_ref_req

When asserted, this active-High input requests that the Memory Controller send a refresh command to the DRAM. It must be pulsed for a single cycle to make the request and then deasserted at least until the `app_ref_ack` signal is asserted to acknowledge the request and indicate that it has been sent.

app_ref_ack

When asserted, this active-High input acknowledges a refresh request and indicates that the command has been sent from the Memory Controller to the PHY.

app_zq_req

When asserted, this active-High input requests that the Memory Controller send a ZQ calibration command to the DRAM. It must be pulsed for a single cycle to make the request and then deasserted at least until the `app_zq_ack` signal is asserted to acknowledge the request and indicate that it has been sent.

app_zq_ack

When asserted, this active-High input acknowledges a ZQ calibration request and indicates that the command has been sent from the Memory Controller to the PHY.

ui_clk_sync_rst

This is the reset from the UI which is in synchronous with `ui_clk`.

ui_clk

This is the output clock from the UI. It must be a half or quarter the frequency of the clock going out to the external SDRAM, which depends on 2:1 or 4:1 mode selected in GUI.

init_calib_complete

The PHY asserts `init_calib_complete` when calibration is finished. The application has no need to wait for `init_calib_complete` before sending commands to the Memory Controller.

AXI4 Slave Interface Block

The AXI4 slave interface block maps AXI4 transactions to the UI interface to provide an industry-standard bus protocol interface to the Memory Controller. The AXI4 slave interface is optional in designs provided through the MIG tool. The RTL is consistent between both tools. For details on the AXI4 signaling protocol, see the ARM AMBA specifications [\[Ref 4\]](#).

The overall design is composed of separate blocks to handle each AXI channel, which allows for independent read and write transactions. Read and write commands to the UI rely on a simple round-robin arbiter to handle simultaneous requests. The address read/address write modules are responsible for chopping the AXI4 burst/wrap requests into smaller memory size burst lengths of either four or eight, and also conveying the smaller burst lengths to the read/write data modules so they can interact with the user interface.

If ECC is enabled, all write commands with any of the mask bits enabled are issued as read-modify-write operation.

If ECC is enabled, all write commands with none of the mask bits enabled are issued as write operation.

AXI4 Slave Interface Parameters

Table 1-19 lists the AXI4 slave interface parameters.

Table 1-19: AXI4 Slave Interface Parameters

Parameter Name	Default Value	Allowable Values	Description
C_S_AXI_ADDR_WIDTH	32	32	This is the width of address read and address write signals. This value must be set to 32.
C_S_AXI_DATA_WIDTH	32	32, 64, 128, 256	This is the width of data signals; a width of APP_DATA_WIDTH is recommended for better performance. Using a smaller width invokes an Upsizer, which would spend clocks in packing the data.
C_S_AXI_ID_WIDTH	4	1–16	This is the width of ID signals for every channel.
C_S_AXI_SUPPORTS_NARROW_BURST	1	0, 1	This parameter adds logic blocks to support narrow AXI transfers. It is required if any master connected to the Memory Controller issues narrow bursts. This parameter is automatically set if the AXI data width is smaller than the recommended value.
C_RD_WR_ARB_ALGORITHM	RD_PRI_REG	TDM, ROUND_ROBIN, RD_PRI_REG, RD_PRI_REG_STARVE_LIMIT, WRITE_PRIORITY_REG, WRITE_PRIORITY	This parameter indicates the Arbitration algorithm scheme. See Arbitration in AXI Shim, page 100 for more information.
C_S_AXI_BASEADDR	–	Valid address	This parameter specifies the base address for the memory mapped slave interface. Address requests at this address map to rank 1, bank 0, row 0, column 0. The base/high address together define the accessible size of the memory. This accessible size must be a power of two. Additionally, the base/high address pair must be aligned to a multiple of the accessible size. The minimum accessible size is 4,096 bytes.

Table 1-19: AXI4 Slave Interface Parameters (Cont'd)

Parameter Name	Default Value	Allowable Values	Description
C_S_AXI_HIGHADDR	–	Valid address	This parameter specifies the high address for the memory mapped slave interface. Address requests received above this value wrap back to the base address. The base/high address together define the accessible size of the memory. This accessible size must be a power of two. Additionally, the base/high address pair must be aligned to a multiple of the accessible size. The minimum accessible size is 4,096 bytes.
C_S_AXI_PROTOCOL	AXI4	AXI4	This parameter specifies the AXI protocol.

AXI4 Slave Interface Signals

Table 1-20 lists the AXI4 slave interface specific signal. All of the AXI interface signals are synchronous to `ui_clk`.

Table 1-20: AXI4 Slave Interface Signals

Name	Width	Direction	Active State	Description
aresetn	1	Input	Low	Input reset to the AXI Shim and it should be in synchronous with FPGA logic clock.
s_axi_awid	C_AXI_ID_WIDTH	Input		Write address ID.
s_axi_awaddr	C_AXI_ADDR_WIDTH	Input		Write address.
s_axi_awlen	8	Input		Burst length. The burst length gives the exact number of transfers in a burst.
s_axi_awsz	3	Input		Burst size. This signal indicates the size of each transfer in the burst.
s_axi_awburst	2	Input		Burst type.
s_axi_awlock	1	Input		Lock type. (This is not used in the current implementation.)
s_axi_awcache	4	Input		Cache type. (This is not used in the current implementation.)
s_axi_awprot	3	Input		Protection type. (Not used in the current implementation.)
s_axi_awvalid	1	Input	High	Write address valid. This signal indicates that valid write address and control information are available.

Table 1-20: AXI4 Slave Interface Signals (Cont'd)

Name	Width	Direction	Active State	Description
s_axi_awready	1	Output	High	Write address ready. This signal indicates that the slave is ready to accept an address and associated control signals.
s_axi_wdata	C_AXI_DATA_WIDTH	Input		Write data.
s_axi_wstrb	C_AXI_DATA_WIDTH/8	Input		Write strobes.
s_axi_wlast	1	Input	High	Write last. This signal indicates the last transfer in a write burst.
s_axi_wvalid	1	Input	High	Write valid. This signal indicates that write data and strobe are available.
s_axi_wready	1	Output	High	Write ready.
s_axi_bid	C_AXI_ID_WIDTH	Output		Response ID. The identification tag of the write response.
s_axi_bresp	2	Output		Write response. This signal indicates the status of the write response.
s_axi_bvalid	1	Output	High	Write response valid.
s_axi_bready	1	Input	High	Response ready.
s_axi_arid	C_AXI_ID_WIDTH	Input		Read address ID.
s_axi_araddr	C_AXI_ADDR_WIDTH	Input		Read address.
s_axi_arlen	8	Input		Read burst length.
s_axi_arsize	3	Input		Read burst size.
s_axi_arburst	2	Input		Read burst type.
s_axi_arlock	1	Input		Lock type. (This is not used in the current implementation.)
s_axi_arcache	4	Input		Cache type. (This is not used in the current implementation.)
s_axi_arprot	3	Input		Protection type. (This is not used in the current implementation.)
s_axi_arvalid	1	Input	High	Read address valid.
s_axi_arready	1	Output	High	Read address ready.
s_axi_rid	C_AXI_ID_WIDTH	Output		Read ID tag.
s_axi_rdata	C_AXI_DATA_WIDTH	Output		Read data.
s_axi_rresp	2	Output		Read response.
s_axi_rlast	1	Output		Read last.
s_axi_rvalid	1	Output		Read valid.
s_axi_rready	1	Input		Read ready.

Arbitration in AXI Shim

The AXI4 protocol calls for independent read and write address channels. The Memory Controller has one address channel. The following arbitration options are available for arbitrating between the read and write address channels.

Time Division Multiplexing (TDM)

Equal priority is given to read and write address channels in this mode. The grant to the read and write address channels alternate every clock cycle. The read or write requests from the AXI master has no bearing on the grants. For example, the read requests are served in alternative clock cycles, even when there are no write requests. The slots are fixed and they are served in their respective slots only.

Round-Robin

Equal priority is given to read and write address channels in this mode. The grant to the read and write channels depends on the last served request granted from the AXI master. For example, if the last performed operation is write, then it gives precedence for read operation to be served over write operation. Similarly, if the last performed operation is read, then it gives precedence for write operation to be served over read operation. If both read and write channels requests at the same time when there are no pending requests, this scheme serves write channel ahead of read.

Read Priority (RD_PRI_REG)

Read and write address channels are served with equal priority in this mode. The requests from the write address channel are processed when one of the following occurs:

- No pending requests from read address channel.
- Read starve limit of 256 is reached. It is only checked at the end of the burst.
- Read wait limit of 16 is reached.
- Write QOS is higher which is non-zero. It is only checked at the end of the burst.

The requests from the read address channel are processed in a similar method.

Read Priority with Starve Limit (RD_PRI_REG_STARVE_LIMIT)

The read address channel is always given priority in this mode. The requests from the write address channel are processed when there are no pending requests from the read address channel or the starve limit for read is reached.

Write Priority (WRITE_PRIORITY, WRITE_PRIORITY_REG)

Write address channel is always given priority in this mode. The requests from the read address channel are processed when there are no pending requests from the write address channel. Arbitration outputs are registered in WRITE_PRIORITY_REG mode.

AXI4-Lite Slave Control/Status Register Interface Block

The AXI4-Lite Slave Control register block provides a processor accessible interface to the ECC memory option. The interface is available when ECC is enabled and the primary slave interface is AXI4. The block provides interrupts, interrupt enable, ECC status, ECC enable/disable, ECC correctable errors counter, first failing correctable/uncorrectable data, ECC and address. Fault injection registers for software testing is provided when the ECC_TEST_FI_XOR (C_ECC_TEST) parameter is "ON." The AXI4-Lite interface is fixed at 32 data bits and signaling follows the standard AMBA AXI4-Lite specifications [Ref 4].

The AXI4-Lite control/status register interface block is implemented in parallel to the AXI4 memory-mapped interface. The block monitors the output of the native interface to capture correctable (single bit) and uncorrectable (multiple bit) errors. When a correctable and/or uncorrectable error occurs, the interface also captures the byte address of the failure along with the failing data bits and ECC bits. Fault injection is provided by an XOR block placed in the write datapath after the ECC encoding has occurred. Only the first memory beat in a transaction can have errors inserted. For example, in a memory configuration with a data width of 72 and a mode register set to burst length 8, only the first 72 bits are corruptible through the fault injection interface. Interrupt generation based on either a correctable or uncorrectable error can be independently configured with the register interface.

ECC Enable/Disable

The ECC_ON_OFF register enables/disables the ECC decode functionality. However, encoding is always enabled. The default value at start-up can be parameterized with C_ECC_ONOFF_RESET_VALUE. Assigning a value of 1 for the ECC_ON_OFF bit of this register results in the `correct_en` signal input into the `mem_intf` to be asserted. Writing a value of 0 to the ECC_ON_OFF bit of this register results in the `correct_en` signal to be deasserted. When `correct_en` is asserted, decoding is enabled, and the opposite is true when this signal is deasserted. ECC_STATUS/ECC_CE_CNT are not updated when ECC_ON_OFF = 0. The FI_D0, FI_D1, FI_D2, and FI_D3 registers are not writable when ECC_ON_OFF = 0.

Single Error and Double Error Reporting

Two vectored signals from the Memory Controller indicate an ECC error: `ecc_single` and `ecc_multiple`. The `ecc_single` signal indicates if there has been a correctable error, and the `ecc_multiple` signal indicates if there has been an uncorrectable error. The widths of `ecc_multiple` and `ecc_single` are based on the C_NCK_PER_CLK parameter.

There can be between 0 and $C_NCK_PER_CLK \times 2$ errors per cycle with each data beat signaled by one of the vector bits. Multiple bits of the vector can be signaled per cycle indicating that multiple correctable errors or multiple uncorrectable errors have been detected. The `ecc_err_addr` signal (discussed in [Fault Collection](#)) is valid during the assertion of either `ecc_single` or `ecc_multiple`.

The `ECC_STATUS` register sets the `CE_STATUS` bit and/or `UE_STATUS` bit for correctable error detection and uncorrectable error detection, respectively.



CAUTION! *Multiple bit error is a serious failure of memory and it is uncorrectable. In such cases, the application cannot rely on the contents of the memory. It is suggested to not perform any further transactions to memory.*

Interrupt Generation

When interrupts are enabled with the `CE_EN_IRQ` and/or `UE_EN_IRQ` bits of the `ECC_EN_IRQ` register, if a correctable error or uncorrectable error occurs, the interrupt signal is asserted.

Fault Collection

To aid the analysis of ECC errors, there are two banks of storage registers that collect information on the failing ECC decode. One bank of registers is for correctable errors, and another bank is for uncorrectable errors. The failing address, undecoded data, and ECC bits are saved into these register banks as `CE_FFA`, `CE_FFD`, and `CE_FFE` for correctable errors, and `UE_FFA`, `UE_FFD`, and `UE_FFE` for uncorrectable errors. The data in combination with the ECC bits can help determine which bit(s) have failed. `CE_FFA` stores the address from the `ecc_err_addr` signal and converts it to a byte address. Upon error detection, the data is latched into the appropriate register. Only the first data beat with an error is stored.

When a correctable error occurs, there is also a counter that counts the number of correctable errors that have occurred. The counter can be read from the `CE_CNT` register and is fixed as an 8-bit counter; it does not roll over when the maximum value is increased.

Fault Injection

The ECC fault injection register, `FI_D` and `FI_ECC`, facilitates testing of the software drivers. When set, the ECC fault injection register XORs with the MIG DFI datapath to simulate errors in the memory. The DFI interface lies between the Memory Controller and the PHY. It is ideal for injection now because this is after the encoding has been completed. There is only support to insert errors on the first data beat, therefore there are two to four `FI_D` registers to accommodate this. During operation, after the error has been inserted into the datapath, the register clears itself.

AXI4-Lite Slave Control/Status Register Interface Parameters

[Table 1-21](#) lists the AXI4-Lite slave interface parameters.

Table 1-21: AXI4-Lite Slave Control/Status Register Parameters

Parameter Name	Default Value	Allowable Values	Description
C_S_AXI_CTRL_ADDR_WIDTH	32	32, 64	This is the width of the AXI4-Lite address buses.
C_S_AXI_CTRL_DATA_WIDTH	32	32	This is the width of the AXI4-Lite data buses.
C_ECC_ONOFF_RESET_VALUE	1	0, 1	Controls ECC on/off value at startup/reset.
C_S_AXI_CTRL_BASEADDR	–	Valid Address	This parameter specifies the base address for the AXI4-Lite slave interface.
C_S_AXI_CTRL_HIGHADDR	–	Valid Address	This parameter specifies the high address for the AXI4-Lite slave interface.
C_S_AXI_CTRL_PROTOCOL	AXI4LITE	AXI4LITE	AXI4-Lite protocol

AXI4-Lite Slave Control/Status Register Interface Signals

Table 1-22 lists the AXI4 slave interface specific signals. Clock/reset to the interface is provided from the Memory Controller.

Table 1-22: List of New I/O Signals

Name	Width	Direction	Active State	Description
s_axi_ctrl_awaddr	C_S_AXI_CTRL_ADDR_WIDTH	Input		Write address.
s_axi_ctrl_awvalid	1	Input	High	Write address valid. This signal indicates that valid write address and control information are available.
s_axi_ctrl_awready	1	Output	High	Write address ready. This signal indicates that the slave is ready to accept an address and associated control signals.
s_axi_ctrl_wdata	C_S_AXI_CTRL_DATA_WIDTH	Input		Write data
s_axi_ctrl_wvalid	1	Input	High	Write valid. This signal indicates that write data and strobe are available.
s_axi_ctrl_wready	1	Output	High	Write ready.
s_axi_ctrl_bvalid	1	Output	High	Write response valid.
s_axi_ctrl_bready	1	Input	High	Response ready.
s_axi_ctrl_araddr	C_S_AXI_CTRL_ADDR_WIDTH	Input		Read address.
s_axi_ctrl_arvalid	1	Input	High	Read address valid.
s_axi_ctrl_arready	1	Output	High	Read address.
s_axi_ctrl_rdata	C_S_AXI_CTRL_DATA_WIDTH	Output		Read data.
s_axi_ctrl_rvalid	1	Output		Read valid.

Table 1-22: List of New I/O Signals (Cont'd)

Name	Width	Direction	Active State	Description
s_axi_ctrl_rready	1	Input		Read ready.
interrupt	1	Output	High	IP Global Interrupt signal

AXI4-Lite Slave Control/Status Register Map

ECC register map is shown in Table 1-23. The register map is Little Endian. Write accesses to read-only or reserved values are ignored. Read accesses to write-only or reserved values return the value 0xDEADDEAD.

Table 1-23: ECC Control Register Map

Address Offset	Register Name	Access Type	Default Value	Description
0x00	ECC_STATUS	R/W	0x0	ECC Status Register
0x04	ECC_EN_IRQ	R/W	0x0	ECC Enable Interrupt Register
0x08	ECC_ON_OFF	R/W	0x0 or 0x1	ECC On/Off Register. If C_ECC_ONOFF_RESET_VALUE = 1, the default value is 0x1.
0x0C	CE_CNT	R/W	0x0	Correctable Error Count Register
(0x10–0x9C) Reserved				
0x100	CE_FFD[31:00]	R	0x0	Correctable Error First Failing Data Register.
0x104	CE_FFD[63:32]	R	0x0	Correctable Error First Failing Data Register
0x108	CE_FFD[95:64] ⁽¹⁾	R	0x0	Correctable Error First Failing Data Register.
0x10C	CE_FFD [127:96] ⁽¹⁾	R	0x0	Correctable Error First Failing Data Register.
(0x110–0x17C) Reserved				
0x180	CE_FFE	R	0x0	Correctable Error First Failing ECC Register.
(0x184–0x1BC) Reserved				
0x1C0	CE_FFA[31:0]	R	0x0	Correctable Error First Failing Address
0x1C4	CE_FFA[63:32] ⁽²⁾	R	0x0	Correctable Error First Failing Address
(0x1C8–0x1FC) Reserved				
0x200	UE_FFD [31:00]	R	0x0	Uncorrectable Error First Failing Data Register
0x204	UE_FFD [63:32]	R	0x0	Uncorrectable Error First Failing Data Register
0x208	UE_FFD [95:64] ⁽¹⁾	R	0x0	Uncorrectable Error First Failing Data Register
0x20C	UE_FFD [127:96] ⁽¹⁾	R	0x0	Uncorrectable Error First Failing Data Register
(0x210–0x27C) Reserved				
0x280	UE_FFE	R	0x0	Uncorrectable Error First Failing ECC Register
(0x284–0x2BC) Reserved				

Table 1-23: ECC Control Register Map (Cont'd)

Address Offset	Register Name	Access Type	Default Value	Description
0x2C0	UE_FFA[31:0]	R	0x0	Uncorrectable Error First Failing Address
0x2C4	UE_FFA[63:32] ⁽²⁾	R	0x0	Uncorrectable Error First Failing Address
(0x2C8–0x2FC) Reserved				
0x300	FI_D[31:0] ⁽³⁾	W	0x0	Fault Inject Data Register
0x304	FI_D[63:32] ⁽³⁾	W	0x0	Fault Inject Data Register
0x308	FI_D[95:64] ⁽¹⁾⁽³⁾	W	0x0	Fault Inject Data Register
0x30C	FI_D[127:96] ⁽¹⁾⁽³⁾	W	0x0	Fault Inject Data Register
(0x340–0x37C) Reserved				
0x380	FI_ECC ⁽³⁾	W	0x0	Fault Inject ECC Register

Notes:

1. Data bits 64–127 are only enabled if the DQ width is 144 bits.
2. Reporting address bits 63–32 are only available if the address map is > 32 bits.
3. FI_D* and FI_ECC* are only enabled if ECC_TEST parameter has been set to 1.

AXI4-Lite Slave Control/Status Register Map Detailed Descriptions

ECC_STATUS

This register holds information on the occurrence of correctable and uncorrectable errors. The status bits are independently set to 1 for the first occurrence of each error type. The status bits are cleared by writing a 1 to the corresponding bit position; that is, the status bits can only be cleared to 0 and not set to 1 using a register write. The ECC Status register operates independently of the ECC Enable Interrupt register.

Table 1-24: ECC Status Register Bit Definitions

Bits	Name	Core Access	Reset Value	Description
31:2	Reserved	RSVD	–	Reserved
1	CE_STATUS	R/W	0	If 1, a correctable error has occurred. This bit is cleared when a 1 is written to this bit position.
0	UE_STATUS	R/W	0	If 1, an uncorrectable error has occurred. This bit is cleared when a 1 is written to this bit position

ECC_EN_IRQ

This register determines if the values of the CE_STATUS and UE_STATUS bits in the ECC Status Register assert the Interrupt output signal (ECC_Interrupt). If both CE_EN_IRQ and UE_EN_IRQ are set to 1 (enabled), the value of the Interrupt signal is the logical OR between the CE_STATUS and UE_STATUS bits.

Table 1-25: ECC Interrupt Enable Register Bit Definitions

Bits	Name	Core Access	Reset Value	Description
31:2	Reserved	RSVD	–	Reserved
1	CE_EN_IRQ	R/W	0	If 1, the value of the CE_STATUS bit of ECC Status register is propagated to the Interrupt signal. If 0, the value of the CE_STATUS bit of ECC Status Register is not propagated to the Interrupt signal.
0	UE_EN_IRQ	R/W	0	If 1, the value of the UE_STATUS bit of ECC Status register is propagated to the Interrupt signal. If 0, the value of the UE_STATUS bit of ECC Status Register is not propagated to the Interrupt signal.

ECC_ON_OFF

The ECC On/Off Control Register allows the application to enable or disable ECC checking. The design parameter, C_ECC_ONOFF_RESET_VALUE (default on) determines the reset value for the enable/disable setting of ECC. This facilitates start-up operations when ECC might or might not be initialized in the external memory. When disabled, ECC checking is disabled for read but ECC generation is active for write operations.

Table 1-26: ECC On/Off Control Register Bit Definitions

Bits	Name	Core Access	Reset Value	Description
31:1	Reserved	RSVD	–	Reserved
0	ECC_ON_OFF	R/W	Specified by design parameter, C_ECC_ONOFF_RESET_VALUE	If 0, ECC checking is disabled on read operations. (ECC generation is enabled on write operations when C_ECC = 1). If 1, ECC checking is enabled on read operations. All correctable and uncorrectable error conditions are captured and status is updated.

CE_CNT

This register counts the number of occurrences of correctable errors. It can be cleared or preset to any value using a register write. When the counter reaches its maximum value, it does not wrap around, but instead it stops incrementing and remains at the maximum value. The width of the counter is defined by the value of the C_CE_COUNTER_WIDTH parameter. The value of the CE counter width is fixed to eight bits.

Table 1-27: Correctable Error Counter Register Bit Definitions

Bits	Name	Core Access	Reset Value	Description
31:8	Reserved	RSVD	–	Reserved
7:0	CE_CNT	R/W	0	Holds the number of correctable errors encountered.

CE_FFA[31:0]

This register stores the address (Bits[31:0]) of the first occurrence of an access with a correctable error. When the CE_STATUS bit in the ECC Status register is cleared, this register is re-enabled to store the address of the next correctable error. Storing of the failing address is enabled after reset.

Table 1-28: Correctable Error First Failing Address [31:0] Register Bit Definitions

Bits	Name	Core Access	Reset Value	Description
31:0	CE_FFA[31:0]	R	0	Address (Bits[31:0]) of the first occurrence of a correctable error

CE_FFA[63:32]

Note: This register is unused if C_S_AXI_ADDR_WIDTH < 33.

This register stores the address (Bits[63:32]) of the first occurrence of an access with a correctable error. When the CE_STATUS bit in the ECC Status register is cleared, this register is re-enabled to store the address of the next correctable error. Storing of the failing address is enabled after reset.

Table 1-29: Correctable Error First Failing Address [63:32] Register Bit Definitions

Bits	Name	Core Access	Reset Value	Description
31:0	CE_FFA[63:32]	R	0	Address (Bits[63:32]) of the first occurrence of a correctable error.

CE_FFD[31:0]

This register stores the (corrected) failing data (Bits[31:0]) of the first occurrence of an access with a correctable error. When the CE_STATUS bit in the ECC Status register is cleared, this register is re-enabled to store the data of the next correctable error. Storing of the failing data is enabled after reset.

Table 1-30: Correctable Error First Failing Data [31:0] Register Bit Definitions

Bits	Name	Core Access	Reset Value	Description
31:0	CE_FFD[31:0]	R	0	Data (Bits[31:0]) of the first occurrence of a correctable error.

CE_FFD[63:32]

This register stores the (corrected) failing data (Bits[63:32]) of the first occurrence of an access with a correctable error. When the CE_STATUS bit in the ECC Status register is cleared, this register is re-enabled to store the data of the next correctable error. Storing of the failing data is enabled after reset.

Table 1-31: Correctable Error First Failing Data [63:32] Register Bit Definitions

Bits	Name	Core Access	Reset Value	Description
31:0	CE_FFD[63:32]	R	0	Data (Bits[63:32]) of the first occurrence of a correctable error.

CE_FFD[95:64]

Note: This register is only used when DQ_WIDTH == 144.

This register stores the (corrected) failing data (Bits[95:64]) of the first occurrence of an access with a correctable error. When the CE_STATUS bit in the ECC Status register is cleared, this register is re-enabled to store the data of the next correctable error. Storing of the failing data is enabled after reset.

Table 1-32: Correctable Error First Failing Data [95:64] Register Bit Definitions

Bits	Name	Core Access	Reset Value	Description
31:0	CE_FFD[95:64]	R	0	Data (Bits[95:64]) of the first occurrence of a correctable error.

CE_FFD[127:96]

Note: This register is only used when DQ_WIDTH == 144.

This register stores the (corrected) failing data (Bits[127:96]) of the first occurrence of an access with a correctable error. When the CE_STATUS bit in the ECC Status register is cleared, this register is re-enabled to store the data of the next correctable error. Storing of the failing data is enabled after reset.

Table 1-33: Correctable Error First Failing Data [127:96] Register Bit Definitions

Bits	Name	Core Access	Reset Value	Description
31:0	CE_FFD[127:96]	R	0	Data (Bits[127:96]) of the first occurrence of a correctable error.

CE_FFE

This register stores the ECC bits of the first occurrence of an access with a correctable error. When the CE_STATUS bit in the ECC Status register is cleared, this register is re-enabled to store the ECC of the next correctable error. Storing of the failing ECC is enabled after reset.

Table 1-34 describes the register bit usage when DQ_WIDTH = 72.

Table 1-34: Correctable Error First Failing ECC Register Bit Definitions for 72-Bit External Memory Width

Bits	Name	Core Access	Reset Value	Description
31:8	Reserved	RSVD	–	Reserved
7:0	CE_FFE	R	0	ECC (Bits[7:0]) of the first occurrence of a correctable error.

Table 1-35 describes the register bit usage when DQ_WIDTH = 144.

Table 1-35: Correctable Error First Failing ECC Register Bit Definitions for 144-Bit External Memory Width

Bits	Name	Core Access	Reset Value	Description
31:16	Reserved	RSVD	–	Reserved
15:0	CE_FFE	R	0	ECC (Bits[15:0]) of the first occurrence of a correctable error.

UE_FFA[31:0]

This register stores the address (Bits[31:0]) of the first occurrence of an access with an uncorrectable error. When the UE_STATUS bit in the ECC Status register is cleared, this register is re-enabled to store the address of the next uncorrectable error. Storing of the failing address is enabled after reset.

Table 1-36: Uncorrectable Error First Failing Address [31:0] Register Bit Definitions

Bits	Name	Core Access	Reset Value	Description
31:0	UE_FFA [31:0]	R	0	Address (Bits[31:0]) of the first occurrence of an uncorrectable error.

UE_FFA[63:32]

Note: This register is unused if C_S_AXI_ADDR_WIDTH < 33.

This register stores the address (Bits[63:32]) of the first occurrence of an access with an uncorrectable error. When the UE_STATUS bit in the ECC Status register is cleared, this register is re-enabled to store the address of the next uncorrectable error. Storing of the failing address is enabled after reset.

Table 1-37: Uncorrectable Error First Failing Address [31:0] Register Bit Definitions

Bits	Name	Core Access	Reset Value	Description
31:0	UE_FFA[63:32]	R	0	Address (Bits[63:32]) of the first occurrence of an uncorrectable error

UE_FFD[31:0]

This register stores the (uncorrected) failing data (Bits[31:0]) of the first occurrence of an access with an uncorrectable error. When the UE_STATUS bit in the ECC Status register is cleared, this register is re-enabled to store the data of the next uncorrectable error. Storing of the failing data is enabled after reset.

Table 1-38: Uncorrectable Error First Failing Data [31:0] Register Bit Definitions

Bits	Name	Core Access	Reset Value	Description
31:0	UE_FFD[31:0]	R	0	Data (Bits[31:0]) of the first occurrence of an uncorrectable error.

UE_FFD[63:32]

This register stores the (uncorrected) failing data (Bits[63:32]) of the first occurrence of an access with an uncorrectable error. When the UE_STATUS bit in the ECC Status register is cleared, this register is re-enabled to store the data of the next uncorrectable error. Storing of the failing data is enabled after reset.

Table 1-39: Uncorrectable Error First Failing Data [63:32] Register Bit Definitions

Bits	Name	Core Access	Reset Value	Description
31:0	UE_FFD [63:32]	R	0	Data (Bits[63:32]) of the first occurrence of an uncorrectable error.

UE_FFD[95:64]

Note: This register is only used when the DQ_WIDTH == 144.

This register stores the (uncorrected) failing data (Bits[95:64]) of the first occurrence of an access with an uncorrectable error. When the UE_STATUS bit in the ECC Status register is cleared, this register is re-enabled to store the data of the next uncorrectable error. Storing of the failing data is enabled after reset.

Table 1-40: Uncorrectable Error First Failing Data [95:64] Register Bit Definitions

Bits	Name	Core Access	Reset Value	Description
31:0	UE_FFD[95:64]	R	0	Data (Bits[95:64]) of the first occurrence of an uncorrectable error.

UE_FFD[127:96]

Note: This register is only used when the DQ_WIDTH == 144.

This register stores the (uncorrected) failing data (Bits[127:96]) of the first occurrence of an access with an uncorrectable error. When the UE_STATUS bit in the ECC Status register is cleared, this register is re-enabled to store the data of the next uncorrectable error. Storing of the failing data is enabled after reset.

Table 1-41: Uncorrectable Error First Failing Data [127:96] Register Bit Definitions

Bits	Name	Core Access	Reset Value	Description
31:0	UE_FFD[127:96]	R	0	Data (Bits[127:96]) of the first occurrence of an uncorrectable error.

UE_FFE

This register stores the ECC bits of the first occurrence of an access with an uncorrectable error. When the UE_STATUS bit in the ECC Status register is cleared, this register is re-enabled to store the ECC of the next uncorrectable error. Storing of the failing ECC is enabled after reset.

Table 1-42 describes the register bit usage when DQ_WIDTH = 72.

Table 1-42: Uncorrectable Error First Failing ECC Register Bit Definitions for 72-Bit External Memory Width

Bits	Name	Core Access	Reset Value	Description
31:8	Reserved	RSVD	–	Reserved
7:0	UE_FFE	R	0	ECC (Bits[7:0]) of the first occurrence of an uncorrectable error.

Table 1-43 describes the register bit usage when DQ_WIDTH = 144.

Table 1-43: Uncorrectable Error First Failing ECC Register Bit Definitions for 144-Bit External Memory Width

Bits	Name	Core Access	Reset Value	Description
31:16	Reserved	RSVD	–	Reserved
15:0	UE_FFE	R	0	ECC (Bits[15:0]) of the first occurrence of an uncorrectable error.

FI_D0

This register is used to inject errors in data (Bits[31:0]) written to memory and can be used to test the error correction and error signaling. The bits set in the register toggle the corresponding data bits (word 0 or Bits[31:0]) of the subsequent data written to the memory without affecting the ECC bits written. After the fault has been injected, the Fault Injection Data register is cleared automatically.

The register is only implemented if C_ECC_TEST = "ON" or ECC_TEST_FI_XOR = "ON" and ECC = "ON" in a MIG design in the Vivado IP catalog.

Injecting faults should be performed in a critical region in software; that is, writing this register and the subsequent write to the memory must not be interrupted.

Table 1-44: Fault Injection Data (Word 0) Register Bit Definitions

Bits	Name	Core Access	Reset Value	Description
31:0	FI_D0	W	0	Bit positions set to 1 toggle the corresponding Bits[31:0] of the next data word written to the memory. This register is automatically cleared after the fault has been injected.

Special consideration must be given across FI_D0, FI_D1, FI_D2, and FI_D3 such that only a single error condition is introduced.

FI_D1

This register is used to inject errors in data (Bits[63:32]) written to memory and can be used to test the error correction and error signaling. The bits set in the register toggle the corresponding data bits (word 1 or Bits[63:32]) of the subsequent data written to the memory without affecting the ECC bits written. After the fault has been injected, the Fault Injection Data register is cleared automatically.

This register is only implemented if C_ECC_TEST = "ON" or ECC_TEST_FI_XOR = "ON" and ECC = "ON" in a MIG design in the Vivado IP catalog.

Injecting faults should be performed in a critical region in software; that is, writing this register and the subsequent write to the memory must not be interrupted.

Table 1-45: Fault Injection Data (Word 1) Register Bit Definitions

Bits	Name	Core Access	Reset Value	Description
31:0	FI_D1	W	0	Bit positions set to 1 toggle the corresponding Bits[63:32] of the next data word written to the memory. This register is automatically cleared after the fault has been injected.

FI_D2

Note: This register is only used when DQ_WIDTH = 144.

This register is used to inject errors in data (Bits[95:64]) written to memory and can be used to test the error correction and error signaling. The bits set in the register toggle the corresponding data bits (word 2 or Bits[95:64]) of the subsequent data written to the memory without affecting the ECC bits written. After the fault has been injected, the Fault Injection Data register is cleared automatically.

This register is only implemented if C_ECC_TEST = "ON" or ECC_TEST_FI_XOR = "ON" and ECC = "ON" in a MIG design in the Vivado IP catalog.

Injecting faults should be performed in a critical region in software; that is, writing this register and the subsequent write to the memory must not be interrupted.

Table 1-46: Fault Injection Data (Word 2) Register Bit Definitions

Bits	Name	Core Access	Reset Value	Description
31:0	FI_D2	W	0	Bit positions set to 1 toggle the corresponding Bits[95:64] of the next data word written to the memory. This register is automatically cleared after the fault has been injected.

Special consideration must be given across FI_D0, FI_D1, FI_D2, and FI_D3 such that only a single error condition is introduced.

FI_D3

Note: This register is only used when DQ_WIDTH = 144.

This register is used to inject errors in data (Bits[127:96]) written to memory and can be used to test the error correction and error signaling. The bits set in the register toggle the corresponding data bits (word 3 or Bits[127:96]) of the subsequent data written to the memory without affecting the ECC bits written. After the fault has been injected, the Fault Injection Data register is cleared automatically.

The register is only implemented if C_ECC_TEST = "ON" or ECC_TEST_FI_XOR = "ON" and ECC = "ON" in a MIG design in the Vivado Design Suite.

Injecting faults should be performed in a critical region in software; that is, writing this register and the subsequent write to the memory must not be interrupted.

Table 1-47: Fault Injection Data (Word 3) Register Bit Definitions

Bits	Name	Core Access	Reset Value	Description
31:0	FI_D3	W	0	Bit positions set to 1 toggle the corresponding Bits[127:96] of the next data word written to the memory. The register is automatically cleared after the fault has been injected.

FI_ECC

This register is used to inject errors in the generated ECC written to the memory and can be used to test the error correction and error signaling. The bits set in the register toggle the corresponding ECC bits of the next data written to memory. After the fault has been injected, the Fault Injection ECC register is cleared automatically.

The register is only implemented if C_ECC_TEST = "ON" or ECC_TEST_FI_XOR = "ON" and ECC = "ON" in a MIG design in the Vivado IP catalog.

Injecting faults should be performed in a critical region in software; that is, writing this register and the subsequent write to memory must not be interrupted.

Table 1-48 describes the register bit usage when DQ_WIDTH = 72.

Table 1-48: Fault Injection ECC Register Bit Definitions for 72-Bit External Memory Width

Bits	Name	Core Access	Reset Value	Description
31:8	Reserved	RSVD	–	Reserved
7:0	FI_ECC	W	0	Bit positions set to 1 toggle the corresponding bit of the next ECC written to the memory. The register is automatically cleared after the fault has been injected.

Table 1-49 describes the register bit usage when DQ_WIDTH = 144.

Table 1-49: Fault Injection ECC Register Bit Definitions for 144-Bit External Memory Width

Bits	Name	Core Access	Reset Value	Description
31:16	Reserved	RSVD	–	Reserved
15:0	FI_ECC	W	0	Bit positions set to 1 toggle the corresponding bit of the next ECC written to the memory. The register is automatically cleared after the fault has been injected.

User Interface Block

The UI block presents the UI to a user design. It provides a simple alternative to the native interface. The UI block:

- Buffers read and write data
- Reorders read return data to match the request order
- Presents a flat address space and translates it to the addressing required by the SDRAM

Native Interface

The native interface connects to an FPGA user design to allow access to an external memory device.

Command Request Signals

The native interface provides a set of signals that request a read or write command from the Memory Controller to the memory device. These signals are summarized in [Table 1-50](#).

Table 1-50: Native Interface Command Signals

Signal	Direction	Description
accept	Output	This output indicates that the memory interface accepts the request driven on the last cycle.
bank[2:0]	Input	This input selects the bank for the current request.
bank_mach_next[]	Output	This output is reserved and should be left unconnected.
cmd[2:0]	Input	This input selects the command for the current request.
col[COL_WIDTH – 1:0]	Input	This input selects the column address for the current request.
data_buf_addr[7:0]	Input	This input indicates the data buffer address where the Memory Controller: <ul style="list-style-type: none"> Locates data while processing write commands. Places data while processing read commands.
hi_priority	Input	This input is reserved and should be connected to logic 0.
rank[]	Input	This input is reserved and should be connected to logic 0.
row[ROW_WIDTH – 1:0]	Input	This input selects the row address for the current request.
use_addr	Input	The user design strobes this input to indicate that the request information driven on the previous state is valid.

The bank, row, and column comprise a target address on the memory device for read and write operations. Commands are specified using the `cmd[2:0]` input to the core. The available read and write commands are shown in [Table 1-51](#).

Table 1-51: Memory Interface Commands

Operation	cmd[2:0] Code
Memory write	000
Memory read	001
Reserved	All other codes

accept

This signal indicates to the user design whether or not a request is accepted by the core. When the accept signal is asserted, the request submitted on the last cycle is accepted, and the user design can either continue to submit more requests or go idle. When the accept signal is deasserted, the request submitted on the last cycle was not accepted and must be retried.

use_addr

The user design asserts the `use_addr` signal to strobe the request that was submitted to the native interface on the previous cycle.

data_buf_addr

The user design must contain a buffer for data used during read and write commands. When a request is submitted to the native interface, the user design must designate a location in the buffer for when the request is processed. For write commands, `data_buf_addr` is an address in the buffer containing the source data to be written to the external memory. For read commands, `data_buf_addr` is an address in the buffer that receives read data from the external memory. The core echoes this address back when the requests are processed.

Write Command Signals

The native interface has signals that are used when the Memory Controller is processing a write command (Table 1-52). These signals connect to the control, address, and data signals of a buffer in the user design.

Table 1-52: Native Interface Write Command Signals

Signal	Direction	Description
<code>wr_data[2 × nCK_PER_CLK × PAYLOAD_WIDTH – 1:0]</code>	Input	This is the input data for write commands.
<code>wr_data_addr [DATA_BUF_ADDR_WIDTH – 1:0]</code>	Output	This output provides the base address for the source data buffer for write commands.
<code>wr_data_mask[2 × nCK_PER_CLK × DATA_WIDTH/8 – 1:0]</code>	Input	This input provides the byte enable for the write data.
<code>wr_data_en</code>	Output	This output indicates that the memory interface is reading data from a data buffer for a write command.
<code>wr_data_offset[0:0]</code>	Output	This output provides the offset for the source data buffer for write commands.

wr_data

This bus is the data that needs to be written to the external memory. This bus can be connected to the data output of a buffer in the user design.

wr_data_addr

This bus is an echo of `data_buf_addr` when the current write request is submitted. The `wr_data_addr` bus can be combined with the `wr_data_offset` signal and applied to the address input of a buffer in the user design.

wr_data_mask

This bus is the byte enable (data mask) for the data currently being written to the external memory. The byte to the memory is written when the corresponding `wr_data_mask` signal is deasserted.

wr_data_en

When asserted, this signal indicates that the core is reading data from the user design for a write command. This signal can be tied to the chip select of a buffer in the user design.

wr_data_offset

This bus is used to step through the data buffer when the burst length requires more than a single cycle to complete. This bus, in combination with `wr_data_addr`, can be applied to the address input of a buffer in the user design.

Read Command Signals

The native interface provides a set of signals used when the Memory Controller is processing a read command (Table 1-53). These signals are similar to those for processing write commands, except that they transfer data from the memory device to a buffer in the user design.

Table 1-53: Native Interface Read Command Signals

Signal	Direction	Description
<code>rd_data[2 × nCK_PER_CLK × PAYLOAD_WIDTH – 1:0]</code>	Output	This is the output data from read commands.
<code>rd_data_addr[DATA_BUF_ADDR_WIDTH – 1:0]</code>	Output	This output provides the base address of the destination buffer for read commands.
<code>rd_data_en</code>	Output	This output indicates that valid read data is available on the <code>rd_data</code> bus.
<code>rd_data_offset[1:0]</code>	Output	This output provides the offset for the destination buffer for read commands.

rd_data

This bus is the data that was read from the external memory. It can be connected to the data input of a buffer in the user design.

rd_data_addr

This bus is an echo of `data_buf_addr` when the current read request is submitted. This bus can be combined with the `rd_data_offset` signal and applied to the address input of a buffer in the user design.

rd_data_en

This signal indicates when valid read data is available on `rd_data` for a read request. It can be tied to the chip select and write enable of a buffer in the user design.

rd_data_offset

This bus is used to step through the data buffer when the burst length requires more than a single cycle to complete. This bus can be combined with `rd_data_addr` and applied to the address input of a buffer in the user design.

Native Interface Maintenance Command Signals

Table 1-54 lists the native interface maintenance command signals.

Table 1-54: Native Interface Maintenance Command Signals

Signal	Direction	Description
<code>app_sr_req</code>	Input	This input is reserved and should be tied to 0.
<code>app_sr_active</code>	Output	This output is reserved.
<code>app_ref_req</code>	Input	This active-High input requests that a refresh command be issued to the DRAM.
<code>app_ref_ack</code>	Output	This active-High output indicates that the Memory Controller has sent the requested refresh command to the PHY interface.
<code>app_zq_req</code>	Input	This active-High input requests that a ZQ calibration command be issued to the DRAM.
<code>app_zq_ack</code>	Output	This active-High output indicates that the Memory Controller has sent the requested ZQ calibration command to the PHY interface.

app_ref_req

When asserted, this active-High input requests that the Memory Controller send a refresh command to the DRAM. It must be pulsed for a single cycle to make the request and then deasserted at least until the `app_ref_ack` signal is asserted to acknowledge the request and indicate that it has been sent.

app_ref_ack

When asserted, this active-High input acknowledges a refresh request and indicates that the command has been sent from the Memory Controller to the PHY.

app_zq_req

When asserted, this active-High input requests that the Memory Controller send a ZQ calibration command to the DRAM. It must be pulsed for a single cycle to make the request and then deasserted at least until the `app_zq_ack` signal is asserted to acknowledge the request and indicate that it has been sent.

app_zq_ack

When asserted, this active-High input acknowledges a ZQ calibration request and indicates that the command has been sent from the Memory Controller to the PHY.

Clocking Architecture

The PHY design requires that a PLL module be used to generate various clocks, and both global and local clock networks are used to distribute the clock throughout the design. The PHY also requires one MMCM in the same bank as the PLL. This MMCM compensates for the insertion delay of the BUFG to the PHY.

The clock generation and distribution circuitry and networks drive blocks within the PHY that can be divided roughly into four separate, general functions:

- Internal (FPGA) logic
- Write path (output) I/O logic
- Read path (input) and delay I/O logic
- IDELAY reference clock

For DDR3 designs, one MMCM is required for IDELAY reference clock generation. If the design frequency is > 667 MHz, then IDELAY reference clock is either 300 MHz or 400 MHz (depending on FPGA speed grade). MIG instantiates one MMCM for 300 MHz and 400 MHz clock generation.

One MMCM and one PLL are required for the PHY. The PLL is used to generate the clocks for most of the internal logic, the frequency reference clocks to the phasers, and a synchronization pulse required for keeping PHY control blocks synchronized in multi-I/O bank implementations.

For DDR3 SDRAM clock frequencies between 400 MHz and 933 MHz, both the phaser frequency reference clocks have the same frequency as the memory clock frequency. For DDR2 or DDR3 SDRAM clock frequencies below 400 MHz, one of the phaser frequency reference clocks runs at the same frequency as the memory clock and the second frequency reference clock must be either 2x or 4x the memory clock frequency such that it meets the range requirement of 400 MHz to 933 MHz. The two phaser frequency reference clocks must be generated by the same PLL so they are in phase with each other. The block diagram of the clocking architecture is shown in [Figure 1-52](#). The phase of `freq_refclk` varies based on frequency of operation and banks selected for memory interface pins.

- When HP banks are selected for memory interface pins in GUI and the memory frequencies ≥ 400 MHz, the phase is 337.5°.
- When HP banks are selected for memory interface pins in GUI and the memory frequencies are between 200–400 MHz (excluding 400 MHz), the phase is 315°.

- For Low Voltage devices when HP banks are selected for memory interface pins in GUI and the memory frequencies ≥ 400 MHz, the phase is 337.5° .
- For Low Voltage devices when HP banks are selected for memory interface pins in GUI and the memory frequencies are between 200–400 MHz (excluding 400 MHz), the phase is 0° .
- When HR banks are selected for memory interface pins in GUI and the memory frequencies ≥ 400 MHz, the phase is 337.5° .
- When HR banks are selected for memory interface pins in GUI and the memory frequencies are between 200–400 MHz (excluding 400 MHz), the phase is 0° .

The default setting for the PLL multiply (M) and divide (D) values is for the system clock input frequency to be equal to the memory clock frequency. This 1:1 ratio is not required. The PLL input divider (D) can be any value listed in the *7 Series FPGAs Clocking Resources User Guide* (UG472) [Ref 10] as long as the PLL2 operating conditions are met and the other constraints listed here are observed. The PLL multiply (M) value must be between 1 and 16 inclusive. The PLL output divider (O) for the memory clock must be 2 for 800 Mb/s and above, and 4 for 400 to 800 Mb/s. The PLL VCO frequency range must be kept in the range specified in the silicon data sheet. The sync_pulse must be 1/16 of the mem_refclk frequency and must have a duty cycle of 1/16 or 6.25%. For information on physical placement of the PLL and the System Clock CCIO input, see [Design Guidelines](#), page 192.

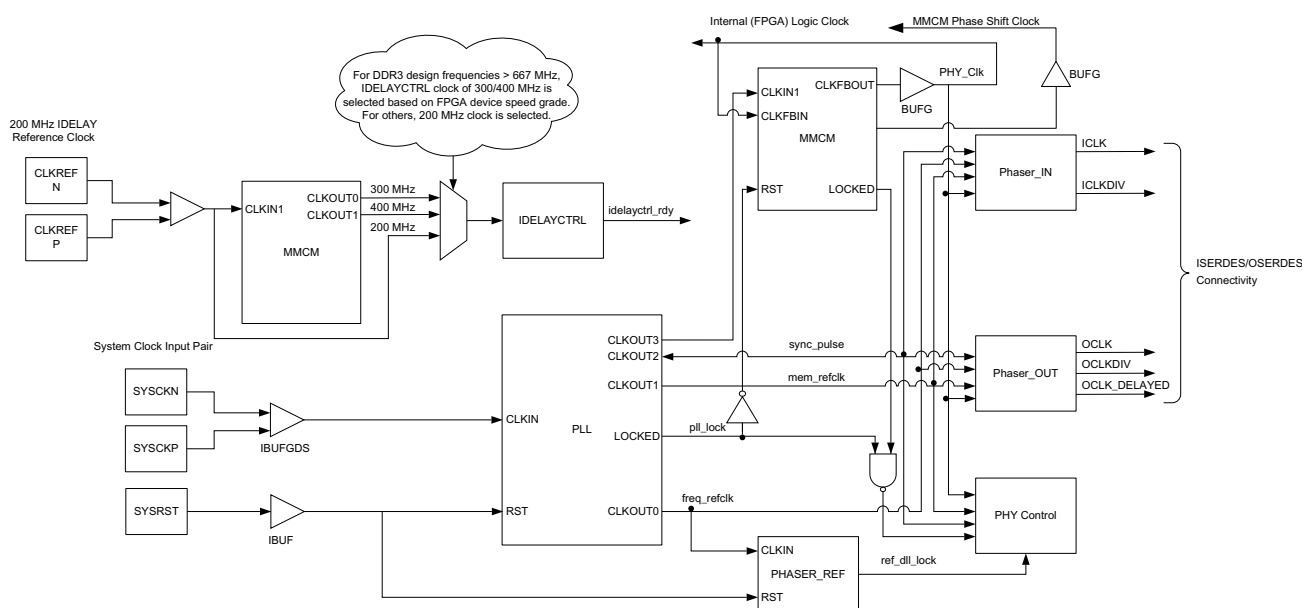


Figure 1-52: Clocking Architecture

The details of the ISERDES/OSERDES connectivity are shown in [Figure 1-58](#), page 141 and [Figure 1-60](#), page 143.

Internal (FPGA) Logic Clock

The internal FPGA logic is clocked by a global clocking resource at a half or quarter frequency of the DDR2 or DDR3 SDRAM clock frequency, which depends on 4:1 or 2:1 mode selected in the MIG tool. This PLL also outputs the high-speed DDR2 or DDR3 memory clock.

Write Path (Output) I/O Logic Clock

The output path comprising both data and controls is clocked by PHASER_OUT. The PHASER_OUT provides synchronized clocks for each byte group to the OUT_FIFOs and to the OSERDES/ODDR. The PHASER_OUT generates a byte clock (OCLK), a divided byte clock (OCLKDIV), and a delayed byte clock (OCLK_DELAYED) for its associated byte group. These clocks are generated directly from the Frequency Reference clock and are in phase with each other. The byte clock is the same frequency as the Frequency Reference clock and the divided byte clock is half the frequency of the Frequency Reference clock. OCLK_DELAYED is used to clock the DQS ODDR to achieve the required 90° phase offset between the write DQS and its associated DQ bits. The PHASER_OUT also drives the signaling required to generate DQS during writes, the DQS and DQ 3-state associated with the data byte group, and the Read Enable for the OUT_FIFO of the byte group. The clocking details of the address/control and the write paths using PHASER_OUT are shown in [Figure 1-58](#) and [Figure 1-60](#).

Read Path (Input) I/O Logic Clock


The input read datapath is clocked by the PHASER_IN block. The PHASER_IN block provides synchronized clocks for each byte group to the IN_FIFOs and to the IDDR/ISERDES. The PHASER_IN block receives the DQS signal for the associated byte group and generates two delayed clocks for DDR2 or DDR3 SDRAM data captures: read byte clock (ICLK) and read divided byte clock (ICLKDIV). ICLK is the delayed version of the frequency reference clock that is phase-aligned with its associated DQS. ICLKDIV is used to capture data into the first rank of flip-flops in the ISERDES. ICLKDIV is aligned to ICLK and is the parallel transfer clock for the last rank of flip-flops in the ISERDES. ICLKDIV is also used as the write clock for the IN_FIFO associated with the byte group. The PHASER_IN block also drives the write enable (WrEnable) for the IN_FIFO of the byte group. The clocking details of the read path using PHASER_IN is shown in [Figure 1-60](#).

IDELAY Reference Clock

You need to always supply a 200 MHz `ref_clk` and then MIG creates the appropriate IDELAYCTRL frequency with an additional MMCM. The IDELAYCTRL module continuously calibrates the IDELAY elements in the I/O region to account for varying environmental conditions. The IP core assumes an external clock signal is driving the IDELAYCTRL module. If a PLL clock drives the IDELAYCTRL input clock, the PLL lock signal needs to be incorporated in the `rst_tmp_idelay` signal inside the `IDELAY_CTRL.v` module. This ensures that the clock is stable before being used.

Memory Controller

In the core default configuration, the Memory Controller (MC) resides between the UI block and the physical layer. This is depicted in Figure 1-53.

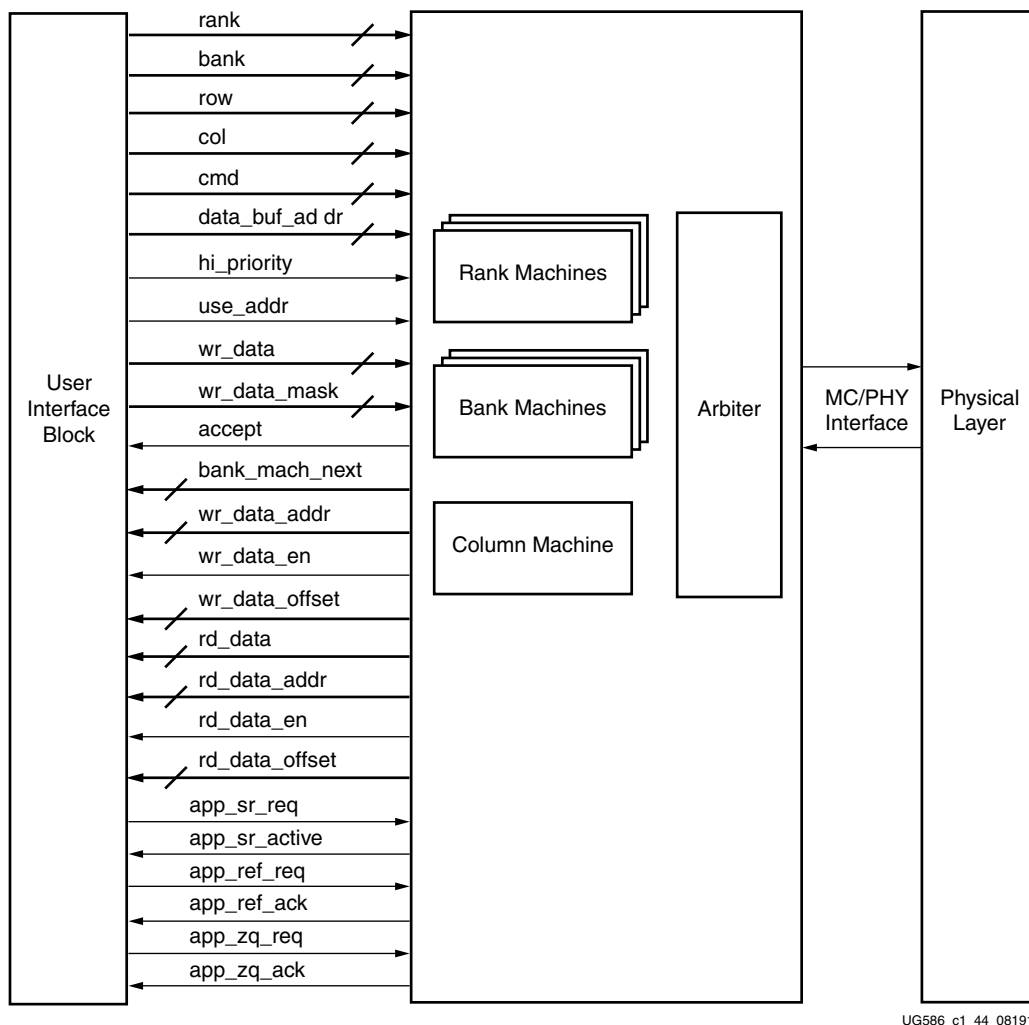

UG586_c1_44_081911

Figure 1-53: Memory Controller

The Memory Controller is the primary logic block of the memory interface. The Memory Controller receives requests from the UI and stores them in a logical queue. Requests are optionally reordered to optimize system throughput and latency.

The Memory Controller block is organized as four main pieces:

- A configurable number of "bank machines"
- A configurable number of "rank machines"
- A column machine
- An arbitration block

Bank Machines

Most of the Memory Controller logic resides in the bank machines. Bank machines correspond to DRAM banks. A given bank machine manages a single DRAM bank at any given time. However, bank machine assignment is dynamic, so it is not necessary to have a bank machine for each physical bank. The number of banks can be configured to trade off between area and performance. This is discussed in greater detail in the [Precharge Policy](#) section.

The duration of a bank machine assignment to a particular DRAM bank is coupled to user requests rather than the state of the target DRAM bank. When a request is accepted, it is assigned to a bank machine. When a request is complete, the bank machine is released and is made available for assignment to another request. Bank machines issue all the commands necessary to complete the request.

On behalf of the current request, a bank machine must generate row commands and column commands to complete the request. Row and column commands are independent but must adhere to DRAM timing requirements.

The following example illustrates this concept. Consider the case when the Memory Controller and DRAM are idle when a single request arrives. The bank machine at the head of the pool:

1. Accepts your request
2. Activates the target row
3. Issues the column (read or write) command
4. Precharges the target row
5. Returns to the idle pool of bank machines

Similar functionality applies when multiple requests arrive targeting different rows or banks.

Now consider the case when a request arrives targeting an open DRAM bank, managed by an already active bank machine. The already active bank machine recognizes that the new request targets the same DRAM bank and skips the precharge step ([step 4](#)). The bank machine at the head of the idle pool accepts the new user request and skips the activate step ([step 2](#)).

Finally, when a request arrives in between both a previous and subsequent request all to the same target DRAM bank, the controller skips both the activate ([step 2](#)) and precharge ([step 4](#)) operations.

A bank machine precharges a DRAM bank as soon as possible unless another pending request targets the same bank. This is discussed in greater detail in the [Precharge Policy](#) section.

Column commands can be reordered for the purpose of optimizing memory interface throughput. The ordering algorithm nominally ensures data coherence. The reordering feature is explained in greater detail in the [Reordering](#) section.

Rank Machines

The rank machines correspond to DRAM ranks. Rank machines monitor the activity of the bank machines and track rank or device-specific timing parameters. For example, a rank machine monitors the number of activate commands sent to a rank within a time window. After the allowed number of activates have been sent, the rank machine generates an inhibit signal that prevents the bank machines from sending any further activates to the rank until the time window has shifted enough to allow more activates. Rank machines are statically assigned to a physical DRAM rank.

Column Machine

The single column machine generates the timing information necessary to manage the DQ data bus. Although there can be multiple DRAM ranks, because there is a single DQ bus, all the columns in all DRAM ranks are managed as a single unit. The column machine monitors commands issued by the bank machines and generates inhibit signals back to the bank machines so that the DQ bus is utilized in an orderly manner.

Arbitration Block

The arbitration block receives requests to send commands to the DRAM array from the bank machines. Row commands and column commands are arbitrated independently. For each command opportunity, the arbiter block selects a row and a column command to forward to the physical layer. The arbitration block implements a round-robin protocol to ensure forward progress.

Reordering

DRAM accesses are broken into two quasi-independent parts, row commands and column commands. Each request occupies a logical queue entry, and each queue entry has an associated bank machine. These bank machines track the state of the DRAM rank or bank it is currently bound to, if any.

If necessary, the bank machine attempts to activate the proper rank, bank, or row on behalf of the current request. In the process of doing so, the bank machine looks at the current state of the DRAM to decide if various timing parameters are met. Eventually, all timing parameters are met and the bank machine arbitrates to send the activate. The arbitration is done in a simple round-robin manner. Arbitration is necessary because several bank machines might request to send row commands (activate and precharge) at the same time.

Not all requests require an activate. If a preceding request has activated the same rank, bank, or row, a subsequent request might inherit the bank machine state and avoid the precharge/activate penalties.

After the necessary rank, bank, or row is activated and the RAS to CAS delay timing is met, the bank machine tries to issue the CAS-READ or CAS-WRITE command. Unlike the row command, all requests issue a CAS command. Before arbitrating to send a CAS command, the bank machine must look at the state of the DRAM, the state of the DQ bus, priority, and ordering. Eventually, all these factors assume their favorable states and the bank machine arbitrates to send a CAS command. In a manner similar to row commands, a round-robin arbiter uses a priority scheme and selects the next column command.

The round-robin arbiter itself is a source of reordering. Assume for example that an otherwise idle Memory Controller receives a burst of new requests while processing a refresh. These requests queue up and wait for the refresh to complete. After the DRAM is ready to receive a new activate, all waiting requests assert their arbitration requests simultaneously. The arbiter selects the next activate to send based solely on its round-robin algorithm, independent of request order. Similar behavior can be observed for column commands.

The controller supports three ordering modes:

- **STRICT** – In this mode the controller always issues commands to the memory in the exact order received at the native interface. This mode can be useful in situations that do not benefit from reordering and the lowest latency is desired. Because the read data comes back in order, the user interface layer might not be needed thus reducing latency. This mode is also useful for debugging.
- **NORM** – In this mode the controller reorders reads but not writes as needed to improve efficiency. All write requests are issued in the request order relative to all other write requests, and requests within a given rank-bank retire in order. This ensures that it is not possible to observe the result of a later write before an earlier write completes.

Note: This reordering is only visible at the native interface. The user interface reorders the read requests back into the original request order.

- **RELAXED** – This is the most efficient mode of the controller. Writes and reads can be reordered as needed for maximum efficiency between rank-bank queues. Thus in this mode it is possible to observe the reordering of writes. However, this behavior is not observable at the user interface layer because the requests are retired in order within a rank-bank and the user interface layer returns the read requests in order. Therefore the RELAXED mode is recommended for use with the user interface layer.

Note: This option is not selectable in the MIG GUI. To enable, generate the design with the synthesis options "Global" in the **Generate Output Products** settings. After generating the design, the design top-level RTL file should be edited and the ORDERING parameter should be changed to "RELAXED."

Precharge Policy

The controller implements an aggressive precharge policy. The controller examines the input queue of requests as each transaction completes. If no requests are in the queue for a currently open bank/row, the controller closes it to minimize latency for requests to other rows in the bank. Because the queue depth is equal to the number of bank machines, greater efficiency can be obtained by increasing the number of bank machines (nBANK_MACHS). As this number is increased, FPGA logic timing becomes more challenging. In some situations, the overall system efficiency can be greater with an increased number of bank machines and a lower memory clock frequency. Simulations should be performed with the target design command behavior to determine the optimum setting.

Note: The overall read latency of the MIG 7 series DDR3/DDR2 core is dependent on how the Memory Controller is configured, but most critically on the target traffic/access pattern and the number of commands already in the pipeline before the read command is issued. Read latency is measured from the point where the read command is accepted by the user or native interface. Simulation should be run to analyze read latency.

Error Correcting Code

The Memory Controller optionally implements an Error Correcting Code (ECC). This code protects the contents of the DRAM array from corruption. A Single Error Correct Double Error Detect (SECCDED) code is used. All single errors are detected and corrected. All errors of two bits are detected. Errors of more than two bits might or might not be detected.

Figure 1-54 shows the ECC block diagram. These blocks are instantiated in the Memory Controller (mc.v) module.

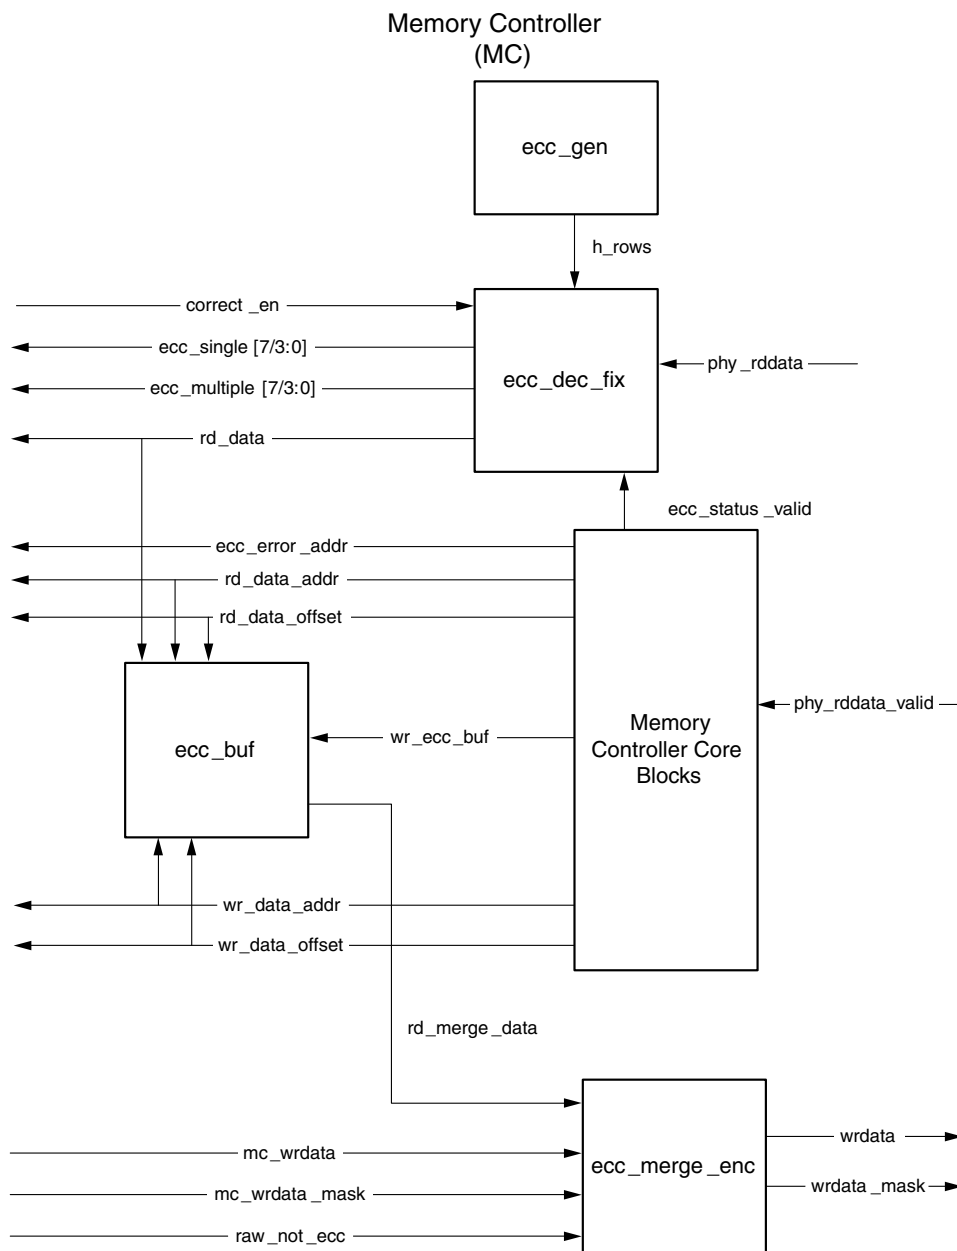


Figure 1-54: ECC Block Diagram

The ECC mode is optional and supported only for a 72-bit data width. The data mask feature is disabled when ECC mode is enabled. When ECC mode is enabled, the entire DQ width is always written. The DRAM DM bits cannot be used because the ECC operates over the entire DQ data width. A top-level parameter called ECC controls the addition of ECC logic. When this parameter is set to "ON," ECC is enabled, and when the parameter is set to "OFF," ECC is disabled.

The ECC functionality is implemented as three functional blocks. A write data merge and ECC generate block. A read data ECC decode and correct block and a data buffer block for temporarily holding the read data for read-modify-write cycles. A fourth block generates the ECC H matrix and passes these matrices to the ECC generate and correct blocks.

For full burst write commands, data fetched from the write data buffer traverses the ECC merge and generate block. This block computes the ECC bits and appends them to the data. The ECC generate step is given one CLK state. Thus the data must be fetched from the write data buffer one state earlier relative to the write command, compared to when ECC is not enabled. At the user interface level, data must be written into the write data buffer no later than one state after the command is written into the command buffer. Other than the earlier data requirement, ECC imposes no other performance loss for writes.

For read cycles, all data traverses the ECC decode fix (`ecc_dec_fix`) block. This process starts when the PHY indicates read data availability on the `phy_rddata_valid` signal. The decode fix process is divided into two CLK states. In the first state, the syndromes are computed. In the second state the syndromes are decoded and any indicated bit flips (corrections) are performed. Also in the second state, the `ecc_single` and `ecc_multiple` indications are computed based on the syndrome bits and the timing signal `ecc_status_valid` generated by the Memory Controller core logic. The core logic also provides an `ecc_err_addr` bus. This bus contains the address of the current read command. Error locations can be logged by looking at the `ecc_single`, `ecc_multiple`, and `ecc_err_addr` buses. ECC imposes a two state latency penalty for read requests.

Read-Modify-Write

Any writes of less than the full DRAM burst must be performed as a read-modify-write cycle. The specified location must be read, corrections if any performed, merged with the write data, ECC computed, and then written back to the DRAM array. The `wr_bytes` command is defined for ECC operation. When the `wr_bytes` command is given, the Memory Controller always performs a read-modify-write cycle instead of a simple write cycle. The byte enables must always be valid, even for simple commands. Specifically, all byte enables must be asserted for all `wr` commands when ECC mode is enabled.

To write partially into memory, `app_wdf_mask` needs to be driven along with the `wr_bytes` command for ECC enabled designs. [Table 1-55](#) shows the available commands when ECC mode is enabled.

Table 1-55: Commands for `app_cmd[2:0]`

Operation	<code>app_cmd[2:0]</code> Code
Write	000
Read	001
Write Bytes	011

When the `wr_bytes` command is given, the Memory Controller performs a read-modify-write (RMW) cycle. When a `wr_bytes` command is at the head of the queue, it first issues a read. But unlike a normal read command, the request remains in the queue. A bit is set in the read response queue indicating this is a RMW cycle. When the read data is returned for this read command, `app_rd_data_valid` is not asserted. Instead, the ECC is decoded, corrections if any are made, and the data is written into the ECC data buffer.

Meanwhile, the original `wr_bytes` command is examining all read returns. Based on the `data_buf_addr` stored in the read return queue, the `wr_bytes` request can determine when its read data is available in the ECC data buffer. Now, the `wr_bytes` request starts arbitrating to send the write command. When the command is granted, data is fetched from the write data buffer and the ECC data buffer, merged as directed by the byte enables, ECC is computed, and data is written to the DRAM. The `wr_bytes` command has significantly lower performance than normal write commands.

In the best case, each `wr_bytes` command requires a DRAM read cycle and a DRAM write cycle instead of simple DRAM write cycle. Read-to-write and write-to-read turnaround penalties further degrade throughput.

The Memory Controller can buffer up to `nBANK_MACHS` `wr_bytes` commands. As long as these commands do not conflict on a rank-bank, the Memory Controller strings together the reads and then the writes, avoiding much of the read-to-write and write-to-read turnaround penalties. However, if the stream of `wr_bytes` commands is to a single rank-bank, each RMW cycle is completely serialized and throughput is significantly degraded.



IMPORTANT: *If performance is important, it is best to avoid the `wr_bytes` command.*

Table 1-56 provides the details of ECC ports at the user interface.

Table 1-56: User Interface for ECC Operation

Signal	Direction	Description
<code>app_correct_en_i</code>	Input	When asserted, this active-High signal corrects single bit data errors. This input is valid only when ECC mode is enabled.
<code>app_ecc_multiple_err[7:0]</code>	Output	<p>This signal is applicable when ECC is enabled. It is valid along with <code>app_rd_data_valid</code>. The <code>app_ecc_multiple_err</code> signal is non-zero if the read data from the external memory has two bit errors per beat of the read burst. The SECDED algorithm does not correct the corresponding read data and puts a non-zero value on this signal to notify the corrupted read data at the UI.</p> <p>This signal is four bits wide in 2:1 mode.</p>

Table 1-56: User Interface for ECC Operation (Cont'd)

Signal	Direction	Description
app_ecc_single_err[7:0]	Output	This signal is applicable when ECC is enabled and is valid along with app_rd_data_vali. The app_ecc_single_err signal is non-zero if the read data from the external memory has a single bit error per beat of the read burst.
app_raw_not_ecc_i[7:0]	Input	This signal is applicable when ECC_TEST is enabled ("ON"). It is valid along with app_rd_data_valid. This signal is asserted to control the individual blocks to be written with raw data in the ECC bits. This signal is four bits wide in 2:1 mode.
app_wdf_mask[APP_MASK_WIDTH – 1:0]	Input	This signal provides the mask for app_wdf_data[].

Note: The MIG generated sim_tb_top.v module has error injection logic on DQ[0] bit. Whenever ECC is enabled, the DQ[0] bit is corrupted with error injection. This results in app_ecc_single_err bits toggling for each read data transaction.

ECC Self-Test Functionality

Under normal operating conditions, the ECC part of the data written to the DRAM array is not visible at the user interface. This can be problematic for system self-test because there is no way to test the bits in the DRAM array corresponding to the ECC bits. There is also no way to send errors to test the ECC generation and correction logic.

Controlled by the top-level parameter ECC_TEST, a DRAM array test mode can be generated. When the ECC_TEST parameter is "ON," the entire width of the DQ data bus is extended through the read and write buffers in the user interface. When ECC_TEST is "ON," the ECC correct enable is deasserted.

To write arbitrary data into both the data and ECC parts of the DRAM array, write the desired data into the extended-width write data FIFO, and assert the corresponding app_raw_not_ecc_i bit with the data. The app_raw_not_ecc_i is seven bits wide (four bits in 2:1 mode), allowing individual ECC blocks to be written with raw data in the ECC bits, or the normal computed ECC bits. In this way, any arbitrary pattern can be written into the DRAM array.

In the read interface, the extended data appears with the normal data. However, the corrector might be trying to "correct" the read data. This is probably not desired during array pattern test, and hence the app_correct_en_i should be set to zero to disable correction.

With the above two features, array pattern test can be achieved. ECC generation logic can be tested by writing data patterns but not asserting app_raw_not_ecc_i and deasserting app_correct_en_i. The data along with the computed ECC bits can be read out and compared. ECC decode correct logic can be tested by asserting app_correct_en_i and writing the desired raw pattern as described above. When the data is read back, the operation of decode correct can be observed.

PHY

The PHY provides a physical interface to an external DDR2 or DDR3 SDRAM. The PHY generates the signal timing and sequencing required to interface to the memory device. It contains the clock-, address-, and control-generation logic, write and read datapaths, and state logic for initializing the SDRAM after power-up. In addition, the PHY contains calibration logic to perform timing training of the read and write datapaths to account for system static and dynamic delays.

The PHY is provided as a single HDL codebase for DDR2 and DDR3 SDRAMs. The MIG tool customizes the SDRAM type and numerous other design-specific parameters through top-level HDL parameters and constraints contained in a XDC file.

Overall PHY Architecture

The 7 series FPGA PHY is composed of dedicated blocks and soft calibration logic. The dedicated blocks are structured adjacent to one another with back-to-back interconnects to minimize the clock and datapath routing necessary to build high-performance physical layers. Dedicated clock structures within an I/O bank referred to as byte group clocks help minimize the number of loads driven by the byte group clock drivers. Byte group clocks are driven by phaser blocks. The phaser blocks (PHASER_IN and PHASER_OUT) are multi-stage programmable delay line loops that can dynamically track DQS signal variation and provide precision phase adjustment.

Each 7 series FPGA I/O bank has dedicated blocks comprising a PHY control block, four PHASER_IN and PHASER_OUT blocks, four IN/OUT_FIFOs, IOLOGIC (ISERDES, OSERDES, ODDR, IDELAY), and IOBs. Four byte groups exist in an I/O bank, and each byte group contains the PHASER_IN and PHASER_OUT, IN_FIFO and OUT_FIFO, and twelve IOLOGIC and IOB blocks. Ten of the twelve IOIs in a byte group are used for DQ and DM bits, and the other two IOIs are used to implement differential DQS signals.

[Figure 1-55](#) shows the dedicated blocks available in a single I/O bank. A single PHY control block communicates with all four PHASER_IN and PHASER_OUT blocks within the I/O bank.


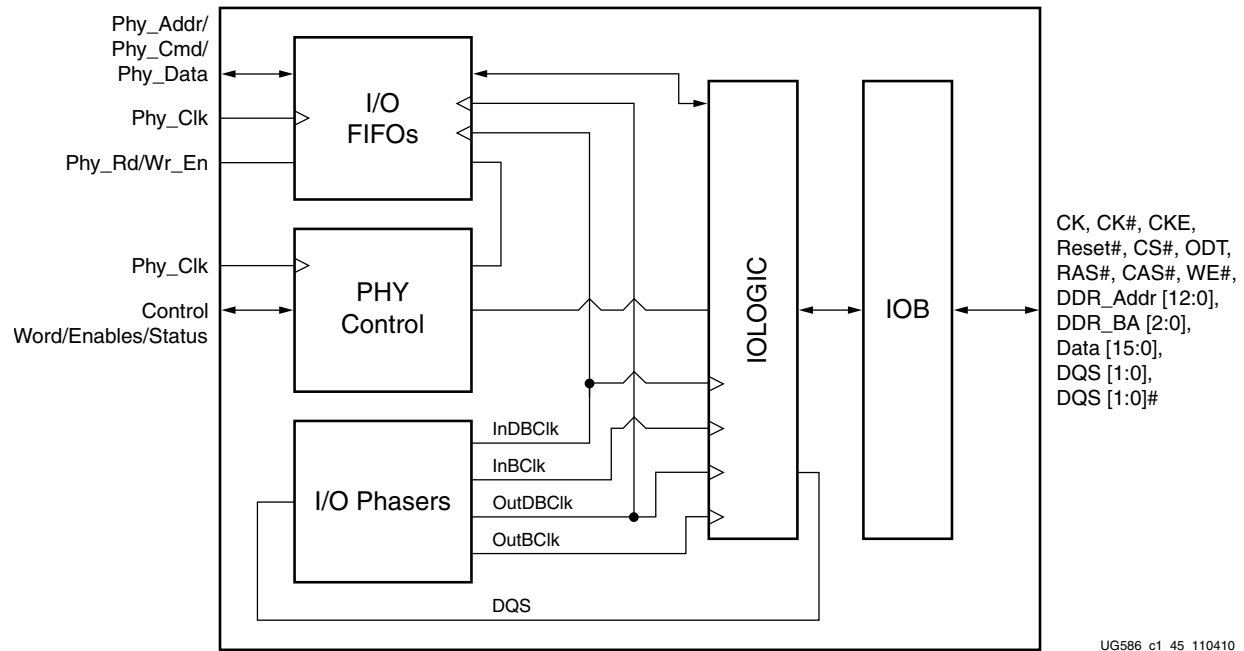


Figure 1-55: Single Bank DDR2/DDR3 PHY Block Diagram

The Memory Controller and calibration logic communicate with this dedicated PHY in the slow frequency clock domain, which is either a divided by 4 or divided by 2 version of the DDR2 or DDR3 memory clock. A block diagram of the PHY design is shown in [Figure 1-56](#).

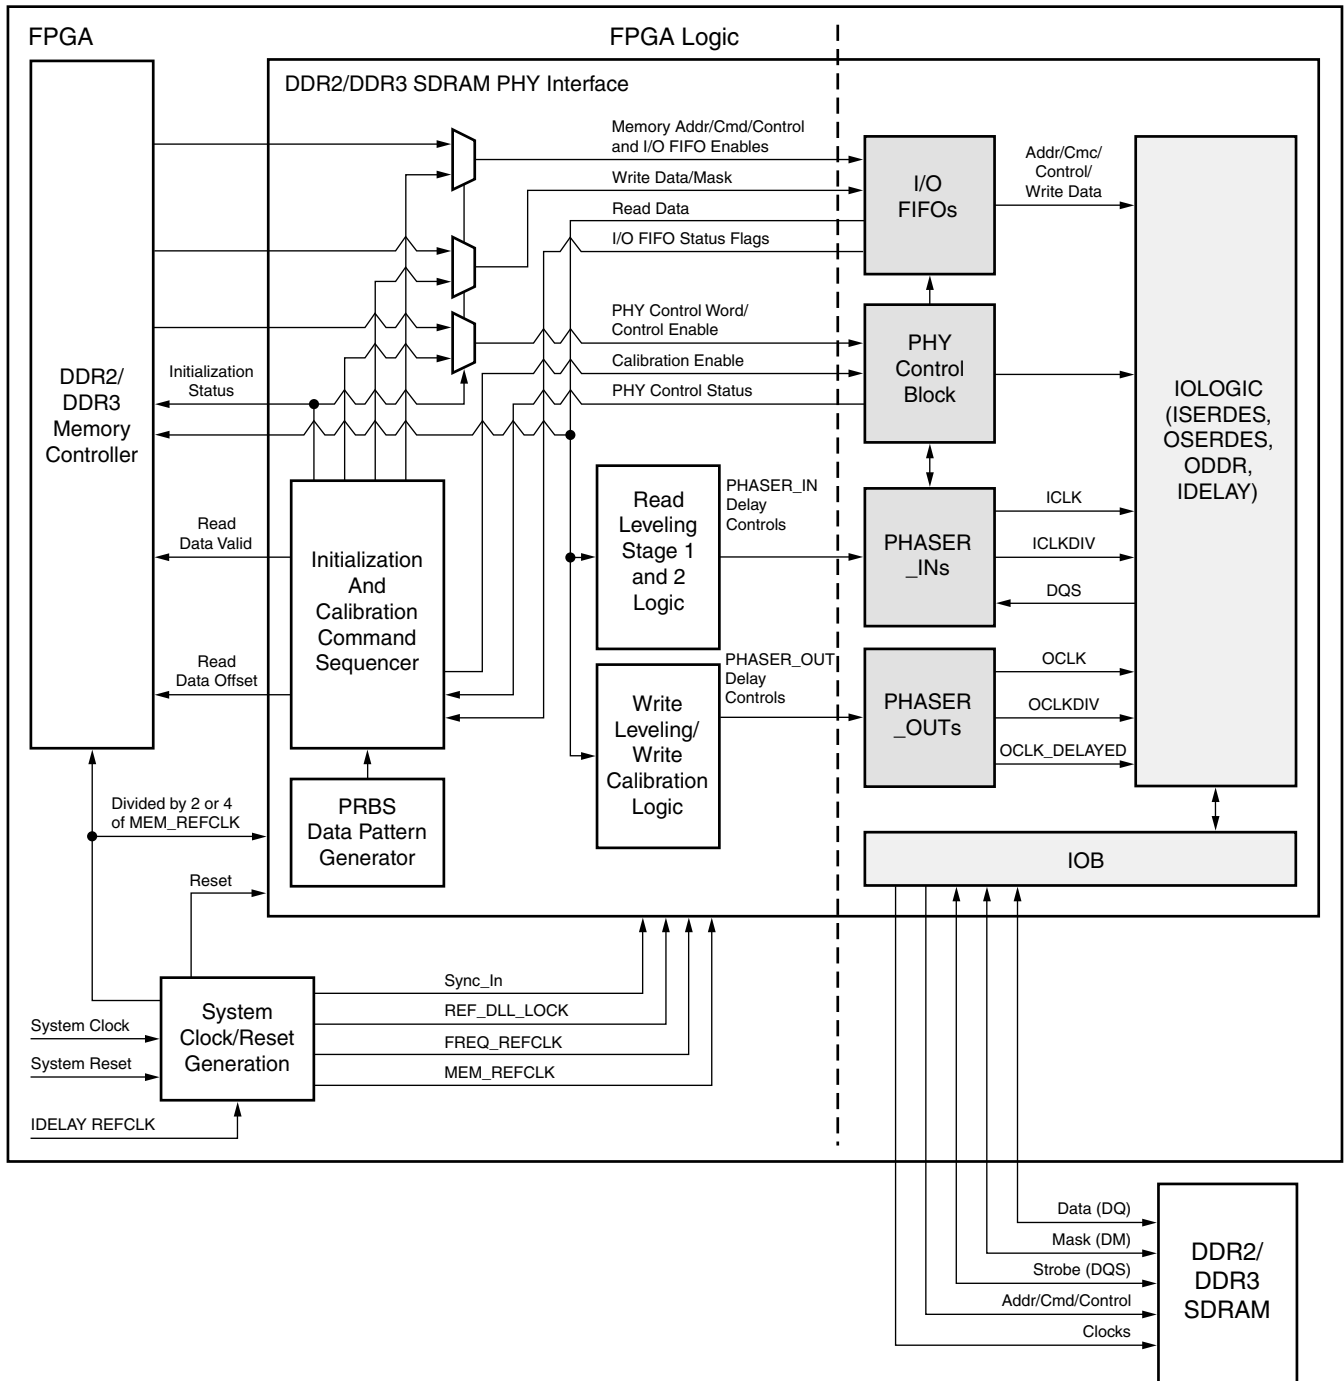


UG586_c1_46_110410

Figure 1-56: PHY Block Diagram

Memory Initialization and Calibration Sequence

After deassertion of system reset, the PHY performs the required power-on initialization sequence for the memory. This is followed by several stages of timing calibration for both the write and read datapaths. After calibration is complete, the PHY indicates that initialization is finished, and the controller can begin issuing commands to the memory.

Figure 1-57 shows the overall flow of memory initialization and the different stages of calibration.

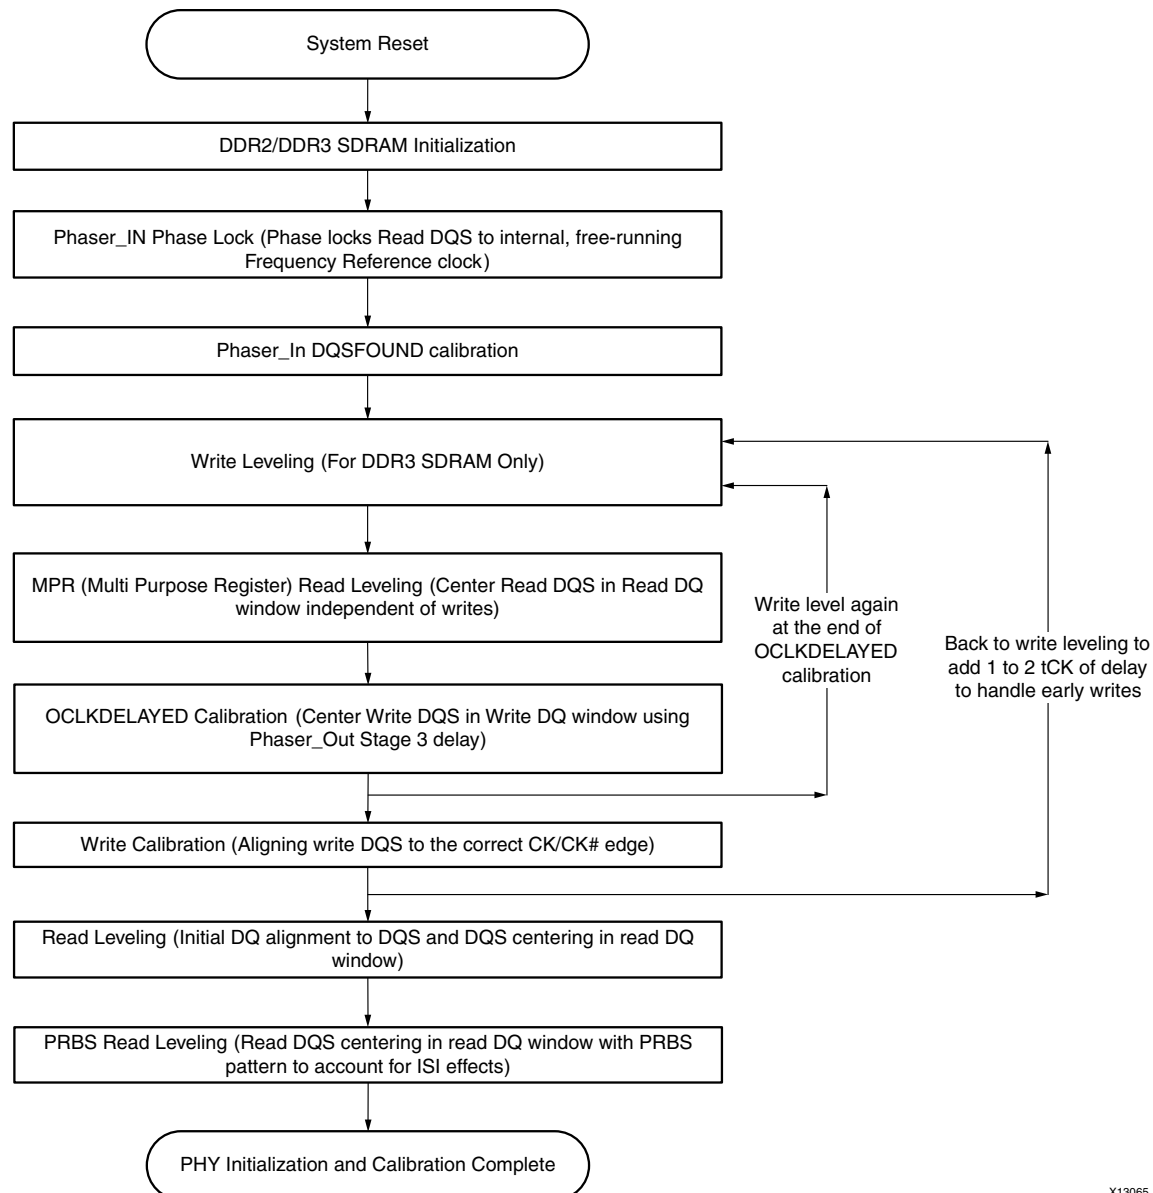

X13065

Figure 1-57: PHY Overall Initialization and Calibration Sequence

The calibration stages in [Figure 1-57](#) correspond to these sections:

- [Memory Initialization, page 144](#)
- [PHASER_IN Phase Lock, page 145](#)
- [PHASER_IN DQSFOUND Calibration, page 145](#)
- [Write Leveling, page 146](#)
- [Multi-Purpose Register Read Leveling, page 149](#)
- [OCLKDELAYED Calibration, page 150](#)
- [Write Calibration, page 152](#)
- [Read Leveling, page 154](#)
- [PRBS Read Leveling, page 157](#)
- [Dynamic Calibration and Periodic Read Behavior, page 157](#)

I/O Architecture

Each 7 series FPGA I/O bank has dedicated blocks comprising a PHY control block, four PHASER_IN and PHASER_OUT blocks, four IN/OUT_FIFOs, ISERDES, OSERDES, ODDR, IDELAY, and IOBs. A single PHY control block communicates with all four PHASER_IN and PHASER_OUT blocks within the I/O bank.

PHY Control Block

The PHY control block is the central control block that manages the flow of data and control information between the FPGA logic and the dedicated PHY. This includes control over the flow of address, command, and data between the IN/OUT_FIFOs and ISERDES/OSERDES, and control of the PHASER_IN and PHASER_OUT blocks. The PHY control block receives control words from the calibration logic or the Memory Controller at the slow frequency (1/4 the frequency of the DDR2 or DDR3 SDRAM clock) PHY_Clk rate and processes the control words at the DDR2 or DDR3 SDRAM clock rate (CK frequency).

The calibration logic or the Memory Controller initiates a DDR2 or DDR3 SDRAM command sequence by writing address, command, and data (for write commands) into the IN/OUT_FIFOs and simultaneously or subsequently writes the PHY control word to the PHY control block. The PHY control word defines a set of actions that the PHY control block does to initiate the execution of a DDR2 or DDR3 SDRAM command.

The PHY control block provides the control interfaces to the byte group blocks within its I/O bank. When multi-I/O bank implementations are required, each PHY control block within a given I/O bank controls the byte group elements in that bank. This requires that the PHY control blocks stay in phase with their adjacent PHY control blocks. The center PHY control block is configured to be the master controller for a three I/O bank implementation. For two bank implementations, either PHY control block can be designated the master.

The PHY control interface is used by the calibration logic or the Memory Controller to write PHY control words to the PHY. The signals in this interface are synchronous to the PHY_Clk and are listed in [Table 1-57](#). This is a basic FIFO style interface. Control words are written into the control word FIFO on the rising edge of PHY_Clk when PHY_Ctl_WrEn is High and PHY_Ctl_Full is Low. For multi-I/O bank PHYs, the same control word must be written into each PHY control block for proper operation.

Table 1-57: PHY Control Interface

Signal	Direction	Description
PHY_Clk	Input	This is the PHY interface clock for the control word FIFO. PHY control word signals are captured on the rising edge of this clock.
PHY_Ctl_Wr_N	Input	This active-Low signal is the write enable signal for the control word FIFO. A control word is written into the control word FIFO on the rising edge of PHY_Clk, when this signal is active.
PHY_Ctl_Wd[31:0]	Input	This is the PHY control word described in Table 1-58 .
PHY_Ctl_Full	Output	This active-High output is the full flag for the control word FIFO. It indicates that the FIFO cannot accept anymore control words and blocks writes to the control word FIFO.
PHY_Ctl_AlmostFull	Output	This active-High output is the almost full flag for the control word FIFO. It indicates that the FIFO can accept no more than one additional control word as long as the PHY_Ctl_Full signal is inactive.
PHY_Ctl_Ready	Output	This active-High output becomes set when the PHY control block is ready to start receiving commands.

The PHY control word is broken down into several fields, as shown in [Table 1-58](#).

Table 1-58: PHY Control Word

3 1	3 0	2 9	2 8	2 7	2 6	2 5	2 4	2 3	2 2	2 1	2 0	1 9	1 8	1 7	1 6	1 5	1 4	1 3	1 2	1 1	1 0	9	8	7	6	5	4	3	2	1	0
Act Pre		Event Delay		CAS Slot		Seq		Data Offset				Reser ved		Low Index		Aux_Out		Control Offset				PHY Cmd									

- **PHY Command** – This field defines the actions undertaken by the PHY control block to manage command and data flow through the dedicated PHY. The PHY commands are:
 - **Write (Wr – 0x01)** – This command instructs the PHY control block to read the address, command, and data OUT_FIFOs and transfer the data read from those FIFOs to their associated IOIs.
 - **Read (Rd – 0x03)** – This command instructs the PHY control block to read the address, command OUT_FIFOs, and transfer the data read from those FIFOs to their associated IOIs. In addition, data read from the memory is transferred after its arrival from the data IOIs to the Data IN_FIFO.
 - **Non-Data (ND – 0x04)** – This command instructs the PHY control block to read the address and command OUT_FIFOs and transfer the data read from those FIFOs to their associated IOIs.

- **Control Offset** – This field is used to control when the address and command IN/OUT_FIFOs are read and transferred to the IOIs. The control offset is in units of the DDR2 or DDR3 SDRAM clock cycle.
- **Auxiliary Output** – This field is used to control when the auxiliary output signals (Aux_Output[3:0]) are used. Auxiliary outputs can be configured to activate during read and write commands. The timing offset and duration are controlled by the attributes described in [Table 1-59, page 138](#). These outputs are not used by the DDR2 and DDR3 interfaces generated by the MIG tool; they are set to 0.
- **Low Index (Bank)** – The dedicated PHY has internal counters that require this field to specify which of the eight DDR2 or DDR3 SDRAM banks to use for the data command. The MIG IP core does not use these internal counters; therefore, this field should be all zeros.
- **Reserved** – This field must always be set to 2'b00.
- **Data Offset** – This field is used to control when the data IN/OUT_FIFOs are read or written based on the PHY command. The data offset is in units of the DDR2 or DDR3 SDRAM clock cycle.
- **Seq** – This field contains a sequence number used in combination with the Sync_In control signal from the PLL to keep two or more PHY control blocks executing the commands read from their respective control queues in sync. Commands with a given seq value must be executed by the command parser within the PHY control block during the specific phase indicated by the Seq field.
- **CAS Slot** – The slot number being used by the Memory Controller for write/read (CAS) commands.
- **Event Delay** – The dedicated PHY has internal counters that require this field to specify the delay values loaded into these counters. The event delay is in units of DDR2 or DDR3 SDRAM clock cycles. The MIG IP core does not use these internal counters; therefore, this field should be all zeros.
- **Activate Precharge** – The dedicated PHY has internal counters that require this field to specify the type of DDR2 or DDR3 command related to the event delay counter. Valid values are:
 - 00: No action
 - 01: Activate
 - 10: Precharge
 - 11: Precharge/Activate

The MIG IP core does not use these internal counters; therefore, this field should be all zeros.

Table 1-59: Auxiliary Output Attributes

Attribute	Type	Description
MC_AO_WRLVL_EN	Vector[3:0]	This attribute specifies whether or not the related Aux_Output is active during write leveling as specified by the PC_Enable_Calib[1] signal. For example, this attribute specifies whether ODT is active during write leveling.
WR_CMD_OFFSET_0	Vector[5:0]	This attribute specifies how long in DDR2 or DDR3 SDRAM clock cycles after the associated write command is executed that the auxiliary output becomes active. For example, this attribute ensures that the ODT signal is asserted at the correct clock cycle to meet the JEDEC ODTLon and ODTLoff specifications.
WR_DURATION_0	Vector[5:0]	This attribute specifies how long in DDR2 or DDR3 SDRAM clock cycles the auxiliary output remains active for a write command. For example, this attribute ensures that the ODT signal is asserted at the correct clock cycle to meet the JEDEC ODTLon and ODTLoff specifications.
RD_CMD_OFFSET_0	Vector[5:0]	This attribute specifies how long in DDR2 or DDR3 SDRAM clock cycles after the associated read command is executed that the auxiliary output becomes active.
RD_DURATION_0	Vector[5:0]	This attribute specifies how long in DDR2 or DDR3 SDRAM clock cycles the auxiliary output remains active for a read command.
WR_CMD_OFFSET_1	Vector[5:0]	This attribute specifies how long in DDR2 or DDR3 SDRAM clock cycles after the associated write command is executed that the auxiliary output becomes active.
WR_DURATION_1	Vector[5:0]	This attribute specifies how long in DDR2 or DDR3 SDRAM clock cycles the auxiliary output remains active for a write command.
RD_CMD_OFFSET_1	Vector[5:0]	This attribute specifies how long in DDR2 or DDR3 SDRAM clock cycles after the associated read command is executed that the auxiliary output becomes active.
RD_DURATION_1	Vector[5:0]	This attribute specifies how long in DDR2 or DDR3 SDRAM clock cycles the auxiliary output remains active for a read command.
WR_CMD_OFFSET_2	Vector[5:0]	This attribute specifies how long in DDR2 or DDR3 SDRAM clock cycles after the associated write command is executed that the auxiliary output becomes active.
WR_DURATION_2	Vector[5:0]	This attribute specifies how long in DDR2 or DDR3 SDRAM clock cycles the auxiliary output remains active for a write command.
RD_CMD_OFFSET_2	Vector[5:0]	This attribute specifies how long in DDR2 or DDR3 SDRAM clock cycles after the associated read command is executed that the auxiliary output becomes active.
RD_DURATION_2	Vector[5:0]	This attribute specifies how long in DDR2 or DDR3 SDRAM clock cycles the auxiliary output remains active for a read command.
WR_CMD_OFFSET_3	Vector[5:0]	This attribute specifies how long in DDR2 or DDR3 SDRAM clock cycles after the associated write command is executed that the auxiliary output becomes active.
WR_DURATION_3	Vector[5:0]	This attribute specifies how long in DDR2 or DDR3 SDRAM clock cycles the auxiliary output remains active for a write command.

Table 1-59: Auxiliary Output Attributes (Cont'd)

Attribute	Type	Description
RD_CMD_OFFSET_3	Vector[5:0]	This attribute specifies how long in DDR2 or DDR3 SDRAM clock cycles after the associated read command is executed that the auxiliary output becomes active.
RD_DURATION_3	Vector[5:0]	This attribute specifies how long in DDR2 or DDR3 SDRAM clock cycles the auxiliary output remains active for a read command.
CMD_OFFSET	Vector[5:0]	This attribute specifies how long in DDR2 or DDR3 SDRAM clock cycles after the associated command is executed that the auxiliary output defined by AO_TOGGLE toggles.
AO_TOGGLE	Vector[3:0]	This attribute specifies which auxiliary outputs are in toggle mode. An auxiliary output in toggle mode is inverted when its associated AO bit is set in the PHY control word after the CMD_OFFSET has expired.

The PHY control block has several counters that are not enabled because the synchronous mode is used where PHY_Clk is either 1/4 or 1/2 the frequency of the DDR2 or DDR3 SDRAM clock frequency.

At every rising edge of PHY_Clk, a PHY control word is sent to the PHY control block with information for four memory clock cycles worth of commands and a 2-bit Seq count value. The write enable to the control FIFO is always asserted and no operation (NOP) commands are issued between valid commands in the synchronous mode of operation. The Seq count must be increased with every command sequence of four. The Seq field is used to synchronize PHY control blocks across multiple I/O banks.

The DDR3 SDRAM RESET_N signal is directly controlled by the FPGA logic, not the PHY control word. The DDR2 SDRAM RESET_N signal for RDIMM interfaces is directly controlled by the FPGA logic, not the PHY control word. The PHY control block, in conjunction with the PHASER_OUT, generates the write DQS and the DQ/DQS 3-state control signals during read and write commands.

The PHY cmd field is set based on whether the sequence of four commands has either a write, a read, or neither. The PHY cmd field is set to write if there is a write request in the command sequence. It is set to read if there is a read request in the command sequence, and it is set to non-data if there is neither a write nor a read request in the command sequence. A write and a read request cannot be issued within a sequence of four commands. The control offset field in the PHY control word defines when the command OUT_FIFOs is read out and transferred to the IOLOGIC. The data offset defines when the data OUT_FIFOs are read out with respect to the command OUT_FIFOs being read. For read commands, the data offset is determined during calibration. The PHY control block assumes that valid data associated with a write command is already available in the DQ OUT_FIFO when it is required to be read out.


Command Path

A command requested by the calibration logic or Memory Controller is sent out as a PHY control word to the PHY control block and a simultaneous input to the address/control/command OUT_FIFOs. Each of the address/control/command signals must have values for four memory clock cycles because each PHY_Clk cycle entails four memory clock cycles.

There are three types of commands:

- Write commands including write and write with auto precharge. The PHY command values in the PHY control word for both these write commands are the same (0x01). The difference is the address value input to the OUT_FIFO. Address bit A10 is 1 for writes with auto precharge in the address OUT_FIFOs.
- Read commands including read and read with auto precharge. The PHY command values in the PHY control word for both these read commands are the same (0x11). The difference is the address value input to the OUT_FIFO. Address bit A10 is 1 for reads with auto precharge in the address OUT_FIFOs.
- Non-Data commands including Mode Register Set, Refresh, Precharge, Precharge All Banks, Activate, No Operation, Deselect, ZQ Calibration Long, and ZQ Calibration Short. The PHY command values in the PHY control word for all these commands are the same (0x100). The RAS_N, CAS_N, WE_N, bank address, and address values input to the OUT_FIFOs associated with these commands differ.


Figure 1-58 shows the block diagram of the address/control/command path. The OSERDES is used in single data rate (SDR) mode because address/control/commands are SDR signals. A PHY control word is qualified with the PHY_Ctl1_Wr_N signal and an entry to the OUT_FIFOs is qualified with the PHY_Cmd_WrEn signal. The FPGA logic need not issue NOP commands during long wait times between valid commands to the PHY control block because the default in the dedicated PHY for address/commands can be set to 0 or 1 as needed.

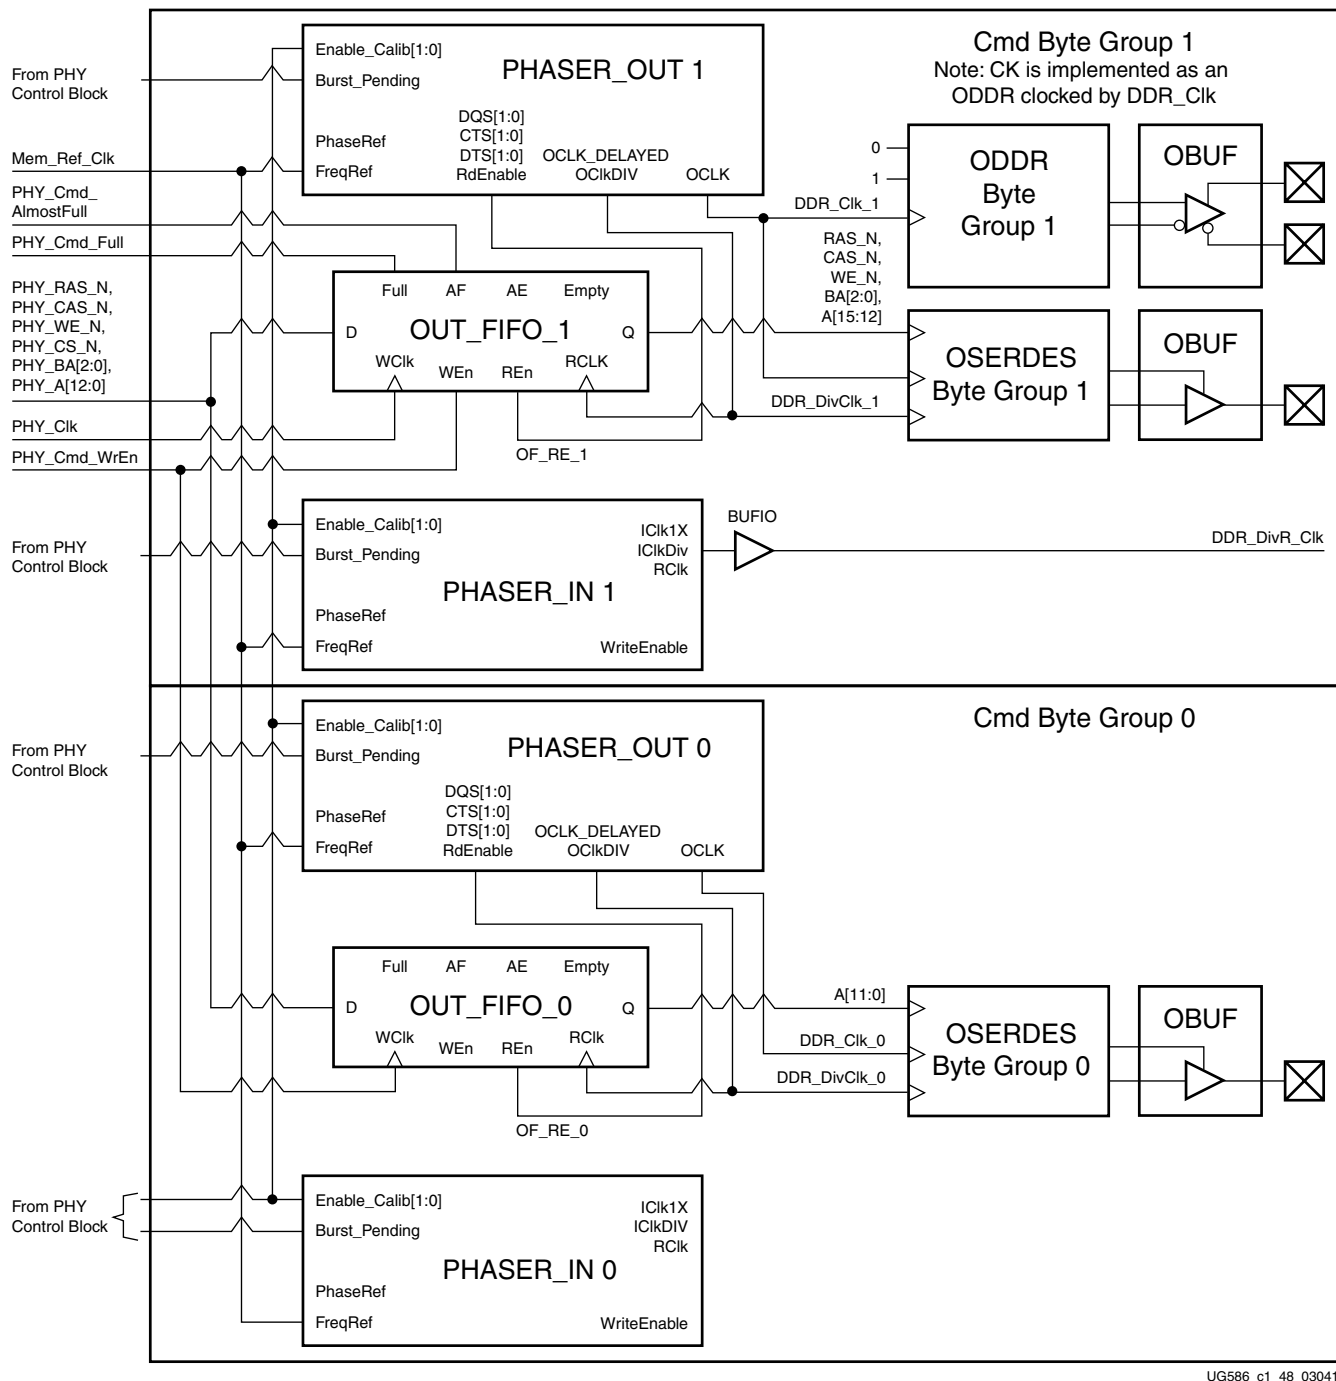

UG586_c1_48_030412

Figure 1-58: Address/Command Path Block Diagram

The timing diagram of the address/command path from the output of the OUT_FIFO to the FPGA pins is shown in Figure 1-59.

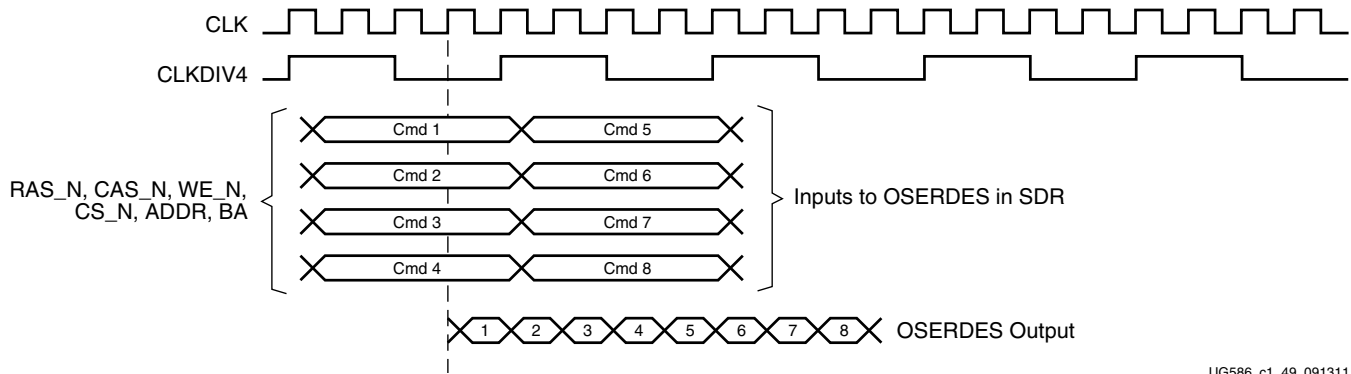

UG586_c1_49_091311

Figure 1-59: Address/Command Timing Diagram

Datapath

The datapath comprises the write and read datapaths. The datapath in the 7 series FPGA is completely implemented in dedicated logic with IN/OUT_FIFOs interfacing the FPGA logic. The IN/OUT_FIFOs provide datapath serialization/deserialization in addition to clock domain crossing, thereby allowing the FPGA logic to operate at low frequencies up to 1/4 the frequency of the DDR2 or DDR3 SDRAM clock. [Figure 1-60](#) shows the block diagram of the datapath.

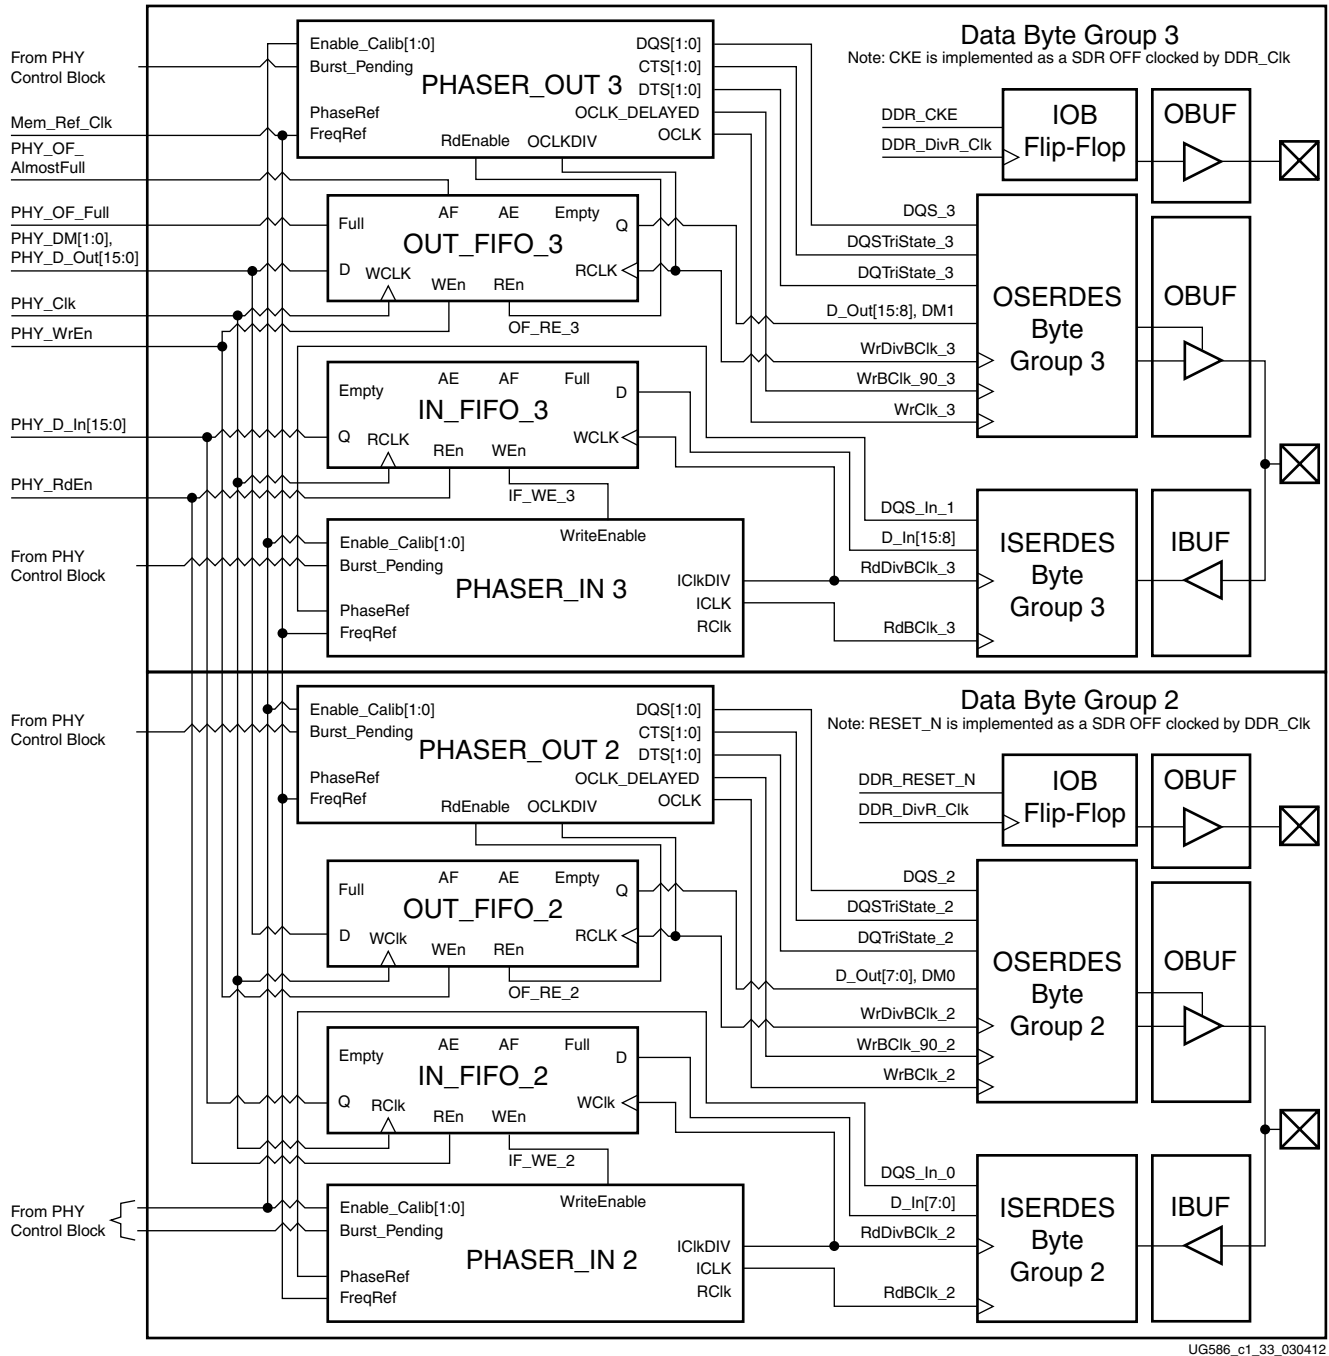


Figure 1-60: Datapath Block Diagram

Each IN/OUT_FIFO has a storage array of memory elements arranged as 10 groups eight bits wide and eight entries deep. During a write, the OUT_FIFO receives eight bits of data for each DQ bit from the calibration logic or Memory Controller and writes the data into the storage array in the PHY_Clk clock domain, which is 1/4 the frequency of the DDR2 or DDR3 SDRAM clock.

The OUT_FIFO serializes from eight bits to four bits and outputs the 4-bit data to the OSERDES in the OCLKDIV domain that is half the frequency of the DDR2 or DDR3 SDRAM clock. The OSERDES further serializes the 4-bit data to a serial DDR data stream in the OCLK domain. The PHASER_OUT clock output OCLK is used to clock DQ bits whereas the OCLK_DELAYED output is used to clock DQS to achieve the 90° phase offset between DQS and its associated DQ bits during writes. During write leveling, both OCLK and OCLK_DELAYED are shifted together to align DQS with CK at each DDR2 or DDR3 component.

The IN_FIFO shown in [Figure 1-59](#) receives 4-bit data from each DQ bit ISERDES in a given byte group and writes them into the storage array. The IN_FIFO is used to further deserialize the data by writing two of the 4-bit datagrams into each 8-bit memory element. This 8-bit parallel data is output in the PHY_Clk clock domain which is 1/4 the frequency of the DDR2 or DDR3 SDRAM clock. Each read cycle from the IN_FIFO contains all the byte data read during a burst length 8 memory read transaction. The data bus width input to the dedicated PHY is 8x that of the DDR2 or DDR3 SDRAM when running the FPGA logic at 1/4 the frequency of the DDR2 or DDR3 SDRAM clock.

Power-Saving Features

Designs generated by the MIG tool use the SSTL T_DCI standards, which save power by turning off the DCI when the FPGA output driver is active. Also, by using the IOBUF_DCIEN (High Performance banks) and IOBUF_INTERMDISABLE (High Range banks) primitives, designs automatically disable the IBUF when the output is active. The controller uses these primitives to disable both DCI/IN_TERM and the IBUF when the controller is idle.

For more information on the IOBUF_DCIEN and IOBUF_INTERMDISABLE primitives, see *7 Series FPGAs SelectIO™ Resources User Guide* (UG471) [\[Ref 2\]](#).

Calibration and Initialization Stages

Memory Initialization

The PHY executes a JEDEC®-compliant DDR2 or DDR3 initialization sequence for memory following deassertion of system reset. Each DDR2 or DDR3 SDRAM has a series of mode registers, accessed through mode register set (MRS) commands. These mode registers determine various SDRAM behaviors, such as burst length, read and write CAS latency, and additive latency. The particular bit values programmed into these registers are configurable in the PHY and determined by the values of top-level HDL parameters like BURST_MODE (BL), BURST_TYPE, CAS latency (CL), CAS write latency (CWL), write recovery for auto precharge (tWR), on-die termination resistor values (RTT_NOM and RTT_WR), and output driver strength (OUTPUT_DRV).

PHASER_IN Phase Lock

PHASER_IN is placed in the read calibration mode to phase align its free-running frequency reference clock to the associated read DQS. The calibration logic issues back-to-back read commands to provide the PHASER_IN block with a continuous stream of DQS pulses for it to achieve lock. A continuous stream of DQS pulses is required for the PHASER_IN block to phase align the free-running frequency reference clock to the associated read DQS. Each DQS has a PHASER_IN block associated with it. When the PHASER_IN lock signal (`pi_phase_locked`) of all the DQS PHASER_INs are asserted, the calibration logic deasserts the read calibration signal to put the PHASER_INs in normal operation mode.

PHASER_IN DQSFOUND Calibration

This calibration stage is required to align the different DQS groups to the same PHY_Clk clock edge in an I/O bank. Different DQS groups have different skews with respect to each other because of the clock (CK) fly-by routing differences to each DDR2 or DDR3 component and delay differences in each component. This calibration stage is required to determine the optimal position of read `data_offset` with respect to the read command per I/O bank.


In this stage of calibration, the PHASER_IN block is in normal operation mode and the calibration logic issues a set of four back-to-back read commands with gaps in between. The `data_offset` associated with the first read command is not accurate because the round-trip delays are unknown.

For interfaces using HP I/O banks, the `data_offset` for the first set of read commands is set to CL + 13. The `data_offset` value for the subsequent set of reads is decreased one memory clock cycle at a time until the DQSFOUND output from the PHASER_IN block is asserted. When the DQSFOUND signal is asserted for all of the bytes, the CK delay stage begins.

For interfaces using HR I/O banks, the `data_offset` for the first set of read commands is set to CL – 2. The `data_offset` value for the subsequent set of reads is increased one memory clock cycle at a time until the DQSFOUND output from the PHASER_IN block is asserted. When the DQSFOUND signal is asserted for all of the bytes, the CK delay stage begins.

In the CK delay stage, the PHASER_OUT stage 2 delay tap is increased one at a time starting from 0 to 63 for CK/Address/Command/Control byte lanes. This effectively moves where the read DQS preamble begins and causes the DQSFOUND to fail. Any one DQSFOUND failure of the entire interface is considered a failure. A passing window is determined by recording the taps where the DQSFOUND failures occur. The final tap value for CK/Address/Command/Control byte lanes is set to the center of the passing window. If no failing edges are found the final tap is set to 32.

Each byte group can be read out of the IN_FIFO on different PHY_Clk cycles due to fly-by routing and delay differences within each group. Therefore, the IN_FIFO Not Empty flags for all the byte groups are ANDed together and used as the read enable for all data IN_FIFOs. Figure 1-61 shows the read data capture timing diagram.

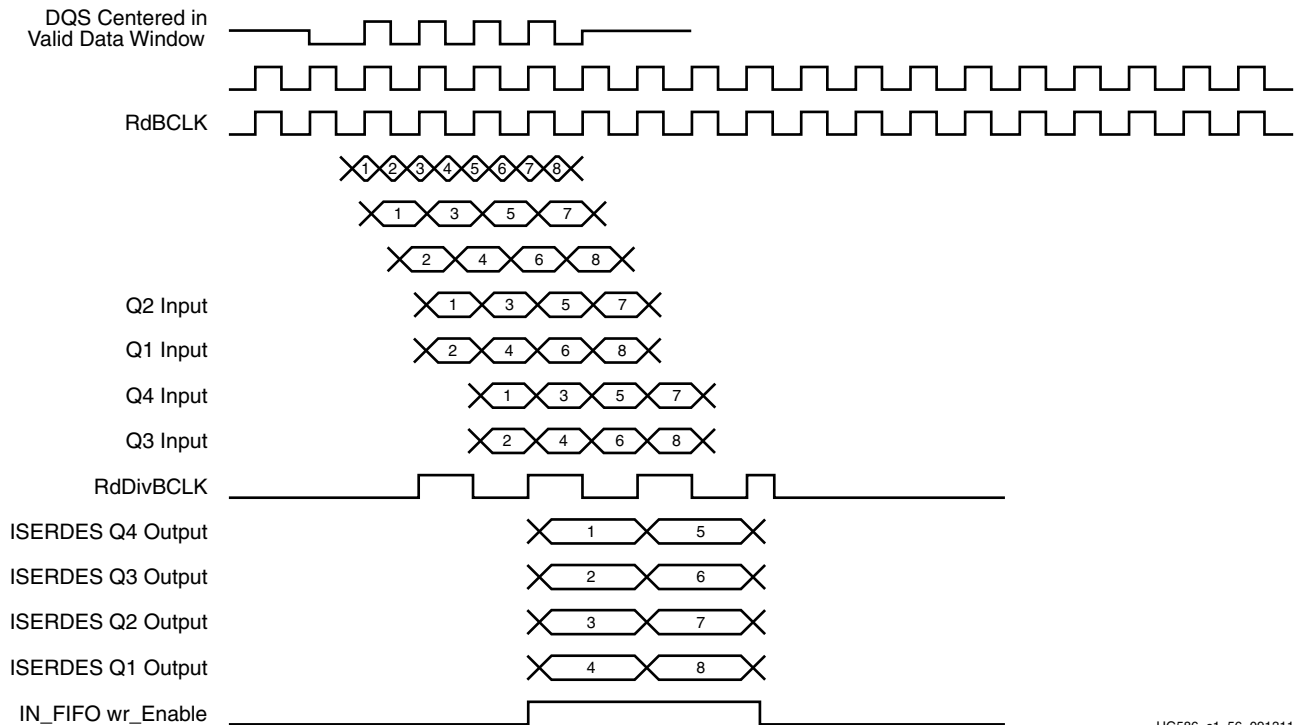


UG586_c1_56_091311

Figure 1-61: Read Data Capture Timing Diagram

Write Leveling

Write leveling, which is a feature available in DDR3 SDRAM, is performed in this stage of calibration. DDR3 SDRAM modules have adopted fly-by topology on clocks, address, commands, and control signals to improve signal integrity. Specifically, the clocks, address, and control signals are all routed in a daisy-chained fashion, and termination is located at the end of each trace. However, this causes a skew between the strobe (DQS) and the clock (CK) at each memory device on the module. Write leveling, a new feature in DDR3 SDRAMs, allows the controller to adjust each write DQS phase independently with respect to the CK forwarded to the DDR3 SDRAM device. This compensates for the skew between DQS and CK and meets the τ_{DQSS} specification.


During write leveling, DQS is driven by the FPGA memory interface and DQ is driven by the DDR3 SDRAM device to provide feedback. The FPGA memory interface has the capability to delay DQS until a 0-to-1 transition is detected on DQ . Write leveling is performed once after power-up. The calibration logic ORs the DQ bits in a byte to determine the transition because different memory vendors use different bits in a byte as feedback. The DQS delay can be achieved with the PHASER_OUT fine and coarse delay adjustment in the 7 series FPGAs. Figure 1-62 shows the write leveling block diagram.

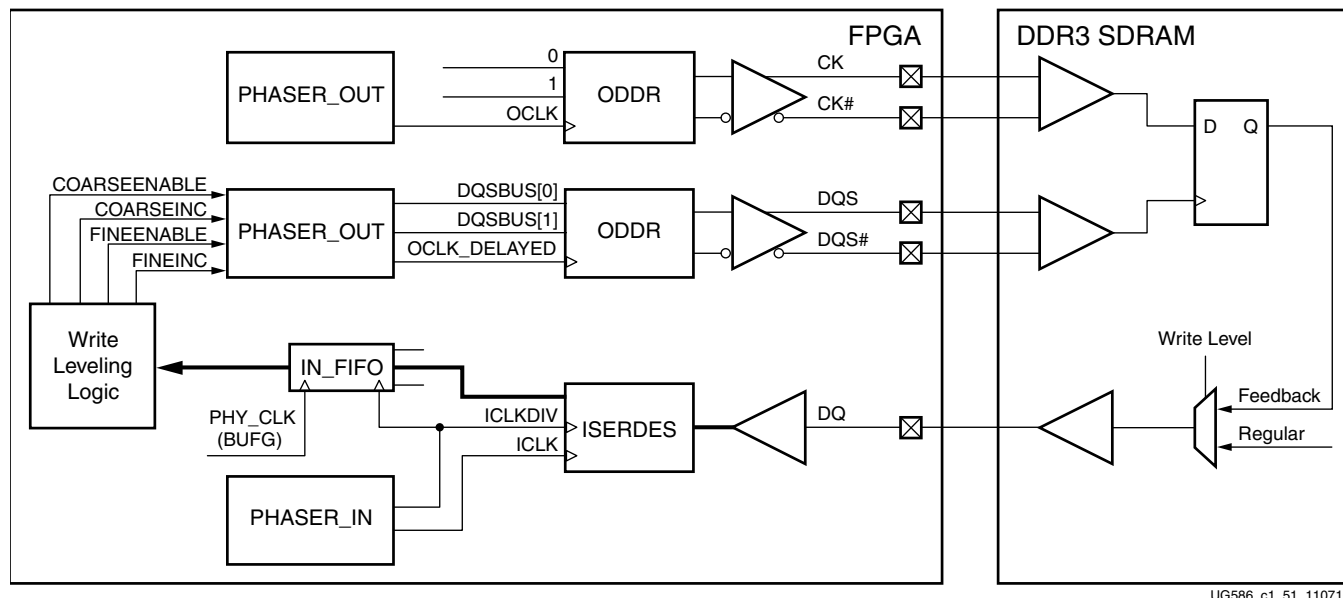

UG586_c1_51_110710

Figure 1-62: Write Leveling Block Diagram

The timing diagram for write leveling is shown in Figure 1-63. Periodic DQS pulses are output by the FPGA memory interface to detect the level of the CK clock at the DDR3 SDRAM device. The interval between DQS pulses is specified as a minimum of 16 clock cycles. DQS is delayed using the PHASER_OUT fine and coarse delay in unit tap increments until a 0 to 1 transition is detected on the feedback DQ input. The DQS delay established by write leveling ensures the t_{DQSS} specification.

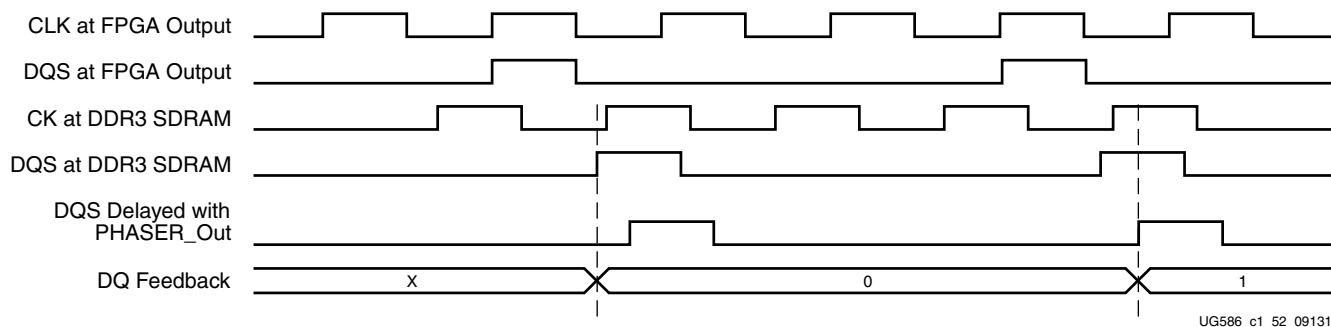

UG586_c1_52_091311

Figure 1-63: Write Leveling Timing Diagram

Figure 1-64 shows that the worst-case delay required during write leveling can be one tCK (DDR3 SDRAM clock period).


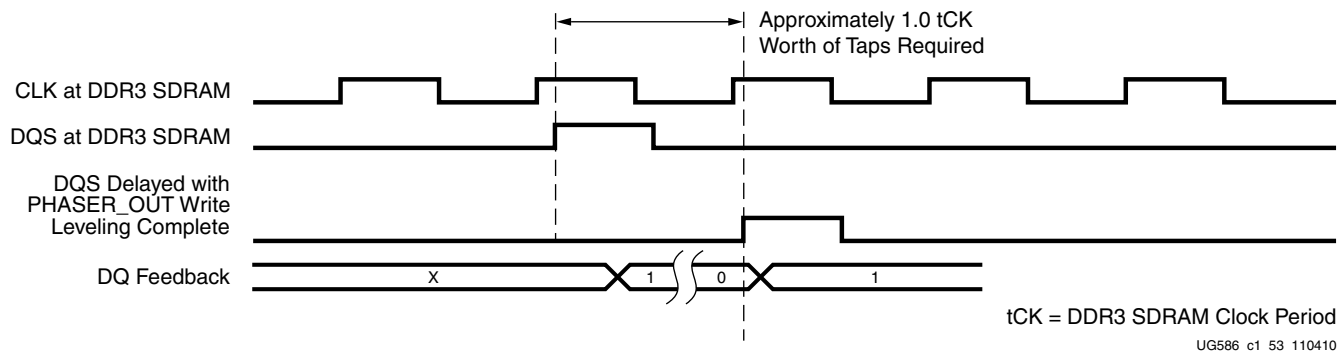


Figure 1-64: Write Leveling Taps Requirement

Implementation Details

The `write_calib_n` signal indicating the start of write leveling mode is input to the PHY control block after `tWLDQSEN` to ensure that `DQS` is driven Low after `ODT` is asserted. In this mode, periodic write requests must be issued to the PHY control block to generate periodic `DQS` pulses for write leveling. During write leveling, `PHASER_IN` outputs a free-running clock used to capture the `DQ` feedback to the `DQ IN_FIFOs`. During write leveling, the data byte group `IN_FIFOs` is in flow-through mode.

Figure 1-65 shows the flow diagram of the sequence of commands during write leveling. The `PHASER_OUT` fine phase shift taps are increased one tap at a time to observe a 0-to-1 transition on the feedback `DQ`. A stable counter is implemented in the write leveling logic to mitigate the risk of finding a false edge in the jitter region. A counter value of three means that the sampled data value was constant for three consecutive tap increments and `DQS` is considered to be in a stable region with respect to `CK`. The counter value is reset to 0 whenever a value different from the previous value is detected. Edge detection is inhibited when the stable counter value is less than 3. The `write_calib_n` signal is deasserted when write leveling is performed on all `DQSs` in all ranks.

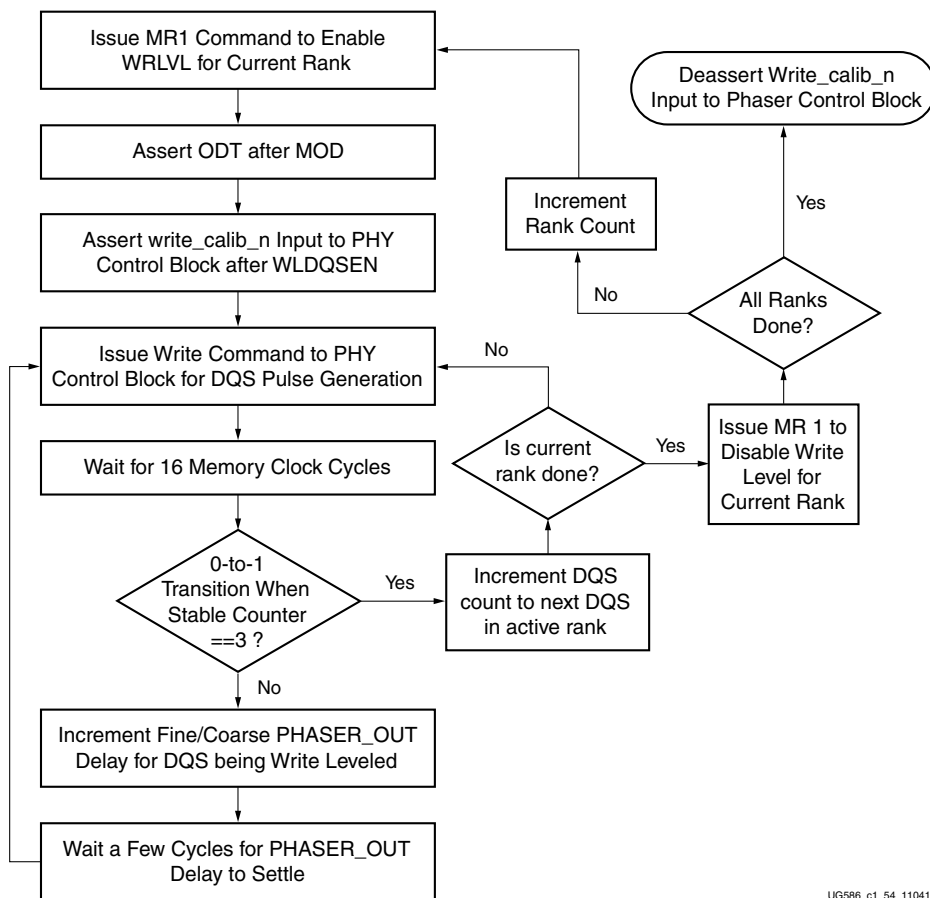

UG586_c1_54_110410

Figure 1-65: Write Leveling Flow Diagram

Multi-Purpose Register Read Leveling

At this stage of calibration, the write DQS is not centered in the write DQ window nor is the read DQS centered in the read DQ window. The Multi-Purpose Register (MPR) is used to center the read DQS in the read DQ window. The MPR has a predefined 01010101 pattern that is read back during this stage of calibration. Read DQS centering is required for the next stage of calibration.

MPR read leveling is performed on a per byte basis and it is a two step process.

- The first step is to delay all the DQ bits in a byte using IDELAY taps by monitoring Bit[0] in that byte. The DQ bits are moved to place the first valid rising edge data after the first rising edge of DQS.
- The second step is to sweep DQS across the entire byte window using PHASER_IN fine taps to detect two edges. The entire DQ byte lane (Bits[7:0]) is monitored while sweeping the byte window to find the aggregate eye. Note that although the JEDEC standard states it is only required to send the MPR pattern on Bit[0] of a byte, all vendors tested sent the MPR pattern on the entire byte.
- Minimum data window (MIN_EYE_SIZE) must be met for two edges to be found.

- When second edge is not found, `second_edge_taps` are set to zero. However, the algorithm computes the midpoint of the data window using 63 as the second edge tap position because 63 is the maximum fine tap value and no edge was detected.

OCLKDELAYED Calibration

Write `DQS` is centered in the write `DQ` window using the `PHASER_OUT` stage 3 delay in this stage of calibration. The starting stage 3 tap value ranges from 28 to 34 depending on the memory clock frequency. There are three substages in this calibration stage performed on a per byte basis:

- Stage 3 tap limit determination
- Detection of write `DQ` valid window edges
- Write `DQS` centering in the write data valid window

The DDR3 SDRAM JEDEC specification requires the write `DQS` to be within $\pm 90^\circ$ of `CK` defined by the t_{DQSS} specification. To avoid t_{DQSS} violation during the edge detection, stage left and right limits of stage 3 tap movement are determined in this substage. These limits are calibrated using MMCM phase shift taps to optimize the calibration center point. The start of this substage is triggered by `lim_start`. The output signals `lim2ocal_stg3_left_lim` and `lim2ocal_stg3_right_lim` validated by `lim_done` are input to the edge detection substage.

In the edge detection substage, the first step is decrementing stage 3 taps until either one or more edges are found or the tap value reaches `lim2ocal_stg3_left_lim`. The stage 3 taps are then increased until one or more edges are found or the tap value reaches `lim2ocal_stg3_right_lim`.

At the end of edge detection stage, the following signals indicate which edges are detected. [Figure 1-66](#) shows the names associated with the different edges.

- **f2z** – If asserted, this indicates that the left-edge of the rise window was detected and it validates `fuzz2zero` as the tap value of the left-edge of the rise window.
- **z2f** – If asserted, this indicates that the right-edge of the rise window is detected and it validates `zero2fuzz` as the tap value of the right-edge of the rise window.
- **f2o** – If asserted, this indicates that the left-edge of the fall window was detected and it validates `fuzz2oneeighty` as the tap value of the left-edge of the fall window.
- **o2f** – If asserted, this indicates that the right-edge of the fall window was detected and it validates `oneeighty2fuzz` as the tap value of the right-edge of the fall window.

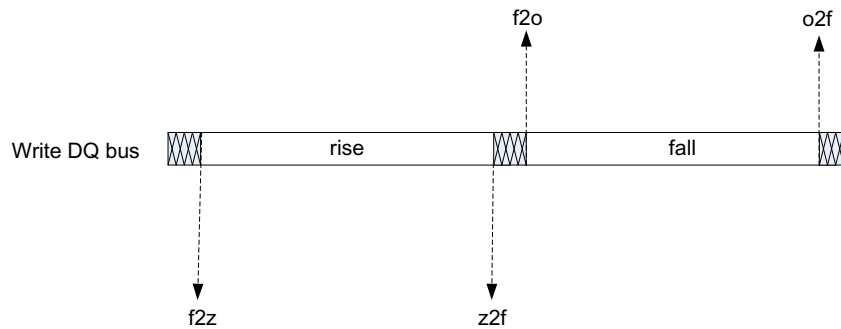


Figure 1-66: Rise and Fall Write Data Window Edges

The stage 3 start tap value places the \overline{DQS} anywhere between 90° and 225° with respect to \overline{DQ} . The number of edges detected depends on the write level taps value after the initial write leveling and the starting \overline{DQS} position with respect to \overline{DQ} . If \overline{DQS} starts in the rise \overline{DQ} window between 90° and 180° , then the following can occur:

- Either f2z, z2f, and f2o edges can be detected
- Or f2z and z2f edges of the rise window can be detected
- Or only f2z edge can be detected or only z2f edge can be detected

If \overline{DQS} starts in the noise/jitter region around 180° , then the following can occur:

- Either z2f, f2o, and o2f edges can be detected
- Or f2z, z2f and f2o edges can be detected
- Or z2f and f2o edges of the noise can be detected

Finally, if \overline{DQS} starts in the fall window between 180° and 225° , then the following can occur:

- Either z2f, f2o, and o2f edges can be detected
- Or f2o and o2f edges can be detected
- Or only f2o edge can be detected

[Table 1-60](#) describes the different starting scenarios of write \overline{DQS} with respect to \overline{DQ} , the possible edges that can be detected, and the equation used to determine the center value.

Table 1-60: Starting Scenarios for Write \overline{DQS}

Start \overline{DQS}	f2z	z2f	f2o	o2f	Center Equation
Rise Window (90° to 180°)					
Case 1	Found	Found	Found	Not Found	$(fuzz2zero + zero2fuzz)/2$
Case 2	Found	Found	Not Found	Not Found	$(fuzz2zero + zero2fuzz)/2$

Table 1-60: Starting Scenarios for Write DQS (Cont'd)

Start DQS	f2z	z2f	f2o	o2f	Center Equation
Case 3	Found	Not Found	Not Found	Not Found	$(\text{fuzz2zero} + \text{lim2ocal_stg3_right_lim})/2$
Case 4	Not Found	Found	Not Found	Not Found	$(\text{lim2ocal_stg3_left_lim} + \text{zero2fuzz})/2$
Noise/Jitter Region					
Case 1	Found	Found	Found	Not Found	$(\text{fuzz2zero} + \text{zero2fuzz})/2$
Case 2	Not Found	Found	Found	Found	$(\text{zero2fuzz} + \text{fuzz2oneeighty})/2 - 90^\circ$
Case 3	Not Found	Found	Found	Not Found	$(\text{zero2fuzz} + \text{fuzz2oneeighty})/2 - 90^\circ$
Fall Window 180° to 225°					
Case 1	Not Found	Found	Found	Found	$(\text{zero2fuzz} + \text{fuzz2oneeighty})/2 - 90^\circ$
Case 2	Not Found	Not Found	Found	Found	$(\text{fuzz2oneeighty} + \text{oneeighty2fuzz})/2 - 180^\circ$
Case 3	Not Found	Not Found	Found	Not Found	$(\text{fuzz2oneeighty} + \text{lim2ocal_stg3_right_lim})/2 - 180^\circ$

During the centering substage the write DQS is centered in the write DQ window based on the edges found during the edge detection stage. At the end of this stage, write DQS should be centered in the write DQ window. DQS to CK are not correct therefore write leveling is performed at the end of this stage of calibration.

With every stage 3 tap decrease, the stage 2 taps are increased by 2 to maintain the DQS to CK relationship established during write leveling. Similarly, with every stage 3 tap increment, the stage 2 taps are decreased by 2. If stage 2 taps reach 0 or 63, stage 3 tap increment/decrement is allowed to proceed up to the left and right limit values to avoid τ_{DQSS} violation. At the end of this stage of calibration, write leveling is redone to align DQS and CK using stage 2 taps.

Write Calibration

Write calibration is performed after both stages of read leveling because correct data pattern sequence detection is necessary for this stage of calibration. Write calibration is required to align DQS to the correct CK edge. During write leveling, DQS is aligned to the nearest rising edge of CK. However, this might not be the edge that captures the write command. Depending on the interface type (UDIMM, RDIMM, or component), the DQS could either be one CK cycle earlier than, one CK cycle later than, or aligned to the CK edge that captures the write command. Figure 1-67 shows several different scenarios based on the initial phase relationship between DQS and CK for a UDIMM or RDIMM interface.

Figure 1-68 shows an initial DQS to CK alignment case for component interfaces. The assumption is that component interfaces also use the fly-by topology, thereby requiring write leveling.

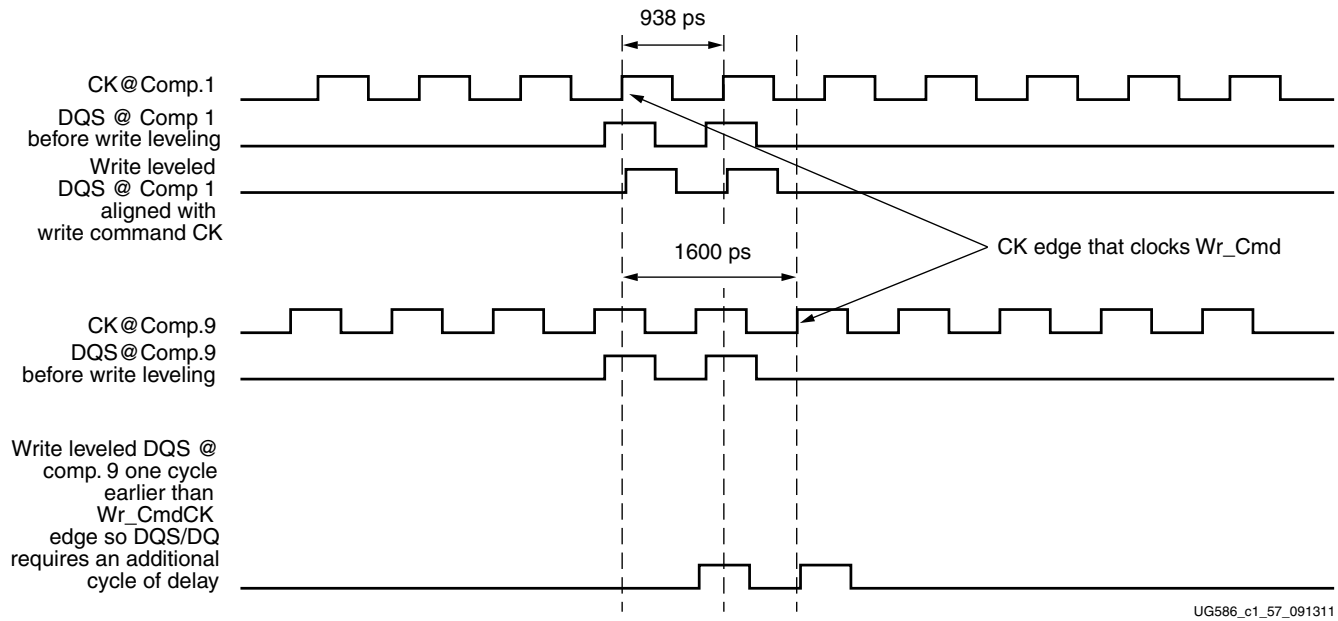


Figure 1-67: UDIMM/RDIMM DQS-to-CK Initial Alignment

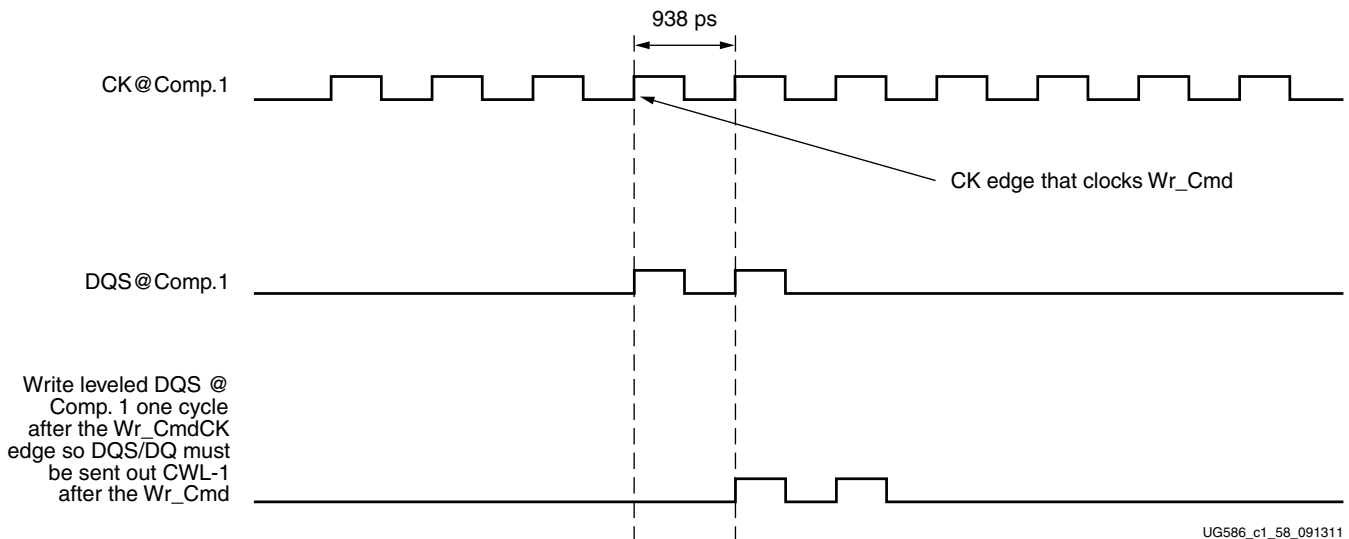


Figure 1-68: Component DQS-to-CK Initial Alignment

The PHASER_OUT fine and coarse delay provides 1 t_{CK} worth of delay for write leveling. The additional clock cycle of delay required to align to the correct CK edge is achieved using the coarse delay line. If the total delay required is over one clock cycle, the div_cycle_delay input to the PHASER_OUT block need not be asserted because a circular buffer was added to the PHASER_OUT block.

Implementation Details

A write command is issued with a known write data pattern (FF 00 AA 55 55 AA 99 66) to a specific location. This is followed by a read command to the same location. The data read back out of the IN_FIFO is compared with the expected data pattern on a byte basis. If the data read out matches the expected pattern, no further changes are required in the write path for that byte, as shown in [Figure 1-69](#). If the first two data words read back match the second set of data words in the expected pattern, the DQS and DQ 3-state signal must be delayed by one memory clock. This scenario is shown in [Figure 1-70](#). After all the bytes are calibrated, the calibration logic asserts the `init_calib_complete` signal indicating the completion of the initialization and calibration sequence. The Memory Controller can now drive the address, command, and data buses.

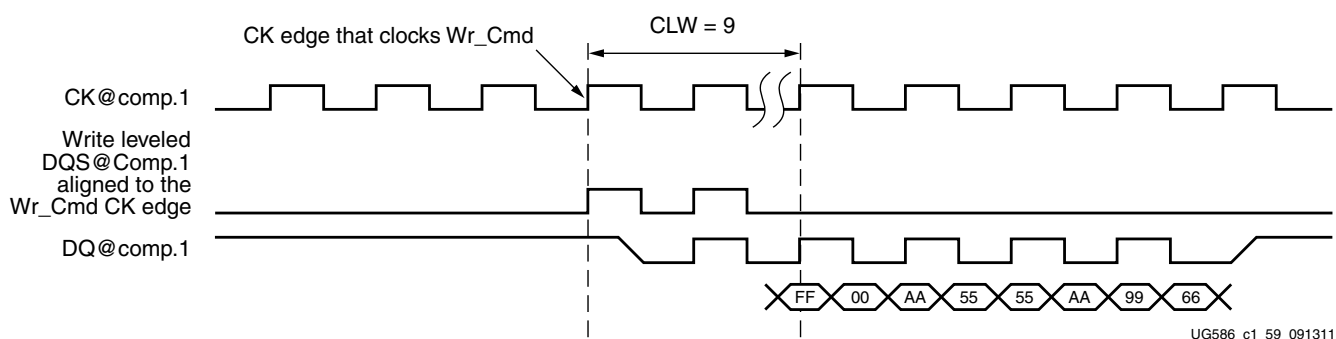


Figure 1-69: DQS Aligned to the Correct CK Edge – No Change in Write Path

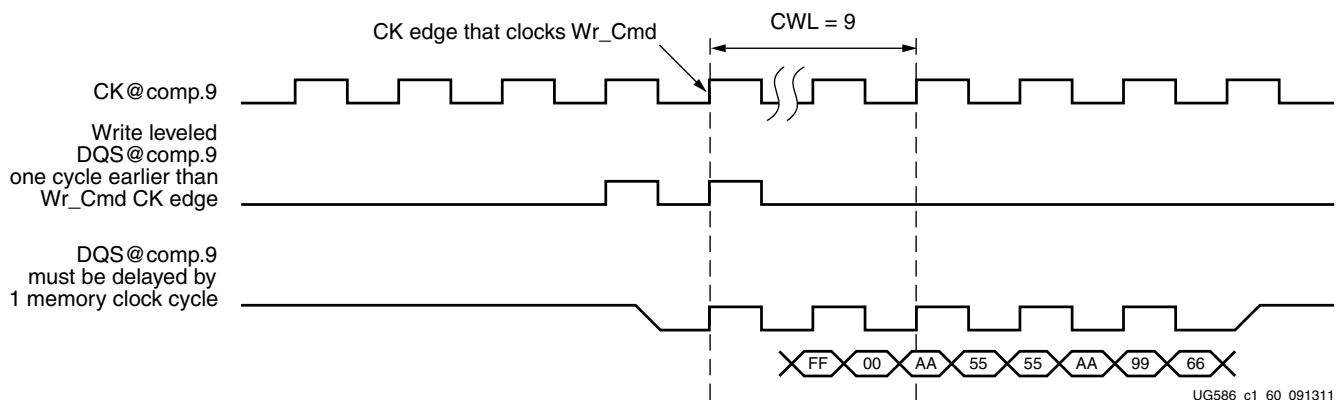


Figure 1-70: DQS Aligned to Incorrect CK Edge – Delay DQS/DQ by One Memory Clock Cycle

Read Leveling

Read leveling stage 1 is required to center align the read strobe in the read valid data window for the first stage of capture. In strobe-based memory interfaces like DDR2 or DDR3 SDRAM, the second stage transfer requires an additional pulse which in 7 series FPGAs is provided by the PHASER_IN block. This stage of calibration uses the PHASER_IN stage 2 fine delay line to center the capture clock in the valid DQ window. The capture clock is the free-running `FREQ_REF` clock that is phase aligned to read DQS in the PHASER_IN phase locked stage.

A PHASER_IN provides two clock outputs namely ICLK and ICLKDIV. ICLK is the stage 2 delay output and ICLKDIV is the rising edge aligned divided by 2 version of ICLK.

The ICLK and ICLKDIV outputs of one PHASER_IN block are used to clock all the DQ ISERDES associated with one byte. The ICLKDIV is also the write clock for the read DQ IN_FIFOs. One PHASER_IN block is associated with a group of 12 I/Os. Each I/O bank in the 7 series FPGA has four PHASER_IN blocks, and hence four bytes for DDR2 or DDR3 SDRAM can be placed in a bank.

Implementation Details

This stage of read leveling is performed one byte at a time where each DQS is center aligned to its valid byte window. At the start of this stage, a write command is issued to a specified DDR2 or DDR3 SDRAM address location with a predefined data pattern. This write command is followed by back-to-back read commands to continuously read data back from the same address location that was written to.

The algorithm first increments the IDELAY taps for all DQ bits in a byte simultaneously until an edge is detected. At the end of the IDELAY increments, DQS is at or before the left edge of the window.

The calibration logic reads data out of the IN_FIFO and records it for comparison. The data pattern sequence is important for this stage of calibration. No assumption is made about the initial relationship between DQS and the data window at tap 0 of the fine delay line. The algorithm then delays DQS using the PHASER_IN fine delay line until a DQ window edge is detected.

An averaging algorithm is used for data window detection where data is read back over multiple cycles at the same tap value. The number of sampling cycles is set to 214. In addition to averaging, there is also a counter to track whether DQS is positioned in the unstable jitter region. A counter value of 3 means that the sampled data value was constant for three consecutive tap increments and DQS is considered to be in a stable region. The counter value is reset to 0 whenever a value different from the previous value is detected.

The next step is to increment the fine phase shift delay line of the DQS PHASER_IN block one tap at a time until a data mismatch is detected. The data read out of IN_FIFO after the required settling time is then compared with the recorded data at the previous tap value. This is repeated until a data mismatch is found, indicating the detection of a valid data window edge. A valid window is the number of PHASER_IN fine phase shift taps for which the stable counter value is a constant 3. This algorithm mitigates the risk of detecting a FALSE valid edge in the unstable jitter regions.

There are three possible scenarios for the initial DQS position with respect to the data window. The first valid rising edge of DQS could either be in the previous data window, in the left noise region of the current data window, or just past the left noise region inside the current data window. The PHASER_IN fine delay line has 64 taps (A bit time worth of taps. Tap resolution therefore changes with frequency.).

The first two scenarios would result in the left data window edge being detected with a tap count less than 1/2 the bit time and the second window edge might or might not be detected, depending on the frequency and the width of the noise region. The third scenario results in the right window edge being detected with a tap count close to a bit time. When both edges are detected, the final DQS tap value is computed as:

$$\text{first_edge_taps} + (\text{second_edge_taps} - \text{first_edge_taps})/2.$$

When only one edge is detected and the tap value of the detected edge is less than 1/2 of a bit time, the final DQS tap value is computed as:

$$(\text{first_edge_taps} + (63 - \text{first_edge_taps})/2)$$

When only one edge is detected and the tap value of the detected edge is almost a bit time, the final DQS tap value is computed as:

$$(63 - (63 - \text{first_edge_taps})/2)$$

Figure 1-71 shows the timing diagram for DQS center alignment in the data valid window.

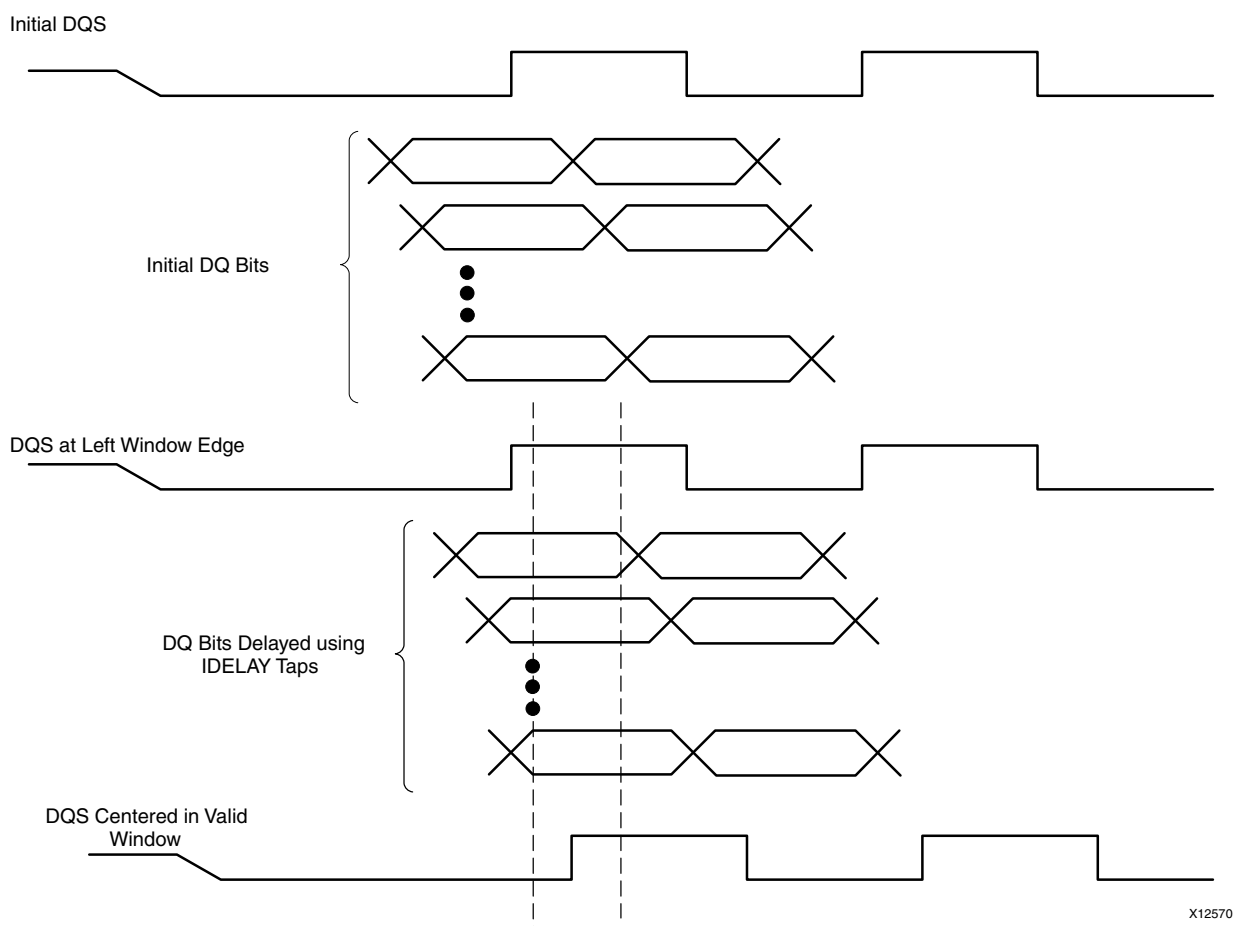


Figure 1-71: **Read Leveling Stage 1 Timing Diagram**

X12570

PRBS Read Leveling

This stage of read calibration follows the Read Leveling calibration stage. The DQS PHASER_IN fine tap setting determined during the Read Leveling calibration stage is used as the starting point for this stage of calibration. The PRBS read leveling stage does not change the DQ IDELAY tap settings determined during the Read Leveling calibration stage.

Complex pattern pre-loaded in a block RAM is written to the DDR3 SDRAM at the start of this calibration stage. This sequence is then read back non-continuously to determine the read data valid window. For each phaser in tap, read back happens multiple times determined by internal sample count setting. The algorithm starts at the DQS PHASER_IN fine tap setting determined during the Read Leveling calibration stage (initial tap value) and decrements one tap at a time until a data mismatch is found when comparing read data with the expected data. Per-bit deskew scheme using FINEDELAY is also added to increase the read valid margin. FINEDELAY is a part of IDELAY primitive. The algorithm starts edge detection at PHASER_IN tap 0. It increments until it detects the valid pattern and records the tap as left edge. The PHASER_IN taps are further increased until a data pattern mismatch is found or tap value is 63 and this tap is recorded as right edge. The algorithm then computes the center of the read data valid window based on the detected edges.

Dynamic Calibration and Periodic Read Behavior

The PHASER_IN performs two dynamic adjustments during reads. The first is within the PHASER_IN DLL which needs to see DQS edges to keep the free-running frequency reference clock phase align locked to the associated read DQS. This dynamic adjustment only looks at the DQS edges and makes adjustments as required. The internal clock is used at the end of the burst when there are no more DQS edges, but clocks are needed to get the final data through the ISERDES.

The second dynamic adjustment is performed within the PHASER_IN to fine tune the position of the DQS preamble for the subsequent read. This dynamic adjustment only looks for the DQS preamble. It is needed to account for drift in the system which can move the DQS with respect to the internal clock.

Both of these PHASER_IN dynamic adjustments require periodic reads to ensure the PHASER_IN is continually adjusted and ready for reads. Because of this, the MIG 7 series DDR2/DDR3 controller sends periodic reads every 1 μ s when the bus is idle or performing writes. The PHASER_IN only requires read DQS. Therefore, if reads are being performed as requested from the user interface, the controller does not send the periodic reads.

When the controller is writing and the 1 μ s periodic reads are due, the reads are sent to the address of the next read/write in the queue. When the controller is idle and no reads or writes are requested, the periodic reads use the last address accessed. If this address has been closed, an activate is required. Two back-to-back BL8 reads are required for the dynamic alignment.

All of the dynamic adjustment is hard logic. However, the periodic reads sent to look at DQS is soft logic controlled by the MIG 7 series DDR2/DDR3 controller.



IMPORTANT: *Customers using the PHY only design must include the periodic read logic within the custom controller.*

If the periodic reads are not included, two things can occur that might cause issues:

1. The free running PHASER_IN ICLK drifts away from DQS. This exposes the memory system to issues when ICLK switches.
2. Read latency adjustments are not done within the phaser. This causes issues with the switching logic in the PHASER_IN.

The periodic read was added in MIG core v1.5, released with ISE Design Suite 14.1. Further characterization work proved the 1 μ s periodic read was required to keep the PHASER_IN aligned and ready for subsequent reads.



IMPORTANT: *The frequency of the periodic reads must be 1 μ s and cannot be changed.*

Temperature Monitor

The temperature monitor helps maintain DQS center alignment in the data valid window by compensating for temperature drift.

The temperature monitor is comprised of two modules. The first module, `tempmon`, instantiates the XADC module and periodically samples it for the current device temperature. The `tempmon` configures the XADC for continuous looping on the XADC calibration and temperature measurement, both with averaging. This generates an updated temperature measurement every 116 μ s. The `tempmon` module resides within the clocking infrastructure. The module also synchronizes the parallel temperature bus to the Memory Controller FPGA logic clock.

The XADC instantiation can be bypassed if the user design already instantiates the XADC. This selection is configured by a selection in the MIG GUI. In this case, you must drive and periodically update the `device_temp_i[11:0]`. It should be updated at a minimum of once every 116 μ s and there is no limit on the maximum update rate. Although updates are more frequent, the REF rate is not affected. The `device_temp_i[11:0]` value is the raw value as read from the DRP port defined by the XADC specification *XADC Wizard v2.4 LogiCORE IP Product Guide* (PG091) [Ref 11], without any conversion. XADC averaging must be turned on for the temperature channel. Averaging can be turned on only for the temperature if averaging is not desired for the other channels. Averaging should be set to 16, but 64 or 256 is acceptable if already set for other XADC channels.

The second module, `ddr_phy_tempmn`, resides in the top-level calibration module, `calib_top`. It receives the `device_temp[11:0]` from the `tempmn` module and an enable signal from the Memory Controller. The enable signal is set by the Memory Controller whenever a REF or ZQ command has been sent to the DRAM and all pending transactions have cleared the DQ bus. The temperature value is sampled on the clock when the enable transitions from Low to High.

User designs utilizing the PHY-only design must drive the `tempmn_sample_en` input every time a ZQ or REF is sent. It should be brought High after all pending reads have been received through the ISERDES and held until the REF or ZQ has completed and an ACT is ready to be sent. After calibration has completed and the enable signal is set, the `ddr_phy_tempmn` samples the `device_temp[11:0]` bus and establishes a baseline temperature.

After each subsequent enable, the current temperature is compared to the baseline temperature. If the temperature change is sufficient, the module adjusts the PHASER_IN fine delay to mitigate temperature drift. This process continues throughout normal operation.

Memory Controller to PHY Interface

The calibration logic module constructs the PHY control word before sending it to the PHY control block during calibration. After calibration is complete, the `init_calib_complete` signal is asserted and sent to the Memory Controller to indicate that normal operation can begin. To avoid latency increase, the Memory Controller must send commands in the format required by the dedicated PHY block. As a result, the address, command, control, and data buses are multiplexed before being sent to the PHY control block. These buses are driven by the calibration module during the memory initialization and calibration stages and by the Memory Controller during normal operation. [Table 1-61](#) describes the Memory Controller to PHY interface signals. These signals are synchronous to the FPGA logic clock.

Table 1-61: Memory Controller to Calibration Logic Interface Signals

Signal Name	Width	I/O To/From PHY	Type	Description
<code>rst</code>	1	Input	–	The <code>rstdiv0</code> output from the infrastructure module synchronized to the <code>PHY_Clk</code> domain.
<code>PHY_Clk</code>	1	Input	–	This clock signal is 1/4 the frequency of the DDR2 or DDR3 clock.
<code>mem_refclk</code>	1	Input	–	This is the DDR2 or DDR3 frequency clock.
<code>freq_refclk</code>	1	Input	–	This signal is the same frequency as <code>mem_refclk</code> between 400 MHz to 933 MHz, and 1/2 or 1/4 of <code>mem_refclk</code> for frequencies below 400 MHz.

Table 1-61: Memory Controller to Calibration Logic Interface Signals (Cont'd)

Signal Name	Width	I/O To/From PHY	Type	Description
sync_pulse	1	Input	–	This is the synchronization pulse output by the PLL.
pll_lock	1	Input	–	The LOCKED output of the PLL instantiated in the infrastructure module.
mmcm_ps_clk	1	Input	–	MMCM phase shifted clock used in OCLKDELAYED calibration stage to optimize calibration center point.
poc_sample_pd	1	Input	–	Input to phase detector in OCLKDELAYED calibration logic used for optimization of center point.
iddr_rst	1	Input	Active-High	Reset input to phase detector in OCLKDELAYED calibration logic.
psen	1	Output	Active-High	When psen is asserted for one mmcm_ps_clk clock period, a phase shift increment or decrement is initiated.
psincdec	1	Output	Active-High	A High on psincdec initiates a phase increment by 1/56th of the VCO period. A Low on psincdec initiates a phase decrement by 1/56th of the VCO period.
psdone	1	Input	Active-High	The MMCM asserted this signal for one mmcm_ps_clk period when phase shift is completed.
mc_ras_n	[nCK_PER_CLK – 1:0]	Input	Active-Low	mc_XXX_n[0] is the first cmd in the sequence of four.
mc_cas_n	[nCK_PER_CLK – 1:0]	Input	Active-Low	mc_XXX_n[0] is the first cmd in the sequence of four.
mc_we_n	[nCK_PER_CLK – 1:0]	Input	Active-Low	mc_XXX_n[0] is the first cmd in the sequence of four.
mc_address	[ROW_WIDTH × nCK_PER_CLK – 1:0]	Input	–	mc_address[ROW_WIDTH – 1:0] is the first command address in the sequence of four.
mc_bank	[BANK_WIDTH × nCK_PER_CLK – 1:0]	Input	–	mc_bank[BANK_WIDTH – 1:0] is the first command bank address in the sequence of four.
mc_cs_n	[CS_WIDTH × nCS_PER_RANK × nCK_PER_CLK – 1:0]	Input	–	mc_cs_n [CS_WIDTH – 1:0] is the cs_n associated with the first command in the sequence.
mc_odt	[1:0]	Input	–	mc_odt [1:0] is the ODT driven by the controller based on the RTT_NOM and RTT_WR values. This signal is valid when the CKE_ODT_AUX parameter is set to FALSE.

Table 1-61: Memory Controller to Calibration Logic Interface Signals (Cont'd)

Signal Name	Width	I/O To/From PHY	Type	Description
mc_cke	[nCK_PER_CLK – 1:0]	Input	–	mc_cke [nCK_PER_CLK – 1:0] is the CKE associated with the DRAM interface. This signal is valid when the CKE_ODT_AUX parameter is set to FALSE.
mc_reset_n	1	Input	Active-Low	mc_reset_n is input directly to the IOLOGIC without an OUT_FIFO.
mc_wrdata	[2 × nCK_PER_CLK × DQ_WIDTH – 1:0]	Input	–	This is the write data to the dedicated PHY. It is 8x the memory DQ width for a 4:1 clock ratio.
mc_wrdata_mask	[2 × nCK_PER_CLK × (DQ_WIDTH/8) – 1:0]	Input	–	This is the write data mask to the dedicated PHY. It is 8x the memory DM width for a 4:1 clock ratio.
mc_wrdata_en	1	Input	Active-High	This signal is the WREN input to the DQ OUT_FIFO.
mc_cmd_wren	1	Input	Active-High	This signal is the write enable input of the address/command OUT_FIFOs.
mc_ctl_wren	1	Input	Active-High	This signal is the write enable input to the PHY control word FIFO in the dedicated PHY block.
mc_cmd	[2:0]	Input	–	This signal is used for PHY_Ctl_Wd configuration: 0x04: Non-data command (No column command in the sequence of commands) 0x01: Write command 0x03: Read command
mc_data_offset	[5:0]	Input	–	This signal is used for PHY_Ctl_Wd configuration: 0x00: Non-data command (No column command in the sequence of commands) CWL + COL cmd position + 2 (for nCK_PER_CLK = 4) or CWL + COL cmd position – 2 (for nCK_PER_CLK = 2): Write command calib_rd_data_offset+COL cmd position – 1: Read command
mc_aux_out0	[3:0]	Input	Active-High	This is the auxiliary outputs field in the PHY control word used to control ODT and CKE assertion.
mc_aux_out1	[3:0]	Input	Active-High	This is the auxiliary outputs field in the PHY control word used to control ODT and CKE assertion for four-rank interfaces.
mc_rank_cnt	[1:0]	Input	–	This is the rank accessed by the command sequence in the PHY control word.

Table 1-61: Memory Controller to Calibration Logic Interface Signals (Cont'd)

Signal Name	Width	I/O To/From PHY	Type	Description
phy_mc_ctl_full	1	Output	Active-High	Bitwise AND of all the Almost FULL flags of all the PHY Control FIFOs. The Almost FULL flag is asserted when the FIFO is one entry away from being FULL.
phy_mc_cmd_full	1	Output	Active-High	Bitwise OR of all the Almost FULL flags of all the command OUT_FIFOs. The Almost FULL flag is asserted when the FIFO is one entry away from being FULL.
phy_mc_data_full	1	Output	Active-High	Bitwise OR of all the Almost FULL flags of all the write data OUT_FIFOs. The Almost FULL flag is asserted when the FIFO is one entry away from being FULL.
phy_rd_data	$[2 \times \text{nCK_PER_CLK} \times \text{DQ_WIDTH} - 1:0]$	Output	–	This is the read data from the dedicated PHY. It is 8x the memory DQ width for a 4:1 clock ratio.
phy_rddata_valid	1	Output	Active-High	This signal is asserted when valid read data is available.
calib_rd_data_offset	$[6 \times \text{RANKS} - 1:0]$	Output	–	This signal is the calibrated read data offset value with respect to command 0 in the sequence of four commands.
init_calib_complete	1	Output	Active-High	This signal is asserted after memory initialization and calibration are completed.

Notes:

1. The parameter nCK_PER_CLK defines the number of DDR2 or DDR3 SDRAM clock cycles per PHY_Clk cycle.
2. The parameter ROW_WIDTH is the number of DDR2 or DDR3 SDRAM ranks.
3. The parameter BANK_WIDTH is the number of DDR2 or DDR3 SDRAM banks.
4. The parameter CS_WIDTH is the number of DDR2 or DDR3 SDRAM cs_n signals.
5. The parameter CKE_WIDTH is the number of DDR2 or DDR3 SDRAM CKE signals.
6. The parameter DQ_WIDTH is the width of the DDR2 or DDR3 SDRAM DQ bus.

Designing with the Core

The core is bundled with an example design that can be simulated. The example design can be used as a starting point for the user design or as a reference for debugging purposes.

Only supported modifications should be made to the configuration of the core. See [Customizing the Core, page 180](#) for supported configuration parameters.

Interfacing to the Core

The Memory Controller can be connected using either the AXI4 slave interface, the UI, or the native interface. The AXI4 slave interface provides an AXI4 memory-mapped compliant slave ideal for connecting to processor subsystems. The AXI4 slave interface converts its transactions to pass them over the UI. The UI resembles a simple FIFO interface and always returns the data in order. The native interface offers higher performance in some situations, but is more challenging to use.

The native interface contains no buffers and returns data as soon as possible, but the return data might be out of order. The application must reorder the received data internally if the native interface is used and reordering is enabled. The following sections describe timing protocols of each interface and how they should be controlled.

Note: For a multi-ported memory interface or an interface that is sending requests faster than the MIG can consume, putting a packet (store and forward) FIFO on the input side of the user logic side of the crossbar is necessary. This allows it to buffer the requests and grants bursts to come out as soon as it is ready.

AXI4 Slave Interface

The AXI4 slave interface follows the AXI4 memory-mapped slave protocol specification as described in the ARM AMBA open specifications. See this specification [\[Ref 4\]](#) for the signaling details of the AXI4 slave interface.

AXI Addressing

The AXI address from the AXI master is a TRUE byte address. The AXI shim converts the address from the AXI master to the memory based on AXI SIZE and memory data width. The LSBs of the AXI byte address are masked to 0, depending on the data width of the memory array. If the memory array is 64 bits (8 bytes) wide, AXI address[2:0] are ignored and treated as 0. If the memory array is 16 bits (2 bytes) wide, AXI address[0] is ignored and treated as 0.

DDR3 DRAM is accessed in blocks of eight DRAM words for a burst length of 8. The UI data port is as wide as eight DRAM words for 4:1 PHY to Memory Controller (MC) clock ratio mode and four DRAM words for 2:1 PHY to MC clock ratio.

Table 1-62: AXI Byte Address Masking

PHY to MC Clock Ratio	UI Data Width	Memory Interface Data Width	AXI Byte Address [7:0] (LSBs) Masking
4:1	64	8	A[7:0]
	128	16	A[7:1], 1'b0
	256	32	A[7:2], 2'b00
	512	64	A[7:3], 3'b000

Table 1-62: AXI Byte Address Masking (Cont'd)

PHY to MC Clock Ratio	UI Data Width	Memory Interface Data Width	AXI Byte Address [7:0] (LSBs) Masking
2:1	32	8	A[7:0]
	64	16	A[7:1], 1'b0
	128	32	A[7:2], 2'b00
	256	64	A[7:3], 3'b000

Upsizing

When the data width on the User Interface side is wider than that on the AXI Interface side, upsizing is performed in the AXI Shim interface. Data packing is performed for INCR and WRAP bursts.


In the resulting transaction issued to the user interface side, the number of data beats is reduced accordingly:

- For writes, data merging occurs.
- For reads, data serialization occurs.


User Interface

The mapping between the User Interface address bus and the physical memory row, bank and column can be configured. Depending on how the application data is organized, addressing scheme Bank- Row-Column or Row-Bank-Column can be chosen to optimize controller efficiency. These addressing schemes are shown in [Figure 1-72](#) and [Figure 1-73](#).

User Address

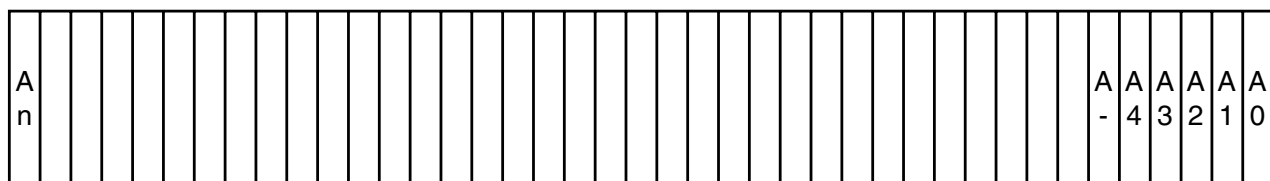


Memory

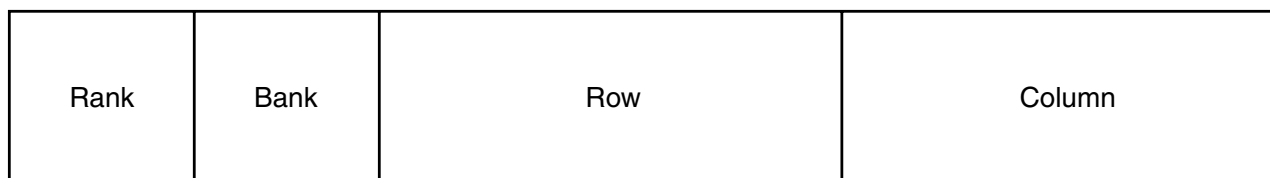


UG586 c1 61 091410

Figure 1-72: Memory Address Mapping for Bank-Row-Column Mode in UI Module

User Address

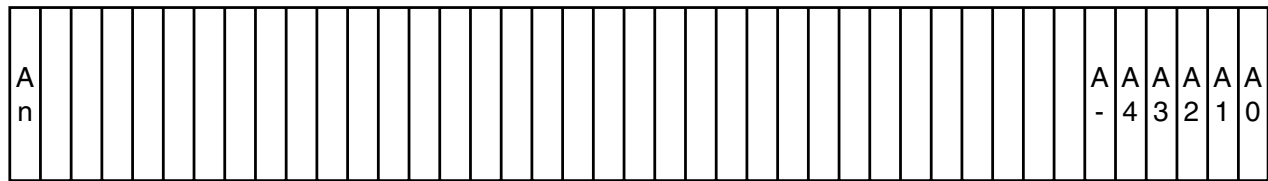

Memory

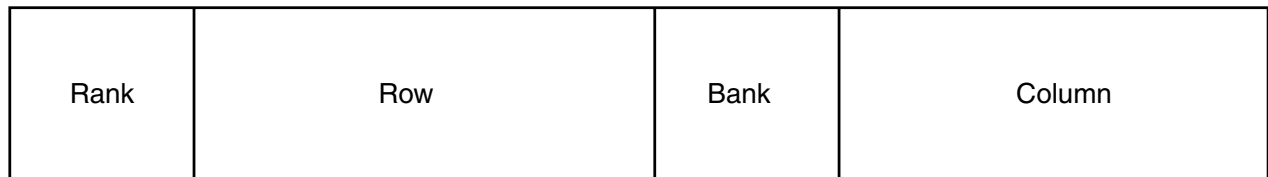

UG586_c1_61a_012411

Figure 1-73: Memory Address Mapping for Row-Bank-Column Mode in UI Module

Figure 1-72 and Figure 1-73 show that the address map is controlled by the string parameter MEM_ADDR_ORDER. This parameter can take the following values:

- **BANK_ROW_COLUMN** – Address map is as shown in Figure 1-72.
- **ROW_BANK_COLUMN** – Address map is as shown in Figure 1-73.
- **TG_TEST** – Address map is used for testing purpose only. It enables the address remap to test address access to different portions of the DRAM. It remaps the address as explained in the following examples. The remap is done within the UI portion of the controller.

Note: The row width, column width, and bank width value settings are assumed for the following examples:

- **Row Width** – 15
- **Bank Width** – 3
- **Column Width** – 10

Example (1) – When the selected option in the MIG GUI is BANK_ROW_COLUMN and the address to the controller is mapped accordingly.

Original Mapping of the Address Bits																													
BANK Address Bits			ROW Address Bits															COLUMN Address Bits											
27	26	25	24	23	22	21	20	19	18	17	16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0		
B2	B1	B0	R14	R13	R12	R11	R10	R9	R8	R7	R6	R5	R4	R3	R2	R1	R0	C9	C8	C7	C6	C5	C4	C3	C2	C1	C0		
Remapped Address with TG_TEST																													


Original Mapping of the Address Bits																															
BANK Address Bits			ROW Address Bits															COLUMN Address Bits													
27	26	25	24	23	22	21	20	19	18	17	16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0				
R0	C9	C8	R4	R3	B2	B1	B0	R14	R13	R12	R11	R10	R9	R8	C7	C6	C5	R2	R1	R7	R6	R5	C4	C3	C2	C1	C0				

Example (2) – When the selected option in the MIG GUI is ROW_BANK_COLUMN and the address to the controller is mapped accordingly.

Original Mapping of the Address Bits																															
ROW Address Bits															BANK Address Bits			COLUMN Address Bits													
27	26	25	24	23	22	21	20	19	18	17	16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0				
R14	R13	R12	R11	R10	R9	R8	R7	R6	R5	R4	R3	R2	R1	R0	B2	B1	B0	C9	C8	C7	C6	C5	C4	C3	C2	C1	C0				
Remapped Address with TG_TEST																															
ROW Address Bits															BANK Address Bits			COLUMN Address Bits													
27	26	25	24	23	22	21	20	19	18	17	16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0				
R0	C9	C8	R4	R3	B2	B1	B0	R14	R13	R12	R11	R10	R9	R8	C7	C6	C5	R2	R1	R7	R6	R5	C4	C3	C2	C1	C0				

Command Path

When the user logic `app_en` signal is asserted and the `app_rdy` signal is asserted from the UI, a command is accepted and written to the FIFO by the UI. The command is ignored by the UI whenever `app_rdy` is deasserted. The user logic needs to hold `app_en` High along with the valid command and address values until `app_rdy` is asserted as shown in Figure 1-74.

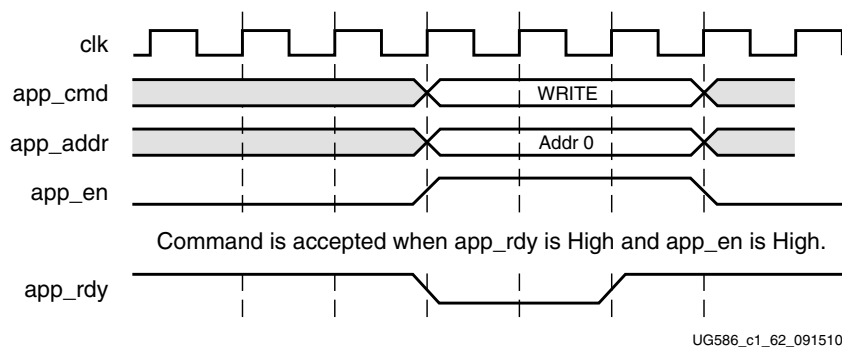

UG586_c1_62_091510

Figure 1-74: UI Command Timing Diagram with `app_rdy` Asserted

A non back-to-back write command can be issued as shown in Figure 1-75. This figure depicts three scenarios for the `app_wdf_data`, `app_wdf_wren`, and `app_wdf_end` signals, as follows:

1. Write data is presented along with the corresponding write command (second half of BL8).
2. Write data is presented before the corresponding write command.
3. Write data is presented after the corresponding write command, but should not exceed the limitation of two clock cycles.

For write data that is output after the write command has been registered, as shown in Note 3, the maximum delay is two clock cycles.

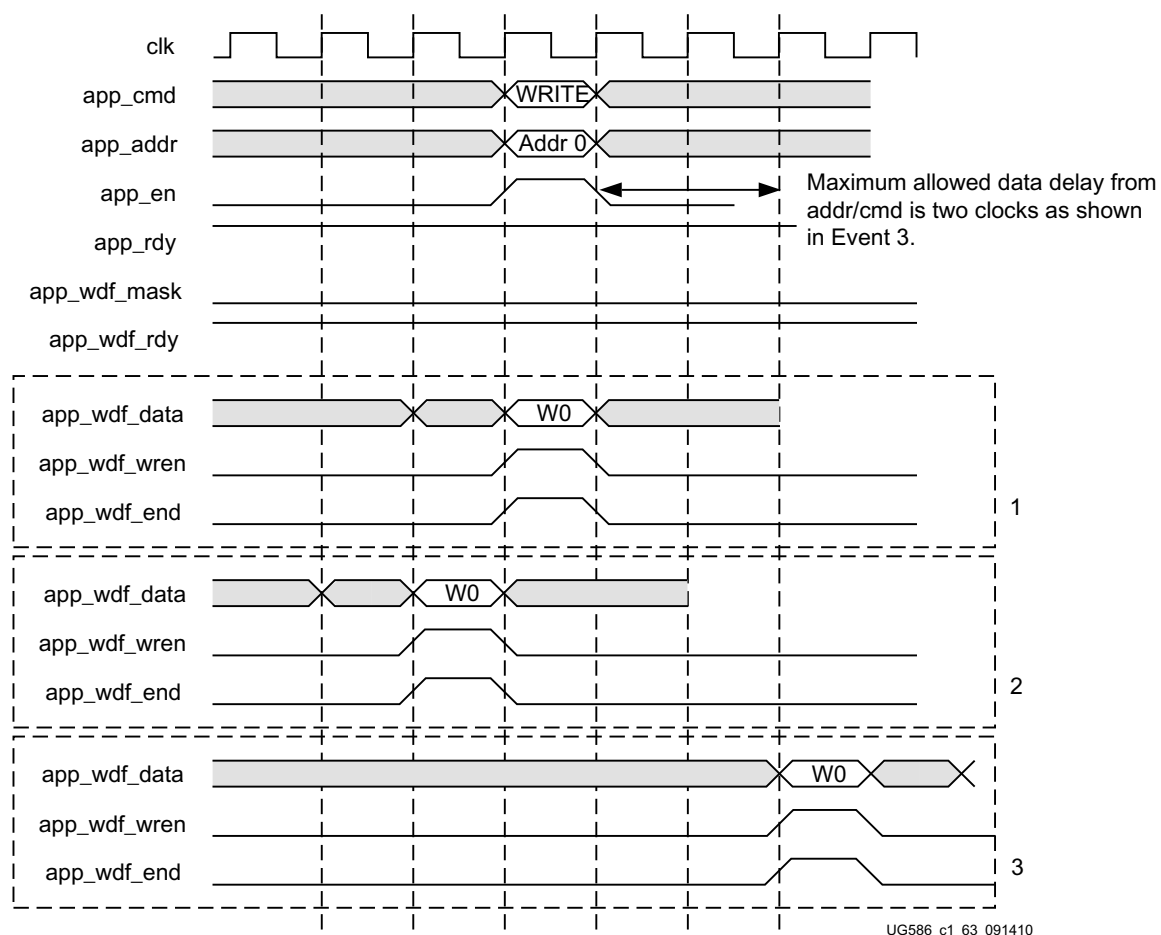


Figure 1-75: 4:1 Mode UI Interface Write Timing Diagram (Memory Burst Type = BL8)

Write Path

The write data is registered in the write FIFO when `app_wdf_wren` is asserted and `app_wdf_rdy` is High (Figure 1-76). If `app_wdf_rdy` is deasserted, the user logic needs to hold `app_wdf_wren` and `app_wdf_end` High along with the valid `app_wdf_data` value until `app_wdf_rdy` is asserted. `app_wdf_data` data can be pushed even before `app_cmd` "write command" is asserted. The only condition is that for every `app_cmd` "write command," the associated `app_wdf_data` "write data" must be present. The `app_wdf_mask` signal can be used to mask out the bytes to write to external memory.

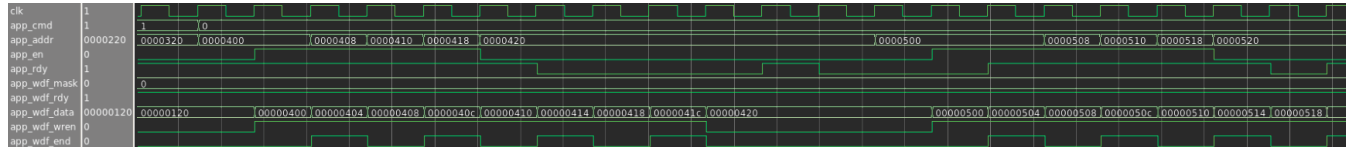


Figure 1-76: 2:1 Mode UI Interface Back-to-Back Write Commands Timing Diagram (Memory Burst Type = BL8)

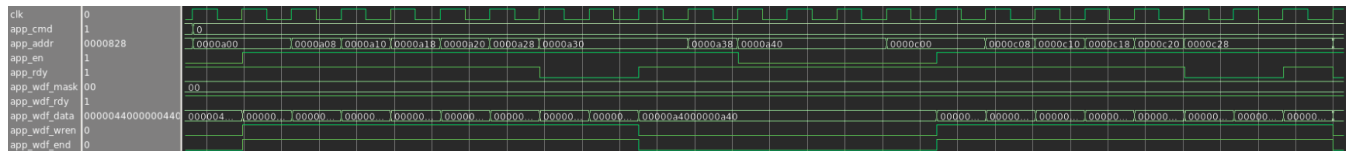


Figure 1-77: 4:1 Mode UI Interface Back-to-Back Write Commands Timing Diagram (Memory Burst Type = BL8)

As shown in Figure 1-75, page 167, the maximum delay for a single write between the write data and the associated write command is two clock cycles.

The `app_wdf_end` signal must be used to indicate the end of a memory write burst. For memory burst types of eight in 2:1 mode, the `app_wdf_end` signal must be asserted on the second write data word.

The map of the application interface data to the DRAM output data can be explained with an example.

For a 4:1 Memory Controller to DRAM clock ratio with an 8-bit memory, at the application interface, if the 64-bit data driven is 0000_0806_0000_0805 (Hex), the data at the DRAM interface is as shown in Figure 1-78. This is for a Burst Length 8 (BL8) transaction.

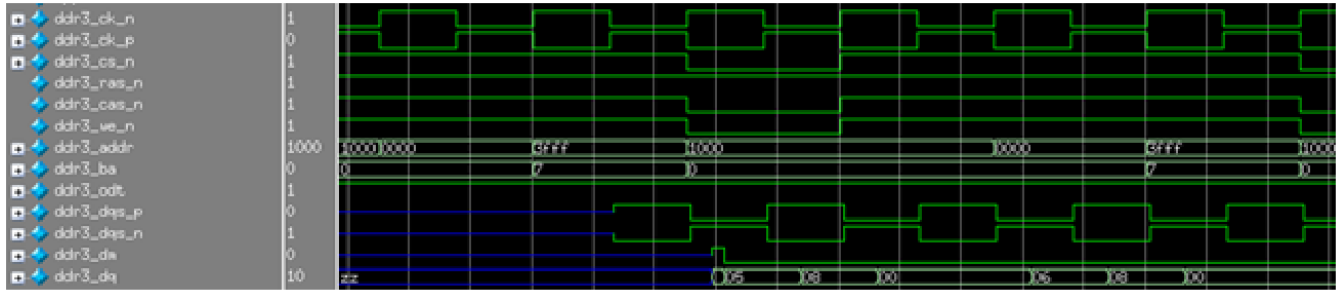


Figure 1-78: Data at the DRAM Interface for 4:1 Mode

The data values at different clock edges are as shown in Table 1-63.

Table 1-63: Data Values at Different Clock Edges

Rise0	Fall0	Rise1	Fall1	Rise2	Fall2	Rise3	Fall3
05	08	00	00	06	08	00	00

For a 2:1 Memory Controller to DRAM clock ratio, the application data width is 32 bits. Hence for BL8 transactions, the data at the application interface must be provided in two clock cycles. The `app_wdf_end` signal is asserted for the second data as shown in Figure 1-79. In this case, the application data provided in the first cycle is 0000_0405 (Hex), and the data provided in the last cycle is 0000_080A (Hex). This is for a BL8 transaction.



Figure 1-79: Data at the Application Interface for 2:1 Mode

Figure 1-80 shows the corresponding data at the DRAM interface.

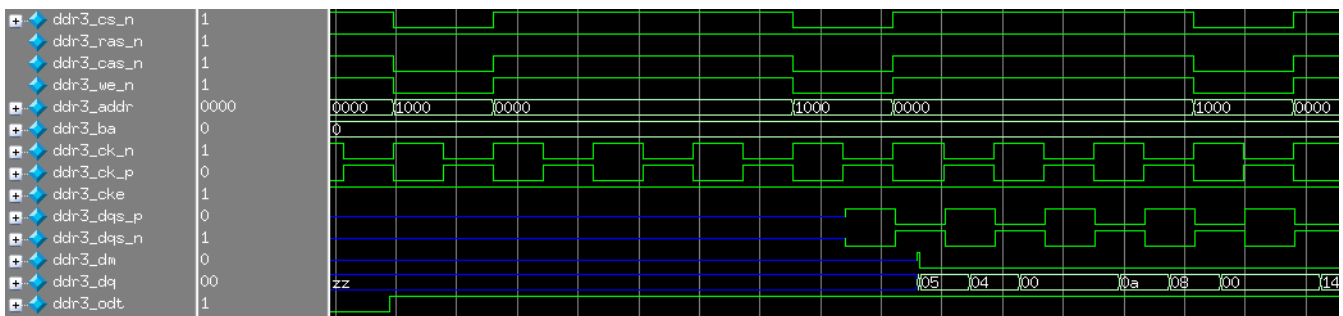


Figure 1-80: Data at the DRAM Interface for 2:1 Mode

Read Path

The read data is returned by the UI in the requested order and is valid when `app_rd_data_valid` is asserted (Figure 1-81 and Figure 1-82). The `app_rd_data_end` signal indicates the end of each read command burst and is not needed in user logic.

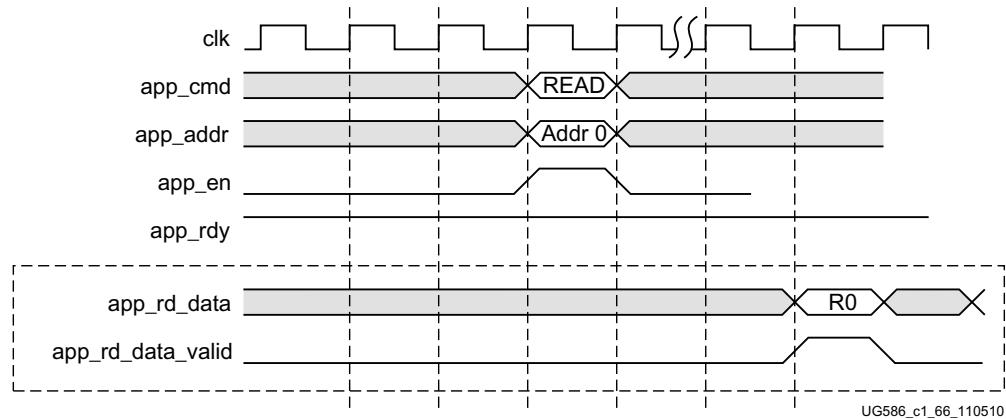


Figure 1-81: 4:1 Mode UI Interface Read Timing Diagram (Memory Burst Type = BL8)

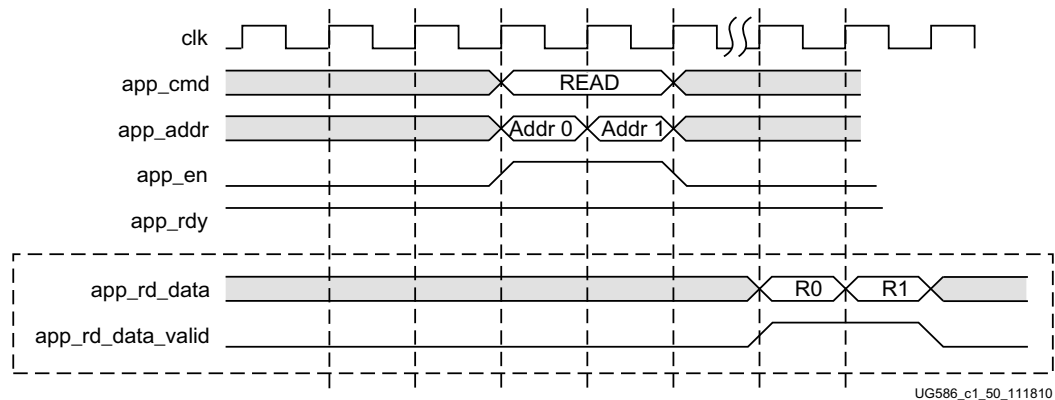


Figure 1-82: 2:1 Mode UI Interface Read Timing Diagram (Memory Burst Type = BL4 or BL8)

In Figure 1-82, the read data returned is always in the same order as the requests made on the address/control bus.

User Refresh

For user-controlled refresh, the Memory Controller managed maintenance should be disabled by setting the `USER_REFRESH` parameter to "ON."

To request a REF command, `app_ref_3req` is strobed for one cycle. When the Memory Controller sends the command to the PHY, it strobes `app_ref_ack` for one cycle, after which another request can be sent. Figure 1-83 illustrates the interface.

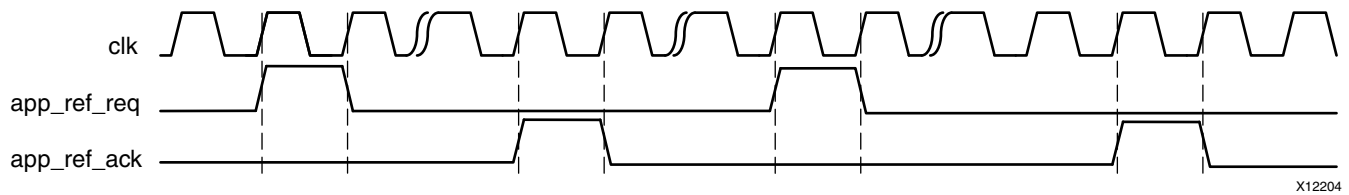


Figure 1-83: User-Refresh Interface

A user-refresh operation can be performed any time provided the handshake defined above is followed. There are no additional interfacing requirements with respect to other commands. However, pending requests affect when the operation goes out. The Memory Controller fulfills all pending data requests before issuing the refresh command. Timing parameters must be considered for each pending request when determining when to strobe `app_ref_req` to avoid a tREFI violation. To account for the worst case, subtract tRCD, CL, the data transit time, and tRP for each bank machine to ensure that all transactions can complete before tREFI expires. Equation 1-1 shows the REF request interval maximum.

$$(tREFI - (tRCD + ((CL + 4) \times tCK) + tRP) \times nBANK_MACHS) \quad \text{Equation 1-1}$$

A user REF should be issued immediately following calibration to establish a time baseline for determining when to send subsequent requests.

User ZQ

For user-controlled ZQ calibration, the Memory Controller managed maintenance should be disabled by setting the tZQI parameter to 0.

To request a ZQ command, `app_zq_req` is strobed for one cycle. When the Memory Controller sends the command to the PHY, it strobes `app_zq_ack` for one cycle, after which another request can be sent. Figure 1-84 illustrates the interface.

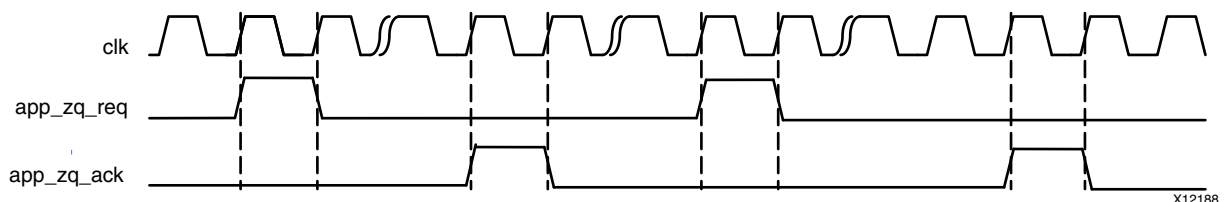


Figure 1-84: User ZQ Interface

A user ZQ operation can be performed any time provided the handshake defined above is followed. There are no additional interfacing requirements with respect to other commands. However, pending requests affect when the operation goes out. The Memory Controller fulfills all pending data requests before issuing the ZQ command. Timing parameters must be considered for each pending request when determining when to strobe `app_zq_req` to achieve the desired interval if precision timing is desired.

To account for the worst case, subtract t_{RCD} , CL , the data transit time and t_{RP} for each bank machine to ensure that all transactions can complete before the target t_{ZQI} expires.

Equation 1-2 shows the ZQ request interval maximum.

$$(t_{ZQI} - (t_{RCD} + ((CL + 4) \times t_{CK}) + t_{RP}) \times n_{BANK_MACHS}) \quad \text{Equation 1-2}$$

A user ZQ should be issued immediately following calibration to establish a time baseline for determining when to send subsequent requests.

Native Interface

The native interface protocol is shown in Figure 1-85.

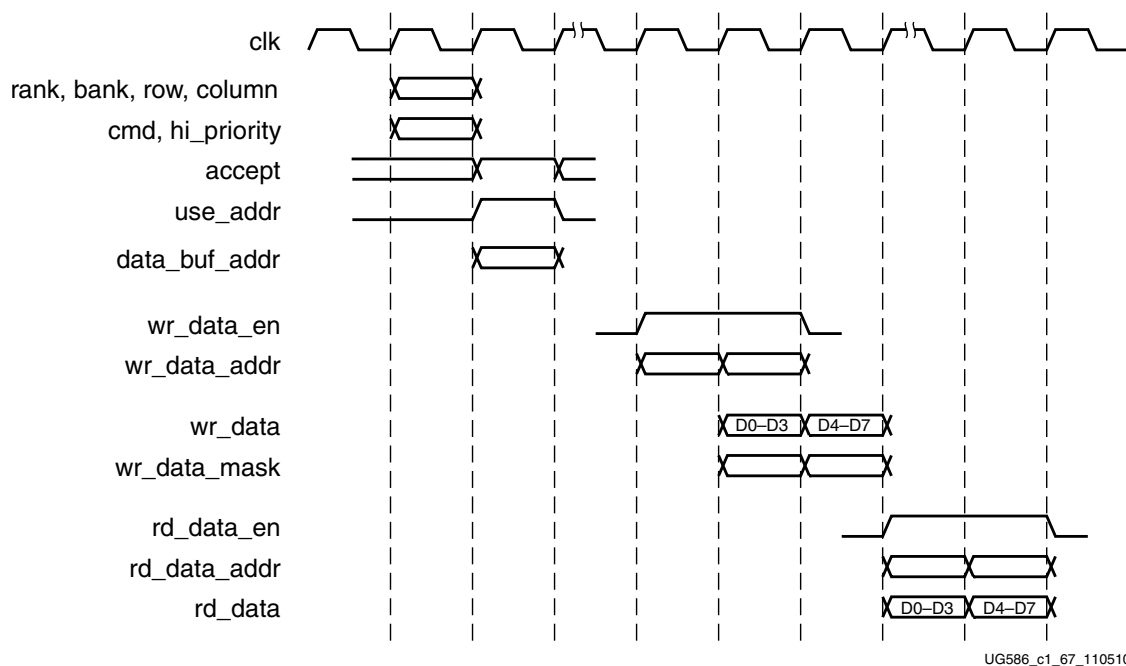


Figure 1-85: Native Interface Protocol

Requests are presented to the native interface as an address and a command. The address is composed of the bank, row, and column inputs. The command is encoded on the **cmd** input.

The address and command are presented to the native interface one state before they are validated with the **use_addr** signal. The memory interface indicates that it can accept the request by asserting the **accept** signal. Requests are confirmed as accepted when **use_addr** and **accept** are both asserted in the same clock cycle. If **use_addr** is asserted but **accept** is not, the request is not accepted and must be repeated. This behavior is shown in Figure 1-86.

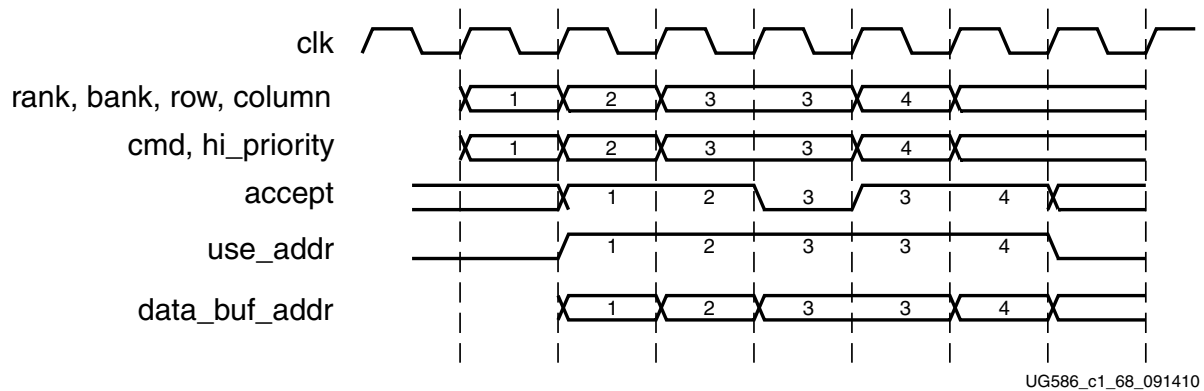


Figure 1-86: Native Interface Flow Control

In Figure 1-86, requests 1 and 2 are accepted normally. The first time request 3 is presented, **accept** is driven Low, and the request is not accepted. The user design retries request 3, which is accepted on the next attempt. Request 4 is subsequently accepted on the first attempt.

The **data_buf_addr** bus must be supplied with requests. This bus is an address pointer into a buffer that exists in the user design. It tells the core where to locate data when processing write commands and where to place data when processing read commands. When the core processes a command, the core echoes **data_buf_addr** back to the user design by **wr_data_addr** for write commands and **rd_data_addr** for read commands. This behavior is shown in Figure 1-87. Write data must be supplied in the same clock cycle that **wr_data_en** is asserted.

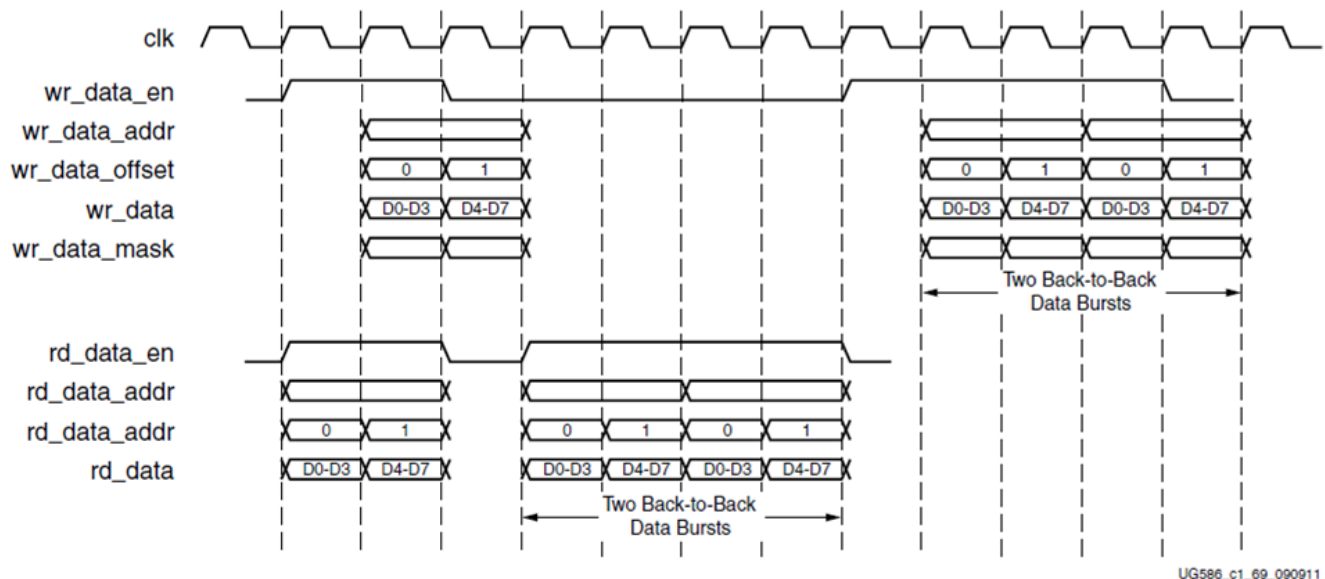


Figure 1-87: Command Processing

Transfers can be isolated with gaps of non-activity, or there can be long bursts with no gaps. The user design can identify when a request is being processed and when it finishes by

monitoring the `rd_data_en` and `wr_data_en` signals. When the `rd_data_en` signal is asserted, the Memory Controller has completed processing a read command request. Similarly, when the `wr_data_en` signal is asserted, the Memory Controller is processing a write command request.

When NORM ordering mode is enabled, the Memory Controller reorders received requests to optimize throughput between the FPGA and memory device. The data is returned to the user design in the order processed, not the order received. The user design can identify the specific request being processed by monitoring `rd_data_addr` and `wr_data_addr`. These fields correspond to the `data_buf_addr` supplied when the user design submits the request to the native interface. Both of these scenarios are depicted in [Figure 1-87](#).

The native interface is implemented such that the user design must submit one request at a time and, thus, multiple requests must be submitted in a serial fashion. Similarly, the core must execute multiple commands to the memory device one at a time. However, due to pipelining in the core implementation, read and write requests can be processed in parallel at the native interface.

User Refresh

See [User Refresh](#) for the UI. The feature is identical in the native interface.

User ZQ

See [User ZQ](#) for the UI. The feature is identical in the native interface.

Physical Layer Interface (Non-Memory Controller Design)

The MIG Physical Layer, or PHY, can be used without the Memory Controller. The PHY files are located in the `user_design/rtl/phy` directory generated by the MIG tool. Also needed are the infrastructure files located in `user_design/rtl/clocking`. The MIG Memory Controller can be used as an example of how to interface to the PHY. The `user_design/rtl/ip_top/mem_intf.v` file shows a sample instantiation of the Memory Controller and the PHY.

The PHY provides a physical interface to an external DDR2 or DDR3 SDRAM. The PHY generates signal timing and sequencing required to interface to the memory device. It contains clock-, address-, and control- generation logic, write and read datapaths, and state logic for initializing the SDRAM after power-up. In addition, the PHY contains calibration logic to perform timing training of the read and write datapaths to account for system static and dynamic delays. At the end of calibration the PHY asserts the `init_calib_complete` signal output to the Memory Controller. The assertion of this signal indicates that the Memory Controller can begin normal memory transactions.

A detailed description of the PHY architecture and the various stages of calibration are provided in [PHY, page 131](#). The signals required for the Memory Controller to interface to the PHY are listed in [Table 1-61](#).

For clocking requirements, see [Clocking Architecture, page 119](#). You can choose to use the infrastructure, `iodelay_ctrl`, and `clk_ibuf` modules provided in the clocking directory output by the MIG tool or instantiate the primitives in these modules in your system design.

In 2014.4, the OCLKDELAYED calibration stage was enhanced to optimize the calibration center point using MMCM phase shift taps. This resulted in the addition of a BUFG for the distribution of the phase shifted clock output and a few input and output ports between the PHY and the infrastructure module. These additional ports are listed in [Table 1-61](#).

The `tempmon` module in the clocking directory should be used to supply the temperature data from the XADC to the `ddr_phy_tempmon` module. For more information, see [Temperature Monitor, page 158](#).


The PHY Control FIFO, command OUT_FIFOs, and write data OUT_FIFOs are all in asynchronous operation mode. The read clock and the write clock to these FIFOs differ in frequency and phase. Therefore all three OUT_FIFO FULL flags (`phy_mc_ctl_full`, `phy_mc_cmd_full`, and `phy_mc_data_full`) described in [Table 1-61, page 159](#) must be monitored by the controller to prevent overflow of the PHY Control FIFO and the OUT_FIFOs, leading to loss of command and data.

Memory commands and data can be sent directly through the PHY interface. Different command types are sent through different slots. The CAS Write Latency (CWL) command dictates the slot number to use for write/read commands. For an odd CWL value, CAS slot numbers 1 or 3 can be used; for an even CWL value, CAS slot numbers 0 or 2 can be used for the write/read commands. In [Figure 1-88](#), the Control Offset, Low Index, Event Delay, Seq, and Act Pre fields of PHY Control words are tied Low internally inside the `phy_top` module and are not used.



IMPORTANT: *Note that the following inputs have to be tied to logic "1."*

```
assign mc_reset_n = 1'b1;
assign mc_cmd_wren = 1'b1;
assign mc_ctl_wren = 1'b1;
```

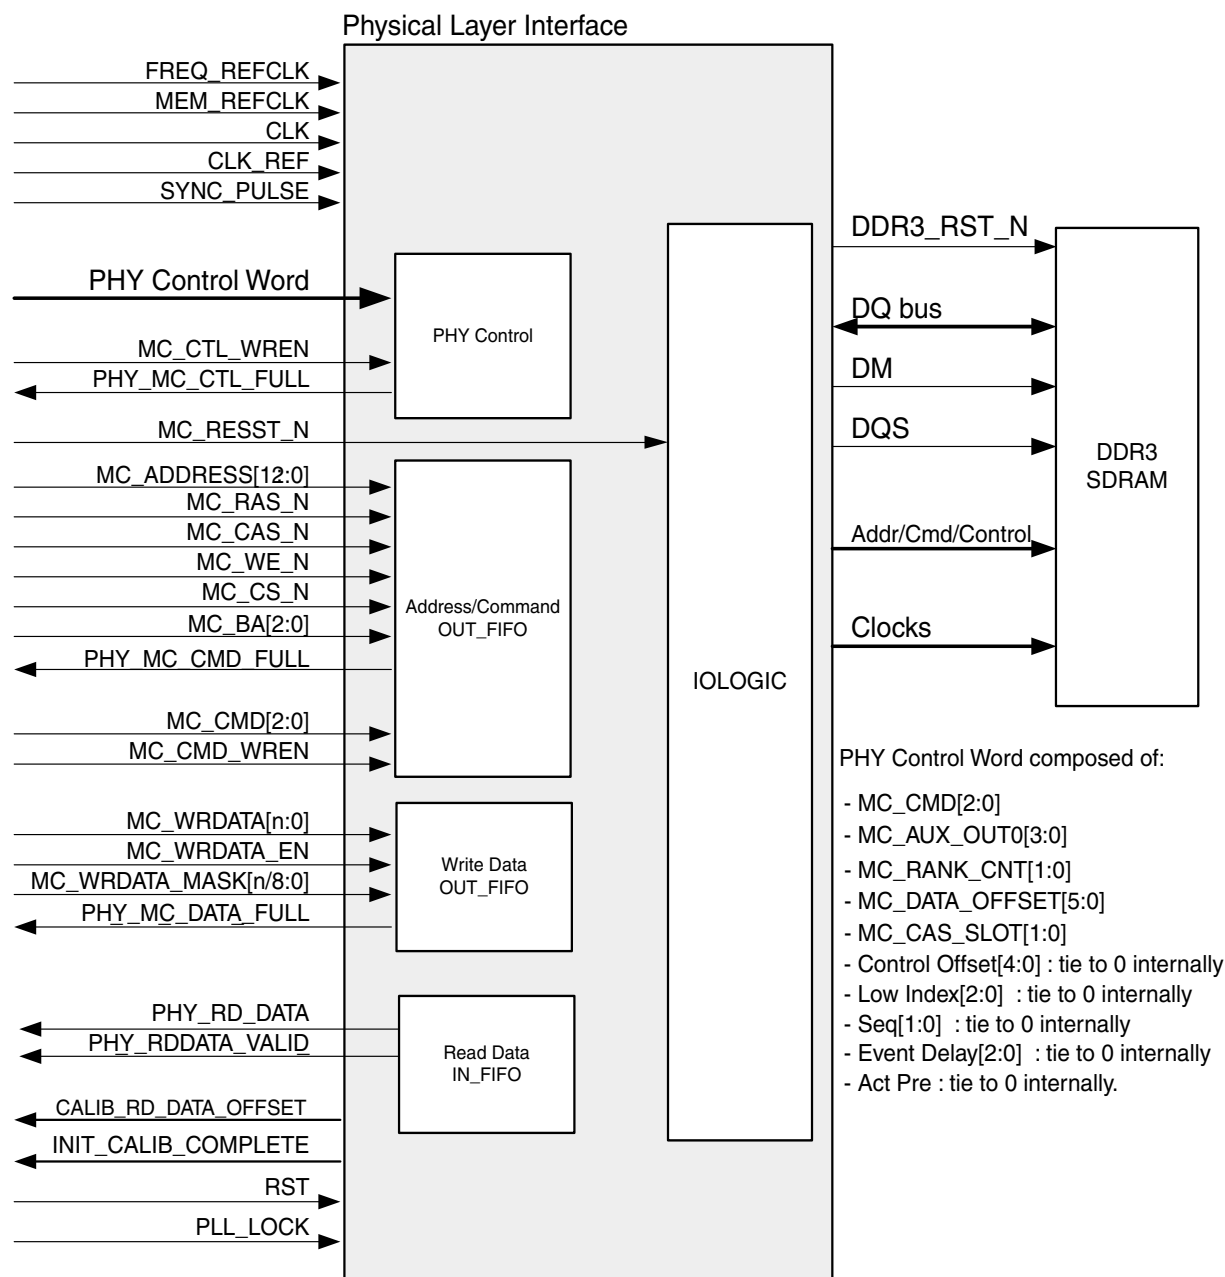

X12189

Figure 1-88: PHY Interface Example

The data offset field (MC_DATA_OFFSET) in the PHY control word for read commands is determined during PHASER_IN DQSFOUND calibration. It is provided by the PHY through the PHY interface. The Memory Controller must add the slot number being used to this read data offset value provided by the PHY. PHY control inside the PHY needs to know when to read data from IN_FIFO after a READ command has been issued to memory.

$$\text{Read data offset} = \text{Calibrated PHY read data offset} + \text{slot number}$$

The data offset field in the PHY control word for write commands must be set based on the slot number being used, CWL, and the nCK_PER_CLK parameter value as shown in the following equations:

- For nCK_PER_CLK = 4

$$\text{Write data offset} = \text{CWL} + 2 + \text{slot number}$$

- For nCK_PER_CLK = 2

$$\text{Write data offset} = \text{CWL} - 2 + \text{slot number}$$

The write waveform shown in [Figure 1-89](#) illustrates an example with DDR3 SDRAM CWL = 7 and nCK_PER_CLK = 4. The selected slot number can be 1 or 3.

$$\text{Write data offset} = \text{CWL} + \text{slot number} + 2$$

$$= 7 + 1 + 2 = 10$$

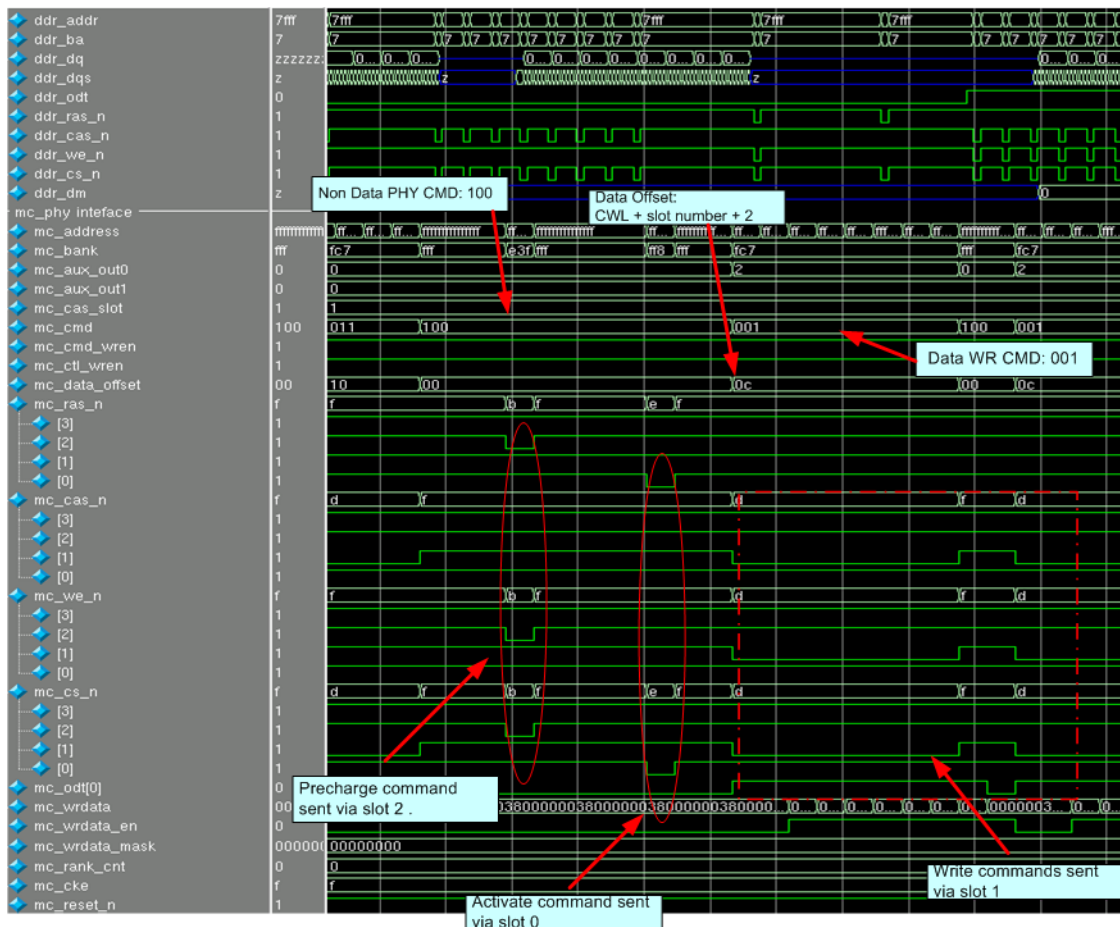


Figure 1-89: Sending Write Commands in the PHY Interface (CWL = 9)



IMPORTANT: Bits[31:27, 24:23, 14:12, and 7:3] in Table 1-58, page 136 are not used in this example.

The write waveform shown in Figure 1-90 illustrates an example with calibrated PHY read data offset = 10. For a selected slot number of 1, nCK_PER_CLK of 4, the read data offset is:

$$\begin{aligned} \text{Read data offset} &= \text{Calibrated PHY read data offset} + \text{slot number} \\ &= 10 + 1 = 11 \end{aligned}$$

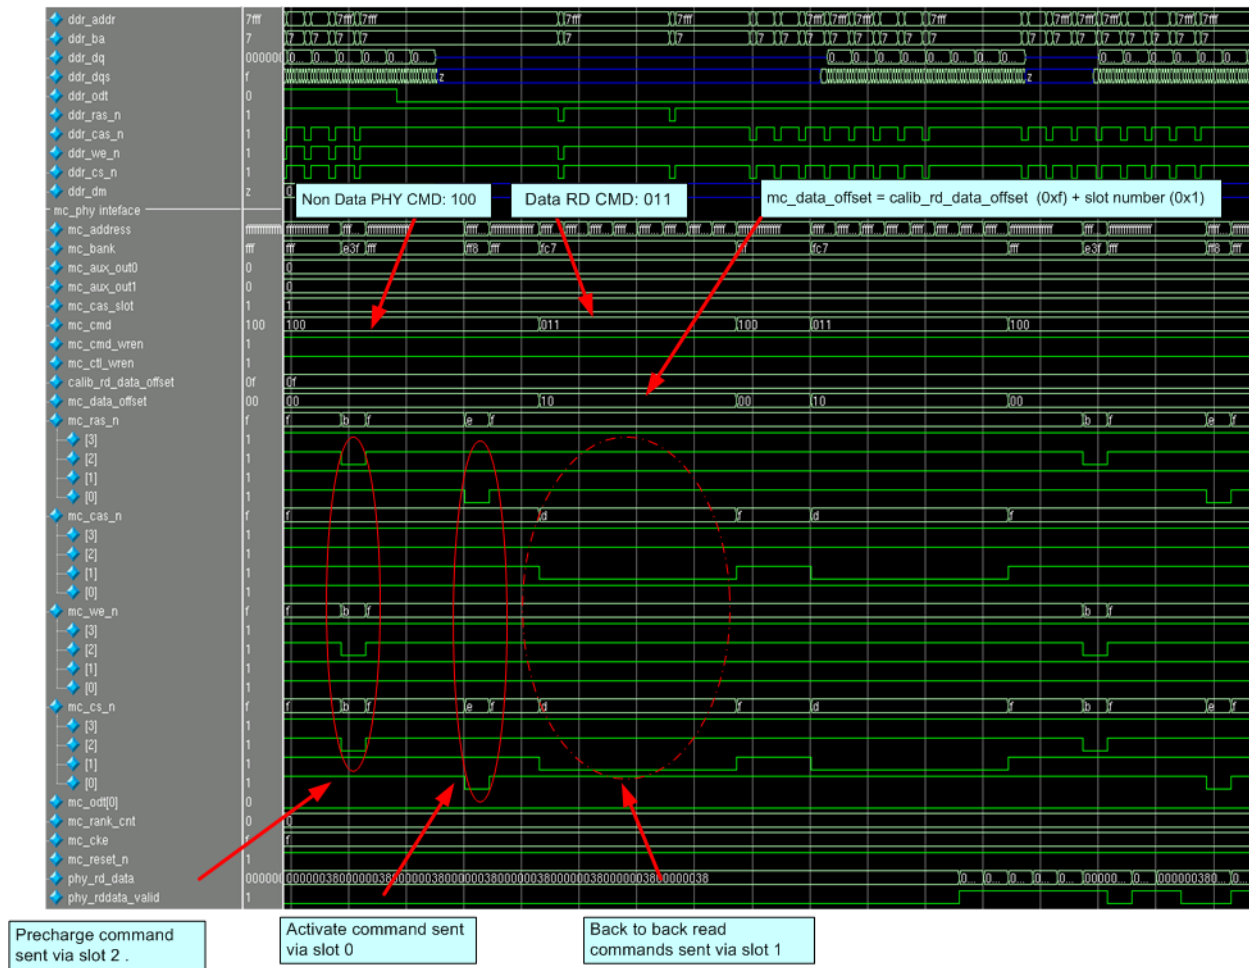


Figure 1-90: Sending Read Commands in the PHY Interface



IMPORTANT: Bits[31:27, 24:23, 14:12, and 7:3] in Table 1-58, page 136 are not used in this example.

The PHY calibration operates with additive latency AL) equal to 0. If a non-zero additive latency (CL – 1 or CL – 2) is preferred after the completion of calibration, the controller must issue the appropriate MRS command. Furthermore, the mentioned data offset must be recalculated with the addition of the AL value.

Customizing the Core

The 7 series FPGAs memory interface solution supports several configurations for DDR2 or DDR3 SDRAM devices. The specific configuration is defined by Verilog parameters in the top-level of the core. As per the OOC flow, none of the parameter values are passed down to the user design RTL file from the example design top RTL file. So, any design related parameter change is not reflected in the user design logic. The MIG tool should be used to regenerate a design when parameters need to be changed. The parameters set by the MIG tool are summarized in [Table 1-64](#), [Table 1-65](#), and [Table 1-66](#).

Table 1-64: 7 Series FPGA Memory Solution Configuration Parameters

Parameter	Description	Options
REFCLK_FREQ ⁽¹⁾	This is the reference clock frequency for IDELAYCTRLs. This can be set to 200.0 for any speed grade device. For DDR3 SDRAM designs, the frequency value is dependent on memory design frequency and FPGA speed grade. For more information, see the IDELAYE2 (IDELAY) and ODELAYE2 (ODELAY) Attribute Summary table in the <i>7 Series FPGAs SelectIO™ Resources User Guide</i> [Ref 2]. This parameter should not be changed.	200.0, 300.0, and 400.0
SIM_BYPASS_INIT_CAL ⁽²⁾	This is the calibration procedure for simulation. "OFF" is not supported in simulation. "OFF" must be used for hardware implementations. "FAST" enables a fast version of read and write leveling. "SIM_FULL" enables full calibration but skips the power-up initialization delay. "SIM_INIT_CAL_FULL" enables full calibration including the power-up delays.	"OFF" "SIM_INIT_CAL_FULL" "FAST" "SIM_FULL"
nCK_PER_CLK	This is the number of memory clocks per clock.	4, 2 (depends on the PHY to Controller Clock ratio chosen in the GUI)
nCS_PER_RANK	This is the number of unique CS outputs per rank for the PHY.	1, 2
DQS_CNT_WIDTH	This is the number of bits required to index the DQS bus and is given by $\text{ceil}(\log_2(\text{DQS_WIDTH}))$.	
ADDR_WIDTH	This is the memory address bus width. It is equal to RANK_WIDTH + BANK_WIDTH + ROW_WIDTH + COL_WIDTH.	
BANK_WIDTH	This is the number of memory bank address bits.	This option is based on the selected memory device.
CS_WIDTH	This is the number of unique CS outputs to memory.	This option is based on the selected MIG tool configuration.

Table 1-64: 7 Series FPGA Memory Solution Configuration Parameters (Cont'd)

Parameter	Description	Options
CK_WIDTH	This is the number of CK/CK# outputs to memory.	This option is based on the selected MIG tool configuration.
CKE_WIDTH	This is the number of CKE outputs to memory.	This option is based on the selected MIG tool configuration.
ODT_WIDTH	This is the number of ODT outputs to memory.	This option is based on the selected MIG tool configuration.
COL_WIDTH	This is the number of memory column address bits.	This option is based on the selected memory device.
RANK_WIDTH	This is the number of bits required to index the RANK bus.	This parameter value is 1 for both Single and Dual rank devices.
ROW_WIDTH	This is the DRAM component address bus width.	This option is based on the selected memory device.
DM_WIDTH	This is the number of data mask bits.	DQ_WIDTH/8
DQ_WIDTH	This is the memory DQ bus width.	This parameter supports DQ widths from 8 to a maximum of 72 in increments of 8. The available maximum DQ width is frequency dependent on the selected memory device.
DQS_WIDTH	This is the memory DQS bus width.	DQ_WIDTH/8
BURST_MODE	This is the memory data burst length.	DDR3: "8" DDR2: "8"
BM_CNT_WIDTH	This is the number of bits required to index a bank machine and is given by $\text{ceil}(\log_2(\text{nBANK_MACHS}))$.	
ADDR_CMD_MODE	This parameter is used by the controller to calculate timing on the memory addr/cmd bus. This parameter should not be changed.	"1T"
ORDERING ⁽³⁾	This option reorders received requests to optimize data throughput and latency.	"NORM": Allows the Memory Controller to reorder read but not write commands to the memory. "RELAXED": Allows the Memory Controller to reorder commands to the memory for maximum efficiency. Strong ordering is not preserved at the native interface in this mode. "STRICT": Forces the Memory Controller to execute commands in the exact order received.
STARVE_LIMIT	This sets the number of times a read request can lose arbitration before the request declares itself high priority. The actual number of lost arbitrations is STARVE_LIMIT \times nBANK_MACHS.	1, 2, 3, ... 10

Table 1-64: 7 Series FPGA Memory Solution Configuration Parameters (Cont'd)

Parameter	Description	Options
WRLVL	This option enables write leveling calibration in DDR3 designs. This parameter must always be "ON" for DDR3 and "OFF" for DDR2. This parameter should not be changed.	DDR3: "ON" DDR2: "OFF"
RTT_NOM	This is the nominal ODT value.	DDR3_SDRAM: "120": RZQ/2 "60": RZQ/4 "40": RZ/6 DDR2_SDRAM: "150": 150 Ω "75": 75 Ω "50": 50 Ω
RTT_WR	This is the dynamic ODT write termination used in multiple-RANK designs. RTT_WR should always be set to "OFF" since Dynamic ODT is not supported.	DDR3_SDRAM: "OFF": RTT_WR disabled. "120": RZQ/2 "60": RZQ/4
OUTPUT_DRV	This is the DRAM reduced output drive option.	"HIGH" "LOW"
REG_CTRL	This is the option for DIMM or unbuffered DIMM selection. This parameter should not be changed.	"ON": Registered DIMM "OFF": Components, SODIMMs, UDIMMs.
IODELAY_GRP ⁽⁴⁾	This is an ASCII character string to define an IDELAY group used in a memory design. This is used by the Vivado Design Suite to group all instantiated IDELAYs into the same bank. Unique names must be assigned when multiple IP cores are implemented on the same FPGA.	Default: "IODELAY_MIG"
ECC_TEST	This option, when set to "ON," allows the entire DRAM bus width to be accessible through the UI. For example, if DATA_WIDTH == 64, the app_rd_data width is 288.	"ON" "OFF"
PAYLOAD_WIDTH	This is the actual DQ bus used for user data.	ECC_TEST = OFF: PAYLOAD_WIDTH = DATA_WIDTH ECC_TEST = ON: PAYLOAD_WIDTH = DQ_WIDTH
DEBUG_PORT	This option enables debug signals/control.	"ON" "OFF"
TCQ	This is the clock-to-Q delay for simulation purposes.	(The value is in picoseconds.)
tCK	This is the memory tCK clock period (ps).	The value, in picoseconds, is based on the selected frequency in the MIG tool.
DIFF_TERM_SYSCLOCK	"TRUE," "FALSE"	Differential termination for system clock input pins.

Table 1-64: 7 Series FPGA Memory Solution Configuration Parameters (Cont'd)

Parameter	Description	Options
DIFF_TERM_REFCLK	"TRUE," "FALSE"	Differential termination for IDELAY reference clock input pins.
TEMP_MON_CONTROL	This option selects the device temperature source for the Temperature Monitor feature (see Temperature Monitor). Select "INTERNAL" to direct the MIG tool to instantiate the XADC and temperature polling circuit in the memory interface top-level user design module. Select "EXTERNAL" if the XADC is already instantiated elsewhere in the design. In this case, the device temperature must be periodically sampled and driven onto the device_temp_i bus in the memory interface top-level user design module.	"INTERNAL" "EXTERNAL"

Notes:

1. The lower limit (maximum frequency) is pending characterization.
2. Core initialization during simulation can be greatly reduced by using SIM_BYPASS_INIT_CAL. Three simulation modes are supported. Setting SIM_BYPASS_INIT_CAL to FAST causes write leveling and read calibration to occur on only one bit per memory device. This is then used across the remaining data bits. Setting SIM_BYPASS_INIT_CAL to SIM_INIT_CAL_FULL causes complete memory initialization and calibration sequence occurs on all byte groups. SIM_BYPASS_INIT_CAL should be set to SIM_INIT_CAL_FULL for simulations only. SIM_BYPASS_INIT_CAL should be set to OFF for implementation, or the core does not function properly.
3. When set to NORM or RELAXED, ORDERING enables the reordering algorithm in the Memory Controller. When set to STRICT, request reordering is disabled, which might limit throughput to the external memory device. However, it can be helpful during initial core integration because requests are processed in the order received; the user design does not need to keep track of which requests are pending and which requests have been processed.
4. This parameter is prefixed with the module name entered in the MIG tool during design generation. If the design is generated with the module name as mig_7series_0, then IODELAY_GRP parameter name is "mig_7series_0_IODELAY_MIG."

The parameters listed in [Table 1-65](#) depend on the selected memory clock frequency, memory device, memory configuration, and FPGA speed grade. The values for these parameters are embedded in the memc_ui_top IP core and should not be modified in the top-level.



RECOMMENDED: Xilinx strongly recommends that the MIG tool be rerun for different configurations.

Table 1-65: Embedded 7 Series FPGAs Memory Solution Configuration Parameters

Parameter	Description	Options
tFAW	This is the minimum interval of four active commands.	This value, in picoseconds, is based on the device selection in the MIG tool.
tRRD	This is the ACTIVE-to-ACTIVE minimum command period.	This value, in picoseconds, is based on the device selection in the MIG tool.
tRAS	This is the minimum ACTIVE-to-PRECHARGE period for memory.	This value, in picoseconds, is based on the device selection in the MIG tool.

Table 1-65: Embedded 7 Series FPGAs Memory Solution Configuration Parameters (Cont'd)

Parameter	Description	Options
tRCD	This is the ACTIVE-to-READ or -WRITE command delay.	This value, in picoseconds, is based on the device selection in the MIG tool.
tREFI	This is the average periodic refresh interval for memory.	This value, in picoseconds, is based on the device selection in the MIG tool.
tRFC	This is the REFRESH-to-ACTIVE or REFRESH-to-REFRESH command interval.	This value, in picoseconds, is based on the device selection in the MIG tool.
tRP	This is the PRECHARGE command period.	This value, in picoseconds, is based on the device selection in the MIG tool.
tRTP	This is the READ-to-PRECHARGE command delay.	This value, in picoseconds, is based on the device selection in the MIG tool.
tWTR	This is the WRITE-to-READ command delay.	This value, in picoseconds, is based on the device selection in the MIG tool.
tZQI	This is the ZQ short calibration interval. This value is system dependent and should be based on the expected rate of change of voltage and temperature in the system. Consult the memory vendor for more information on ZQ calibration.	This value is set in nanoseconds. Set to 0, if the user manages this function.
tZQCS	This is the timing window to perform the ZQCS command in DDR3 SDRAM.	This value, in CK, is based on the device selection in the MIG tool.
nAL	This is the additive latency in memory clock cycles.	0
CL	This is the read CAS latency. The available option is frequency dependent in the MIG tool.	DDR3: 5, 6, 7, 8, 9, 10, 11 DDR2: 3, 4, 5, 6
CWL	This is the write CAS latency. The available option is frequency dependent in the MIG tool.	DDR3: 5, 6, 7, 8
BURST_TYPE	This is an option for the ordering of accesses within a burst.	"Sequential" "Interleaved"
RST_ACT_LOW	This is the active-Low or active-High reset. This is set to 1 when System Reset Polarity option is selected as active-Low and set to 0 when the option is selected as active-High.	0, 1
IBUF_LPWR_MODE	This option enables or disables the low-power mode for the input buffers.	"ON" "OFF"
IDELAY_HP_MODE	This option enables or disables the IDELAY high-performance mode.	"ON" "OFF"

Table 1-65: Embedded 7 Series FPGAs Memory Solution Configuration Parameters (Cont'd)

Parameter	Description	Options
tRCD	This is the ACTIVE-to-READ or -WRITE command delay.	This value, in picoseconds, is based on the device selection in the MIG tool.
tREFI	This is the average periodic refresh interval for memory.	This value, in picoseconds, is based on the device selection in the MIG tool.
tRFC	This is the REFRESH-to-ACTIVE or REFRESH-to-REFRESH command interval.	This value, in picoseconds, is based on the device selection in the MIG tool.
tRP	This is the PRECHARGE command period.	This value, in picoseconds, is based on the device selection in the MIG tool.
tRTP	This is the READ-to-PRECHARGE command delay.	This value, in picoseconds, is based on the device selection in the MIG tool.
tWTR	This is the WRITE-to-READ command delay.	This value, in picoseconds, is based on the device selection in the MIG tool.
tZQI	This is the ZQ short calibration interval. This value is system dependent and should be based on the expected rate of change of voltage and temperature in the system. Consult the memory vendor for more information on ZQ calibration.	This value is set in nanoseconds. Set to 0, if the user manages this function.
tZQCS	This is the timing window to perform the ZQCS command in DDR3 SDRAM.	This value, in CK, is based on the device selection in the MIG tool.
nAL	This is the additive latency in memory clock cycles.	0
CL	This is the read CAS latency. The available option is frequency dependent in the MIG tool.	DDR3: 5, 6, 7, 8, 9, 10, 11 DDR2: 3, 4, 5, 6
CWL	This is the write CAS latency. The available option is frequency dependent in the MIG tool.	DDR3: 5, 6, 7, 8
BURST_TYPE	This is an option for the ordering of accesses within a burst.	"Sequential" "Interleaved"
RST_ACT_LOW	This is the active-Low or active-High reset. This is set to 1 when System Reset Polarity option is selected as active-Low and set to 0 when the option is selected as active-High.	0, 1
IBUF_LPWR_MODE	This option enables or disables the low-power mode for the input buffers.	"ON" "OFF"
IDELAY_HP_MODE	This option enables or disables the IDELAY high-performance mode.	"ON" "OFF"

Table 1-65: Embedded 7 Series FPGAs Memory Solution Configuration Parameters (Cont'd)

Parameter	Description	Options
DATA_IO_PRIM_TYPE	This option instantiates IBUF primitives for Data (DQ) and Strobe (DQS) as per banks selected for the interface and also depends on the I/O Power Reduction option in the MIG tool.	"HP_LP" "HR_LP" "DEFAULT"
DATA_IO_IDLE_PWRDWN	This option is set to ON valid when I/O Power reduction option is enabled.	"ON," "OFF"
CA_MIRROR	This option enables Address mirroring on second rank when it is enabled. This is valid for DDR3 SDRAM dual rank UDIMMs only. This parameter should not be changed.	"ON," "OFF"
SYSCLK_TYPE	This parameter indicates whether the system uses single-ended system clocks, differential system clocks, or is driven from an internal clock (No Buffer). Based on the selected CLK_TYPE, the clocks must be placed on the correct input ports. For differential clocks, sys_clk_p/sys_clk_n must be used. For single-ended clocks, sys_clk_i must be used. For the No Buffer option, sys_clk_i, which appears in port list, needs to be driven from an internal clock.	DIFFERENTIAL SINGLE_ENDED NO_BUFFER
REFCLK_TYPE	This parameter indicates whether the system uses single-ended reference clocks, differential reference clocks, is driven from an internal clock (No Buffer), or can connect system clock inputs only (Use System Clock). Based on the selected CLK_TYPE, the clocks must be placed on the correct input ports. For differential clocks, clk_ref_p/clk_ref_n must be used. For single-ended clocks, clk_ref_i must be used. For the No Buffer option, clk_ref_i, which appears in the port list, needs to be driven from an internal clock. For the Use System Clock option, clk_ref_i is connected to the system clock in the user design top module.	DIFFERENTIAL SINGLE_ENDED NO_BUFFER USE_SYSTEM_CLOCK
CLKIN_PERIOD	–	Input clock period.
CLKFBOUT_MULT	–	PLL voltage-controlled oscillator (VCO) multiplier. This value is set by the MIG tool based on the frequency of operation.
CLKOUT0_DIVIDE, CLKOUT1_DIVIDE, CLKOUT2_DIVIDE, CLKOUT3_DIVIDE	–	VCO output divisor for PLL outputs. This value is set by the MIG tool based on the frequency of operation.

Table 1-65: Embedded 7 Series FPGAs Memory Solution Configuration Parameters (Cont'd)

Parameter	Description	Options
CLKOUT0_PHASE	–	Phase of PLL output CLKOUT0. This value is set by the MIG tool based on the banks selected for memory interface pins and the frequency of operation.
DIVCLK_DIVIDE	–	PLLE2 VCO divisor. This value is set by the MIG tool based on the frequency of operation.
USE_DM_PORT	This is the enable data mask option used during memory write operations.	0 = Disable 1 = Enable
CK_WIDTH	This is the number of CK/CK# outputs to memory.	
DQ_CNT_WIDTH	This is $\text{ceil}(\log_2(\text{DQ_WIDTH}))$.	
DRAM_TYPE	This is the supported memory standard for the Memory Controller.	"DDR3", "DDR2"
DRAM_WIDTH	This is the DQ bus width per DRAM component.	
AL	This is the additive latency.	0
nBANK_MACHS ⁽¹⁾	This is the number of bank machines. A given bank machine manages a single DRAM bank at any given time.	2, 3, 4, 5, 6, 7, 8
DATA_BUF_ADDR_WIDTH	This is the bus width of the request tag passed to the Memory Controller. This parameter is set to 5 for 4:1 mode and 4 for 2:1 mode. This parameter should not be changed.	5, 4
SLOT_0_CONFIG	This is the rank mapping. This parameter should not be changed.	Single-rank setting: 8'b0000_0001 Dual-rank setting: 8'b0000_0011
ECC	This is the error correction code, available in 72-bit data width configurations. ECC is not currently available.	72
RANKS	This is the number of ranks.	
DATA_WIDTH	This parameter determines the write data mask width and depends on whether or not ECC is enabled.	ECC = ON: $\text{DATA_WIDTH} = \text{DQ_WIDTH} + \text{ECC_WIDTH}$ ECC = OFF: $\text{DATA_WIDTH} = \text{DQ_WIDTH}$
APP_DATA_WIDTH	This UI_INTFC parameter specifies the payload data width in the UI.	$\text{APP_DATA_WIDTH} = 2 \times \text{nCK_PER_CLK} \times \text{PAYLOAD_WIDTH}$
APP_MASK_WIDTH	This UI_INTFC parameter specifies the payload mask width in the UI.	

Table 1-65: Embedded 7 Series FPGAs Memory Solution Configuration Parameters (Cont'd)

Parameter	Description	Options
USER_REFRESH	This parameter indicates if the user manages refresh commands. Can be set for either the User or Native interface.	"ON," "OFF"
REF_CLK_MMCM_IODELAY_CTRL	This parameter value determines the instantiation of MMCM. This MMCM is used to generate 300 MHz and 400 MHz clock for IDELAY CTRL module.	"TRUE," "FALSE"

Notes:

1. nBANK_MACHS parameter values can be changed in user_design top-level RTL file (<module name>_mig.v/vhd: This RTL file is used as user design top RTL file for synthesis and implementation. <module name>_mig_sim.v/vhd: This RTL file is used as user design top RTL file for simulation.). Note that the parameter value can be updated only in non-OOC MIG designs.

Table 1-66 contains parameters set up by the MIG tool based on the pinout selected. When making pinout changes, Xilinx recommends rerunning the MIG tool to set up the parameters properly. See [Bank and Pin Selection Guides for DDR3 Designs, page 193](#) and [Bank and Pin Selection Guides for DDR2 Designs, page 203](#).

Mistakes to the pinout parameters can result in non-functional simulation, an unroutable design, and/or trouble meeting timing. These parameters are used to set up the PHY and route all the necessary signals to and from it. The following parameters are calculated based on selected Data and Address/Control byte groups. These parameters do not consider the system signals selection (that is, system clock, reference clock and status signals).

Table 1-66: DDR2/DDR3 SDRAM Memory Interface Solution Pinout Parameters

Parameter	Description	Example
BYTE_LANES_B0, BYTE_LANES_B1, BYTE_LANES_B2	Defines the byte lanes being used in a given I/O bank. A 1 in a bit position indicates a byte lane is used, and a 0 indicates unused. This parameter varies based on the pinout and should not be changed manually in generated design.	Ordering of bits from MSB to LSB is T0, T1, T2, and T3 byte groups. 4'b1101: For a given bank, three byte lanes are used and one byte lane is not used.
DATA_CTL_B0, DATA_CTL_B1, DATA_CTL_B2	Defines mode of use of byte lanes in a given I/O bank. A 1 in a bit position indicates a byte lane is used for data, and a 0 indicates it is used for address/control. This parameter varies based on the pinout and should not be changed manually in generated design.	4'b1100: With respect to the BYTE_LANE example, two byte lanes are used for Data and one for Address/Control.

Table 1-66: DDR2/DDR3 SDRAM Memory Interface Solution Pinout Parameters (Cont'd)

[illegible]

Table 1-66: DDR2/DDR3 SDRAM Memory Interface Solution Pinout Parameters (Cont'd)

Parameter	Description	Example
ADDR_MAP	<p>Bank and byte lane position information for the address. 12-bit parameter provided per pin.</p> <ul style="list-style-type: none"> [11:8] – Bank position. Values of 0, 1, or 2 are supported [7:4] – Byte lane position within a bank. Values of 0, 1, 2, or 3 are supported. [3:0] – Bit position within a byte lane. Values of [0, 1, 2, . . . , A, B] are supported. <p>This parameter varies based on the pinout and should not be changed manually in generated design.</p>	<p>Upper-most Data or Address/Control byte group selected bank is referred to as Bank 0 in parameters notation. Numbering of banks is 0, 1, and 2 from top to bottom.</p> <p>Byte groups T0, T1, T2, and T3 are numbered in parameters as 3, 2, 1 and 0, respectively.</p> <p>Bottom-most pin in a byte group is referred as “0” in MAP parameters. Numbering is counted from 0 to 9 from bottom-most pin to top pin with in a byte group by excluding DQS I/Os. DQS_N and DQS_P pins of the byte group are numbered as A and B, respectively.</p> <p>192'h000_000_039_038_037_036_035_034_033_032_031_029_028_027_026_02B: This parameter is denoted for Address width of 16 with 12 bits for each pin. In this case the Address width is 14 bits. Ordering of parameters is from MSB to LSB (that is, ADDR[0] corresponds to the 12 LSBs of the parameter.</p> <p>12'h02B: Address pin placed in bank 0, byte lane 1, at location B.</p> <p>12'h235: Address pin placed in bank 2, byte lane 0, at location 5.</p>
BANK_MAP	<p>Bank and byte lane position information for the bank address. See the ADDR_MAP description. This parameter varies based on the pinout and should not be changed manually in generated design.</p>	<p>See the ADDR_MAP example.</p>
CAS_MAP	<p>Bank and byte lane position information for the CAS command. See the ADDR_MAP description. This parameter varies based on the pinout and should not be changed manually in generated design.</p>	<p>See the ADDR_MAP example.</p>
CKE_MAP	<p>Bank and byte lane position information for the CKE. This parameter is referred to as one of the Address/Control byte groups. See ADDR_MAP description. This parameter varies based on the pinout and should not be changed manually in generated design.</p>	<p>See the ADDR_MAP example.</p>

Table 1-66: DDR2/DDR3 SDRAM Memory Interface Solution Pinout Parameters (Cont'd)

Parameter	Description	Example
ODT_MAP	Bank and byte lane position information for the ODT. This parameter is referred to as one of the Address/Control byte groups. See ADDR_MAP description. This parameter varies based on the pinout and should not be changed manually in generated design.	See the ADDR_MAP example.
CS_MAP	Bank and byte lane position information for the chip select. See the ADDR_MAP description. This parameter varies based on the pinout and should not be changed manually in generated design.	See the ADDR_MAP example.
PARITY_MAP	Bank and byte lane position information for the parity bit. Parity bit exists for RDIMMs only. See the ADDR_MAP description. This parameter varies based on the pinout and should not be changed manually in generated design.	See the ADDR_MAP example.
RAS_MAP	Bank and byte lane position information for the RAS command. See the ADDR_MAP description. This parameter varies based on the pinout and should not be changed manually in generated design.	See the ADDR_MAP example.
WE_MAP	Bank and byte lane position information for the WE command. See the ADDR_MAP description. This parameter varies based on the pinout and should not be changed manually in generated design.	See the ADDR_MAP example.

Table 1-66: DDR2/DDR3 SDRAM Memory Interface Solution Pinout Parameters (Cont'd)

Parameter	Description	Example
DQS_BYTE_MAP	Bank and byte lane position information for the strobe. See the CK_BYTE_MAP description. This parameter varies based on the pinout and should not be changed manually in generated design.	See the CK_BYTE_MAP example.
DATA0_MAP, DATA1_MAP, DATA2_MAP, DATA3_MAP, DATA4_MAP, DATA5_MAP, DATA6_MAP, DATA7_MAP, DATA8_MAP	Bank and byte lane position information for the data bus. See the ADDR_MAP description. This parameter varies based on the pinout and should not be changed manually in generated design.	See the ADDR_MAP example.
MASK0_MAP, MASK1_MAP	Bank and byte lane position information for the data mask. See the ADDR_MAP description. This parameter varies based on the pinout and should not be changed manually in generated design.	See the ADDR_MAP example.

Design Guidelines

Guidelines for DDR2 and DDR3 SDRAM designs are covered in this section.

For general PCB routing guidelines, see [Appendix A, General Memory Routing Guidelines](#).

DDR3 SDRAM

This section describes guidelines for DDR3 SDRAM designs, including bank selection, pin allocation, pin assignments, termination, I/O standards, and trace lengths.

Design Rules

Memory types, memory parts, and data widths are restricted based on the selected FPGA, FPGA speed grade, and the design frequency. The final frequency ranges are subject to characterization results.

Bank and Pin Selection Guides for DDR3 Designs

The MIG tool generates pin assignments for a memory interface based on physical layer rules.

Xilinx 7 series FPGAs are designed for very high-performance memory interfaces, and certain rules must be followed to use the DDR3 SDRAM physical layer. Xilinx 7 series FPGAs have dedicated logic for each DQS byte group. Four DQS byte groups are available in each 50-pin bank. Each byte group consists of a clock-capable I/O pair for the DQS and 10 associated I/Os.

Several times in this document byte groups are referenced for address and control as well, this refers to the 12 associated groups. In a typical DDR3 data bus configuration, eight of these 10 I/Os are used for the DQS, one is used for the data mask (DM), and one is left over for other signals in the memory interface.

The MIG tool should be used to generate a pinout for a 7 series DDR3 interface. The MIG tool follows these rules:

- The system clock input must be in the same column as the memory interface. The system clock input is recommended to be in the address/control bank, when possible.



RECOMMENDED: *Although the MIG allows system clock selection to be in different super logic regions (SLRs), it is not recommended due to the additional clock jitter in this topology.*

- CK must be connected to a p-n pair in one of the control byte groups. Any p-n pair in the group is acceptable, including SRCC, MRCC, and DQS pins.
- If multiple CK outputs are used, such as for dual rank, all CK outputs must come from the same byte lane.
- DQS signals for a byte group must be connected to a designated DQS pair in the bank due to the dedicated strobe connections for DDR2 and DDR3 SDRAM. For more information, see *7 Series FPGAs Clocking Resources User Guide* (UG472) [Ref 10].
- DQ and DM (if used) signals must be connected to the byte group pins associated with the corresponding DQS.
- VRN and VRP are used for the digitally controlled impedance (DCI) reference for banks that support DCI.
- The non-byte groups pins (that is, VRN/VRP pins in HP banks and top/bottom most pins in HR banks) can be used for an address/control pin, if the following conditions are met:
 - For HP banks, DCI cascade is used or the bank does not need the VRN/VRP pins, as in the case of only outputs.
 - The adjacent byte group (T0/T3) is used as an address/control byte group.

- An unused pin exists in the adjacent byte group (T0/T3) or the CK output is contained in the adjacent byte group.
- No more than three vertical banks from a die perspective can be used for a single interface.
- The address/control must be in the middle I/O bank of interfaces that span three I/O banks. All address/control must be in the same I/O bank. Address/control cannot be split between banks.
- Control (RAS_N, CAS_N, WE_N, CS_N, CKE, ODT) and address lines must be connected to byte groups not used for the data byte groups.
- RESET_N can be connected to any available pin within the device, including the VRN/VRP pins if DCI cascade is used, as long as timing is met and an appropriate I/O voltage standard is used. The GUI restricts this pin to the banks used for the interface to help with timing, but this is not a requirement.
- Devices implemented with SSI technology have SLRs. Memory interfaces cannot span across SLRs. Ensure that this rule is followed for the part chosen and for any other pin-compatible parts that can also be used.

Pin Swapping

- Pins can be freely swapped within each byte group (data and address/control), except for the DQS pair which must be on a clock-capable DQS pair and the CK which must be on a p-n pair.
- Byte groups (data and address/control) can be freely swapped with each other.
- Pins in the address/control byte groups can be freely swapped within and between their byte groups.
- No other pin swapping is permitted.

Bank Sharing Among Controllers

No unused part of a bank used in a memory interface is permitted to be shared with another memory interface. The dedicated logic that controls all the FIFOs and phasers in a bank is designed to only operate with a single memory interface and cannot be shared with other memory interfaces. With the exception of the shared address and control in the dual controller supported in the MIG core.

System Clock, PLL and MMCM Locations, and Constraints

The PLL and MMCM are required to be in the bank that supplies the clock to the memory to meet the specified interface performance. The system clock input is also strongly recommended to be in this bank. The MIG tool follows these two rules whenever possible. The exception is a 16-bit interface in a single bank where there might not be pins available for the clock input. In this case, the clock input needs to come from an adjacent bank

through the frequency backbone to the PLL. The system clock input to the PLL must come from clock capable I/O.

The system clock input can only be used for an interface in the same column. If the clock came from another column, the additional PLL or MMCM and clock routing required for this induces too much additional jitter.

Unused outputs from the PLL can be used as clock outputs. Only the settings for these outputs can be changed. Settings related to the overall PLL behavior and the used outputs must not be disturbed.

A PLL cannot be shared among interfaces. See [Clocking Architecture, page 119](#) for information on allowed PLL parameters.

DDR3 Component PCB Routing

Fly-by routing topology is required for the clock, address, and control lines. Fly-by means that this group of lines is routed in a daisy-chain fashion and terminated appropriately at the end of the line. The trace length of each signal within this group to a given component must be matched. The controller uses write leveling to account for the different skews between components. This technique uses fewer FPGA pins because signals do not have to be replicated. The data bus routing for each component should be as short as possible. Each signal should be routed on a single PCB layer to minimize discontinuities caused by additional vias.

V_{REF}

The V_{REF} includes internal and external:

- **Internal V_{REF}** – Only be used for data rates of 800 Mb/s or below.
- **External V_{REF}** – For the maximum specified data rate in a given FPGA speed grade, external V_{REF} must track the midpoint of the VDD supplied to the DRAM and ground. This can be done with a resistive divider or by a regulator that tracks this midpoint. Regulators that supply a fixed reference voltage irrespective of the VDD voltage should not be used at these data rates. V_{REF} traces need to have a larger than the minimum spacing to reduce coupling from other intrusive signals. See *7 Series FPGAs PCB Design and Pin Planning Guide* (UG483) [\[Ref 12\]](#), " V_{REF} Stabilization Capacitors" section.

VCCAUX_IO

VCCAUX_IO has two values that can be set to 1.8V or 2.0V depending on memory performance. If migration occurs between different memory performance or FPGA speed grades, VCCAUX_IO might need to be its own supply that can be adjusted. For performance information, see the *7 Series FPGAs Data Sheets* [\[Ref 13\]](#). For more information on VCCAUX_IO, see *7 Series SelectIO™ Resources User Guide* (UG471) [\[Ref 2\]](#), "VCCAUX_IO" section.

Power System and Plane Discontinuities

See *7 Series FPGAs PCB Design and Pin Planning Guide* (UG483) [Ref 12].

Termination

These rules apply to termination for DDR3 SDRAM:

- Simulation (IBIS or other) is highly recommended. The loading of address (A, BA), command (RAS_N, CAS_N, WE_N), and control (CS_N, ODT) signals depends on various factors, such as speed requirements, termination topology, use of unbuffered DIMMs, and multiple rank DIMMs, and can be a limiting factor in reaching a performance target.
- Single ended 40Ω traces and termination are required for operation at 1,333 Mb/s and higher. 50Ω is acceptable below 1,333 Mb/s. [Figure 1-91](#) and [Figure 1-92](#) are for 1,333 Mb/s and higher.
- Differential 80Ω traces and termination are required for operation at 1,333 Mb/s and higher. 100Ω is acceptable below 1,333 Mb/s. [Figure 1-93](#) is for 1,333 Mb/s and higher.
- When using a V_{TT} supply, care must be taken to manage the high frequency currents from the terminations. Bypass caps recommendation 1 μF for every four terminations and 100 μF for every 25 terminations evenly distributed relative to the terminations. A planelet should also be used to distribute power to the terminations.
- Address and control signals (A, BA, RAS_N, CAS_N, WE_N, CS_N, CKE, ODT) are to be terminated with the onboard DIMM termination. If DIMM termination does not exist or a component is being used, a 40Ω pull-up to V_{TT} at the far end of the line should be used ([Figure 1-91](#)). Except for the CK/CK_N which requires a differential termination as shown in [Figure 1-93](#).
- A split 80Ω termination to V_{CCO} and a 80Ω termination to GND can be used ([Figure 1-92](#)), but takes more power. For bidirectional signals, the termination is needed at both ends of the signal. ODT should be used on the memory side. For best performance in HP banks, DCI should be used. For best performance in HR banks, IN_TERM (internal termination) should be used.

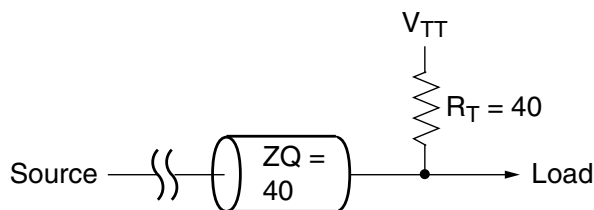


Figure 1-91: 40Ω Termination to V_{TT}

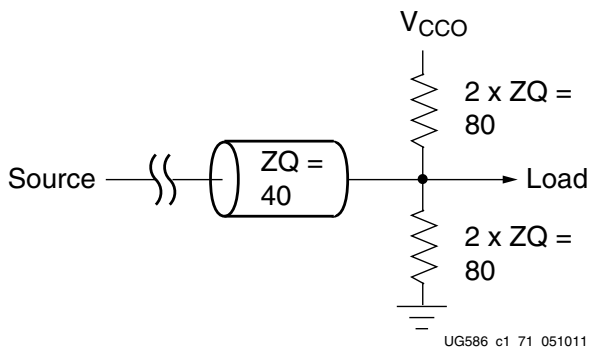


Figure 1-92: 80Ω Split Termination to VCC0 and GND

- Differential signals should be terminated with the memory device internal termination or an 80Ω differential termination at the load (Figure 1-93). For bidirectional signals, termination is needed at both ends of the signal. ODT should be used on the memory side. For best performance in HP banks, DCI should be used. For best performance in HR banks, IN_TERM (internal termination) should be used.

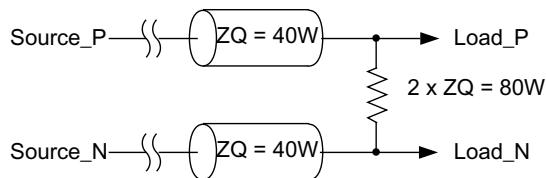


Figure 1-93: (a) 80Ω Differential Termination

Note: For CK_P/CK_N differential signals, the termination method mentioned in Figure 1-94 is recommended.

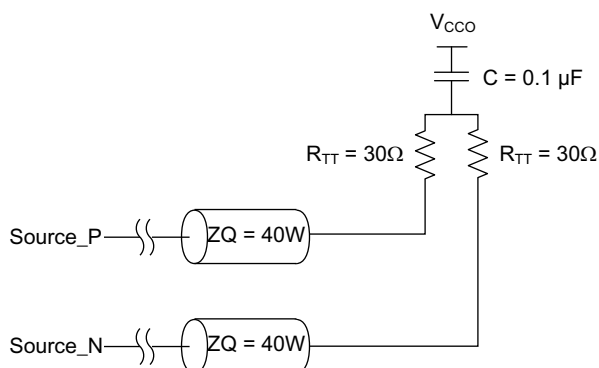


Figure 1-94: (b) 80Ω Differential Termination

- All termination must be placed as close to the load as possible. The termination can be placed before or after the load provided that the termination is placed within a small distance of the load pin. The allowable distance can be determined by simulation.

- DCI (HP banks) or IN_TERM (HR banks) is required at the FPGA to meet the specified performance.
- The RESET_N signal is not terminated. This signal should be pulled down during memory initialization with a 4.7 kΩ resistor connected to GND.
- ODT, which terminates a signal at the memory, is required. The MIG tool should be used to specify the configuration of the memory system for setting the mode register properly. See Micron technical note TN-47-01 [Ref 14] for additional details on ODT.
- DM should be pulled to GND if DM is not driven by the FPGA (data mask not used or data mask disabled scenarios). The value of the pull-down resistor used for DM in this case should be no larger than four times the ODT value. Check with the memory vendor for further information.

Trace Lengths

The trace lengths described here are for high-speed operation. The package delay should be included when determining the effective trace length. Note that different parts in the same package have different internal package skew values. De-rate the minimum period appropriately in the **MIG Controller Options** page when different parts in the same package are used.

Another method is to generate the package lengths using Vivado Design Suite. The following commands generate a csv file that contains the package delay values for every pin of the device under consideration.

```
link_design -part <part_number>
write_csv <file_name>
```

For example, to obtain the package delay information for the 7 series FPGA XC7K160T-FF676, this command should be issued:

```
link_design -part xc7k160tffbg676
write_csv flight_time
```

This generates a file named `flight_time.csv` in the current directory with package trace delay information for each pin. While applying specific trace-matching guidelines for the DDR3 SDRAM interface, this additional package delay term should be considered for the overall electrical propagation delay.

When migrating between different die sizes in the same package, there might be different delays for the same package pin. The delay values for each of the devices must be accounted for and the mid-range should be used for each pin. This might decrease the maximum possible performance for the target device. See [Table 1-67](#) for exact degradation.

These rules indicate the maximum electrical delays between DDR3 SDRAM signals:

- The maximum electrical delay between any DQ or DM and its associated DQS/DQS# must be $\leq \pm 5$ ps.

- The maximum electrical delay between any address and control signals and the corresponding CK/CK# must be $\leq \pm 25$ ps, with 8 ps being the optimal target.
- CK/CK# signals must arrive at each memory device after the DQS/DQS# signals. The skew allowed between CK/CK# and DQS/DQS# must be bounded between 0 and 1,600 ps. The recommended skew between CK/CK# and DQS/DQS# is 150 ps to 1,600 ps for components/UDIMMs and for RDIMMs it is 450 ps to 750 ps. For DIMM modules, the total CK/CK# and DQS/DQS# propagation delays from the FPGA to the memory components on the DIMM must be accounted for when designing to this requirement.
- CK/CK# must arrive after DQS/DQS# at each memory component to ensure calibration can align DQS/DQS# to the correct CK/CK# clock cycle. Write Calibration failures are seen if this specification is violated. See [Debugging Write Calibration Failures \(dbg_wrcal_err = 1\)](#), page 253 in the [Debugging DDR3/DDR2 Designs](#), page 228.

The specified DQ to DQS skew limit can be increased if the memory interface is not operated at the maximum frequency. [Table 1-67](#) indicates the relaxed skew limit (\pm) for these cases. The vertical axis is the bit rate in Mb/s. The first column is the FPGA maximum rate, check the data sheet to determine this maximum rate. The second column is the actual speed the memory system is operating at. The horizontal axis is the DDR3 SDRAM component speed rating.

Table 1-67: DQ to DQS Skew Limit

FPGA Rating		Memory Component Rating					
Rated	Actual	2,133	1,866	1,600	1,333	1,066	800
1,866	1,866	18.0	5.0	–	–	–	–
	1,600	62.6	49.5	31.3	–	–	–
	1,333	125.2	112.1	93.9	66.4	–	–
	1,066	150.0	150.0	150.0	150.0	125.4	–
	800	150.0	150.0	150.0	150.0	150.0	150.0
1,600	1,866	–	–	–	–	–	–
	1,600	36.2	23.2	5.0	–	–	–
	1,333	98.8	85.8	67.6	40.1	–	–
	1,066	150.0	150.0	150.0	134.0	99.0	–
	800	150.0	150.0	150.0	150.0	150.0	150.0
1,333	1,866	–	–	–	–	–	–
	1,600	–	–	–	–	–	–
	1,333	63.7	50.7	32.5	5.0	–	–
	1,066	150.0	144.7	126.4	98.9	63.9	–
	800	150.0	150.0	150.0	150.0	150.0	150.0

Table 1-67: DQ to DQS Skew Limit (Cont'd)

FPGA Rating		Memory Component Rating					
Rated	Actual	2,133	1,866	1,600	1,333	1,066	800
1,066	1,866	–	–	–	–	–	–
	1,600	–	–	–	–	–	–
	1,333	–	–	–	–	–	–
	1,066	98.7	85.7	67.5	40.0	5.0	–
	800	150.0	150.0	150.0	150.0	150.0	98.5
800	1,866	–	–	–	–	–	–
	1,600	–	–	–	–	–	–
	1,333	–	–	–	–	–	–
	1,066	–	–	–	–	–	–
	800	150.0	148.2	130.0	102.5	67.0	5.0

For example, if an 1,866 rated –3 FPGA operates at 1,600 Mb/s with a 1,600 rated DDR3 component, the DQ to DQS skew limit is ± 31.3 ps. If the interface operates at 1,066 with a 1,333 rated DDR3 component, the skew limit is ± 150 ps.

Similarly, the specified CK to address/control skew limit can be increased if the memory interface is not operated at the maximum frequency. Table 1-68 indicates the relaxed skew limit (\pm) for these cases. The vertical axis is the bit rate in Mb/s. The horizontal axis is the DDR3 SDRAM component speed rating. The top portion of the chart is for skew changes relative to the 1,867 Mb/s rated FPGAs, while the lower portion is for the 1,600 Mb/s rated FPGAs.

Table 1-68: CK to Address/Control Skew Limit

FPGA Rating		Memory Component Rating					
Rated	Actual	2,133	1,866	1,600	1,333	1,066	800
1,866	1,866	35.0	25.0	–	–	–	–
	1,600	124.1	114.1	94.1	–	–	–
	1,333	150.0	150.0	150.0	150.0	–	–
	1,066	150.0	150.0	150.0	150.0	150.0	–
	800	150.0	150.0	150.0	150.0	150.0	150.0
1,600	1,866	–	–	–	–	–	–
	1,600	55.0	45.0	25.0	–	–	–
	1,333	150.0	150.0	150.0	130.2	–	–
	1,066	150.0	150.0	150.0	150.0	150.0	–
	800	150.0	150.0	150.0	150.0	150.0	150.0

Table 1-68: CK to Address/Control Skew Limit (Cont'd)

FPGA Rating		Memory Component Rating					
Rated	Actual	2,133	1,866	1,600	1,333	1,066	800
1,333	1,866	–	–	–	–	–	–
	1,600	–	–	–	–	–	–
	1,333	75.0	65.0	45.0	25.0	–	–
	1,066	150.0	150.0	150.0	150.0	140.4	–
	800	150.0	150.0	150.0	150.0	150.0	150.0
1,066	1,866	–	–	–	–	–	–
	1,600	–	–	–	–	–	–
	1,333	–	–	–	–	–	–
	1,066	147.5	137.5	117.5	97.5	25.0	–
	800	150.0	150.0	150.0	150.0	150.0	150.0
800	1,866	–	–	–	–	–	–
	1,600	–	–	–	–	–	–
	1,333	–	–	–	–	–	–
	1,066	–	–	–	–	–	–
	800	150.0	150.0	150.0	150.0	100.0	25.0

For example, if an 1,863 Mb/s rated FPGA operates at 1600 Mb/s with a 1,600 rated DDR3 component, the CK to address/control skew limit is ± 94.1 ps. If a 1,600 Mb/s rated FPGA operates at 1,066 with a 1,333 rated DDR3 component, the skew limit is ± 150 ps.

The skew between bytes in an I/O bank must be 1 ns or less.

Configuration

The XDC contains timing, pin, and I/O standard information. The `sys_clk` constraint sets the operating frequency of the interface and is set through the MIG GUI. This must be rerun if this needs to be altered, because other internal parameters are affected. For example:

```
create_clock -period 1.875 [get_ports sys_clk_p]
```

The `clk_ref` constraint sets the frequency for the IDELAY reference clock, which is typically 200 MHz. For example:

```
create_clock -period 5 [get_ports clk_ref_p]
```

The I/O standards are set appropriately for the DDR3 interface with LVCMOS15, SSTL15, SSTL15_T_DCI, DIFF_SSTL15, or DIFF_SSTL15_T_DCI, as appropriate. LVDS_25 is used for the system clock (`sys_clk`) and I/O delay reference clock (`clk_ref`). These standards can be changed, as required, for the system configuration. These signals are brought out to the top-level for system connection:

- **sys_rst** – This is the main system reset (asynchronous). The reset signal must be applied for a minimum pulse width of 5 ns.
- **init_calib_complete** – This signal indicates when the internal calibration is done and that the interface is ready for use.
- **tg_compare_error** – This signal is generated by the example design traffic generator if read data does not match the write data.

These signals are all set to LVCMOS25 and can be altered as needed for the system design. They can be generated and used internally instead of being brought out to pins.

A 16-bit wide interfaces might need to have the system clock in a bank above or below the bank with the address/control and data. In this case, the MIG tool puts an additional constraint in the XDC. An example is shown here:

```
set_property CLOCK_DEDICATED_ROUTE BACKBONE [get_nets sys_clk_p]
set_property CLOCK_DEDICATED_ROUTE BACKBONE [get_pins -hierarchical *pll*CLKIN1]
```

This results in a warning listed below during PAR. This warning can be ignored.

```
WARNING:Place:1402 - A clock IOB / PLL clock component pair have been found that are
not placed at an optimal clock IOB / PLL site pair. The clock IOB component
<sys_clk_p> is placed at site <IOB_X1Y76>. The corresponding PLL component
<u_backbl6/u_ddr3_infrastructure/plle2_i> is placed at site <PLLE2_ADV_X1Y2>. The
clock I/O can use the fast path between the IOB and the PLL if the IOB is placed on
a Clock Capable IOB site that has dedicated fast path to PLL sites within the same
clock region. You might want to analyze why this issue exists and correct it. This
is normally an ERROR but the CLOCK_DEDICATED_ROUTE constraint was applied on COMP.PIN
<sys_clk_p.PAD> allowing your design to continue. This constraint disables all clock
placer rules related to the specified COMP.PIN. The use of this override is highly
discouraged as it might lead to very poor timing results. It is recommended that this
error condition be corrected in the design.
```

Do not drive user clocks through the I/O clocking backbone from the region(s) containing the MIG generated memory interface to CMT blocks in adjacent regions due to resource limitations. For more information, see the *7 Series FPGAs Clocking Resources User Guide* (UG472) [Ref 10].

The MIG tool sets the VCCAUX_IO constraint based on the data rate and voltage input selected. The generated XDC has additional constraints as needed. For example:

```
# PadFunction: IO_L1P_T0_39
set_property VCCAUX_IO HIGH [get_ports {ddr3_dq[0]}]
set_property SLEW FAST [get_ports {ddr3_dq[0]}]
set_property IOSTANDARD SSTL15_T_DCI [get_ports {ddr3_dq[0]}]
set_property PACKAGE_PIN A9 [get_ports {ddr3_dq[0]}]

# PadFunction: IO_L1N_T0_39
set_property VCCAUX_IO HIGH [get_ports {ddr3_dq[1]}]
set_property SLEW FAST [get_ports {ddr3_dq[1]}]
set_property IOSTANDARD SSTL15_T_DCI [get_ports {ddr3_dq[1]}]
set_property PACKAGE_PIN A8 [get_ports {ddr3_dq[1]}]
```

Consult the Constraints Guide for more information.

For DDR3 SDRAM interfaces that have the memory system input clock (`sys_clk_p/sys_clk_n`) placed on CCIO pins within one of the memory banks, the MIG tool assigns the DIFF_SSTL15 I/O standard (VCCO = 1.5V) to the CCIO pins. Because the same differential input receiver is used for both DIFF_SSTL15 and LVDS inputs, an LVDS clock source can be connected directly to the DIFF_SSTL15 CCIO pins. For more details on usage and required circuitry for LVDS and LVDS_25 I/O Standards, see the *7 Series FPGAs SelectIO™ Resources User Guide* (UG471) [Ref 2].

I/O Standards

These rules apply to the I/O standard selection for DDR3 SDRAMs:

- Designs generated by the MIG tool use the SSTL15_T_DCI and DIFF_SSTL15_T_DCI standards for all bidirectional I/O (DQ, DQS) in the High-Performance banks. In the High-Range banks, the tool uses the SSTL15 and DIFF_SSTL15 standard with the internal termination (IN_TERM) attribute chosen in the GUI.
- The SSTL15 and DIFF_SSTL15 standards are used for unidirectional outputs, such as control/address, and forward memory clocks.
- LVCMOS15 is used for the `RESET_N` signal driven to the DDR3 memory.

The MIG tool creates the XDC using the appropriate standard based on input from the GUI.

DDR2 SDRAM

This section describes guidelines for DDR2 SDRAM designs, including bank selection, pin allocation, pin assignments, termination, I/O standards, and trace lengths.

Design Rules

Memory types, memory parts, and data widths are restricted based on the selected FPGA, FPGA speed grade, and the design frequency. The final frequency ranges are subject to characterization results.

Pin Assignments

The MIG tool generates pin assignments for a memory interface based on physical layer rules.

Bank and Pin Selection Guides for DDR2 Designs

Xilinx 7 series FPGAs are designed for very high-performance memory interfaces, and certain rules must be followed to use the DDR2 SDRAM physical layer. Xilinx 7 series FPGAs have dedicated logic for each DQS byte group. Four DQS byte groups are available in each 50-pin bank. Each byte group consists of a clock-capable I/O pair for the DQS and 10

associated I/Os. In a typical DDR2 configuration, eight of these 10 I/Os are used for the DQS: one is used for the data mask (DM), and one remains for other signals in the memory interface.

Xilinx 7 series FPGAs have dedicated clock routing for high-speed synchronization that is routed vertically within the I/O banks. Thus, DDR2 memory interfaces must be arranged in the banks vertically and not horizontally. In addition, the maximum height is three banks.

The MIG tool, when available, should be used to generate a pinout for a 7 series DDR2 interface. The MIG tool follows these rules:

- DQS signals for a byte group must be connected to a designated DQS CC pair in the bank.
- DQ signals and a DM signal must be connected to the byte group pins associated with the corresponding DQS.
- Control (RAS_N, CAS_N, WE_N, CS_N, CKE, ODT) and address lines must be connected to byte groups not used for the data byte groups.
- The non-byte groups pins (that is, VRN/VRP pins in HP banks and top/bottom most pins in HR banks) can be used for an address/control pin, if the following conditions are met:
 - For HP banks, DCI cascade is used or the bank does not need the VRN/VRP pins, as in the case of only outputs.
 - The adjacent byte group (T0/T3) is used as an address/control byte group.
 - An unused pin exists in the adjacent byte group (T0/T3) or the CK output is contained in the adjacent byte group.
- All address/control byte groups must be in the same I/O bank. Address/control byte groups cannot be split between banks.
- The address/control byte groups must be in the middle I/O bank of interfaces that span three I/O banks.
- CK must be connected to a p-n pair in one of the control byte groups. Any p-n pair in the group is acceptable, including SRCC, MRCC, and DQS pins. These pins are generated for each component and a maximum of four ports/pairs only are allowed due to I/O pin limitations. Only one CK pair must be connected for one byte group. CK pairs are generated for each component, and a maximum of four pairs only are allowed due to I/O pin limitations. This varies based on **Memory Clock Selection** in the Memory Options page in the MIG GUI.
- CS_N pins are generated for each component and a maximum of four ports/pairs only are allowed due to I/O pin limitations.
- For single rank components and DIMMs, only one CKE port is generated.
- For single rank components and DIMMs, the ODT port is repeated based on the number of components. The maximum number of allowed ports is 3.

- For data widths of 16 with a x8 part, only one set of $\overline{CK}/CK\#$, \overline{CS} , \overline{ODT} ports is generated to fit the design in a single bank.
- \overline{VRN} and \overline{VRP} are used for the digitally controlled impedance (DCI) reference for banks that support DCI. DCI cascade is permitted.
- The interface must be arranged vertically.
- No more than three banks can be used for a single interface. All the banks chosen must be consequent.
- The system clock input must be in the same column as the memory interface. The system clock input is recommended to be in the address/control bank, when possible.



RECOMMENDED: *Although the MIG allows system clock selection to be in different super logic regions (SLRs), it is not recommended due to the additional clock jitter in this topology.*

- Devices implemented with SSI technology have SLRs. Memory interfaces cannot span across SLRs. Ensure that this rule is followed for the part chosen and for any other pin-compatible parts that can also be used.

Bank Sharing Among Controllers

No unused part of a bank used in a memory interface is permitted to be shared with another memory interface. The dedicated logic that controls all the FIFOs and phasers in a bank is designed to only operate with a single memory interface and cannot be shared with other memory interfaces.

Pin Swapping

- Pins can be freely swapped within each byte group (data and address/control), except for the \overline{DQS} pair which must be on a clock-capable \overline{DQS} pair and the \overline{CK} , which must be on a p-n pair.
- Byte groups (data and address/control) can be freely swapped with each other.
- Pins in the address/control byte groups can be freely swapped within and between their byte groups.
- No other pin swapping is permitted.

Internal V_{REF}

Internal V_{REF} can only be used for data rates of 800 Mb/s or below.

System Clock, PLL Location, and Constraints

The PLL is required to be in the bank that supplies the clock to the memory to meet the specified interface performance. The system clock input is also strongly recommended to be in this bank. The MIG tool follows these two rules whenever possible. The exception is a 16-bit interface in a single bank where there might not be pins available for the clock input. In this case, the clock input needs to come from an adjacent bank through the frequency backbone to the PLL. The system clock input to the PLL must come from clock capable I/O.

The system clock input can only be used for an interface in the same column. The system clock input cannot be driven from another column. The additional PLL or MMCM and clock routing required for this induces too much additional jitter.

Unused outputs from the PLL can be used as clock outputs. Only the settings for these outputs can be changed. Settings related to the overall PLL behavior and the used outputs must not be disturbed.

A PLL cannot be shared among interfaces.

See [Clocking Architecture, page 119](#) for information on allowed PLL parameters.

Configuration

The XDC contains timing, pin, and I/O standard information. The `sys_clk` constraint sets the operating frequency of the interface and is set through the MIG GUI. The MIG GUI must be rerun if this needs to be altered, because other internal parameters are affected. For example:

```
create_clock -period 1.875 [get_ports sys_clk_p]
```

The `clk_ref` constraint sets the frequency for the IDELAY reference clock, which is typically 200 MHz. For example:

```
create_clock -period 5 [get_ports clk_ref_p]
```

The I/O standards are set appropriately for the DDR2 interface with LVCMOS18, SSTL18_II, SSTL18_II_T_DCI, DIFF_SSTL18_II, or DIFF_SSTL18_II_T_DCI, as appropriate. LVDS_25 is used for the system clock (`sys_clk`) and I/O delay reference clock (`clk_ref`). These standards can be changed, as required, for the system configuration. These signals are brought out to the top-level for system connection:

- **sys_rst** – This is the main system reset (asynchronous). The reset signal must be applied for a minimum pulse width of 5 ns.
- **init_calib_complete** – This signal indicates when the internal calibration is done and that the interface is ready for use.
- **tg_compare_error** – This signal is generated by the example design traffic generator, if read data does not match the write data.

These signals are all set to LVCMOS25 and can be altered as needed for the system design. They can be generated and used internally instead of being brought out to pins.

A 16-bit wide interface might need to have the system clock in a bank above or below the bank with the address/control and data. In this case, the MIG tool puts an additional constraint in the XDC. An example is shown here:

```
set_property CLOCK_DEDICATED_ROUTE BACKBONE [get_nets sys_clk_p]
set_property CLOCK_DEDICATED_ROUTE BACKBONE [get_pins -hierarchical *pll*CLKIN1]
```

This results in a warning listed below during PAR. This warning can be ignored.

WARNING:Place:1402 - A clock IOB/PLL clock component pair have been found that are not placed at an optimal clock IOB/PLL site pair. The clock IOB component <sys_clk_p> is placed at site <IOB_X1Y76>. The corresponding PLL component <u_backb16/u_ddr2_infrastructure/plle2_i> is placed at site <PLLE2_ADV_X1Y2>. The clock I/O can use the fast path between the IOB and the PLL if the IOB is placed on a Clock Capable IOB site that has dedicated fast path to PLL sites within the same clock region. You might want to analyze why this issue exists and correct it. This is normally an ERROR but the CLOCK_DEDICATED_ROUTE constraint was applied on COMP.PIN <sys_clk_p.PAD> allowing your design to continue. This constraint disables all clock placer rules related to the specified COMP.PIN. The use of this override is highly discouraged as it might lead to very poor timing results. It is recommended that this error condition be corrected in the design.

Do not drive user clocks through the I/O clocking backbone from the region(s) containing the MIG generated memory interface to CMT blocks in adjacent regions due to resource limitations. For more information, see the *7 Series FPGAs Clocking Resources User Guide* (UG472) [Ref 10].

The MIG tool sets the VCCAUX_IO constraint based on the data rate and voltage input selected. The generated XDC has additional constraints as needed. For example:

```
# PadFunction: IO_L14P_T2_SRCC_36
set_property VCCAUX_IO NORMAL [get_ports {ddr2_dq[0]}]
set_property SLEW FAST [get_ports {ddr2_dq[0]}]
set_property IOSTANDARD SSTL18_II_T_DCI [get_ports {ddr2_dq[0]}]
set_property PACKAGE_PIN AJ12 [get_ports {ddr2_dq[0]}]

# PadFunction: IO_L14N_T2_SRCC_36
set_property VCCAUX_IO NORMAL [get_ports {ddr2_dq[1]}]
set_property SLEW FAST [get_ports {ddr2_dq[1]}]
set_property IOSTANDARD SSTL18_II_T_DCI [get_ports {ddr2_dq[1]}]
set_property PACKAGE_PIN AK12 [get_ports {ddr2_dq[1]}]
```

Consult the *Xilinx Timing Constraints User Guide* (UG612) [Ref 15] for more information.

For DDR2 SDRAM interfaces that have the memory system input clock (sys_clk_p/sys_clk_n) placed on CCIO pins within one of the memory banks, MIG assigns the DIFF_SSTL18_II I/O standard (VCCO = 1.8V) to the CCIO pins. Because the same differential input receiver is used for both DIFF_SSTL18_II and LVDS inputs, an LVDS clock

source can be connected directly to the DIFF_SSTL18_II CCIO pins. For more details on usage and required circuitry for LVDS and LVDS_25 I/O Standards, see the *7 Series FPGAs SelectIO™ Resources User Guide* (UG471) [Ref 2].

Termination

These rules apply to termination for DDR2 SDRAM:

- Simulation (using IBIS or other) is highly recommended. The loading of address (A, BA), command (RAS_N, CAS_N, WE_N), and control (CS_N, ODT) signals depends on various factors, such as speed requirements, termination topology, use of unbuffered DIMMs, and multiple rank DIMMs. Loading can be a limiting factor in reaching a performance target.
- Unidirectional signals should be terminated with the memory device internal termination or a pull-up of 50Ω to VTT at the load (Figure 1-91 with 50Ω instead of 40Ω). A split 100Ω termination to VCCO and a 100Ω termination to GND can be used (Figure 1-92 with 100Ω instead of 80Ω), but takes more power. For bidirectional signals, the termination is needed at both ends of the signal. ODT should be used on the memory side. For best performance in HP banks, DCI should be used. For best performance in HR banks, IN_TERM (internal termination) should be used.
- Differential signals should be terminated with the memory device internal termination or a 100Ω differential termination at the load (Figure 1-93). For bidirectional signals, termination is needed at both ends of the signal. ODT should be used on the memory side. For best performance in HP banks, DCI should be used. For best performance in HR banks, IN_TERM (internal termination) should be used.
- All termination must be placed as close to the load as possible. The termination can be placed before or after the load provided that the termination is placed within a small distance of the load pin. The allowable distance can be determined by simulation.
- DCI (HP banks) or IN_TERM (HR banks) is required at the FPGA to meet the specified performance.
- Address (A, BA) and control signals (RAS_N, CAS_N, WE_N, CS_N, ODT) are to be terminated with the onboard DIMM termination. If DIMM termination does not exist or a component is being used, a 50Ω pull-up to VTT at the far end of the line should be used except for the CK/CK_N which requires a differential termination.
- The CKE signal is not terminated. This signal should be pulled down during memory initialization with a 4.7 kΩ resistor connected to GND.
- ODT, which terminates a signal at the memory, is required. The MIG tool should be used to specify the configuration of the memory system for setting the mode register properly. See Micron technical note *TN-47-01* [Ref 14] for additional details on ODT.
- ODT applies to the DQ, DQS, and DM signals only. If ODT is used, the mode register must be set appropriately to enable ODT at the memory.

- \overline{DM} should be pulled to GND if \overline{ODT} is used but \overline{DM} is not driven by the FPGA (for scenarios where the data mask is not used or is disabled).

I/O Standards

These rules apply to the I/O standard selection for DDR2 SDRAMs:

- Designs generated by the MIG tool use the SSTL18_II_T_DCI and DIFF_SSTL18_II_T_DCI standards for all bidirectional I/O (\overline{DQ} , \overline{DQS}) in the High-Performance banks. In the High-Range banks, the tool uses the SSTL18_II and DIFF_SSTL18_II standard with the internal termination (IN_TERM) attribute chosen in the GUI.
- The SSTL18_II and DIFF_SSTL18_II standards are used for unidirectional outputs, such as control/address and forward memory clocks.
- LVCMOS18 is used for the \overline{RESET}_N signal driven to the DDR2 memory RDIMM interfaces. The MIG tool creates the XDC using the appropriate standard based on input from the GUI.

Trace Lengths

The trace lengths described in this section are for high-speed operation. The package delay should be included when determining the effective trace length. Different parts in the same package have different internal package skew values. Derate the minimum period appropriately in the **MIG Controller Options** page when different parts in the same package are used.

One method to determine the delay is to use the L and C values for each pin from the IBIS models. The delay value is determined as the square root of ($L \times C$).

Another method is to generate the package lengths using Vivado. The following commands generate a csv file that contains the package delay values for every pin of the device under consideration.

```
link_design -part <part_number>
write_csv <file_name>
```

For example, to obtain the package delay information for the 7 series FPGA XC7K160T-FF676, this command should be issued:

```
link_design -part xc7k160tfbg676
write_csv flight_time
```

This generates a file named `flight_time.csv` in the current directory with package trace delay information for each pin. While applying specific trace-matching guidelines for the DDR2 SDRAM interface, this additional package delay term should be considered for the overall electrical propagation delay. Different die in the same package might have different delays for the same package pin. If this is expected, the values should be averaged appropriately to decrease the maximum possible performance for the target device.

These rules indicate the maximum electrical delays between DDR2 SDRAM signals:

- The maximum electrical delay between any DQ or DM and its associated DQS/DQS# must be $\leq \pm 5$ ps.
- The maximum electrical delay between any address and control signals and the corresponding CK/CK# must be $\leq \pm 25$ ps.
- The maximum electrical delay between any DQS/DQS# and CK/CK# must be $< \pm 25$ ps.

Clocking

The 7 series FPGA MIG DDR3/DDR2 design has two clock inputs, the reference clock and the system clock. The reference clock drives the IODELAYCTRL components in the design, while the system clock input is used to create all MIG design clocks that are used to clock the internal logic, the frequency reference clocks to the phasers, and a synchronization pulse required for keeping PHY control blocks synchronized in multi-I/O bank implementations. For more information on clocking architecture, see [Clocking Architecture, page 119](#).

The MIG tool allows you to input the Memory Clock Period and then lists available Input Clock Periods that follow the supported clocking guidelines. Based on these two clock periods selections, the generated MIG core appropriately sets the PLL parameters. The MIG tool enables automatic generation of all supported clocking structures. For information on how to use the MIG tool to set up the desired clocking structure including input clock placement, input clock frequency, and IODELAYCTRL `ref_clk` generation, see [Creating 7 Series FPGA DDR3 Memory Controller Block Design, page 32](#).

Input Clock Guidelines



IMPORTANT: *The input system clock cannot be generated internally.*

- PLL Guidelines
 - CLKFBOUT_MULT_F (M) must be between 1 and 16 inclusive.
 - DIVCLK_DIVIDE (D, Input Divider) can be any value supported by the PLLE2 parameter.
 - CLKOUT_DIVIDE (O, Output Divider) must be 2 for 400 MHz and up operation and 4 for below 400 MHz operation.
 - The above settings must ensure the minimum PLL VCO frequency (FVCOMIN) is met. For specifications, see the appropriate DC and Switching Characteristics Data Sheet. The *7 Series FPGAs Clocking Resources User Guide* (UG472) [\[Ref 10\]](#) includes the equation for calculating FVCO.
 - The relationship between the input period and the memory period is $\text{InputPeriod} = (\text{MemoryPeriod} \times M) / (D \times D1)$.

- The clock input (`sys_clk`) can be input on any CCIO in the column where the memory interface is located; this includes CCIO in banks that do not contain the memory interface, but must be in the same column as the memory interface. The PLL must be located in the bank containing the clock sent to the memory. To route the input clock to the memory interface PLL, the CMT backbone must be used. With the MIG implementation, one spare interconnect on the backbone is available that can be used for this purpose.
 - MIG core versions 1.4 and later allow this input clocking setup and properly drive the CMT backbone.
 - `CLOCK_DEDICATED_ROUTE = BACKBONE` constraint is used to implement CMT backbone, following warning message is expected. It can be ignored safely.

WARNING: [Place 30-172] Sub-optimal placement for a clock-capable IO pin and PLL pair. The flow will continue as the `CLOCK_DEDICATED_ROUTE` constraint is set to `BACKBONE`.

```
u_mig_7series_0/c0_u_ddr3_clk_ibuf/diff_input_clk.u_ibufg_sys_clk (IBUFDS.O) is
locked to IOB_X0Y176
u_mig_7series_0/c0_u_ddr3_infrastructure/plle2_i (PLLE2_ADV.CLKIN1) is locked to
PLLE2_ADV_X0Y1
u_mig_7series_0/c1_u_ddr3_infrastructure/plle2_i (PLLE2_ADV.CLKIN1) is locked to
PLLE2_ADV_X0Y5
.....
```

- For DDR3 interfaces that have the memory system input clock (`sys_clk`) placed on CCIO pins within one of the memory banks, the MIG tool assigns the DIFF_SSTL15 I/O standard ($V_{CCO} = 1.5V$) to the CCIO pins. Because the same differential input receiver is used for both DIFF_SSTL15 and LVDS inputs, an LVDS clock source can be connected directly to the DIFF_SSTL15 CCIO pins.
- It is acceptable to have differential inputs such as LVDS and LVDS_25 in I/O banks that are powered at voltage levels other than the nominal voltages required for the outputs of those standards (1.8V for LVDS outputs, and 2.5V for LVDS_25 outputs). However, these criteria must be met:
 - a. The optional internal differential termination is not used (`DIFF_TERM = FALSE`, which is the default value).

Note: This might require manually changing `DIFF_TERM` parameter located in the top-level module or setting this in the UCF or XDC.
 - b. The differential signals at the input pins meet the VIN requirements in the Recommended Operating Conditions table of the specific device family data sheet.
 - c. The differential signals at the input pins meet the VIDIFF (min) requirements in the corresponding LVDS or LVDS_25 DC specifications tables of the specific device family data sheet.

One way to accomplish the above criteria is to use an external circuit that both AC-couples and DC-biases the input signals. The figure shows an example circuit for providing an AC-coupled and DC-biased circuit for a differential clock input. RDIFF

provides the 100 Ω differential receiver termination because the internal DIFF_TERM is set to FALSE. To maximize the input noise margin, all R_{BIAS} resistors should be the same value, essentially creating a V_{ICM} level of V_{CCO}/2. Resistors in the 10k to 100 k Ω range are recommended. The typical values for the AC coupling capacitors C_{AC} are in the range of 100 nF. All components should be placed physically close to the FPGA inputs.

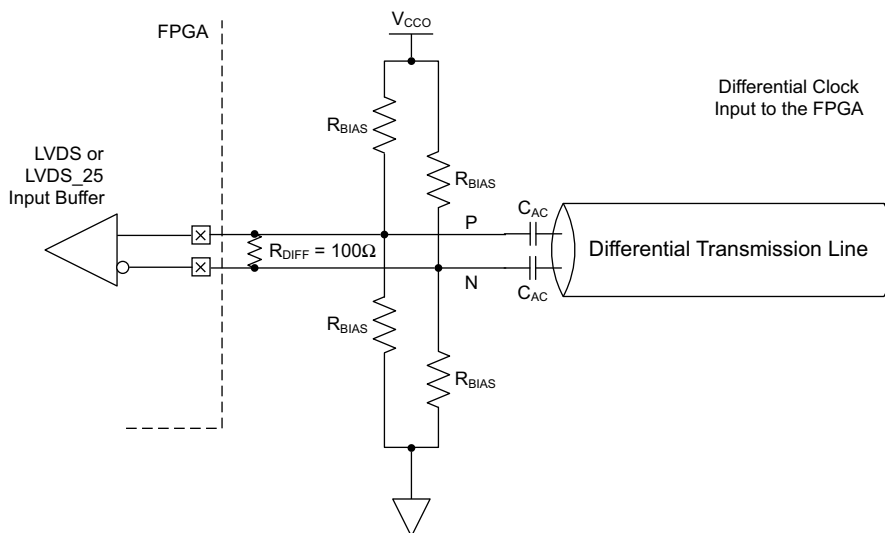


Figure 1-95: Example Circuit for AC-Coupled and DC-Biased Differential Clock Input

Note: The last set of guidelines on differential LVDS inputs are added within the LVDS and LVDS_25 (Low Voltage Differential Signaling) section of the *7 Series SelectIO Resources User Guide* (UG471) [Ref 2] in the next release of the document. These guidelines are irrespective of Package, Column (HR/HP), or I/O Voltage.

Sharing sys_clk between Controllers

The MIG 7 series FPGA designs require `sys_clk` to be in the same I/O bank column as the memory interface to minimize jitter.

- **Interfaces Spanning I/O Columns** – A single `sys_clk` input cannot drive memory interfaces spanning multiple I/O columns. The input clock input must be in the same column as the memory interface to drive the PLL using the CMT Backbone, which minimizes jitter.
- **Interfaces in Single I/O Column** – If the memory interfaces are entirely contained within the same I/O column, a common `sys_clk` can be shared among the interfaces. The `sys_clk` can be input on any CCIO in the column where the memory interfaces are located. This includes CCIO in banks that do not contain the memory interfaces, but must be in the same column as the memory interfaces.

Information on Sharing BUFG Clock (*phy_clk*)

The MIG 7 series DDR3 design includes an MMCM which outputs the `phy_clk` on a BUFG route. It is not possible to share this clock amongst multiple controllers to synchronize the user interfaces. This is not allowed because the timing from the FPGA logic to the PHY Control block must be controlled. This is not possible when the clock is shared amongst multiple controllers. The only option for synchronizing user interfaces amongst multiple controllers is to create an asynchronous FIFO for clock domain transfer.

Information on Sync_Pulse

The MIG 7 series DDR3/DDR2 design includes one PLL that generates the necessary design clocks. One of these outputs is the `sync_pulse`. The sync pulse clock is 1/16 of the `mem_refclk` frequency and must have a duty cycle distortion of 1/16 or 6.25%. This clock is distributed across the low skew clock backbone and keeps all PHASER_IN/_OUT and PHY_Control blocks in sync with each other. The signal is sampled by the `mem_refclk` in both the PHASER_INs/_OUTs and PHY_Control blocks. The phase, frequency, and duty cycle of the `sync_pulse` is chosen to provide the greatest setup and hold margin across PVT.

DDR3 Pinout Examples

Table 1-69 shows an example of a 16-bit DDR3 interface contained within one bank. This example is for a component interface using a 1 Gb x16 part. If x8 components are used or a higher density part is needed that would require more address pins, these options are possible:

- An additional bank can be used.
- `RESET_N` can be moved to another bank as long as timing is met. External timing for this signal is not critical and a level shifter can be used.
- DCI cascade can be used to free up the `VRN/VRP` pins if another bank is available for the DCI master.

Internal V_{REF} is used in this example.

Table 1-69: 16-Bit DDR3 Interface Contained in One Bank

Bank	Signal Name	Byte Group	I/O Type	I/O Number	Special Designation
1	VRP	–	SE	49	–
1	DQ15	D_11	P	48	–
1	DQ14	D_10	N	47	–
1	DQ13	D_09	P	46	–
1	DQ12	D_08	N	45	–
1	DQS1_P	D_07	P	44	DQS-P

Table 1-69: 16-Bit DDR3 Interface Contained in One Bank (Cont'd)

Bank	Signal Name	Byte Group	I/O Type	I/O Number	Special Designation
1	DQS1_N	D_06	N	43	DQS-N
1	DQ11	D_05	P	42	–
1	DQ10	D_04	N	41	–
1	DQ9	D_03	P	40	–
1	DQ8	D_02	N	39	–
1	DM1	D_01	P	38	–
1	–	D_00	N	37	–
1	DQ7	C_11	P	36	–
1	DQ6	C_10	N	35	–
1	DQ5	C_09	P	34	–
1	DQ4	C_08	N	33	–
1	DQS0_P	C_07	P	32	DQS-P
1	DQS0_N	C_06	N	31	DQS-N
1	DQ3	C_05	P	30	–
1	DQ2	C_04	N	29	–
1	DQ1	C_03	P	28	CCIO-P
1	DQ0	C_02	N	27	CCIO-N
1	DM0	C_01	P	26	CCIO-P
1	RESET_N	C_00	N	25	CCIO-N
1	RAS_N	B_11	P	24	CCIO-P
1	CAS_N	B_10	N	23	CCIO-N
1	WE_N	B_09	P	22	CCIO-P
1	BA2	B_08	N	21	CCIO-N
1	CK_P	B_07	P	20	DQS-P
1	CK_N	B_06	N	19	DQS-N
1	BA1	B_05	P	18	–
1	BA0	B_04	N	17	–
1	CS_N	B_03	P	16	–
1	ODT	B_02	N	15	–
1	CKE	B_01	P	14	–
1	A12	B_00	N	13	–
1	A11	A_11	P	12	–
1	A10	A_10	N	11	–
1	A9	A_09	P	10	–

Table 1-69: 16-Bit DDR3 Interface Contained in One Bank (Cont'd)

Bank	Signal Name	Byte Group	I/O Type	I/O Number	Special Designation
1	A8	A_08	N	9	–
1	A7	A_07	P	8	DQS-P
1	A6	A_06	N	7	DQS-N
1	A5	A_05	P	6	–
1	A4	A_04	N	5	–
1	A3	A_03	P	4	–
1	A2	A_02	N	3	–
1	A1	A_01	P	2	–
1	A0	A_00	N	1	–
1	VRN	–	SE	0	–

Table 1-70 shows an example of a 32-bit DDR3 interface contained within two banks. This example uses 2 Gb x8 components.

Table 1-70: 32-Bit DDR3 Interface Contained in Two Banks

Bank	Signal Name	Byte Group	I/O Type	I/O Number	Special Designation
1	VRP	–	SE	49	–
1	–	D_11	P	48	–
1	–	D_10	N	47	–
1	–	D_09	P	46	–
1	–	D_08	N	45	–
1	–	D_07	P	44	DQS-P
1	–	D_06	N	43	DQS-N
1	–	D_05	P	42	–
1	–	D_04	N	41	–
1	–	D_03	P	40	–
1	–	D_02	N	39	–
1	–	D_01	P	38	–
1	–	D_00	N	37	–
1	–	C_11	P	36	–
1	–	C_10	N	35	–
1	–	C_09	P	34	–
1	–	C_08	N	33	–
1	–	C_07	P	32	DQS-P

Table 1-70: 32-Bit DDR3 Interface Contained in Two Banks (Cont'd)

Bank	Signal Name	Byte Group	I/O Type	I/O Number	Special Designation
1	–	C_06	N	31	DQS-N
1	–	C_05	P	30	–
1	–	C_04	N	29	–
1	–	C_03	P	28	CCIO-P
1	–	C_02	N	27	CCIO-N
1	CKE	C_01	P	26	CCIO-P
1	ODT	C_00	N	25	CCIO-N
1	RAS_N	B_11	P	24	CCIO-P
1	CAS_N	B_10	N	23	CCIO-N
1	WE_N	B_09	P	22	CCIO-P
1	BA2	B_08	N	21	CCIO-N
1	CK_P	B_07	P	20	DQS-P
1	CK_N	B_06	N	19	DQS-N
1	BA1	B_05	P	18	–
1	BA0	B_04	N	17	–
1	CS_N	B_03	P	16	–
1	A14	B_02	N	15	–
1	A13	B_01	P	14	–
1	A12	B_00	N	13	–
1	A11	A_11	P	12	–
1	A10	A_10	N	11	–
1	A9	A_09	P	10	–
1	A8	A_08	N	9	–
1	A7	A_07	P	8	DQS-P
1	A6	A_06	N	7	DQS-N
1	A5	A_05	P	6	–
1	A4	A_04	N	5	–
1	A3	A_03	P	4	–
1	A2	A_02	N	3	–
1	A1	A_01	P	2	–
1	A0	A_00	N	1	–
1	VRN	–	SE	0	–
2	VRP	–	SE	49	–
2	DQ31	D_11	P	48	–

Table 1-70: 32-Bit DDR3 Interface Contained in Two Banks (Cont'd)

Bank	Signal Name	Byte Group	I/O Type	I/O Number	Special Designation
2	DQ30	D_10	N	47	–
2	DQ29	D_09	P	46	–
2	DQ28	D_08	N	45	–
2	DQS3_P	D_07	P	44	DQS-P
2	DQS3_N	D_06	N	43	DQS-N
2	DQ27	D_05	P	42	–
2	DQ26	D_04	N	41	–
2	DQ25	D_03	P	40	–
2	DQ24	D_02	N	39	–
2	DM3	D_01	P	38	–
2	–	D_00	N	37	–
2	DQ23	C_11	P	36	–
2	DQ22	C_10	N	35	–
2	DQ21	C_09	P	34	–
2	DQ20	C_08	N	33	–
2	DQS2_P	C_07	P	32	DQS-P
2	DQS2_N	C_06	N	31	DQS-N
2	DQ19	C_05	P	30	–
2	DQ18	C_04	N	29	–
2	DQ17	C_03	P	28	CCIO-P
2	DQ16	C_02	N	27	CCIO-N
2	DM2	C_01	P	26	CCIO-P
2	–	C_00	N	25	CCIO-N
2	DQ15	B_11	P	24	CCIO-P
2	DQ14	B_10	N	23	CCIO-N
2	DQ13	B_09	P	22	CCIO-P
2	DQ12	B_08	N	21	CCIO-N
2	DQS1_P	B_07	P	20	DQS-P
2	DQS1_N	B_06	N	19	DQS-N
2	DQ11	B_05	P	18	–
2	DQ10	B_04	N	17	–
2	DQ9	B_03	P	16	–
2	DQ8	B_02	N	15	–
2	DM1	B_01	P	14	–

Table 1-70: 32-Bit DDR3 Interface Contained in Two Banks (Cont'd)

Bank	Signal Name	Byte Group	I/O Type	I/O Number	Special Designation
2	–	B_00	N	13	–
2	DQ7	A_11	P	12	–
2	DQ6	A_10	N	11	–
2	DQ5	A_09	P	10	–
2	DQ4	A_08	N	9	–
2	DQS0_P	A_07	P	8	DQS-P
2	DQS0_N	A_06	N	7	DQS-N
2	DQ3	A_05	P	6	–
2	DQ2	A_04	N	5	–
2	DQ1	A_03	P	4	–
2	DQ0	A_02	N	3	–
2	DM0	A_01	P	2	–
2	RESET_N	A_00	N	1	–
2	VRN	–	SE	0	–

Table 1-71 shows an example of a 64-bit DDR3 interface contained within three banks. This example uses four 2 Gb x16 components.

Table 1-71: 64-Bit DDR3 Interface in Three Banks

Bank	Signal Name	Byte Group	I/O Type	I/O Number	Special Designation
1	VRP	–	SE	49	–
1	DQ63	D_11	P	48	–
1	DQ62	D_10	N	47	–
1	DQ61	D_09	P	46	–
1	DQ60	D_08	N	45	–
1	DQS7_P	D_07	P	44	DQS-P
1	DQS7_N	D_06	N	43	DQS-N
1	DQ59	D_05	P	42	–
1	DQ58	D_04	N	41	–
1	DQ57	D_03	P	40	–
1	DQ56	D_02	N	39	–
1	DM7	D_01	P	38	–
1	–	D_00	N	37	–
1	DQ55	C_11	P	36	–

Table 1-71: 64-Bit DDR3 Interface in Three Banks (Cont'd)

Bank	Signal Name	Byte Group	I/O Type	I/O Number	Special Designation
1	DQ54	C_10	N	35	–
1	DQ53	C_09	P	34	–
1	DQ52	C_08	N	33	–
1	DQS6_P	C_07	P	32	DQS-P
1	DQS6_N	C_06	N	31	DQS-N
1	DQ51	C_05	P	30	–
1	DQ50	C_04	N	29	–
1	DQ49	C_03	P	28	CCIO-P
1	DQ48	C_02	N	27	CCIO-N
1	DM6	C_01	P	26	CCIO-P
1	–	C_00	N	25	CCIO-N
1	DQ47	B_11	P	24	CCIO-P
1	DQ46	B_10	N	23	CCIO-N
1	DQ45	B_09	P	22	CCIO-P
1	DQ44	B_08	N	21	CCIO-N
1	DQS5_P	B_07	P	20	DQS-P
1	DQS5_N	B_06	N	19	DQS-N
1	DQ43	B_05	P	18	–
1	DQ42	B_04	N	17	–
1	DQ41	B_03	P	16	–
1	DQ40	B_02	N	15	–
1	DM5	B_01	P	14	–
1	–	B_00	N	13	–
1	DQ39	A_11	P	12	–
1	DQ38	A_10	N	11	–
1	DQ37	A_09	P	10	–
1	DQ36	A_08	N	9	–
1	DQS4_P	A_07	P	8	DQS-P
1	DQS4_N	A_06	N	7	DQS-N
1	DQ35	A_05	P	6	–
1	DQ34	A_04	N	5	–
1	DQ33	A_03	P	4	–
1	DQ32	A_02	N	3	–
1	DM4	A_01	P	2	–

Table 1-71: 64-Bit DDR3 Interface in Three Banks (Cont'd)

Bank	Signal Name	Byte Group	I/O Type	I/O Number	Special Designation
1	–	A_00	N	1	–
1	VRN	–	SE	0	–
2	VRP	–	SE	49	–
2	–	D_11	P	48	–
2	–	D_10	N	47	–
2	–	D_09	P	46	–
2	–	D_08	N	45	–
2	–	D_07	P	44	DQS-P
2	–	D_06	N	43	DQS-N
2	–	D_05	P	42	–
2	–	D_04	N	41	–
2	–	D_03	P	40	–
2	–	D_02	N	39	–
2	–	D_01	P	38	–
2	–	D_00	N	37	–
2	–	C_11	P	36	–
2	–	C_10	N	35	–
2	–	C_09	P	34	–
2	–	C_08	N	33	–
2	–	C_07	P	32	DQS-P
2	–	C_06	N	31	DQS-N
2	–	C_05	P	30	–
2	–	C_04	N	29	–
2	–	C_03	P	28	CCIO-P
2	–	C_02	N	27	CCIO-N
2	–	C_01	P	26	CCIO-P
2	ODT	C_00	N	25	CCIO-N
2	RAS_N	B_11	P	24	CCIO-P
2	CAS_N	B_10	N	23	CCIO-N
2	WE_N	B_09	P	22	CCIO-P
2	BA2	B_08	N	21	CCIO-N
2	CK_P	B_07	P	20	DQS-P
2	CK_N	B_06	N	19	DQS-N
2	BA1	B_05	P	18	–

Table 1-71: 64-Bit DDR3 Interface in Three Banks (Cont'd)

Bank	Signal Name	Byte Group	I/O Type	I/O Number	Special Designation
2	BA0	B_04	N	17	–
2	CS_N	B_03	P	16	–
2	CKE	B_02	N	15	–
2	A13	B_01	P	14	–
2	A12	B_00	N	13	–
2	A11	A_11	P	12	–
2	A10	A_10	N	11	–
2	A9	A_09	P	10	–
2	A8	A_08	N	9	–
2	A7	A_07	P	8	DQS-P
2	A6	A_06	N	7	DQS-N
2	A5	A_05	P	6	–
2	A4	A_04	N	5	–
2	A3	A_03	P	4	–
2	A2	A_02	N	3	–
2	A1	A_01	P	2	–
2	A0	A_00	N	1	–
2	VRN	–	SE	0	–
3	VRP	–	SE	49	–
3	DQ31	D_11	P	48	–
3	DQ30	D_10	N	47	–
3	DQ29	D_09	P	46	–
3	DQ28	D_08	N	45	–
3	DQS3_P	D_07	P	44	DQS-P
3	DQS3_N	D_06	N	43	DQS-N
3	DQ27	D_05	P	42	–
3	DQ26	D_04	N	41	–
3	DQ25	D_03	P	40	–
3	DQ24	D_02	N	39	–
3	DM3	D_01	P	38	–
3	–	D_00	N	37	–
3	DQ23	C_11	P	36	–
3	DQ22	C_10	N	35	–
3	DQ21	C_09	P	34	–

Table 1-71: 64-Bit DDR3 Interface in Three Banks (Cont'd)

Bank	Signal Name	Byte Group	I/O Type	I/O Number	Special Designation
3	DQ20	C_08	N	33	–
3	DQS2_P	C_07	P	32	DQS-P
3	DQS2_N	C_06	N	31	DQS-N
3	DQ19	C_05	P	30	–
3	DQ18	C_04	N	29	–
3	DQ17	C_03	P	28	CCIO-P
3	DQ16	C_02	N	27	CCIO-N
3	DM2	C_01	P	26	CCIO-P
3	–	C_00	N	25	CCIO-N
3	DQ15	B_11	P	24	CCIO-P
3	DQ14	B_10	N	23	CCIO-N
3	DQ13	B_09	P	22	CCIO-P
3	DQ12	B_08	N	21	CCIO-N
3	DQS1_P	B_07	P	20	DQS-P
3	DQS1_N	B_06	N	19	DQS-N
3	DQ11	B_05	P	18	–
3	DQ10	B_04	N	17	–
3	DQ9	B_03	P	16	–
3	DQ8	B_02	N	15	–
3	DM1	B_01	P	14	–
3	–	B_00	N	13	–
3	DQ7	A_11	P	12	–
3	DQ6	A_10	N	11	–
3	DQ5	A_09	P	10	–
3	DQ4	A_08	N	9	–
3	DQS0_P	A_07	P	8	DQS-P
3	DQS0_N	A_06	N	7	DQS-N
3	DQ3	A_05	P	6	–
3	DQ2	A_04	N	5	–
3	DQ1	A_03	P	4	–
3	DQ0	A_02	N	3	–
3	DM0	A_01	P	2	–
3	RESET_N	A_00	N	1	–
3	VRN	–	SE	0	–

Table 1-72 shows an example of a 72-bit DDR3 interface contained within three banks. This example is for a 4 Gb UDIMM using nine 4 Gb x8 components. The serial presence detect (SPD) pins are not used here. CB[7:0] is represented as DQ[71:64] and S0# as CS_N for consistency with the component design examples in Table 1-69, page 213, Table 1-70, page 215, and Table 1-71, page 218.

Table 1-72: 72-Bit DDR3 UDIMM Interface in Three Banks

Bank	Signal Name	Byte Group	I/O Type	I/O Number	Special Designation
1	VRP	–	SE	49	–
1	DQ63	D_11	P	48	–
1	DQ62	D_10	N	47	–
1	DQ61	D_09	P	46	–
1	DQ60	D_08	N	45	–
1	DQS7_P	D_07	P	44	DQS-P
1	DQS7_N	D_06	N	43	DQS-N
1	DQ59	D_05	P	42	–
1	DQ58	D_04	N	41	–
1	DQ57	D_03	P	40	–
1	DQ56	D_02	N	39	–
1	DM7	D_01	P	38	–
1	–	D_00	N	37	–
1	DQ55	C_11	P	36	–
1	DQ54	C_10	N	35	–
1	DQ53	C_09	P	34	–
1	DQ52	C_08	N	33	–
1	DQS6_P	C_07	P	32	DQS-P
1	DQS6_N	C_06	N	31	DQS-N
1	DQ51	C_05	P	30	–
1	DQ50	C_04	N	29	–
1	DQ49	C_03	P	28	CCIO-P
1	DQ48	C_02	N	27	CCIO-N
1	DM6	C_01	P	26	CCIO-P
1	–	C_00	N	25	CCIO-N
1	DQ47	B_11	P	24	CCIO-P
1	DQ46	B_10	N	23	CCIO-N
1	DQ45	B_09	P	22	CCIO-P
1	DQ44	B_08	N	21	CCIO-N

Table 1-72: 72-Bit DDR3 UDIMM Interface in Three Banks (Cont'd)

Bank	Signal Name	Byte Group	I/O Type	I/O Number	Special Designation
1	DQS5_P	B_07	P	20	DQS-P
1	DQS5_N	B_06	N	19	DQS-N
1	DQ43	B_05	P	18	–
1	DQ42	B_04	N	17	–
1	DQ41	B_03	P	16	–
1	DQ40	B_02	N	15	–
1	DM5	B_01	P	14	–
1	–	B_00	N	13	–
1	DQ39	A_11	P	12	–
1	DQ38	A_10	N	11	–
1	DQ37	A_09	P	10	–
1	DQ36	A_08	N	9	–
1	DQS4_P	A_07	P	8	DQS-P
1	DQS4_N	A_06	N	7	DQS-N
1	DQ35	A_05	P	6	–
1	DQ34	A_04	N	5	–
1	DQ33	A_03	P	4	–
1	DQ32	A_02	N	3	–
1	DM4	A_01	P	2	–
1	–	A_00	N	1	–
1	VRN	–	SE	0	–
2	VRP	–	SE	49	–
2	DQ71	D_11	P	48	–
2	DQ70	D_10	N	47	–
2	DQ69	D_09	P	46	–
2	DQ68	D_08	N	45	–
2	DQS8_P	D_07	P	44	DQS-P
2	DQS8_N	D_06	N	43	DQS-N
2	DQ67	D_05	P	42	–
2	DQ66	D_04	N	41	–
2	DQ65	D_03	P	40	–
2	DQ64	D_02	N	39	–
2	DM8	D_01	P	38	–
2	–	D_00	N	37	–

Table 1-72: 72-Bit DDR3 UDIMM Interface in Three Banks (Cont'd)

Bank	Signal Name	Byte Group	I/O Type	I/O Number	Special Designation
2	–	C_11	P	36	–
2	–	C_10	N	35	–
2	–	C_09	P	34	–
2	–	C_08	N	33	–
2	–	C_07	P	32	DQS-P
2	–	C_06	N	31	DQS-N
2	–	C_05	P	30	–
2	–	C_04	N	29	–
2	–	C_03	P	28	CCIO-P
2	ODT0	C_02	N	27	CCIO-N
2	CKE0	C_01	P	26	CCIO-P
2	CS_N0	C_00	N	25	CCIO-N
2	RAS_N	B_11	P	24	CCIO-P
2	CAS_N	B_10	N	23	CCIO-N
2	WE_N	B_09	P	22	CCIO-P
2	BA2	B_08	N	21	CCIO-N
2	CK_P	B_07	P	20	DQS-P
2	CK_N	B_06	N	19	DQS-N
2	BA1	B_05	P	18	–
2	BA0	B_04	N	17	–
2	A15	B_03	P	16	–
2	A14	B_02	N	15	–
2	A13	B_01	P	14	–
2	A12	B_00	N	13	–
2	A11	A_11	P	12	–
2	A10	A_10	N	11	–
2	A9	A_09	P	10	–
2	A8	A_08	N	9	–
2	A7	A_07	P	8	DQS-P
2	A6	A_06	N	7	DQS-N
2	A5	A_05	P	6	–
2	A4	A_04	N	5	–
2	A3	A_03	P	4	–
2	A2	A_02	N	3	–

Table 1-72: 72-Bit DDR3 UDIMM Interface in Three Banks (Cont'd)

Bank	Signal Name	Byte Group	I/O Type	I/O Number	Special Designation
2	A1	A_01	P	2	–
2	A0	A_00	N	1	–
2	VRN	–	SE	0	–
3	VRP	–	SE	49	–
3	DQ31	D_11	P	48	–
3	DQ30	D_10	N	47	–
3	DQ29	D_09	P	46	–
3	DQ28	D_08	N	45	–
3	DQS3_P	D_07	P	44	DQS-P
3	DQS3_N	D_06	N	43	DQS-N
3	DQ27	D_05	P	42	–
3	DQ26	D_04	N	41	–
3	DQ25	D_03	P	40	–
3	DQ24	D_02	N	39	–
3	DM3	D_01	P	38	–
3	–	D_00	N	37	–
3	DQ23	C_11	P	36	–
3	DQ22	C_10	N	35	–
3	DQ21	C_09	P	34	–
3	DQ20	C_08	N	33	–
3	DQS2_P	C_07	P	32	DQS-P
3	DQS2_N	C_06	N	31	DQS-N
3	DQ19	C_05	P	30	–
3	DQ18	C_04	N	29	–
3	DQ17	C_03	P	28	CCIO-P
3	DQ16	C_02	N	27	CCIO-N
3	DM2	C_01	P	26	CCIO-P
3	–	C_00	N	25	CCIO-N
3	DQ15	B_11	P	24	CCIO-P
3	DQ14	B_10	N	23	CCIO-N
3	DQ13	B_09	P	22	CCIO-P
3	DQ12	B_08	N	21	CCIO-N
3	DQS1_P	B_07	P	20	DQS-P
3	DQS1_N	B_06	N	19	DQS-N

Table 1-72: 72-Bit DDR3 UDIMM Interface in Three Banks (Cont'd)

Bank	Signal Name	Byte Group	I/O Type	I/O Number	Special Designation
3	DQ11	B_05	P	18	–
3	DQ10	B_04	N	17	–
3	DQ9	B_03	P	16	–
3	DQ8	B_02	N	15	–
3	DM1	B_01	P	14	–
3	–	B_00	N	13	–
3	DQ7	A_11	P	12	–
3	DQ6	A_10	N	11	–
3	DQ5	A_09	P	10	–
3	DQ4	A_08	N	9	–
3	DQS0_P	A_07	P	8	DQS-P
3	DQS0_N	A_06	N	7	DQS-N
3	DQ3	A_05	P	6	–
3	DQ2	A_04	N	5	–
3	DQ1	A_03	P	4	–
3	DQ0	A_02	N	3	–
3	DM0	A_01	P	2	–
3	RESET_N	A_00	N	1	–
3	VRN	–	SE	0	–

Debugging DDR3/DDR2 Designs

Calibration failures and data errors can occur for many reasons and the debug of these errors can be time consuming. This section is intended to provide a clear step-by-step debug process to quickly identify the root cause of the failure and move to resolution.

To focus the debug of calibration or data errors, use the provided MIG Example Design on the targeted board with the Debug Feature enabled through the MIG 7 series GUI. The latest MIG 7 series release should be used to generate the Example Design.

Finding Help on Xilinx.com

To help in the design and debug process when using the MIG IP core, the [Xilinx Support web page](#) contains key resources such as product documentation, release notes, answer records, information about known issues, and links for obtaining further product support.

Documentation

This product guide is the main document associated with the MIG IP core. This guide, along with documentation related to all products that aid in the design process, can be found on the [Xilinx Support web page](#) or by using the Xilinx Documentation Navigator.

Download the Xilinx Documentation Navigator from the [Downloads page](#). For more information about this tool and the features available, open the online help after installation.

Solution Centers

See the [Xilinx Solution Centers](#) for support on devices, software tools, and intellectual property at all stages of the design cycle. Topics include design assistance, advisories, and troubleshooting tips.

The Solution Center specific to the MIG IP core is located at the [Xilinx MIG Solution Center](#).

Answer Records

Answer Records include information about commonly encountered problems, helpful information on how to resolve these problems, and any known issues with a Xilinx product. Answer Records are created and maintained daily ensuring that users have access to the most accurate information available.

Answer Records for this core can also be located by using the Search Support box on the main [Xilinx support web page](#). To maximize your search results, use proper keywords such as:

- Product name
- Tool message(s)
- Summary of the issue encountered

A filter search is available after results are returned to further target the results.

Answer Record for the DDR2/DDR3 Cores Generated by MIG IP core

AR: [54025](#) for Vivado

Technical Support

Xilinx provides technical support at [Xilinx support web page](#) for this product when used as described in the product documentation. Xilinx cannot guarantee timing, functionality, or support if you do any of the following:

- Implement the solution in devices that are not defined in the documentation.
- Customize the solution beyond that allowed in the product documentation.
- Change any section of the design labeled DO NOT MODIFY.

To contact Xilinx Technical Support, navigate to the [Xilinx Support web page](#).

Note: Access to WebCase is not available in all cases. Log in to the WebCase tool to see your specific support options.

Debug Tools

There are many tools available to address MIG IP core design issues. It is important to know which tools are useful for debugging various situations.

Example Design

Generation of a DDR2 or DDR3 design through the MIG 7 series tool produces an example design and a user design. The example design includes a synthesizable test bench with a traffic generator that is fully verified in simulation and hardware. This example design can be used to observe the behavior of the MIG 7 series design and can also aid in identifying board-related issues. For complete details on the example design, see the [Quick Start Example Design, page 65](#). This section describes using the example design to perform hardware validation.

Debug Signals

The MIG 7 series tool includes a Debug Signals Control option on the FPGA Options screen. Enabling this feature allows calibration, tap delay, and read data signals to be monitored using the Vivado logic analyzer feature. Selecting this option port maps the debug signals to ILA VIO cores in the design top module. For details on enabling this debug feature, see the [“Using MIG in the Vivado Design Suite, page 21”](#). The debug port is disabled for functional simulation and can only be enabled if the signals are actively driven by the user design.

Note: “Debug Signals” are not available when using IP integrator but Integrated Logic Analyzer (ILA) insertion is still available on the synthesized DCP. For more information, see the *Vivado Design Suite User Guide: Programming and Debugging* (UG908) [\[Ref 16\]](#).

Vivado Design Suite Debug Feature

The Vivado Design Suite debug feature inserts ILA 3.0 and VIO 3.0 directly into your design. The debug feature also allows you to set trigger conditions to capture application and MIG debug signals in hardware. Captured signals can be analyzed through the Vivado logic analyzer feature. For more information about the Vivado logic see the *Vivado Design Suite User Guide: Programming and Debugging* (UG908) [\[Ref 16\]](#).



IMPORTANT: *The ILA operates on a synchronous clock and cannot be triggered during reset. Instead, set the trigger on an ILA signal to look for a rising edge (“R”) or falling edge (“F”) with the radix value of the signal set to “Binary.” With this trigger setting, the trigger can be armed. When the reset is applied and released, the trigger captures the desired ILA results.*

The Vivado logic analyzer feature snapshot is shown in [Figure 1-96](#). The [Hardware Debug](#) section has a snapshot of the older analyzer version but the debugging steps and data to be captured remain the same.

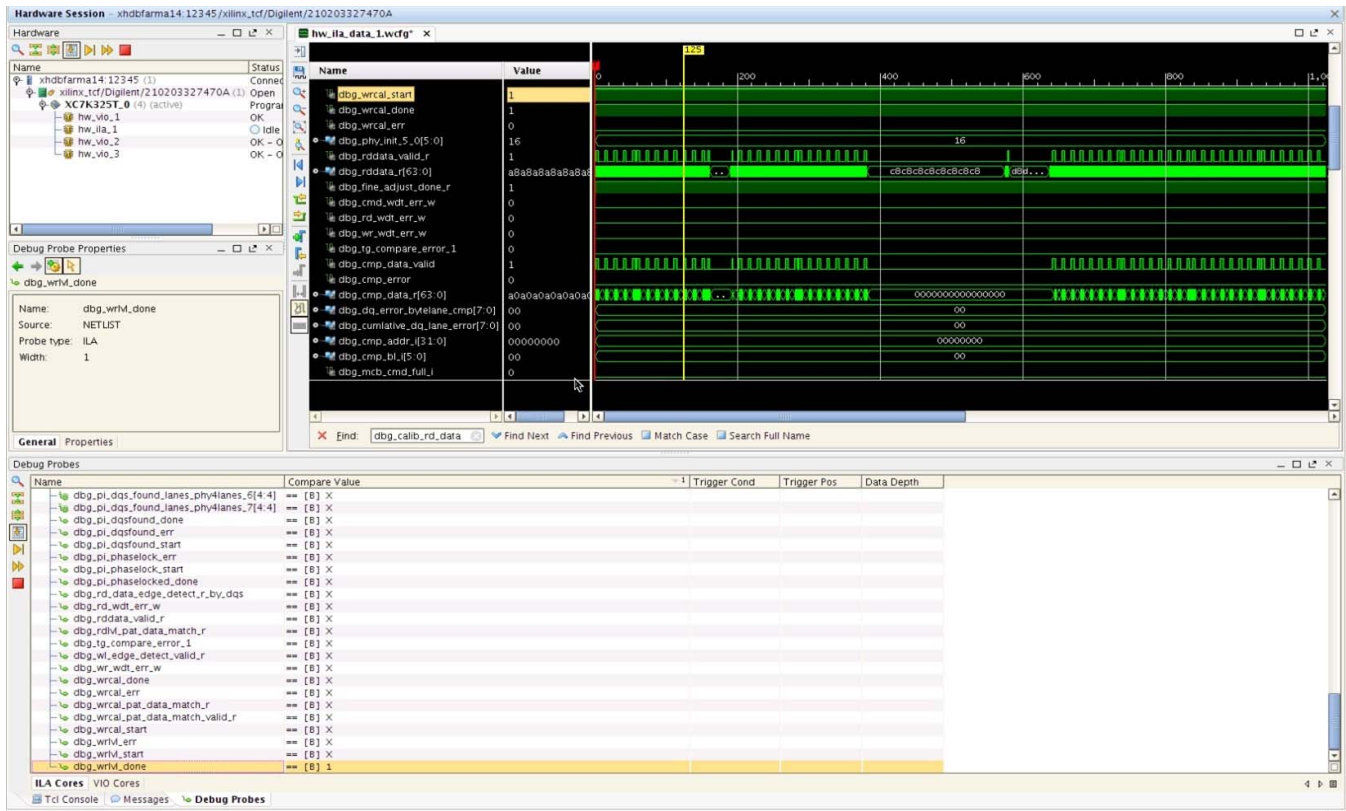


Figure 1-96: Vivado Analyzer Feature

Reference Boards

Various Xilinx development boards support MIG IP core that include FPGA interfaces to a DDR SODIMM. These boards can be used to prototype designs and establish that the core can communicate with the system.

- 7 series FPGA evaluation boards
 - VC707
 - KC705
 - AC701

Hardware Debug

Hardware issues can range from calibration failures to issues seen after hours of testing. This section provides debug steps for common issues. The Vivado logic analyzer feature is a valuable resource to use in hardware debug. The signal names mentioned in the following individual sections can be probed using the Vivado logic analyzer feature for debugging the specific issues.

Many of these common issues can also be applied to debugging design simulations. Details are provided on:

- [General Checks](#)
- [Calibration Stages](#)
- [Determine the Failing Calibration Stage](#)
- [Debug Signals](#)
- [Debugging PHASER_IN PHASELOCKED Calibration Failures \(dbg_pi_phaselock_err = 1\)](#)
- [Debugging PHASER_IN DQSFOUND Calibration Failures \(dbg_pi_dqsfound_err = 1\)](#)
- [Debugging Write Leveling Failures \(dbg_wrlvl_err = 1\)](#)
- [Debugging MPR Read Leveling Failures – DDR3 Only \(dbg_rdlvl_err\[1\] = 1\)](#)
- [Debugging OCLKDELAYED Calibration Failures](#)
- [Debugging Write Calibration Failures \(dbg_wrcal_err = 1\)](#)
- [Debugging Read Leveling Failures \(dbg_rdlvl_err\[0\] = 1\)](#)
- [Debugging PRBS Read Leveling Failures](#)
- [Calibration Times](#)
- [Debugging Data Errors](#)

General Checks

This section details the list of general checks, primarily board level, which need to be verified before moving forward with the debug process. Strict adherence to the proper board design is critical in working with high speed memory interfaces.

- Ensure all guidelines referenced in the [Design Guidelines](#) have been followed. The [Design Guidelines](#) section includes information on trace matching, PCB Routing, noise, termination, I/O Standards, and pin/bank requirements. Adherence to these guidelines, along with proper board design and signal integrity analysis, is critical to the success of high-speed memory interfaces.
- Measure all voltages on the board during idle and non-idle times to ensure the voltages are set appropriately and noise is within specifications.
 - Ensure the termination voltage regulator (V_{tt}) is turned on (set to 0.75V).
 - Ensure V_{REF} is measured.
- When applicable, check VRN/VRP resistors. Note the values are not the same as Virtex-6 FPGA.
- Look at the clock inputs to ensure they are clean.

- Check the reset to ensure the polarity is correct and the signal is clean. The reset signal must be applied for a minimum pulse width of 5 ns.
- Check terminations by using this user guide as a guideline.
- Perform general signal integrity analysis.
 - IBIS simulations should run to ensure terminations, ODT, and output drive strength settings are appropriate.
 - Observe DQ/DQS on a scope at the memory. View the alignment of the signals and analyze the signal integrity during both writes and reads.
 - Observe the Address and Command signals on a scope at the memory. View the alignment and analyze the signal integrity.
- Verify the memory parts on the board(s) in test are the correct part(s) set through the MIG tool. The timing parameters and signals widths (that is, address, bank address) must match between the RTL and physical parts. Read/write failures can occur due to a mismatch.
- Verify SDRAM pins are behaving correctly. Look for floating or grounded signals. It is rare, but manufacturing issues with the memory devices can occur and result in calibration failures.
- If Data Mask (DM) is not being used, ensure DM is tied Low at the memory with the appropriate termination as noted in the memory data sheet.
- Measure the CK/CK_n, DQS/DQS_n, and system clocks for duty cycle distortion and general signal integrity.
- If internal V_{REF} is used, ensure the constraints are set appropriately according to the Xilinx Constraints Guide. When the constraints are applied properly, a note similar to the following appears in the .bgn BitGen report file:
 - There were two CONFIG constraint(s) processed from example_top.pcf.
 CONFIG INTERNAL_VREF_BANK12 = 0.75
 CONFIG INTERNAL_VREF_BANK14 = 0.75
- Check the iodelay_ctrl ready signal.
- Check the PLL lock.
- Check the phaser_ref lock signal.
- Bring the init_calib_complete out to a pin and check with a scope.

Calibration Stages

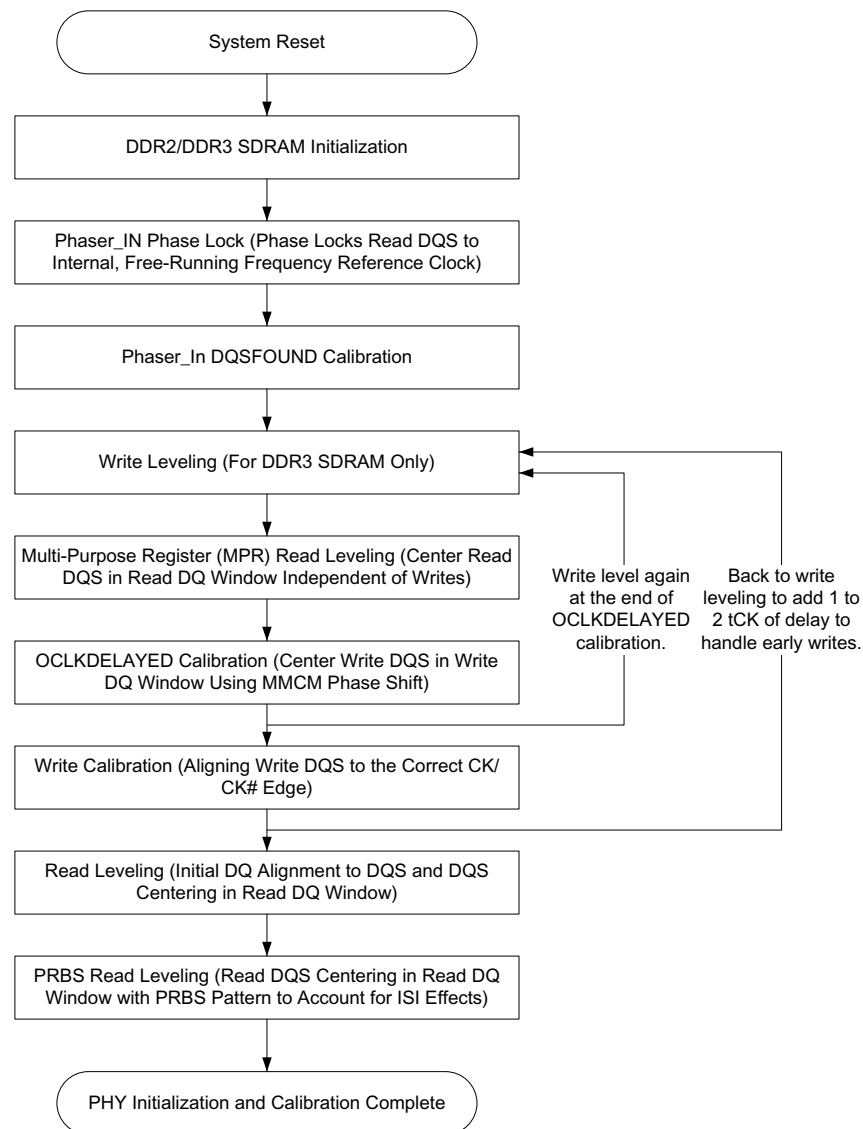


Figure 1-97: Calibration Stages

Memory Initialization

The PHY executes a JEDEC-compliant DDR2 or DDR3 initialization sequence following the deassertion of system reset. Each DDR2 or DDR3 SDRAM has a series of mode registers accessed through Mode Register Set (MRS) commands. These mode registers determine various SDRAM behaviors, such as burst length, read and write CAS latency, and additive latency. The MIG 7 series designs does not issue a calibration failure during Memory Initialization.

All other initialization/calibration stages are reviewed in the following Debugging Calibration Stages section.

Determine the Failing Calibration Stage

Using the Vivado logic analyzer feature, configure the device along with `debug_nets.ltx` file. This file can be found in the `example.runs\impl_1\` directory after implementation completes with `Debug_port` feature enabled. Observe the following debug signals in the provided ILA core. This indicates which calibration stage failed:

Table 1-73: DDR2/DDR3 Basic ILA Debug Signals

Signal Name	Description
<code>init_calib_complete</code>	Signifies memory initialization and calibration have completed successfully.
<code>dbg_wrlvl_start</code>	Signifies the start of the Write Leveling stage of calibration.
<code>dbg_wrlvl_done</code>	Signifies successful completion of the Write Leveling stage of calibration.
<code>dbg_wrlvl_err</code>	Signifies the Write Leveling stage of calibration exhibited errors and did not complete.
<code>dbg_pi_phaselock_start</code>	Signifies the start of the PHASELOCK stage of calibration.
<code>dbg_pi_phaselock_done</code>	Signifies successful completion of the PHASELOCK stage of calibration.
<code>dbg_pi_phaselock_err</code>	Signifies the PHASELOCK stage of calibration exhibited errors and did not complete.
<code>dbg_pi_dqsfound_start</code>	Signifies the start of the DQSFOUND stage of calibration.
<code>dbg_pi_dqsfound_done</code>	Signifies successful completion of the DQSFOUND stage of calibration.
<code>dbg_pi_dqsfound_err</code>	Signifies the DQSFOUND stage of calibration exhibited errors and did not complete.
<code>dbg_rdlvl_start[0]</code>	Signifies the start of Read Leveling Stage 1 calibration.
<code>dbg_rdlvl_start[1]</code>	Signifies the start of the MPR stage of calibration.
<code>dbg_rdlvl_done[0]</code>	Signifies the successful completion of Read Leveling Stage 1 calibration.
<code>dbg_rdlvl_done[1]</code>	Signifies the successful completion of the MPR Stage of calibration.
<code>dbg_rdlvl_err[0]</code>	Signifies Read Leveling Stage 1 calibration exhibited errors and did not complete.
<code>dbg_rdlvl_err[1]</code>	Signifies the MPR stage of calibration exhibited errors and did not complete.
<code>dbg_ockdelay_calib_start</code>	Signifies the start of the OCLKDELAY stage of calibration.
<code>dbg_ockdelay_calib_done</code>	Signifies successful completion of the OCLKDELAY stage of calibration.
<code>dbg_wrcal_start</code>	Signifies the start of the Write Calibration stage of calibration.
<code>dbg_wrcal_done</code>	Signifies successful completion of the Write Calibration stage of calibration.
<code>dbg_wrcal_err</code>	Signifies Write Calibration exhibited errors and did not complete.

Debug Signals

Table 1-74: DDR2/DDR3 Debug Signals

Signal Name	Description
ILA Signals (Status)	
dbg_init_calib_complete	Signifies memory initialization and calibration have completed successfully.
dbg_wrlvl_start	Signifies the start of the Write Leveling stage of calibration.
dbg_wrlvl_done	Signifies successful completion of the Write Leveling stage of calibration.
dbg_wrlvl_err	Signifies the Write Leveling stage of calibration exhibited errors and did not complete.
dbg_pi_phaselock_start	Signifies the start of the PHASELOCK stage of calibration.
dbg_pi_phaselocked_done	Signifies successful completion of the PHASELOCK stage of calibration.
dbg_pi_phaselock_err	Signifies the PHASELOCK stage of calibration exhibited errors and did not complete.
dbg_pi_dqsfound_start	Signifies the start of the DQSFOUND stage of calibration.
dbg_pi_dqsfound_done	Signifies successful completion of the DQSFOUND stage of calibration.
dbg_pi_dqsfound_err	Signifies the DQSFOUND stage of calibration exhibited errors and did not complete.
dbg_rdlvl_start[1]	Signifies the start of the MPR stage of calibration.
dbg_rdlvl_start[0]	Signifies the start of Read Leveling Stage 1 calibration.
dbg_rdlvl_done[1]	Signifies the successful completion of the MPR Stage of calibration.
dbg_rdlvl_done[0]	Signifies the successful completion of Read Leveling Stage 1 calibration.
dbg_rdlvl_err[1]	Signifies Read Leveling Stage 1 calibration exhibited errors and did not complete
dbg_rdlvl_err[0]	Signifies the MPR stage of calibration exhibited errors and did not complete.
dbg_ockdelay_calib_start	Signifies the start of the OCLKDELAY stage of calibration.
dbg_ockdelay_calib_done	Signifies successful completion of the OCLKDELAY stage of calibration.
dbg_wrcal_start	Signifies the start of the Write Calibration stage of calibration.
dbg_wrcal_done	Signifies successful completion of the write calibration stage of calibration.
dbg_wrcal_err	Signifies write calibration exhibited errors and did not complete.
dbg_phy_init_5_0	State variable for the PHY Init state machine. States can be decoded in the ddr_phy_init module.
dbg_rddata_valid_r	Asserts when the read data (dbg_rddata_r) is valid.

Table 1-74: DDR2/DDR3 Debug Signals (Cont'd)

Signal Name	Description
dbg_rddata_r	Read data read out of the IN_FIFO for the DQS group selected through dbg_dqs on the VIO. This is a 64-bit bus. This debug port does not capture ECC data.
dbg_fine_adjust_done_r	Asserts after fine adjustment is completed in DQS found calibration.
dbg_cmd_wdt_err_w	Watch dog timeout error from Traffic Generator when the user interface is not processing the command from traffic generator.
dbg_rd_wdt_err_w	Watch dog timeout error from Traffic Generator when no read data is available from the user interface.
dbg_wr_wdt_err_w	Watch dog timeout error from Traffic Generator when no write data is taken by the user interface.
dbg_tg_compare_error	Sticky bit from the internal Traffic Generator asserted when a data error is found after calibration is completed.
dbg_cmp_data_valid	Valid signal showing that the compare data from Traffic Generator is valid.
dbg_cmp_error	Asserts when compare data is not matching the read data from User Interface.
dbg_cmp_data_r	Register version of compare data from the Traffic Generator.
dbg_dq_error_bytelane_cmp	Indicates which byte has data comparison error for the Traffic Generator.
dbg_cumulative_dq_lane_error	Indicates which byte has data comparison error for the Traffic Generator. This is a sticky status signal and stays asserted until cleared manually using the dbg_clear_error.
dbg_cmp_addr_i	The start address of the burst for which the first data error occurred.
dbg_cmp_bl_i	Burst length of the burst for which the first data error occurred.
dbg_mcb_cmd_full_i	Memory Controller command FIFO full status when the first data error occurred
dbg_mcb_wr_full_i	Memory Controller write data FIFO full status when the first data error occurred.
dbg_mcb_rd_empty_i	Memory Controller read data FIFO empty status when the first data error occurred.
dbg_ddrx_ila_rdp_path_765_764[0]	Signifies PRBS Read Level Stage Start
dbg_ddrx_ila_rdp_path_765_764[1]	Signifies PRBS Read Level Stage Done
dbg_wl_state_r	State variable for the Write Leveling State Machine. States can be decoded in the ddr_phy_wrlvl.v module.
dbg_dqs_cnt_r	Signifies the DQS byte group being calibrated during Write Leveling. The algorithm sequentially steps through the DQS byte groups until Write Leveling completes successfully or a data byte group fails due a 0 to 1 transition not being detected on DQ.
dbg_wl_edge_detect_valid_r	Signifies valid time Write Leveling algorithm is searching for edge.
dbg_rd_data_edge_detect_r_by_dqs	Signifies Write Leveling calibration found the 0 to 1 edge transition.

Table 1-74: DDR2/DDR3 Debug Signals (Cont'd)

Signal Name	Description
dbg_wl_po_fine_cnt_by_dqs	PHASER_OUT Fine Taps found during Write Leveling. Byte capture based on VIO dbg_dqs setting.
dbg_wl_po_coarse_cnt_by_dqs	PHASER_OUT Coarse Taps found during Write Leveling. Byte capture based on VIO dbg_dqs setting.
dbg_phy_oclkdelay_zfo	OCLKDELAY edge found indicator. {z2f, o2f, f2z, f2o}.
dbg_ocal_fuzz2oneeighty	Stage 3 tap value of the left-edge of the fall window.
dbg_ocal_fuzz2zero	fuzz2zero Stage 3 tap value of the left-edge of the rise window.
dbg_ocal_oneeighty2fuzz	oneeighty2fuzz Stage 3 tap value of the right-edge of the fall window.
dbg_ocal_zero2fuzz	Stage 3 tap value of the right-edge of the rise window.
dbg_ocal_oclkdelay_calib_cnt	DQS group counter indicates which DQS group is in OCLKDELAY calibration.
dbg_ocal_scan_win_not_found	Indicator that window is not found during OCLKDELAY calibration.
dbg_wrcal_pat_data_match_r	Asserts when the data pattern match is found during Write Calibration stage.
dbg_wrcal_pat_data_match_valid_r	Acts as a qualifier and asserts when the data pattern match is valid during Write Calibration stage.
dbg_wrcal_dqs_cnt_r	Current DQS group being calibrated in Write Calibration. When wrcal_start asserts, wrcal_dqs_cnt_r is 0. The algorithm sequentially steps through the DQS byte groups checking to see if the read data pattern matches the expected FF00AA5555AA9966 pattern. If the pattern matches, wrcal_dqs_cnt increments by 1. The algorithm then starts looking for the correct data pattern on the next byte until it reaches DQS_WIDTH – 1 or a data byte group fails due to the data pattern not being detected properly. The wrcal_dqs_cnt stays at DQS_WIDTH – 1 after wrcal_done signal is asserted.
cal2_state_r	Write Calibration state machine variable. States can be decoded in the ddr_phy_wrcal.v module.
not_empty_wait_cnt	Count value during Write Calibration pattern detection. Maximum count is 0x1F. If count reaches 0x1F, write calibration fails with the assertion of dbg_wrcal_err.
dbg_early1_data	Asserts when the pattern detected is one CK clock cycle early. When this is asserted, the Write Leveling algorithm moves the CK clock one cycle. After CK is moved, the Write Calibration algorithm restarts pattern detection.
dbg_early2_data	Asserts when the pattern detected is two CK clock cycles early. When this is asserted, the Write Leveling algorithm moves the CK clock two cycles. After CK is moved, the Write Calibration algorithm restarts pattern detection.
dbg_phy_oclkdelay_cal_57_54	Current DQS group being calibrated from OCLK_DELAY calibration stage.
dbg_phy_wrlvl_128_75	PHASER_OUT Fine Taps found during Write Leveling for all bytes
dbg_phy_wrlvl_155_129	PHASER_OUT Coarse Taps found during Write Leveling for all bytes.

Table 1-74: DDR2/DDR3 Debug Signals (Cont'd)

Signal Name	Description
dbg_pi_phase_locked_phy4lanes	<p>Signifies which of the PHASER_IN lanes has achieved lock. It is a 12-bit bus, three nibble data.</p> <p>Each nibble corresponds to a bank information. Uppermost Data or Address/Control byte group selected bank is referred to as Bank0, this corresponds to nibble 0 or Bits[3:0] of the bus. Numbering of banks is 0, 1, and 2 from top to bottom. Bank1 corresponds to nibble 1 or Bits[7:4] of the bus. Bank2 corresponds to nibble 2 or Bits[11:8] of the bus.</p> <p>LSB to MSB bits in each nibble corresponds to T3 to T0 byte lane information of the corresponding bank.</p> <p>For example, Nibble 0, Bit[3] corresponds to T0 byte lane, Bit[2] corresponds to T1 byte lane, Bit[1] corresponds to T2 byte lane, Bit[0] corresponds to T3 byte lane information.</p>
dbg_pi_dqs_found_lanes_phy4lanes	<p>Signifies which of the PHASER_IN lanes is able to find the DQS. It is a 12-bit bus, three nibble data.</p> <p>Each nibble corresponds to a bank information. Uppermost Data or Address/Control byte group selected bank is referred to as Bank0, this corresponds to nibble 0 or Bits[3:0] of the bus. Numbering of banks is 0, 1, and 2 from top to bottom. Bank1 corresponds to nibble 1 or Bits[7:4] of the bus. Bank2 corresponds to nibble 2 or Bits[11:8] of the bus.</p> <p>LSB to MSB bits in each nibble corresponds to T3 to T0 byte lane information of the corresponding bank.</p> <p>For example, Nibble 0, Bit[3] corresponds to T0 byte lane, Bit[2] corresponds to T1 byte lane, Bit[1] corresponds to T2 byte lane, Bit[0] corresponds to T3 byte lane information.</p>
dbg_rd_data_offset	Read data offset found during calibration.
dbg_cal1_state_r	State machine variable for MPR and Read Leveling Stage 1. States can be decoded in the ddr_phy_rdlvl.v module.
dbg_cal1_cnt_cpt_r	Signifies the byte that failed MPR Read Leveling or Read Leveling Stage 1.
dbg_mux_rd_rise0_r	Data pattern received on rising edge 0.
dbg_mux_rd_fall0_r	Data pattern received on falling edge 0.
dbg_mux_rd_rise1_r	Data pattern received on rising edge 1.
dbg_mux_rd_fall1_r	Data pattern received on falling edge 1.
dbg_mux_rd_rise2_r	Data pattern received on rising edge 2.
dbg_mux_rd_fall2_r	Data pattern received on falling edge 2.
dbg_mux_rd_rise3_r	Data pattern received on rising edge 3.
dbg_mux_rd_fall3_r	Data pattern received on falling edge 3.
dbg_rdlvl_pat_data_match_r	Asserts when the valid pattern is detected on the data and is found to match with the expected pattern sent during read leveling.

Table 1-74: DDR2/DDR3 Debug Signals (Cont'd)

Signal Name	Description
dbg_mux_rd_valid_r	Asserts when the valid pattern is detected on dbg_mux_rd_rise0_r, dbg_mux_rd_fall0_r, dbg_mux_rd_rise1_r, dbg_mux_rd_fall1_r, dbg_mux_rd_rise2_r, dbg_mux_rd_fall2_r, dbg_mux_rd_rise3_r, and dbg_mux_rd_fall3_r.
dbg_cpt_first_edge_cnt_by_dqs	Signifies PHASER_IN fine tap count when the first edge in MPR and Read Leveling Stage 1 is found. Byte capture based on VIO dbg_dqs setting.
dbg_cpt_second_edge_cnt_by_dqs	Signifies PHASER_IN fine tap count when then second edge in MPR and Read Leveling Stage 1 is found. Byte capture based on VIO dbg_dqs setting.
dbg_cpt_tap_cnt_by_dqs	Signifies the center tap moved to based on when the first and second edges were found. Byte capture based on VIO dbg_dqs setting.
dbg_dq_idelay_tap_cnt_by_dqs	IDELAY tap value for MPR and Read Leveling Stage 1. This should be within 2 to 3 taps across all DQS byte groups. Byte capture based on VIO dbg_dqs setting.
dbg_dbg_calib_rd_data_offset_1	Read data offset found during calibration.
dbg_dbg_calib_rd_data_offset_2	Read data offset found during calibration.
dbg_data_offset	Data Offset used during normal operation. Value changes during writes, reads, and idle. During writes, it is CWL + 2+slot#. During non-data commands, it is 0. During reads, it should match what was found during DQSFOUND calibration (rd_data_offset_ranks).
dbg_data_offset_1	Data Offset used during normal operation. Value changes during writes, reads, and idle. During writes, it is CWL + 2+slot#. During non-data commands, it is 0. During reads, it should match what was found during DQSFOUND calibration (rd_data_offset_ranks).
dbg_data_offset_2	Data Offset used during normal operation. Value changes during writes, reads, and idle. During writes, it is CWL + 2+slot#. During non-data commands, it is 0. During reads, it should match what was found during DQSFOUND calibration (rd_data_offset_ranks).
dbg_cpt_first_edge_cnt	Signifies PHASER_IN fine tap count when the first edge in MPR and Read Leveling Stage 1 is found.
dbg_cpt_second_edge_cnt	Signifies PHASER_IN fine tap count when then second edge in MPR and Read Leveling Stage 1 is found.
dbg_cpt_tap_cnt	Center PHASER_IN fine tap value in MPR or Read Leveling Stage 1 is found.
dbg_dq_idelay_tap_cnt	IDELAY tap value for MPR and Read Leveling Stage 1. This should be within 2 to 3 taps across all DQS byte groups. Byte capture based on VIO dbg_dqs setting.
dbg_prbs_rdlvl	Debug signals of PRBS Read Level Stage.
dbg_ocal_lim_done	Indicates that stage 3 lower and upper limits have been determined.
dbg_ocal_stg3_lim_left	Stage 3 lower limit.
dbg_ocal_stg3_lim_right	Stage 3 upper limit.
dbg_ocal_center_calib_start	OCLKDELAY center calibration start indicator.

Table 1-74: DDR2/DDR3 Debug Signals (Cont'd)

Signal Name	Description
dbg_wcal_mux_rd_rise0_r	Data pattern received on the Write Calibration stage MUX on rising edge 0.
dbg_wcal_mux_rd_fall0_r	Data pattern received on the Write Calibration stage MUX on falling edge 0.
dbg_wcal_mux_rd_rise1_r	Data pattern received on the Write Calibration stage MUX on rising edge 1.
dbg_wcal_mux_rd_fall1_r	Data pattern received on the Write Calibration stage MUX on falling edge 1.
dbg_wcal_mux_rd_rise2_r	Data pattern received on the Write Calibration stage MUX on rising edge 2.
dbg_wcal_mux_rd_fall2_r	Data pattern received on the Write Calibration stage MUX on falling edge 2.
dbg_wcal_mux_rd_rise3_r	Data pattern received on the Write Calibration stage MUX on rising edge 3.
dbg_wcal_mux_rd_fall3_r	Data pattern received on the Write Calibration stage MUX on falling edge 3.
dbg_early1_data_match_r	Asserts when the pattern detected is one CK clock cycle early and a match is found during Write Calibration.
dbg_early2_data_match_r	Asserts when the pattern detected is two CK clock cycle early and a match is found during Write Calibration.
dbg_wcal_sanity_pat_data_match_valid_r	Asserts when the valid pattern is detected on the data and is found to match with the expected pattern sent during Write Calibration sanity check.
dbg_prbs_final_dqs_tap_cnt_r	Tap values set at the end of PRBS Read Leveling stage.
dbg_prbs_first_edge_taps	Tap value when the first edge is found during PRBS Read Leveling stage calibration.
dbg_prbs_second_edge_taps	Tap value when the second edge is found during PRBS Read Leveling stage calibration.
dbg_ocal_center_calib_done	OCLKDELAY center calibration completing indicator.
dbg_phy_ockdelay_cal_taps	Final stage 3 tap values for all the bytes in the interface. Bits[5:0] for byte 0 and Bits[11:6] for byte 1.
dbg_ocal_tap_cnt	Stage 3 tap value during calibration for each group.
VIO Signals (Control)	
dbg_bit	Currently Unused
dbg_dqs	Input to select DQS byte for which the ILA displays the tap counts of PHASER_OUT. For example, set to 4'b0000 to view the results on DQS[0].
vio_modify_enable	See Table 1-83 .
vio_data_mode_value	See Table 1-83 .
vio_addr_mode_value	See Table 1-83 .

Table 1-74: DDR2/DDR3 Debug Signals (Cont'd)

Signal Name	Description
vio_instr_mode_value	See Table 1-83.
vio_bl_mode_value	See Table 1-83.
vio_fixed_bl_value	See Table 1-83.
vio_data_mask_gen	Enables Traffic Generator Data Mask Generation
vio_pause_traffic	See Table 1-83.
vio_fixed_instr_value	See Table 1-83.
dbg_clear_error	See Table 1-83.
vio_tg_rst	Currently Unused
wdt_en_w	Enable Watch Dog Timer in Traffic Generator
win_start	See Table 1-85.
win_sel_pi_pon	See Table 1-85.
vio_dbg_sel_pi_incdec	See Table 1-85.
vio_dbg_sel_po_incdec	See Table 1-85.
vio_dbg_pi_f_inc	See Table 1-85.
vio_dbg_pi_f_dec	See Table 1-85.
vio_dbg_po_f_inc	See Table 1-85.
vio_dbg_po_f_dec	See Table 1-85.
vio_dbg_po_f_stg23_sel	See Table 1-85.
vio_win_byte_select_inc	See Table 1-85.
vio_win_byte_select_dec	See Table 1-85.
vio_sel_mux_rdd[3:0]	See Table 1-85.
vio_tg_simple_data_sel	Currently Unused
VIO Signals (Status)	
win_start	Status signal reflecting the logic level of win_start input.
dbg_pi_counter_read_val	See Table 1-85.
pi_win_left_ram_out	See Table 1-85.
pi_win_right_ram_out	See Table 1-85.
win_active	See Table 1-85.
dbg_win_chk	Debug signals from window margin check module. See _chk_win.v file for details.
win_current_bit	Unused for DDR3 Interface
win_current_byte[3:0]	See Table 1-85.
win_byte_select	See Table 1-85.
po_win_left_ram_out	See Table 1-85.
po_win_right_ram_out	See Table 1-85.

Table 1-74: DDR2/DDR3 Debug Signals (Cont'd)

Signal Name	Description
dbg_po_counter_read_val	See Table 1-85.
dbg_mem_pattern_init_done	Signal that indicates initial write to the memory is completed.
dbg_tg_compare_error	Sticky bit indicating the error in data transfer after calibration is done.
dbg_tg_wr_data_counts	Counter for the number of bytes written by the Traffic Generator.
dbg_tg_rd_data_counts	Counter for the number of bytes read by the Traffic Generator.

Debugging PHASER_IN PHASELOCKED Calibration Failures (dbg_pi_phaselock_err = 1)

Calibration Overview

During this stage of calibration, each PHASER_IN is placed in the read calibration mode to phase align its free-running frequency reference clock to the associated read DQS. The calibration logic issues back-to-back read commands to provide the PHASER_IN block with a continuous stream of DQS pulses for it to achieve lock. Each DQS has an associated PHASER_IN block. dbg_pi_phase_locked asserts when all PHASER_INs have achieved lock and the PHASER_INs are then placed in normal operation mode.

Debug

If PHASER_IN PHASELOCKED calibration failed, probe the DQS at the memory. A continuous stream of DQS pulses must be seen for lock to occur. Verify the signal integrity of the DQS pulses.

Debugging PHASER_IN DQSFOUND Calibration Failures (dbg_pi_dqsfound_err = 1)

Calibration Overview

In this stage of calibration, the different DQS groups in an I/O bank are aligned to the same PHY_Clk and the optimal read data offset position is found with respect to the read command. The calibration logic issues a set of four back-to-back reads with gaps in between. Each PHASER_IN detects the read DQS preamble. A single read data offset value is determined for all DQS groups in an I/O bank. The PHASER_OUT stage 2 delay for CK/Address/Command/Control byte lanes are increased and decreased to improve margin on the read DQS preamble detected. This read data offset is then used during read requests to the PHY_CONTROL block.

Debug

- If the DQSFOUND stage fails, probe DQS at the memory. Sets of four back-to-back reads should be seen. Read DQS(s) is required by the PHASER_IN(s) to establish the

`read_data_offset` value. If the design is stuck in the `DQSFOUND` stage, start observing the quality of `DQS` at the memory.

- Look at the `read_data_offset` values. There are two sets of `read_data_offset` values that need to be compared.
 - To determine the read data offset found at the end of `DQSFOUND` calibration, look at `dbg_rd_data_offset_0`, `dbg_calib_data_offset_1` (only when more than one bank is used), `dbg_calib_data_offset_2` (only when three banks are used).
 - To determine the data offset used during normal operation reads, look at `dbg_data_offset`, `dbg_data_offset_1` (only when more than one bank is used), and `dbg_data_offset_2` (only when three banks are used).
 - These signals change between reads, writes, and non-data commands. During writes, the value is $CWL + 2 + \text{slot\#}$. During non-data commands, the value is 0. During reads, the value should match what was found during `DQSFOUND` calibration (`dbg_rd_data_offset_0`, `dbg_rd_data_offset_1`, and `dbg_rd_data_offset_2`).
- Compare the read data offset values used during calibration and normal operation reads. These values should match for reads with even CWL and be off by 1 for reads with odd CWL. One additional offset is added for odd CWL values because reads/writes are assigned to slot1 by the Memory Controller, whereas slot0 is used for even CWL.
- The read data offset should be equal to or greater than CL (Read Latency) + 4 or 5 memory cycles of round trip delay on the PCB. For DDR2 interfaces at lower frequencies, it is possible for read data offset to equal CL (Read Latency).
- The PHASER_OUT stage 2 delay for `CK/Address/Command/Control` byte lanes should also be observed for differences between passing and failing cases. The `CK` PHASER_OUT stage 2 delay can be observed in Vivado logic analyzer using the `dbg_po_counter_read_val` signal with `dbg_pi_dqsfound_done` as the trigger.
- When this stage fails (`pi_dqsfound_err = 1`), look to see if any of the `dbg_calib_rd_data_offset/_1/_2` have calculated offsets. If not, focus on the `DQS` signals associated with the failing bank by probing each and analyzing the signal integrity.

If `pi_dqsfound_err` asserted, denoting a failure during `DQSFOUND` calibration, use `pi_dqsfound_err = R` as the trigger. If this stage completed successfully with the asserting of `pi_dqsfound_done = 1`, use `pi_dqsfound_done = R` as the trigger to analyze how the stage completed.

Look at `dbg_rd_data_offset`, `dbg_calib_rd_data_offset_1`, and `dbg_calib_rd_data_offset_2`, these values should vary by one at the most. Next, compare these values to the values used during normal operation reads on the `dbg_data_offset`, `dbg_data_offset_1` and `dbg_data_offset_2` signals. Record the results in the "7 Series DDR3 Calibration Results" spreadsheet.

Table 1-75: Debug Signals of Interest for DQSFOUND Calibration

Signal Name	Description
dbg_pi_dqsfound_start	Signifies the start of the DQSFOUND stage of calibration.
dbg_pi_dqsfound_done	Signifies successful completion of the DQSFOUND stage of calibration.
dbg_pi_dqsfound_err	Signifies the DQSFOUND stage of calibration exhibited errors and did not complete.
dbg_rd_data_offset_0	Read Data Offset found during calibration.
dbg_calib_rd_data_offset_1	Read Data Offset found during calibration.
dbg_calib_rd_data_offset_2	Read Data Offset found during calibration.
dbg_data_offset	Data Offset used during normal operation. Value changes during writes, reads, and idle. During writes, it is CWL+2+slot#. During non-data commands, it is 0. During reads, it should match what was found during DQSFOUND calibration (rd_data_offset_ranks).
dbg_data_offset_1	Data Offset used during normal operation. Value changes during writes, reads, and idle. During writes, it is CWL+2+slot#. During non-data commands, it is 0. During reads, it should match what was found during DQSFOUND calibration (rd_data_offset_ranks).
dbg_data_offset_2	Data Offset used during normal operation. Value changes during writes, reads, and idle. During writes, it is CWL+2+slot#. During non-data commands, it is 0. During reads, it should match what was found during DQSFOUND calibration (rd_data_offset_ranks).

Expected Vivado Logic Analyzer Tool Results

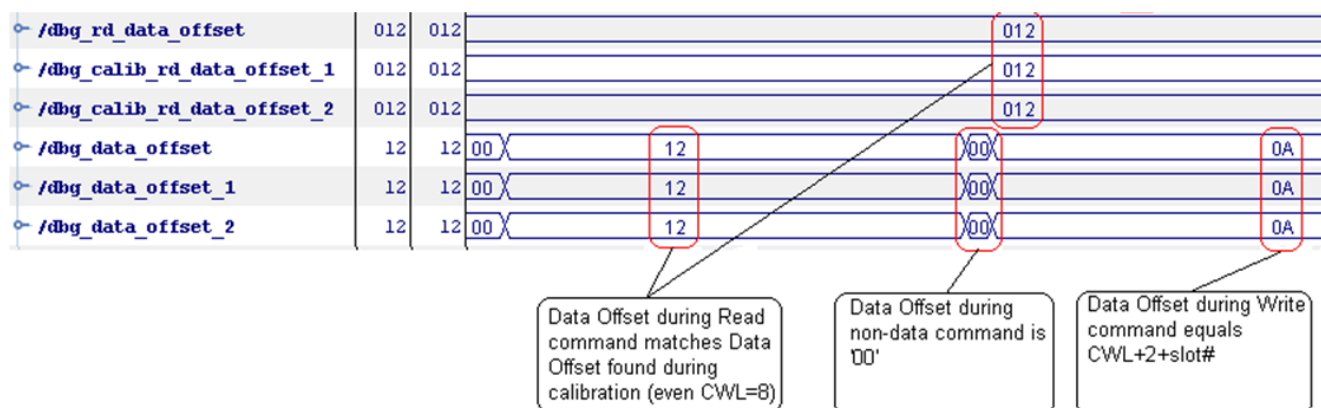


Figure 1-98: Expected Vivado Logic Analyzer Tool Results

Debugging Write Leveling Failures (*dbg_wrlvl_err = 1*)

Calibration Overview

Write leveling, a new feature in DDR3 SDRAMs, allows the controller to adjust each write DQS phase independently with respect to the CK forwarded to the DDR3 SDRAM device. This compensates for the skew between DQS and CK and meets the t_{DQSS} specification. During this stage, the PHY logic asserts the Write_Calib_N input to the PHY Control block to indicate the start of write leveling. Periodic write requests are issued to the PHY Control block to generate periodic DQS pulses. The PHASER_IN outputs a free-running clock to capture the DQ feedback into the DQ IN_FIFOs. The PHASER_OUT fine and coarse taps are used to phase shift DQS one tap at a time until a 0-to-1 transition is seen on the feedback DQ.

Write Leveling is performed at three different points during the calibration process. After memory initialization completes, the PHASER_OUT fine and coarse taps are set to zero. Write Leveling is then initially performed to align DQS to CK. After OCLKDELAYED calibration completes, the coarse tap values found during the initial Write Leveling are carried over and the fine taps are reset to zero. Write Leveling is performed again to ensure the DQS-to-CK relationship is still correct.

Finally, during Write Calibration both the fine and coarse delays are carried over and final adjustments are made when necessary. During Write Calibration, the appropriate pattern must be detected. If Write Leveling aligned DQS to the wrong CK clock, final PHASER_OUT fine/coarse delay adjustments are required to move DQS up to two CK clock cycles. This section shows how to capture the Write Leveling results after each of these adjustments.

Debug

- Verify DQS is toggling on the board. The FPGA sends DQS during Write Leveling. If DQS is not toggling, something is wrong with the setup and the General Checks section of this answer record should be thoroughly reviewed.
- Verify fly-by-routing is implemented correctly on the board.
- Verify CK to DQS trace routing. The CK clocks should be longer than DQS. The recommended value for additional total electrical delay on CK/CK# relative to DQS/DQS# is 150 ps, but any value greater than 0 ps is acceptable.
- The Mode Registers must be properly set up to enable Write Leveling. Specifically, address bit A7 must be correct. If the part chosen in the MIG tool is not accurate or there is an issue with the connection of the address bits on the board, this could be an issue. If the Mode Registers are not set up to enable Write Leveling, the 0-to-1 transition is not seen.

Note: For dual rank design when address mirroring is used, address bit A7 is not the same between the two ranks.

- When `dbg_wrlvl_err` asserts (equals 1), users must determine during which of the three different stages write leveling is performed the failure occurred. Set the ILA trigger to `dbg_wrlvl_err = R` and look at the other “DDR Basic” signals to see which stages completed.
 - a. If only PHASELOCK and DQSFOUND completed, the write leveling failure occurred during the initial run through.
 - b. If `dbg_wrcal_start` did not assert, the write leveling failure occurred after OCLKDELAYED calibration.
 - c. If `dbg_wrcal_start` asserted but `dbg_wrcal_done` did not, the write leveling failure occurred during the final run through during Write Calibration.
- When `dbg_wrlvl_done` asserts (equals 1) and the results of each Write Leveling stage is of interest, separately use the following three ILA triggers to capture the Write Leveling tap results for each stage. Seeing how Write Leveling completed is useful to see how far apart the taps are for different DQS byte groups.
 - a. `dbg_wrlvl_done = R`
 - b. `dbg_wrcal_start = R`
 - c. `init_calib_complete = R`
- To capture the write leveling results at each stage, change/increment `dbg_dqs` on the VIO and set the appropriate trigger as noted above. Look at the taps results and record in the “7 Series DDR3 Calibration Results” spreadsheet. Later releases of the MIG tool include results for all DQS byte groups removing the need to use `dbg_dqs`.

Note: The tap variance across DQS byte groups is quite different due to fly-by routing.

Table 1-76: Debug Signals of Interest for Write Leveling Calibration

Signal Name	Description
dbg_wrlvl_start	Signifies the start of the Write Leveling stage of calibration.
dbg_wrlvl_done	Signifies successful completion of the Write Leveling stage of calibration.
dbg_wrlvl_err	Signifies the Write Leveling stage of calibration exhibited errors and did not complete.
wl_state_r	State variable for the Write Leveling State Machine. States can be decoded in the ddr_phy_wrlvl.v module.
dbg_dqs_cnt_r	Signifies the DQS byte group being calibrated during Write Leveling. The algorithm sequentially steps through the DQS byte groups until write leveling completes successfully or a data byte group fails due a 0 to 1 transition not being detected on DQ.
dbg_wl_edge_detect_valid_r	Signifies valid time Write Leveling algorithm is searching for edge.
dbg_rd_data_edge_detect_r_by_dqs	Signifies Write Leveling calibration found the 0-to-1 edge transition.
dbg_wl_po_fine_cnt_by_dqs	PHASER_OUT Fine Taps found during Write Leveling. Byte capture based on VIO dbg_dqs setting.
dbg_phy_wrlvl_128_75	PHASER_OUT Fine Taps found during Write Leveling.
dbg_wl_po_coarse_cnt_by_dqs	PHASER_OUT Coarse Taps found during Write Leveling. Byte capture based on VIO dbg_dqs setting.
dbg_phy_wrlvl_155_129	PHASER_OUT Coarse Taps found during Write Leveling.

Expected Vivado Logic Analyzer Tool Results

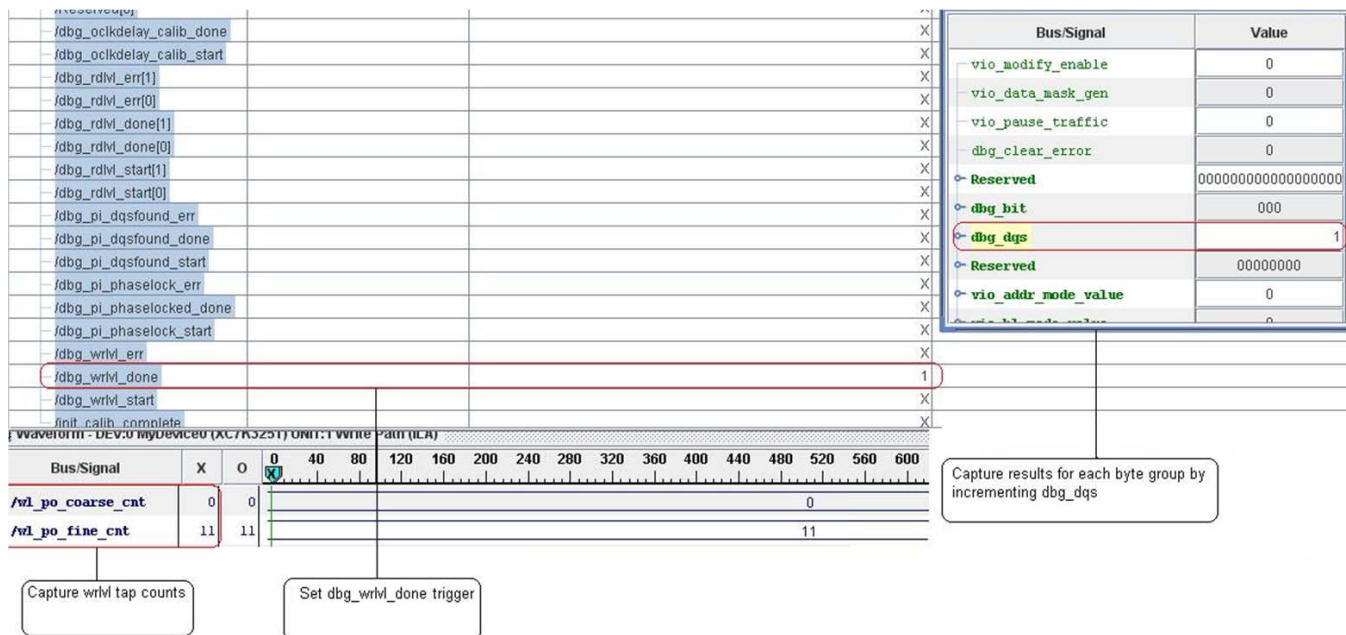


Figure 1-99: Trigger = dbg_wrlvl_done

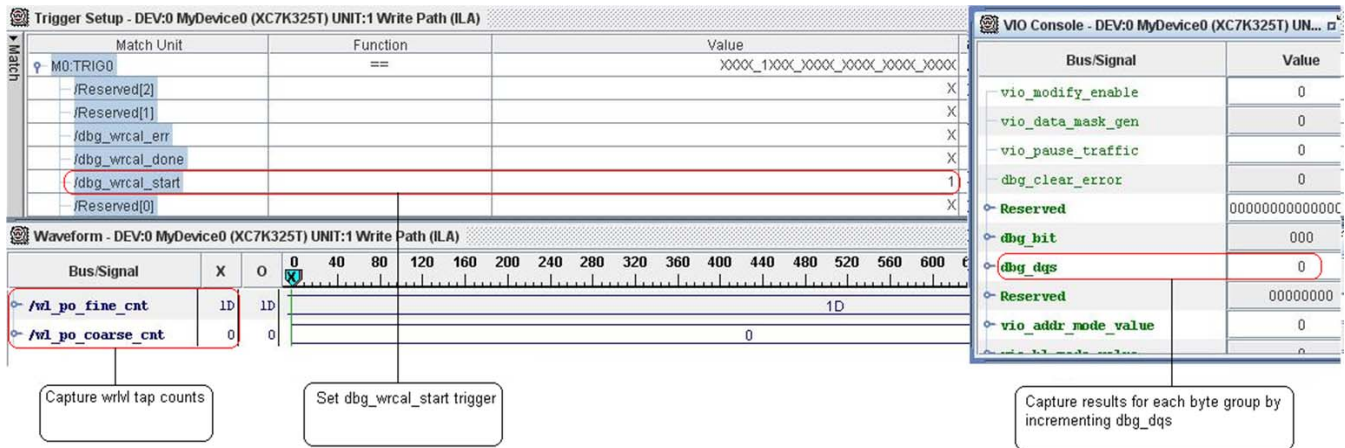


Figure 1-100: Trigger = dbg_wrcal_start

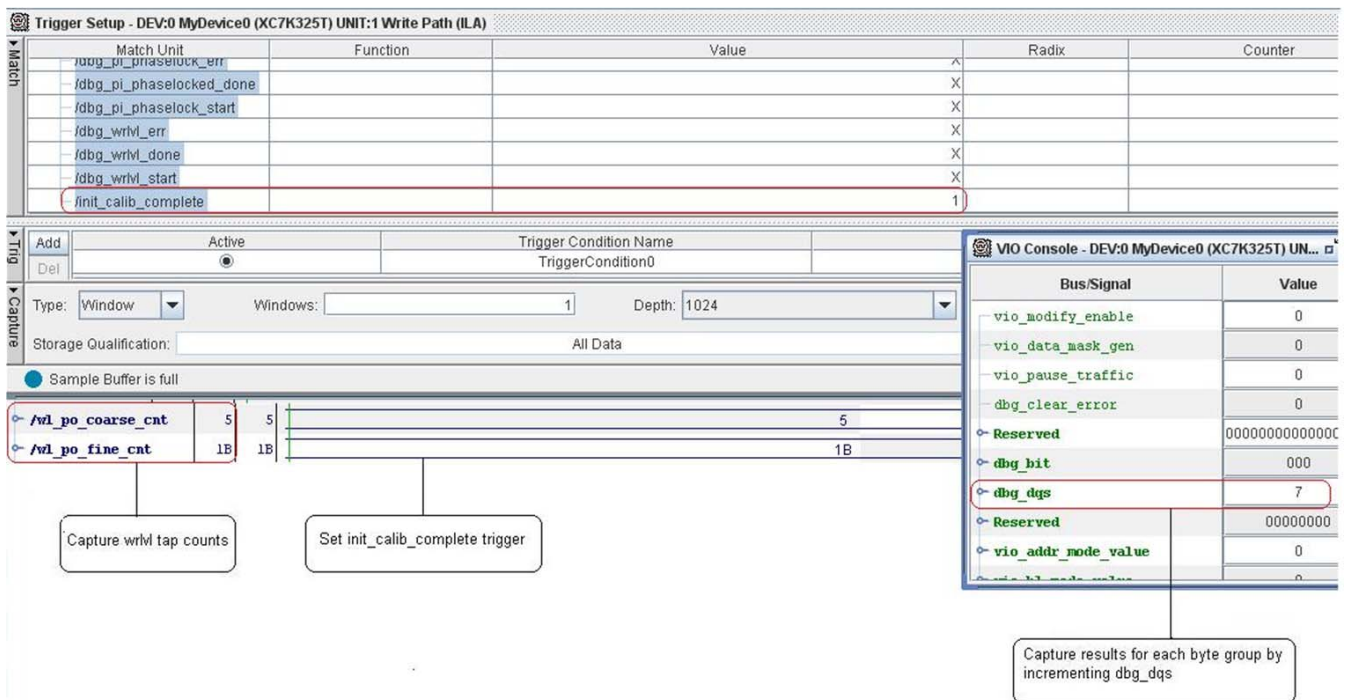


Figure 1-101: Trigger = init_calib_complete

Debugging MPR Read Leveling Failures – DDR3 Only (dbg_rdlvl_err[1] = 1)

Calibration Overview

At this stage of calibration, the write DQS is not centered in the write DQ window, nor is the read DQS centered in the read DQ window. The DDR3 Multi-Purpose Register (MPR) is used to center the read DQS in the read DQ window. The MPR has a pre-defined "01010101" or "10101010" pattern that is read back during this stage of calibration. The read DQS centering is required for the next stage of calibration, OCLKDELAYED calibration.

Debug

- If this stage of calibration failed with the assertion of `dbg_rdlvl_err[1]`, set the ILA trigger to `dbg_rdlvl_err[1]`.
- If this stage of calibration was successful and the results need to be analyzed, use the trigger `dbg_rdlvl_done[1] = R`.
- Set the VIO `dbg_dqs` for each byte and capture the following signals; the results for each byte should be captured in the “7 Series DDR3 Calibration Results” spreadsheet. Later releases of the MIG tool include results for all DQS byte groups removing the need to use `dbg_dqs`

Table 1-77: Debug Signals of Interest for MPR Read Leveling Calibration

Signal Name	Description
<code>dbg_rdlvl_start[1]</code>	Signifies the start of the MPR stage of calibration.
<code>dbg_rdlvl_done[1]</code>	Signifies the successful completion of the MPR Stage of calibration.
<code>dbg_rdlvl_err[1]</code>	Signifies the MPR stage of calibration exhibited errors and did not complete.
<code>cal1_state_r</code>	State machine variable for MPR and Read Leveling Stage 1. States can be decoded in the <code>ddr_phy_rdlvl.v</code> module.
<code>cal1_cnt_cpt_r</code>	Signifies the byte that failed MPR read leveling or read leveling stage 1.
<code>dbg_cpt_first_edge_cnt_by_dqs</code>	Signifies PHASER_IN fine tap count when the first edge in MPR and Read Leveling Stage 1 is found. Byte capture based on VIO <code>dbg_dqs</code> setting.
<code>dbg_cpt_first_edge_cnt</code>	Signifies PHASER_IN fine tap count when the first edge in MPR and Read Leveling Stage 1 is found.
<code>dbg_cpt_second_edge_cnt_by_dqs</code>	Signifies PHASER_IN fine tap count when then second edge in MPR and Read Leveling Stage 1 is found. Byte capture based on VIO <code>dbg_dqs</code> setting.
<code>dbg_cpt_second_edge_cnt</code>	Signifies PHASER_IN fine tap count when then second edge in MPR and Read Leveling Stage 1 is found.
<code>dbg_cpt_tap_cnt_by_dqs</code>	Signifies the center tap moved to based on when the first and second edges were found. Byte capture based on VIO <code>dbg_dqs</code> setting.
<code>dbg_cpt_tap_cnt</code>	Signifies the center tap moved to based on when the first and second edges were found.
<code>dbg_dq_idelay_tap_cnt_by_dqs</code>	IDELAY tap value for MPR and Read Leveling Stage 1. This should be within 2 to 3 taps across all DQS byte groups. Byte capture based on VIO <code>dbg_dqs</code> setting.
<code>dbg_dq_idelay_tap_cnt</code>	IDELAY tap value for MPR and Read Leveling Stage 1. This should be within 2 to 3 taps across all DQS byte groups.

- Always look at `DQ[0]` for each component. Memory devices either send the “01010101” or “10101010” pattern on all DQ bits or on `DQ[0]` as specified by the JEDEC standard.

The MIG design only looks at DQ[0]. If there is an issue with DQ[0], the MPR calibration stage would fail.

- If a DQS byte group failed this stage of calibration, `call_cnt_cpt_r` would equal the byte number that is failing as no further progress or increment on `call_cnt_cpt_r` occurred.
- Check if the failing DQS byte has an `dq_idelay_tap_cnt` value of 31. This means the algorithm ran out of taps searching for the capture edges.
- Check and compare the `dq_idelay_tap_cnt`, `cpt_first_edge_cnt`, `cpt_second_edge_cnt`, and `cpt_tap_cnt` values across bytes during MPR read leveling.
- Look at `idelay_tap_cnt` for each byte group. The `idelay_tap_cnt` across the DQS byte groups should only vary by 2 to 3 taps
- Look at how many edges (up to two) were found. Less than two edges can be found when running around or below 400 MHz. Otherwise, two edges should always be found.
- Using high quality probes and scope, probe the address/command to ensure the load register command to the DRAM that enables MPR was correct. To enable the MPR, a MODE Register Set (MRS) command is issued to the MR3 Register with bit A2 = 1. To make this measurement, bring `mpr_rdlvl_start` to an I/O pin and use as the trigger to capture A2 (must be 1) and `WE_N` (must be 0).

Expected Vivado Logic Analyzer Tool Results

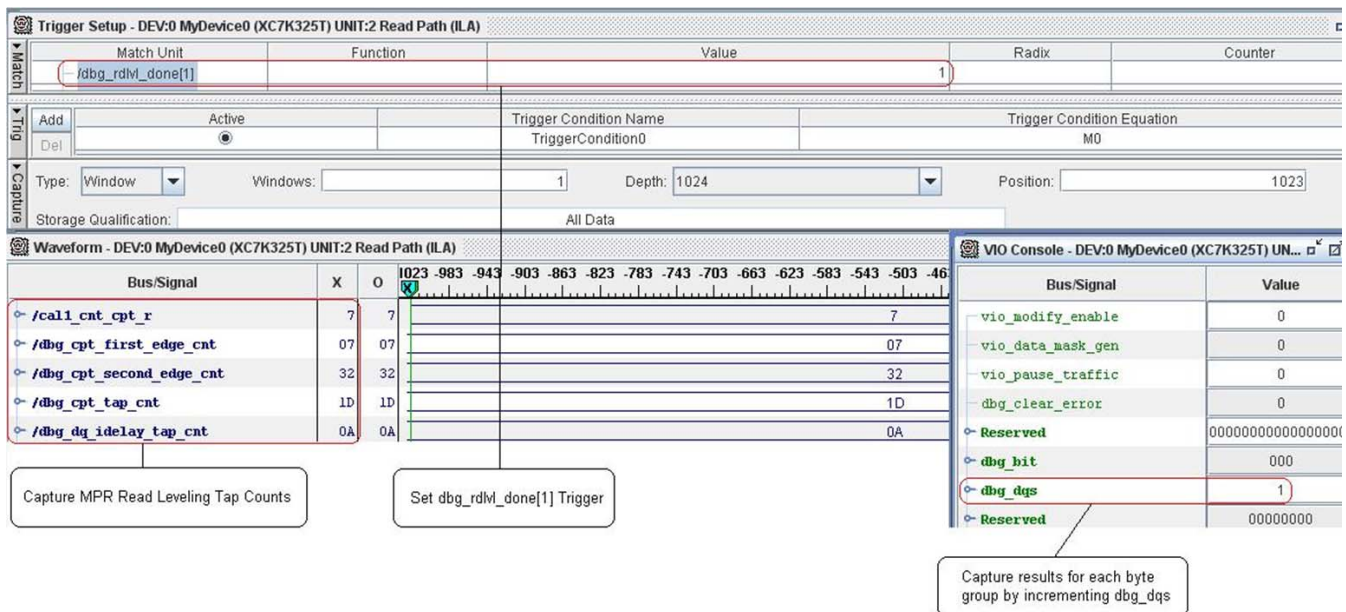


Figure 1-102: Trigger = `dbg_rdlvl_done[1]`

Debugging OCLKDELAYED Calibration Failures

Calibration Overview

The 7 series MMCM has outputs with "fine phase shift" capability. This fine phase shift capability is relatively linear and with fairly high resolution. The algorithm finds at least two edges that are either the edges of the data valid window or the edges of the noise region using Phaser_Out stage 3 taps. The MMCM fine phase shift is used to align the MMCM clock to these detected edges to determine the center of the data valid window using MMCM taps. Finally, the write DQS is edge-aligned with the already centered MMCM clock using Phaser_Out stage 3 taps.

There are three substages in this step:

1. Set Phaser_Out stage 3 limit for OCLKDELAY calibration using MMCM per byte. This stage determines the limits of stage 3 tap movement during the edge detection substage.
2. Detect edges of the write DQ window using simple pattern. These modules perform edge detection by scanning the write DQ window using stage 3 within the limits determined by the limit module.
3. Set DQS to the center of write DQ window using MMCM phaser shift. Centering stage during which the write DQS is centered in the write DQ window based on the edges found during the edge detection stage.

Debug

This stage of calibration can fail if no edges are detected (highly unlikely). Sub-optimal OCLKDELAYED calibration can result in data bit errors during normal operation. This occurs because the DQS to DQ 90° relationship is not correct. Full analysis of this calibration stage is critical.

- Probe the DQS to DQ phase relationship at the memory. DQS should be center aligned to DQ.
- Using dbg_oclkdelay_calib_done = R as the ILA trigger, capture the below signals and record the results in the "7 Series DDR3 Calibration Results" spreadsheet.
- Look at how many edges (up to three) were found. Less than three edges can be found when running around 400 MHz or at higher frequencies when the write level tap values are around 56 taps.

Table 1-78: Debug Signals of Interest for OCLKDELAYED Calibration

Signal Name	Description
dbg_oclkdelay_calib_start	Signifies the start of the OCLKDELAY stage of calibration.
dbg_oclkdelay_calib_done	Signifies the end of the OCLKDELAY stage of calibration.

Table 1-78: Debug Signals of Interest for OCLKDELAYED Calibration (Cont'd)

Signal Name	Description
dbg_phy_oclkdelay_zfo[0]	1 indicates that the left-edge of the fall window was detected and it validates fuzz2oneeighty as the tap value of the left-edge of the fall window.
dbg_phy_oclkdelay_zfo[1]	1 indicates that the left-edge of the rise window was detected and it validates fuzz2zero as the tap value of the left-edge of the rise window.
dbg_phy_oclkdelay_zfo[2]	1 indicates that the right-edge of the fall window was detected and it validates oneeighty2fuzz as the tap value of the right-edge of the fall window.
dbg_phy_oclkdelay_zfo[3]	1 indicates that the right-edge of the rise window was detected and it validates zero2fuzz as the tap value of the right-edge of the rise window.
dbg_ocal_fuzz2oneeighty	Stage 3 tap value of the left-edge of the fall window.
dbg_ocal_fuzz2zero	Stage 3 tap value of the left-edge of the rise window.
dbg_ocal_oneeighty2fuzz	Stage 3 tap value of the right-edge of the fall window.
dbg_ocal_zero2fuzz	Stage 3 tap value of the right-edge of the rise window.
dbg_ocal_oclkdelay_calib_cnt	Byte count indicating the byte being calibrated.
dbg_ocal_lim_done	Indicates that stage 3 lower and upper limits have been determined.
dbg_ocal_stg3_lim_left	Stage 3 lower limit
dbg_ocal_stg3_lim_right	Stage 3 upper limit
phy_oclkdelay_cal_taps	Final stage 3 tap values for all the bytes in the interface. Bits[5:0] for byte 0 and Bits[11:6] for byte 1.
dbg_ocal_center_calib_start	Indicates end of edge detection and start of centering in valid window.
dbg_ocal_center_calib_done	Indicates end of the centering stage of calibration.
dbg_ocal_tap_cnt	Stage 3 tap value during calibration for each group.
dbg_ocal_scan_win_not_found	1 indicates that window edge is not found.

Debugging Write Calibration Failures (dbg_wrcal_err = 1)

Calibration Overview

Write calibration is required to align DQS to the correct CK edge. During write leveling, DQS is aligned to the nearest rising edge of CK. However, this might not be the edge that captures the write command.

Depending on the interface type (UDIMM, RDIMM, or component), the DQS could either be one CK cycle earlier than, two CK cycles earlier than, or aligned to the CK edge that captures the write command.

This is a pattern based calibration; hence, multiple writes followed by a single read are issued during this stage. The following data patterns might be seen:

- On-time write pattern read back – FF00AA5555AA9966
- One CK early write pattern read back – AA5555AA9966BB11

- Two CK early write pattern read back – 55AA9966BB11EE44
- One CK late write pattern read back – XXXXFF00AA5555AA
 - Calibration cannot correct for this pattern. This pattern indicates that the trace delays are incorrect where CK is incorrectly shorter than DQS.

If none of the above patterns are detected during reads, the algorithm assumes the MPR read leveling IDELAY settings are incorrect and the IDELAYs for the DQ bits associated with that byte are set to 0. MPR read leveling could have an incorrect IDELAY setting because with the "01010101" or "10101010" pattern, it is not possible to differentiate between clock cycles.

Debug

If `dbg_wrcal_err` is asserted, denoting a Write Calibration failure, use `dbg_wrcal_err = R` as the trigger and observe the following debug signals. If `dbg_wrcal_done` asserted but the results of this stage need to be analyzed, use `dbg_wrcal_done` as the trigger.

Table 1-79: Debug Signals of Interest for Write Calibration

Signal Name	Description
<code>dbg_wrcal_start</code>	Signifies the start of the Write Calibration stage of calibration.
<code>dbg_wrcal_done</code>	Signifies successful completion of the Write Calibration stage of calibration.
<code>dbg_wrcal_err</code>	Signifies Write Calibration exhibited errors and did not complete.
<code>pat_data_match</code>	Asserts when the valid pattern is detected.
<code>pat_data_match_valid</code>	Toggles when the correct pattern is detected.
<code>wrcal_dqs_cnt</code>	Current DQS group being calibrated in Write Calibration. When <code>dbg_wrcal_start</code> asserts, <code>wrcal_dqs_cnt</code> is 0. The algorithm sequentially steps through the DQS byte groups checking to see if the read data pattern matches the expected FF00AA5555AA9966 pattern. If the pattern matches, <code>wrcal_dqs_cnt</code> increments by 1. The algorithm then starts looking for the correct data pattern on the next byte until it reaches <code>DQS_WIDTH - 1</code> or a data byte group fails due to the data pattern not being detected properly. The <code>wrcal_dqs_cnt</code> stays at <code>DQS_WIDTH - 1</code> after <code>dbg_wrcal_done</code> signal is asserted.
<code>cal2_state</code>	Write Calibration state machine variable.
<code>not_empty_wait_cnt</code>	Count value during write calibration pattern detection. Maximum count is 0x1F. If count reaches 0x1F, write calibration fails with the assertion of <code>dbg_wrcal_err</code> .
<code>early1_data</code>	Asserts when the pattern detected is one CK clock cycle early. When this is asserted, the write leveling algorithm moves the CK clock one cycle. After CK is moved, the write calibration algorithm restarts pattern detection.
<code>early2_data</code>	Asserts when the pattern detected is two CK clock cycles early. When this is asserted, the write leveling algorithm moves the CK clock two cycles. After CK is moved, the write calibration algorithm restarts pattern detection.
<code>dbg_wcal_mux_rd_rise0_r</code>	Data pattern received on rising edge 0.
<code>dbg_wcal_mux_rd_fall0_r</code>	Data pattern received on falling edge 0.
<code>dbg_wcal_mux_rd_rise1_r</code>	Data pattern received on rising edge 1.

Table 1-79: Debug Signals of Interest for Write Calibration (Cont'd)

Signal Name	Description
dbg_wcal_mux_rd_fall1_r	Data pattern received on falling edge 1.
dbg_wcal_mux_rd_rise2_r	Data pattern received on rising edge 2.
dbg_wcal_mux_rd_fall2_r	Data pattern received on falling edge 2.
dbg_wcal_mux_rd_rise3_r	Data pattern received on rising edge 3.
dbg_wcal_mux_rd_fall3_r	Data pattern received on falling edge 3.

1. The number on `wrcal_dqs_cnt` when `dbg_wrcal_err` asserts signifies the byte that failed write calibration. Debug should be focused on this byte group.
2. Observe the `rddata` bus or the `mux_rd_fall/riseX_r` buses and look for the appropriate data pattern. Note, `mux_rd_fall/rise_2/3_r` is not used with the half-rate controller and it is always zero. Again, the three scenarios that allow write calibration to continue are:
 - On-time write expected pattern – FF00AA5555AA9966
 - One cycle early write expected pattern – AA5555AA9966BB11
 - Two cycles early expected pattern – 55AA9966BB11EE44
3. If none of these three patterns are observed on a failing byte, look at the failing pattern and determine how the pattern is failing. Look if there are failing DQ bit(s) within a byte, failing bytes, and others. If the late write pattern noted above was detected, there is most likely a trace length issue between DQS and CK where CK is not longer than DQS as required.
4. If the design is stuck in the Write Calibration stage, the issue could be related to either the write or the read. Determining whether the write or read is causing the failure is critical. The following steps should be completed using `dbg_wrcal_start` as the scope trigger. To perform this, `dbg_wrcal_start` must be brought out to an I/O. For additional details and example Read and Write scope shots, review the [Determining If a Data Error is Due to the Write or Read](#).
 - a. To ensure the writes are correct, observe the write DQS to write DQ relationship at the memory using high quality scope and probes. During write calibration, a write is followed by a read so care needs to be taken to ensure the write is captured. See the [Determining If a Data Error is Due to the Write or Read](#) section for details. If there is a failing bit, determining the write DQS to write DQ relationship for the specific DQ bit is critical. The write ideally has the DQS center aligned in the DQ window. Misalignment between DQS and DQ during Write Calibration points to an issue with OCLKDELAY calibration. Review the [Debugging OCLKDELAYED Calibration Failures](#) section.
 - b. If the DQ-DQS alignment looks correct, next observe the `WE_N` to DQS relationship at the memory during a write again using high quality scope and probes. The `WE_N` to DQS delay must equal the CAS Write Latency (CWL).

- c. Using high quality scope and probes, verify the expected pattern (FF00AA5555AA9966) is being written to the DRAM during a write and that the expected pattern is being read back during the first Write Calibration read. If the pattern is correct during write and read at the DRAM, verify the DQS-CK alignment. During Write Calibration, these two signals should be aligned. Write Leveling aligned these two signals which has successfully completed before Write Calibration.
 - d. Probe ODT and WE_N during a write command. In order for ODT to be properly turned on in the memory, ODT must assert before the write command.
 - e. Probe DM to ensure it is held Low during calibration. If a board issue exists causing DM to improperly assert, incorrect data is read back during calibration causing a write calibration failure. An example of a board issue on DM is when DM is not used and tied Low at the memory with improper termination.
5. It is possible for write calibration to fail due to rare manufacturing issues with the memory device. Verify SDRAM pins are behaving correctly. Look for floating or grounded signals. The debug signals should be used to determine which byte group is failing and if specific pin(s) within that byte group are causing the incorrect data pattern. These pins should be the focus at the memory device.
 6. If the DQS-to-DQ, CWL, and DQS-to-CK look correct, review the above [Debugging MPR Read Leveling Failures – DDR3 Only \(dbg_rdlvl_err\[1\] = 1\)](#) section.

Expected Vivado Logic Analyzer Tool Results

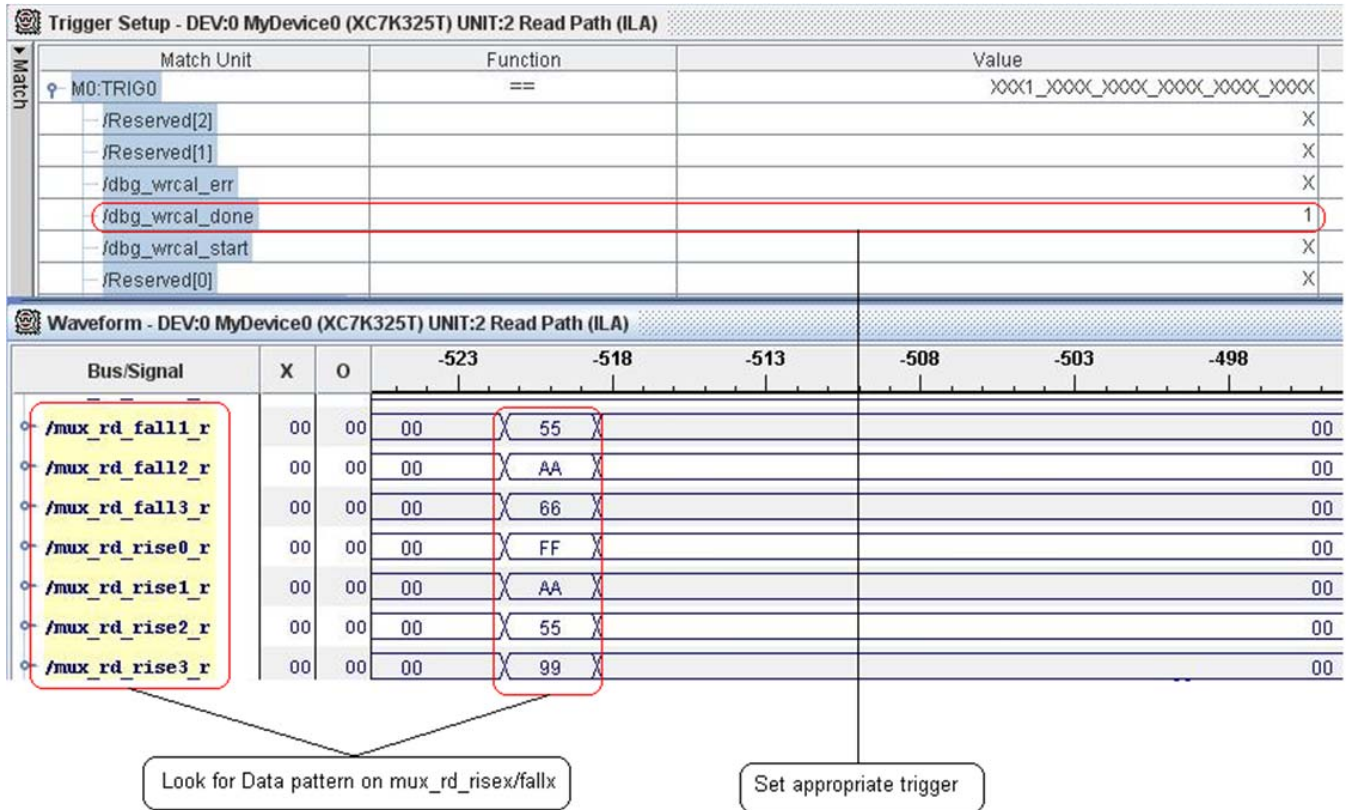


Figure 1-103: Trigger = dbg_wrcal_done

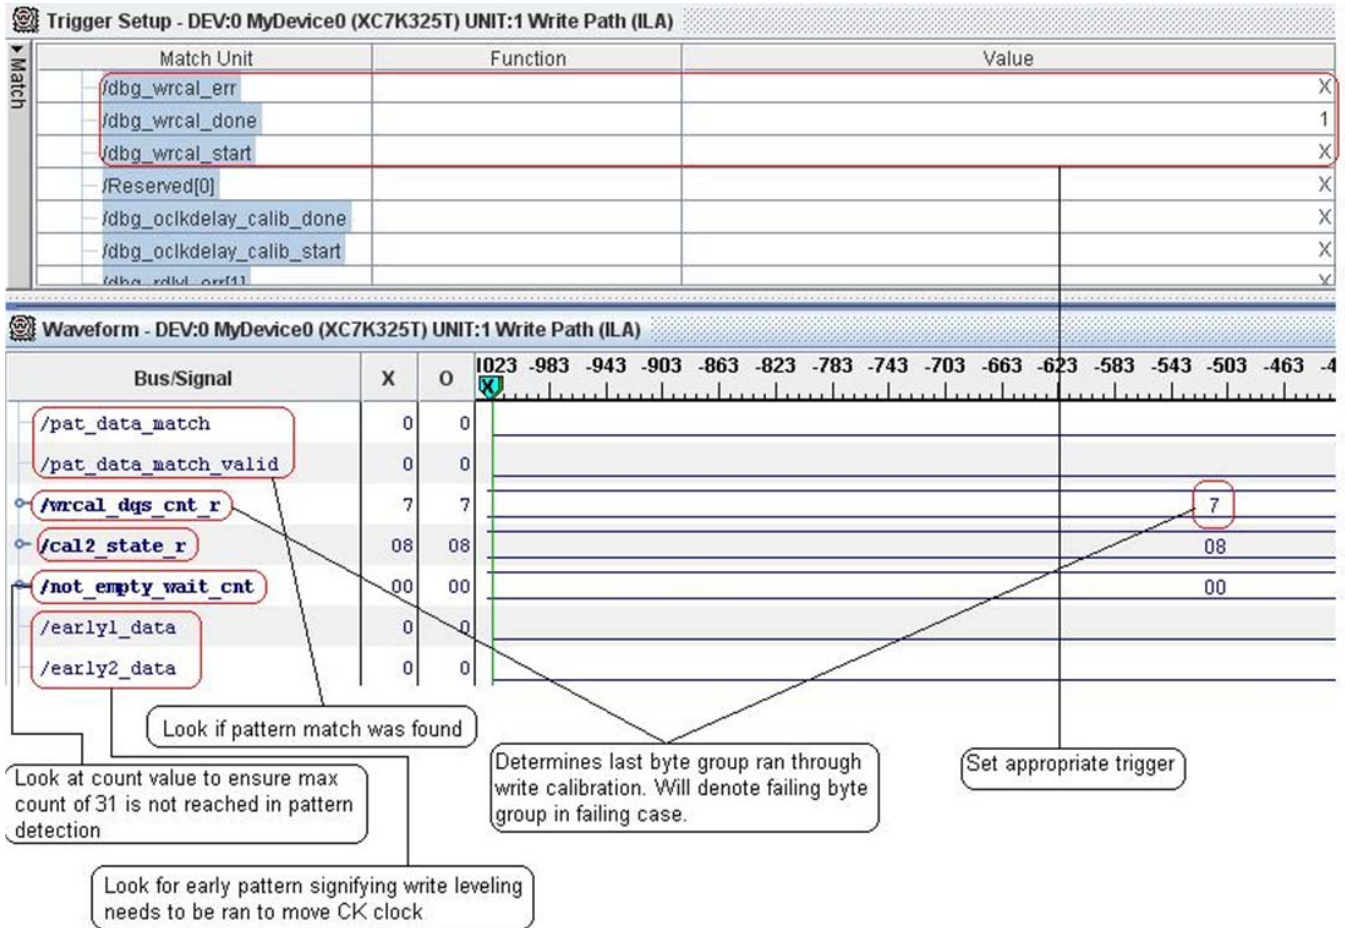


Figure 1-104: Trigger = dbg_wrcal_done

Debugging Read Leveling Failures (dbg_rdlvl_err[0] = 1)

For memory clock frequencies of 400 MHz and above, Read Leveling is performed after Write Calibration.

Calibration Overview

The final read DQS to read DQ centering is done in this stage of calibration. The first step in this stage is to decrease the IDELAY and PHASER_IN stage 2 taps values to zero to undo MPR read leveling. MPR read leveling was only required for OCLKDELAYED calibration. This stage of read leveling accurately centers the read DQS in the read DQ window using a 993377EECC992244 data pattern. If this stage calibrates successfully, the init_calib_complete signal is asserted and calibration is complete.

Debug

- If this stage of calibration failed with the assertion of dbg_rdlvl_err[0], set the ILA trigger to dbg_rdlvl_err[0].

- If this stage of calibration was successful and the results need to be analyzed, set the ILA trigger to `dbg_rdlvl_done[0] = R`.
- Set the VIO `dbg_dqs` for each byte and capture the following signals. The results for each byte should be captured in the “7 Series DDR3 Calibration Results” spreadsheet. Later releases of the MIG tool include results for all DQS byte groups removing the need to use `dbg_dqs`.

Table 1-80: Debug Signals of Interest for Read Leveling Stage 1 Calibration

Signal Name	Description
<code>dbg_rdlvl_start[0]</code>	Signifies the start of Read Leveling Stage 1 of calibration.
<code>dbg_rdlvl_done[0]</code>	Signifies the successful completion of Read Leveling Stage 1 of calibration.
<code>dbg_rdlvl_err[0]</code>	Signifies Read Leveling Stage 1 of calibration exhibited errors and did not complete.
<code>cal1_state_r</code>	State machine variable for MPR and Read Leveling Stage 1. States can be decoded in the <code>ddr_phy_rdlvl.v</code> module.
<code>cal1_cnt_cpt_r</code>	Signifies the byte that failed MPR read leveling or read leveling stage 1.
<code>dbg_cpt_first_edge_cnt_by_dqs</code>	Signifies PHASER_IN fine tap count when the first edge in MPR and Read Leveling Stage 1 is found. Byte capture based on VIO <code>dbg_dqs</code> setting.
<code>dbg_cpt_first_edge_cnt</code>	Signifies PHASER_IN fine tap count when the first edge in MPR and Read Leveling Stage 1 is found.
<code>dbg_cpt_second_edge_cnt_by_dqs</code>	Signifies PHASER_IN fine tap count when then second edge in MPR and Read Leveling Stage 1 is found. Byte capture based on VIO <code>dbg_dqs</code> setting.
<code>dbg_cpt_second_edge_cnt</code>	Signifies PHASER_IN fine tap count when then second edge in MPR and Read Leveling Stage 1 is found.
<code>dbg_cpt_tap_cnt_by_dqs</code>	Signifies the center tap moved to based on when the first and second edges were found. Byte capture based on VIO <code>dbg_dqs</code> setting.
<code>dbg_cpt_tap_cnt</code>	Signifies the center tap moved to based on when the first and second edges were found.
<code>dbg_dq_idelay_tap_cnt_by_dqs</code>	IDELAY tap value for MPR and Read Leveling Stage 1. This should be within 2 to 3 taps across all DQS byte groups. Byte capture based on VIO <code>dbg_dqs</code> setting.
<code>dbg_dq_idelay_tap_cnt</code>	IDELAY tap value for MPR and Read Leveling Stage 1. This should be within 2 to 3 taps across all DQS byte groups.

- Determine which stage is failing by observing `cal1_state_r`.
- Look at `idelay_tap_cnt` for each byte group. The `idelay_tap_cnt` across the DQS byte groups should only vary by 2 to 3 taps.

- Look at how many edges (up to two) were found. Less than two edges can be found when running around or below 400 MHz. Otherwise, two edges should always be found to then center the IDELAY taps.
- Determine if any bytes completed successfully. The read leveling algorithm sequentially steps through each DQS byte group detecting the capture edges. When the failure occurs, the value on `call_cnt_cpt_r` indicates the byte that failed edge detection.
- If the incorrect data pattern is detected, determine if the error is due to the write access or the read access. See the [Determining If a Data Error is Due to the Write or Read](#) section.
- If the `dbg_rdlvl_err[0]` is asserted (read leveling failure), use high quality probes and scope observe the DQS-to-DQ phase relationship during a write. The scope trigger should be `dbg_rdlvl_start[0]`. The alignment should be approximately 90°.
- If the DQS-to-DQ alignment is correct, observe the `WE_N`-to-DQS relationship to see if it meets CWL again using `dbg_rdlvl_start[0]` as a trigger.

Expected Vivado Logic Analyzer Tool Results

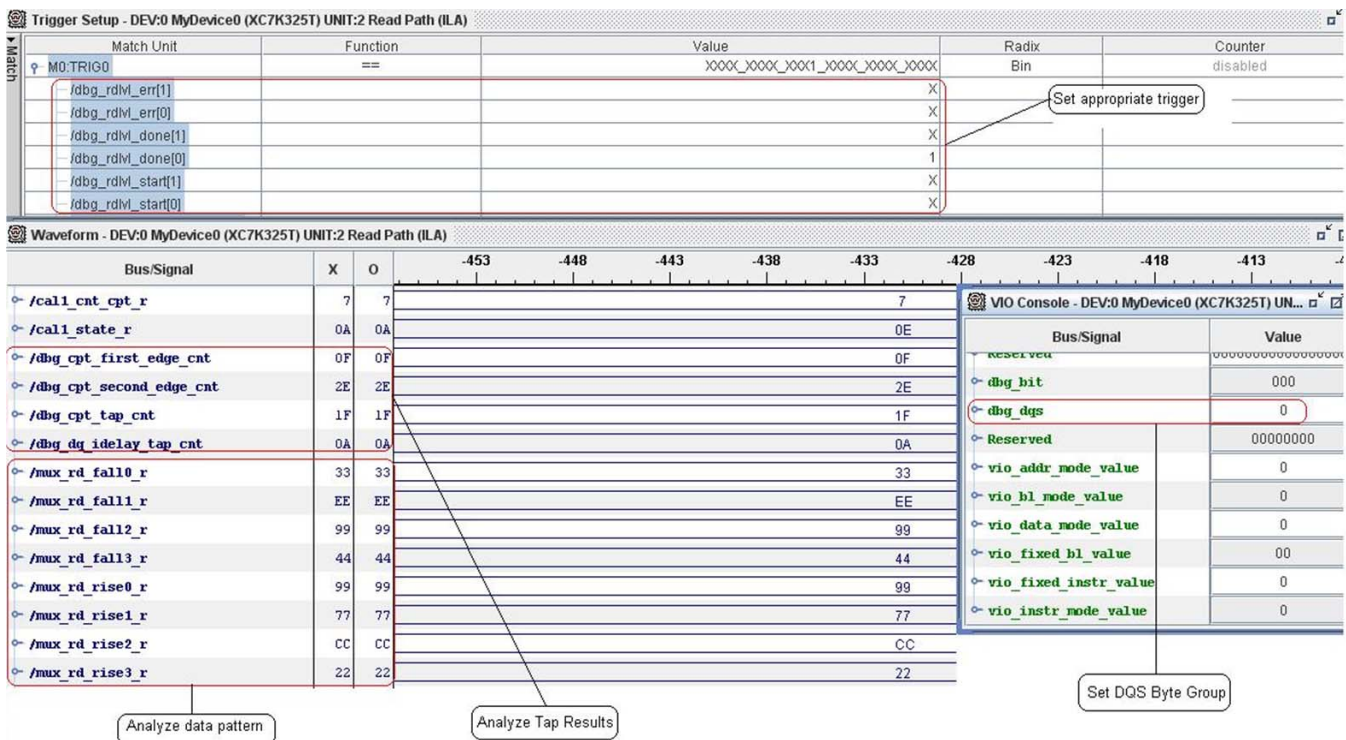


Figure 1-105: Trigger = `dbg_rdlvl_done[0]`

Debugging PRBS Read Leveling Failures

Calibration Overview

This stage of calibration was added in MIG 7 series v1.7 and determines the read data valid window using complex pattern that is written once and read back from the DDR3 SDRAM.

Debug

Table 1-81: Debug Signals of Interest for PRBS Read Leveling Calibration

Debug Signal	Signal Description
left_edge_pb	Signifies PHASER_IN fine tap value of starting valid read window (left edge) for each bit in a byte. left_edge_pb[5:0] is the left edge of Bit[0] and left_edge_pb[47:42] is the left edge of Bit[7].
left_loss_pb	Signifies the loss in aggregate window size caused by left edge change for each bit in a byte. If left edge change of the bit does not affect the valid window, it is set to "0," left_loss_pb[1:0] is for Bit[0], and left_loss_pb[15:14] is for Bit[7].
right_edge_pb	Signifies PHASER_IN fine tap value of ending valid read window (right edge) for each bit in a byte. right_edge_pb[5:0] is right edge of Bit[0] and right_edge_pb[47:42] is the right edge of Bit[7].
right_gain_pb	Signifies the gain in aggregate valid window caused by right edge change for each bit in a byte. If right edge change of the bit does not affect the valid window, it is set to "0," right_gain_pb[1:0] is for Bit[0], and right_gain_pb[15:14] is for Bit[7].
prbs_dqs_cnt_r	Signifies the current DQS byte group being calibrated during PRBS Read Leveling. Use VIO dbg_dqs to select the byte group.
prbs_rdlvl_start	Signifies the start of PRBS Read Leveling calibration.
prbs_rdlvl_done	Signifies the successful completion of PRBS Read Leveling.
compare_err_r0	Signifies data mismatch on first rising edge data comparison.
compare_err_r1	Signifies data mismatch on second rising edge data comparison.
compare_err_r2	Signifies data mismatch on third rising edge data comparison.
compare_err_r3	Signifies data mismatch on forth rising edge data comparison.
compare_err_f0	Signifies data mismatch on first falling edge data comparison.
compare_err_f1	Signifies data mismatch on second falling edge data comparison.
compare_err_f2	Signifies data mismatch on third falling edge data comparison.
compare_err_f3	Signifies data mismatch on forth falling edge data comparison.
compare_err	Signifies data comparison failure due to a read data pattern
prbs_dqs_tap_cnt_r	Signifies the internal counter which tracks PHASER_IN fine tap movement.
pi_counter_read_val	Signifies DQS PHASER_IN fine tap setting.

Table 1-81: Debug Signals of Interest for PRBS Read Leveling Calibration (Cont'd)

Debug Signal	Signal Description
ref_bit	Signifies that reference bit of the byte which has largest left edge PHASER_IN tap value.
complex_victim_inc	Indicates the victim increment for internal calibration pattern change.
rd_victim_sel	Signifies the victim selection to get the correct data pattern to compare during read back.
prbs_state_r1	Signifies the state of PRBS Read Leveling state machine.
rd_valid_r2	Indicates the read out data is valid to use for comparison.
left_edge_found_pb	Indicates left edge found for each bit in a byte. Left_edge_found_pb[0] is for Bit[0] and left_edge_found_pb[7] is for Bit[7].
right_edge_found_pb	Indicates right edge found for each bit in a byte. right_edge_found_pb[0] is for Bit[0] and right_edge_found_pb[7] is for Bit[7].
largest_left_edge	Signifies the left edge tap value of the byte.
smallest_right_edge	Signifies the right edge tap value of the byte.
fine_delay_incdec_pb	Indicates the increment of FINEDELAY tap in IDELAY primitive for each bit in a byte. fine_delay_incdec_pb[0] is for Bit[0] and fine_delay_incdec_pb[7] is for Bit[7].
fine_delay_sel	Indicates fine_delay_incdec_pb is applied for FINEDELAY in IDELAY primitive.
compare_err_pb_latch_r	Indicates that data mismatch happened for each bit in a byte at a specific PHASER_IN tap setting. compare_err_pb_latch_r[0] is for Bit[0] and compare_err_pb_latch_r[7] is for Bit[7].
fine_pi_dec_cnt	Signifies the computed decrease value of PHASER_IN tap.
match_flag_and	Indicates all bits have data mismatch. Recoded for five consecutive PHASER_IN tap setting.
stage_cnt	Signifies the number of scans with different setting of FINEDELAY in IDELAY primitive.
fine_inc_stage	Indicates that FINEDELAY in IDELAY primitive is in the increment stage.
compare_err_pb_and	Signifies the data mismatch happened for all bits in a byte.
right_edge_found	Indicates the right edge of the byte is found.

Calibration Times

For Initial ES (IES) with extended calibration, completing calibration in hardware should take about 30 seconds.

For General ES (GES) and Production, hardware calibration time scales with interface data width and data rate. [Table 1-82](#) lists the calibration times for 32-bit and 72-bit interfaces at 800 Mb/s and 1,600 Mb/s. Calibration times are faster at higher frequencies because the required number of reads and writes to perform the phase adjustment can complete faster than at a lower frequency. Calibration is completed on a per-byte basis. Therefore, larger interface widths result in longer calibration times.

Note: These are typical values. Calibration times can vary significantly depending on the board signal integrity, the FPGA, and the frequency of operation.

MIG release 2014.2 includes updates to the read calibration algorithm resulting in calibration time increase compared to the previous release. MIG release 2014.4 includes updates to the write calibration algorithm using MMCM for better write DQS to write data centering which resulted in increased calibration time.

Table 1-82: Calibration Time in Hardware

MIG Release	Calibration Time at 800 Mb/s (4:1)		Calibration Time at 1,600 Mb/s (4:1)	
	32-bit	72-bit	32-bit	72-bit
2014.1	< 1 second	< 1 second	< 1 second	< 1 second
2014.2	< 1 second	~1 second	< 1 second	Little over 1 second
2014.4	< 1 second	~2 seconds	< 1 second	~1 second
2015.1	~1 second	~2 seconds	< 1 second	~1 second

Debugging Data Errors

General Checks

As with calibration error debug, the General Checks section of this answer record should be reviewed. Strict adherence to proper board design is critical in working with high speed memory interfaces. Violation of these general checks is often the root cause of data errors.

Replicating the Error Using the Traffic Generator

When data errors are seen during normal operation, the MIG 7 series Example Design (Traffic Generator) should be used to replicate the error. The Traffic Generator can be configured to send a wide range of data, address, and command patterns allowing customers to test their target traffic pattern on a verified solution. The Traffic Generator stores the write data and compares it to the read data. This allows comparison of expected and actual data when errors occur. The following section details the critical step in Data Error debug.

Table 1-83: Debug Signals Used for Configuring the Traffic Generator

Signal Name	Description
vio_modify_enable	Set to 1 to vary the command Traffic Generator command pattern.
vio_data_mask_gen	Traffic generator Data Mask generation.
vio_pause_traffic	Set to 1 to pause the Traffic Generator.
dbg_clear_error	Set to clear Traffic Generator errors. This signal can be used in checking for single bit errors or measuring a read window.
vio_addr_mode_value	Valid settings for this signal are: <ul style="list-style-type: none"> • 0x1 = FIXED address mode⁽¹⁾ • 0x2 = PRBS address mode • 0x3 = SEQUENTIAL address mode
vio_bl_mode_value	Valid settings for this signal are: <ul style="list-style-type: none"> • 0x1 = FIXED burst length⁽¹⁾ • 0x2 = PRBS burst length
vio_fixed_bl_value	Valid settings are 1 to 256.
vio_fixed_instr_value	Valid settings are: <ul style="list-style-type: none"> • 0x0 = Write instruction • 0x1 = Read instruction
vio_instr_mode_value	Valid settings for this signal are: <ul style="list-style-type: none"> • 0x1 = Command type (read/write) as defined by fixed_instr_i⁽¹⁾ • 0x2 = Random read/write commands • 0xE = Write only at address zero • 0xF = Read only at address zero

Table 1-83: Debug Signals Used for Configuring the Traffic Generator (Cont'd)

Signal Name	Description
vio_data_mode_value	<p>Valid settings for this signal are:</p> <ul style="list-style-type: none"> 0x0 = Reserved 0x1 = FIXED – 32 bits of fixed_data as defined through fixed_data_i inputs.⁽¹⁾ 0x2 = ADDRESS – 32 bits address as data. Data is generated based on the logical address space. If a design has a 256-bit user data bus, each write beat in the user bus would have a 256/8 address increment in byte boundary. If the starting address is 1300, the data is 1300, followed by 1320 in the next cycle. To simplify the logic, the user data pattern is a repeat of the increment of the address value Bits[31:0]. 0x3 = HAMMER – All 1s are on DQ pins during the rising edge of DQS, and all 0s are on the DQ pins during the falling edge of DQS, except the VICTIM line as defined in the parameter "SEL_VICTIM_LINE." This option is only valid if parameter DATA_PATTERN = "DGEN_HAMMER" or "DGEN_ALL." 0x4 = SIMPLE8 – Simple 8 data pattern that repeats every 8 words. The patterns can be defined by the "simple_datax" inputs.⁽¹⁾ 0x5 = WALKING1s – Walking 1s are on the DQ pins. The starting position of 1 depends on the address value. This option is only valid if the parameter DATA_PATTERN = "DGEN_WALKING" or "DGEN_ALL." 0x6 = WALKING0s – Walking 0s are on the DQ pins. The starting position of 0 depends on the address value. This option is only valid if the parameter DATA_PATTERN = "DGEN_WALKING0" or "DGEN_ALL." 0x7 = PRBS – A 32-stage LFSR generates random data and is seeded by the starting address. This option is only valid if the parameter DATA_PATTERN = "DGEN_PRBS" or "DGEN_ALL." 0x9 = SLOW HAMMER – This is the slow MHz hammer data pattern. 0xF = PHY_CALIB pattern – 0xFF, 00, AA, 55, 55, AA, 99, 66. This mode only generates READ commands at address zero. This is only valid in the Virtex-7 family.

Notes:

1. This setting does not work by default and additional RTL modifications are required.

Table 1-84: Debug Signals of Interest When Isolating Data Error Using the Traffic Generator

Signal Name	Description
dbg_rddata_r	Read data read out of the IN_FIFO for the DQS group selected through dbg_dqs on the VIO. This is a 64-bit bus. This debug port does not capture ECC data.
cmp_data_r	Expected data to be compared with read back data from memory. ⁽¹⁾
dbg_rddata_valid	Signifies that the read data is valid.
cmp_data_valid	Signifies the compare data is valid.
cmp_error	Signifies the cmp_data is not the same as the readback data from memory.

Table 1-84: Debug Signals of Interest When Isolating Data Error Using the Traffic Generator (Cont'd)

Signal Name	Description
error_status[n:0]	<p>This signal latches these values when the error signal is asserted:</p> <ul style="list-style-type: none"> • [42] = mcb_rd_empty • [41] = mcb_wr_full • [37:32] = cmp_bl_i • [31:0] = cmp_addr_i

Notes:

1. Cmp_data_r is not cycle aligned with dbg_rddata_r and might vary from 1 burst before to 3 bursts after dbg_rddata_r.

Isolating the Data Error

Using either the MIG 7 series Traffic Generator or the user design, the first step in data error debug is to isolate when and where the data errors occur. To perform this, the expected data and actual data must be known and compared. Looking at the data errors, the following should be identified:

- Are the errors bit or byte errors?
 - Are errors seen on data bits belonging to certain DQS groups?
 - Are errors seen on specific DQ bits?
- Is the data shifted, garbage, swapped, and others?
- Are errors seen on accesses to certain addresses, banks, or ranks of memory?
 - Designs that can support multiple varieties of DIMM modules, all possible address and bank bit combinations should be supported.
- Do the errors only occur for certain data patterns or sequences?
 - This can indicate a shorted or open connection on the PCB. It can also indicate an SSO or crosstalk issue.
- Determine the frequency and reproducibility of the error.
 - Does the error occur on every calibration/reset?
 - Does the error occur at specific temperature or voltage conditions?
- Determine if the error is correctable.
 - Rewriting, rereading, resetting, and recalibrating.

To isolate the data error using the MIG 7 series Example Design Traffic Generator, use the following steps.

- Determine what type of data error is being seen (bit or byte errors).
 - a. Set the ILA trigger to `cmp_error = 1`.

- b. Observe the `dbg_rddata_r` and `cmp_data_r` signals in Vivado logic analyzer feature.
 - Are errors seen on a data bit/s belonging to a certain DQS group(s)?
 - Does the data appear shifted, garbage, swapped, and others?
- Determine if errors are seen on accesses to a certain address, bank, or rank of the memory.
 - a. Set the ILA trigger to `cmp_error = 1`.
 - b. Set the VIO cores.


```

vio_modify_enable = 1

vio_data_mode_value = 2

vio_addr_mode_value = 3
          
```
 - c. Observe the `cmp_addr_i` bits of the `error_status[31:0]` in Vivado logic analyzer.
- Determine if errors only occur for certain data patterns or sequences. This can indicate a shorted or open connection on the PCB or can also indicate an SSO or crosstalk issue.
 - a. Set the LA trigger to `cmp_error = 1`.
 - b. Set the VIO cores.


```

vio_modify_enable = 1

vio_instr_mode_value = 2

vio_data_mode_value = 2

vio_addr_mode_value = 3
          
```
 - c. Observe the `dbg_rddata_r` and `cmp_data_r` signals and the `cmp_addr_i` bits of the `error_status[31:0]` bus in the Vivado logic analyzer feature.
 - d. Repeat steps 1 to 3 with setting `vio_data_mode_value` to values varying from 3-F.
- Determine the frequency and reproducibility of the error.
 - Does the error occur after every calibration or reset?
 - Does the error occur at specific temperature or voltage conditions?
- Determine if the error is correctable.
 - Rewriting, rereading, resetting, and recalibrating.

Note: `vio_pause_traffic` should be asserted and deasserted each time the VIO inputs are changed.

Determining If a Data Error is Due to the Write or Read

Determining whether a data error is due to the write or the read can be difficult because if writes are the cause, read back of data is bad as well. In addition, issues with control or address timing affect both writes and reads. Some experiments that can help to isolate the issue are:

- If errors are intermittent, issue a small initial number of writes, followed by continuous reads from those locations.
- If the reads intermittently yield bad data, there is a potential read issue. If the reads always yield the same (wrong) data, there is a write issue.

Determine if this is a Write or Read issue using the MIG 7 series Example Design Traffic Generator within the Vivado logic analyzer feature:

1. Set up all the FIXED parameter values in the RTL:
 - a. Open `example_top.v` and change `fixed_data_i` and `fixed_addr_i` under the `traffic_gen_top` instantiation.
 - `fixed_addr_i (32'b00000000000000000000000000000000)`
 - `fixed_data_i (32'b11111111111111111111111111111111)`
 - b. Regenerate bitstream.

2. Set the ILA trigger to `cmp_error = 1`.
3. Set VIO cores to:

```
vio_modify_enable = 1
vio_pause_traffic = 1
vio_addr_mode_value = 1
vio_bl_mode_value = 1
vio_fixed_bl_value = 8
vio_instr_mode_value = 1
vio_fixed_instr_value = 0 (Write Only)
vio_data_mode_value = 1
vio_pause_traffic = 0
```

4. Set the VIO cores to:

```
vio_pause_traffic = 1
```



```
vio_fixed_instr_value = 1 (Read Only)
```

```
vio_pause_traffic = 0
```

5. Observe the `dbg_rddata_r` and `cmp_data_r` signals in Vivado logic analyzer feature.

This can also be done using high quality probes and a scope using the Traffic Generator or your own user design.

1. Capture the write at the memory and the read at the FPGA to view data accuracy, appropriate DQS-to-DQ.
2. Look at the initial transition on DQS from 3-state to active.
3. During Write, DQS does not have a preamble.
4. During Read, the DQS has a Low preamble that is 1 clock cycle long.
5. The following is an example of a Read and a Write to illustrate the difference.

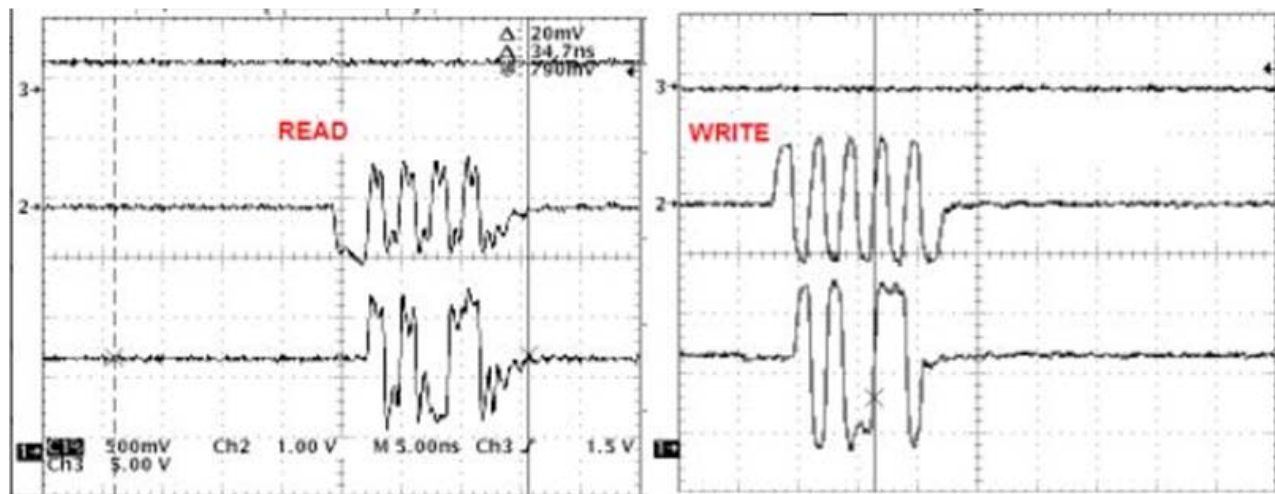


Figure 1-106: **Read and Write**

Analyze write timing:

- If on-die termination (ODT) is used, check that the correct value is enabled in the DDR2/DDR3 device and that the timing on the ODT signal relative to the write burst is correct.
- Measure the phase of DQ relative to DQS. During a Write, DQS should be center aligned to DQ. If the alignment is not correct, focus on the debugging [OCLKDELAYED Calibration, page 150](#).
- For debugging purposes only, use ODELAY to vary the phase of DQ relative to DQS.

Analyze read timing:

- Check the IDELAY values after calibration. Look for variations between IDELAY values. IDELAY values should be very similar for DQS in the same DQS group.
- For debugging purposes only, vary the IDELAY taps after calibration for the bits that are returning bad data.

Checking and Varying Read Timing

Debug signals are provided to verify read window margin on a per-byte basis and should be used for debugging purposes only. Determining if sufficient margin is available for reliable operation can be useful for debugging purposes if data errors are seen after calibration.

There is an automated window check flow that can be used to step through the entire interface and provides the # of PHASER taps required to reach the left edge and right edge of the data window. The window checking can also be manually verified by manually incrementing and decrementing the PHASER taps to verify how much window margin is available.

Table 1-85: Debug Signals Used for Checking and Varying Read/Write Timing

Signal Name	Description
win_start	Single pulse that starts the window check logic.
win_sel_pi_pon	Controls window check logic on read path. Valid settings are: <ul style="list-style-type: none"> • 0x1 = Enables Read Path
vio_dbg_sel_pi_incdec	Enables manual incrementing and decrementing of the PHASER_IN taps.
vio_dbg_pi_f_inc	Increments PHASER_IN fine taps when win_sel_pi_pon = 0x1.
vio_dbg_pi_f_dec	Decrement PHASER_IN fine taps when win_sel_pi_pon = 0x1.
vio_win_byte_select_inc	Increments the byte group being checked by the window margin check module.
vio_win_byte_select_dec	Decrement the byte group being checked by the window margin check module.
dbg_pi_counter_read_val	Current PHASER_IN tap count corresponding to current byte being checked.
pi_win_left_ram_out	PHASER_IN tap count to reach the left edge of the read window for a given byte.
pi_win_right_ram_out	PHASER_IN tap count to reach the right edge of the read window for a given byte.
win_active	Flag to indicate the Window check logic is active and measuring window margins. While active, the other VIOs should not be changed.
win_current_byte	Feedback to indicate which byte is currently being monitored.
win_byte_select	Selects which byte group to display the measured results for.
dbg_clear_error	Clears error in Traffic Generator as a result of changing tap values.
vio_sel_mux_rdd[3:0]	Selects the byte for which the phaser increments or decrements are applied.

Automated Window Check

The automated window checking is enabled by asserting `win_start` with a single pulse. `win_active` should then assert until all byte groups have been measured. `win_sel_pi_pon` must be set to 0x1 to enable Read window measurement. and

`win_byte_select` can be used to select between each byte groups measured results and display them to the Vivado logic analyzer feature waveform window. To calculate the total data valid window use the following equation:

$$(\text{Total \# of taps} \times \text{CLK_PERIOD})/128 = \text{Total Valid Data Window}$$

Note: The Read window measurement results are stored in a block RAM after `win_start` is asserted.

Manual Window Check

To manually measure the data window margin, follow these steps:

1. Enable the manual window check by asserting `dbg_sel_pi_incdec`.

Note: When `dbg_sel_pi_incdec` is enabled, `dbg_pi_counter_read_cal` does not represent the true centered PHASER_IN tap value.

2. Set the ILA trigger to `cmp_error = 1`.
3. Manually increment/decrement the taps using the `dbg_pi_f_inc` or `dbg_pi_f_dec` an event is triggered indicating a left or right edge was found. Note the number of taps that occurred until event triggered.
4. Manually increment/decrement the taps back the same # of taps.
5. Issue a single pulse event to `dbg_clear_error`, and reset the ILA trigger.
6. Manually increment/decrement the taps in the other direction using the `dbg_pi_f_inc` or `dbg_pi_f_dec` an event is triggered indicating a left or right edge was found. Note the number of taps that occurred until event triggered.
7. Add up the left and right tap values determined and calculate the total data valid window using the following equation:

$$(\text{Total \# of taps} \times \text{CLK_PERIOD})/128 = \text{Total Valid Data Window}$$

Analyzing Calibration Results

When data errors occur, the results of calibration should be analyzed to ensure the results are expected and accurate. Each of the above debugging calibration sections notes what the expected results are such as how many edges should be found, how much variance across byte groups should exist, and others. Follow these sections to capture and then analyze the calibration results.

Interface Debug

AXI4-Lite Interfaces

The AXI4 slave interface follows the AXI4 memory-mapped slave protocol specification as described in the ARM AMBA open specifications. See this specification [Ref 4] for the signaling details of the AXI4 slave interface.

Read from a register that does not have all 0s as a default to verify that the interface is functional. Output `s_axi_arready` asserts when the read address is valid, and output `s_axi_rvalid` asserts when the read data/response is valid. If the interface is unresponsive, ensure that the following conditions are met:

- The `S_AXI_ACLK` and `ACLK` inputs are connected and toggling.
- The interface is not being held in reset, and `S_AXI_ARESET` is an active-Low reset.
- The interface is enabled, and `s_axi_aclken` is active-High (if used).
- The main core clocks are toggling and that the enables are also asserted.
- If the simulation has been run, verify in simulation and/or a Vivado logic analyzer feature waveform debugging tool capture that the waveform is correct for accessing the AXI4-Lite interface.

AXI4-Stream Interfaces

The AXI4 slave interface follows the AXI4 memory-mapped slave protocol specification as described in the ARM AMBA open specifications. See this specification [Ref 4] for the signaling details of the AXI4 slave interface.

If data is not being transmitted or received, check the following conditions:

- If transmit `<interface_name>_tready` is stuck Low following the `<interface_name>_tvalid` input being asserted, the core cannot send data.
- If the receive `<interface_name>_tvalid` is stuck Low, the core is not receiving data.
- Check that the `ACLK` inputs are connected and toggling.
- Check that the AXI4-Stream waveforms are being followed.
- Check core configuration.
- Add appropriate core specific checks.

CLOCK_DEDICATED_ROUTE Constraints

System Clock

If the SRCC/MRCC I/O pin and PLL are not allocated in the same bank, the CLOCK_DEDICATED_ROUTE constraint must be set to BACKBONE. DDR3/DDR2 SDRAM manages these constraints for designs generated with the **System Clock** option selected as **Differential/Single-Ended** (at **FPGA Options > System Clock**).

If the design is generated with the **System Clock** option selected as **No Buffer** (at **FPGA Options > System Clock**), the CLOCK_DEDICATED_ROUTE constraints based on the SRCC/MRCC I/O and PLL allocation needs to be handled manually for the IP flow. DDR3/DDR2 SDRAM does not generate clock constraints in the XDC file for the **No Buffer** configurations. You must take care of the clock constraints for the **No Buffer** configurations in the IP flow.

Reference Clock

If the SRCC/MRCC I/O pin and MMCM are not allocated in the same bank, the CLOCK_DEDICATED_ROUTE constraint is set to FALSE. Reference clock is a 200 MHz clock source used to drive IODELAY CTRL logic (through an additional MMCM). This clock is not utilized, CLOCK_DEDICATE_ROUTE (as they are limited in number), hence the FALSE value is set. DDR3/DDR2 SDRAM manages these constraints for designs generated with the **System Clock** option selected as **Differential/Single-Ended** (at **FPGA Options > System Clock**).

If the design is generated with the **System Clock** option selected as **No Buffer** (at **FPGA Options > System Clock**), the CLOCK_DEDICATED_ROUTE constraints based on SRCC/MRCC I/O and MMCM allocation needs to be handled manually for the IP flow. DDR3/DDR2 SDRAM does not generate clock constraints in the XDC file for the **No Buffer** configurations. You must take care of the clock constraints for the **No Buffer** configurations in the IP flow.

QDR II+ Memory Interface Solution

Introduction

The QDR II+ SRAM Memory Interface Solution (MIS) is a physical layer for interfacing Xilinx® 7 series FPGAs user designs to QDR II+ SRAM devices. QDR II+ SRAM capabilities offer high-speed data transfers on separate read and write buses on the rising and falling edges of the clock. These memory devices are used in high-performance systems as temporary data storage, such as:

- Look-up tables in networking systems
- Packet buffers in network switches
- Cache memory in high-speed computing
- Data buffers in high-performance testers

The QDR II+ SRAM memory solutions core is a PHY that takes simple user commands, converts them to the QDR II+ protocol, and provides the converted commands to the memory. The PHY half-frequency design enables you to provide one read and one write request per cycle eliminating the need for a Memory Controller and the associated overhead, thereby reducing the latency through the core. Unique capabilities of the 7 series FPGAs allow the PHY to maximize performance and simplify read data capture within the FPGA. The full solution is complete with a synthesizable reference design.

This chapter describes the core architecture and information about using, customizing, and simulating a LogiCORE™ IP QDR II+ SRAM MIS core for the 7 series FPGAs. Although this soft Memory Controller core is a fully verified solution with guaranteed performance, termination and trace routing rules for the PCB design need to be followed to have the best possible solution. For detailed board design guidelines, see [Design Guidelines, page 342](#).



IMPORTANT: *QDR II+ SRAM designs currently do not support memory-mapped AXI4 interfaces.*

For detailed information and updates about the 7 series FPGAs QDR II+ SRAM MIS core, see the *Xilinx 7 Series FPGA Data Sheets* [Ref 13] and the *Zynq-7000 AP SoC and 7 Series FPGAs Memory Interface Solutions Data Sheet* (DS176) [Ref 1].



IMPORTANT: *Memory Interface Solutions v4.0 only supports the Vivado® Design Suite. The ISE® Design Suite is not supported in this version.*

Using MIG in the Vivado Design Suite

This section provides the steps to generate the Memory Interface Generator (MIG) IP core using the Vivado Design Suite and run implementation.

1. Start the Vivado Design Suite (see [Figure 2-1](#)).

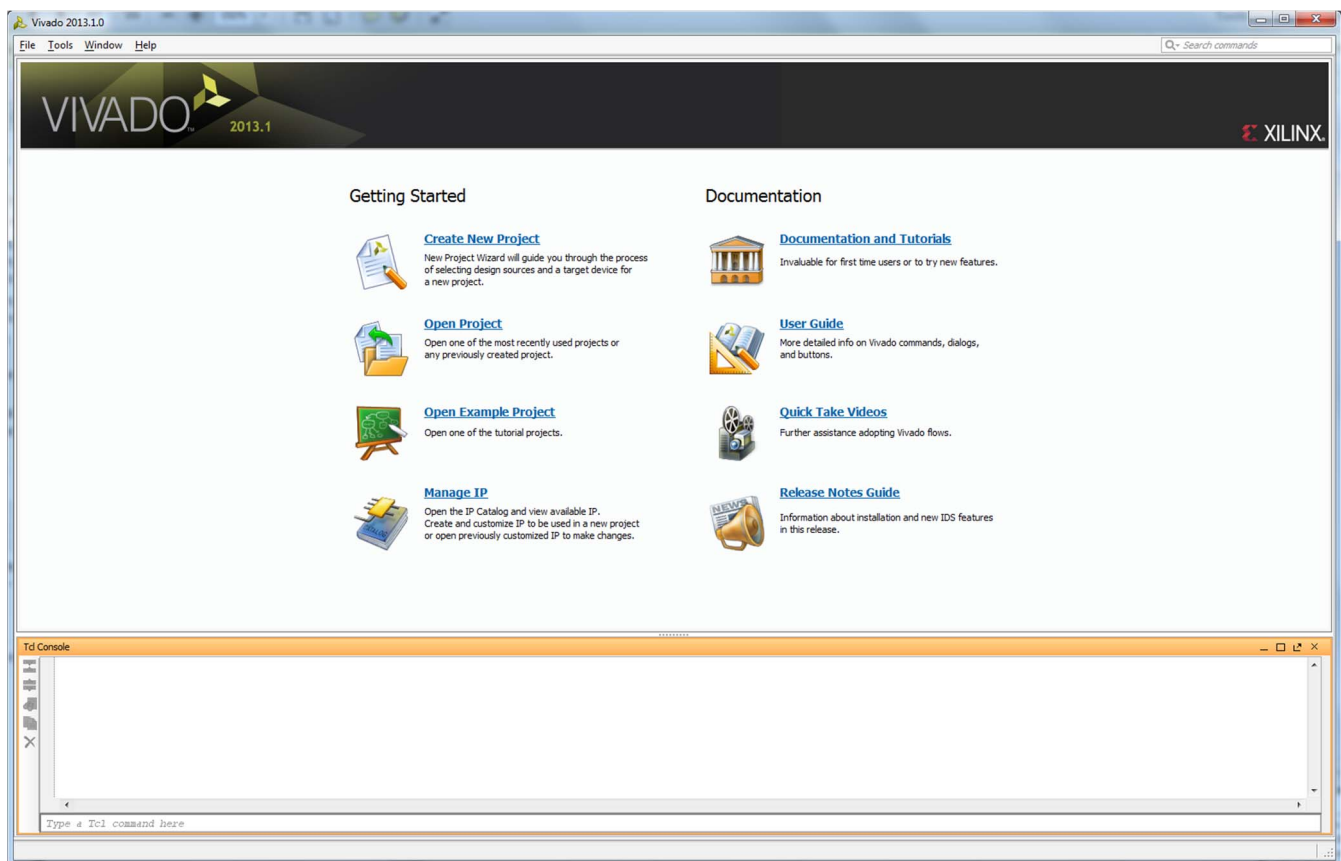


Figure 2-1: Vivado Design Suite

2. To create a new project, click the **Create New Project** option shown in [Figure 2-1](#) to open the page as shown in [Figure 2-2](#).

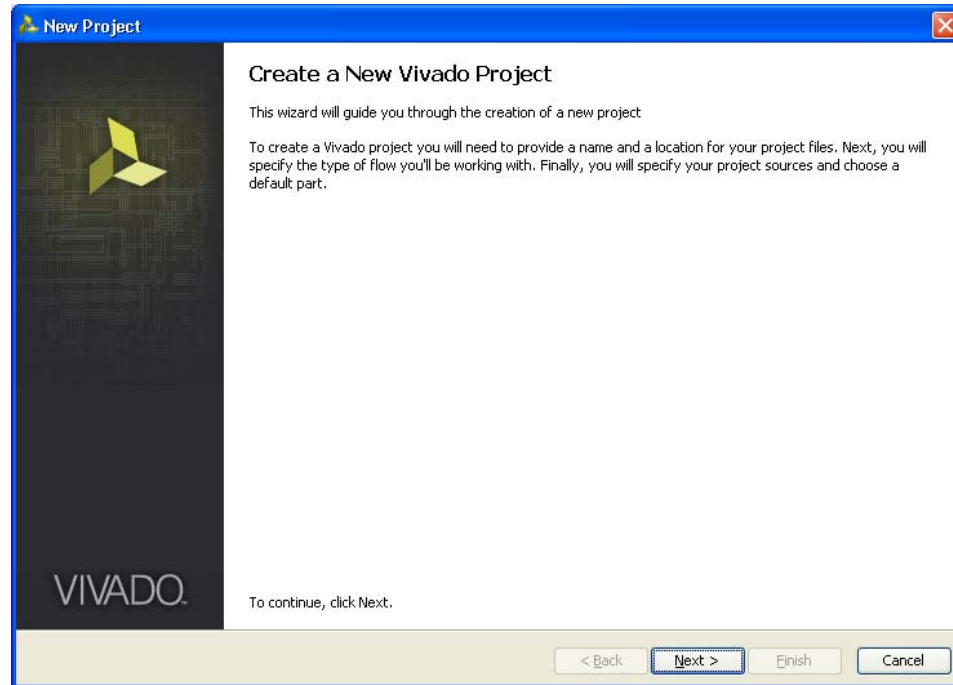


Figure 2-2: Create a New Vivado Tool Project

3. Click **Next** to proceed to the **Project Name** page (Figure 2-3). Enter the **Project Name** and **Project Location**. Based on the details provided, the project is saved in the directory.

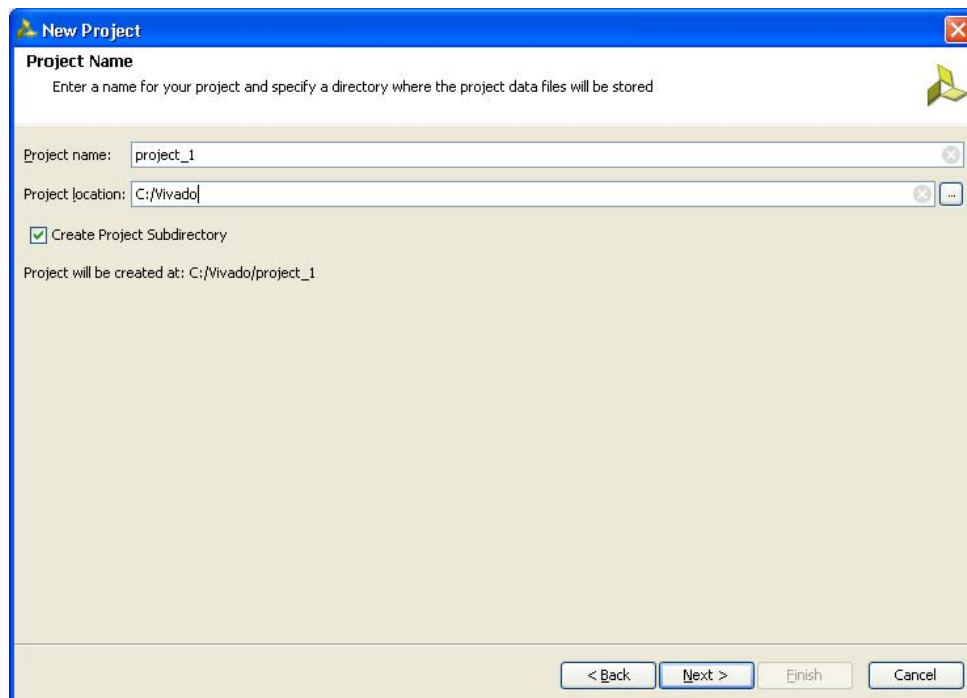


Figure 2-3: Project Name

4. Click **Next** to proceed to the **Project Type** page (Figure 2-4). Select the **Project Type** as **RTL Project** because MIG deliverables are RTL files.

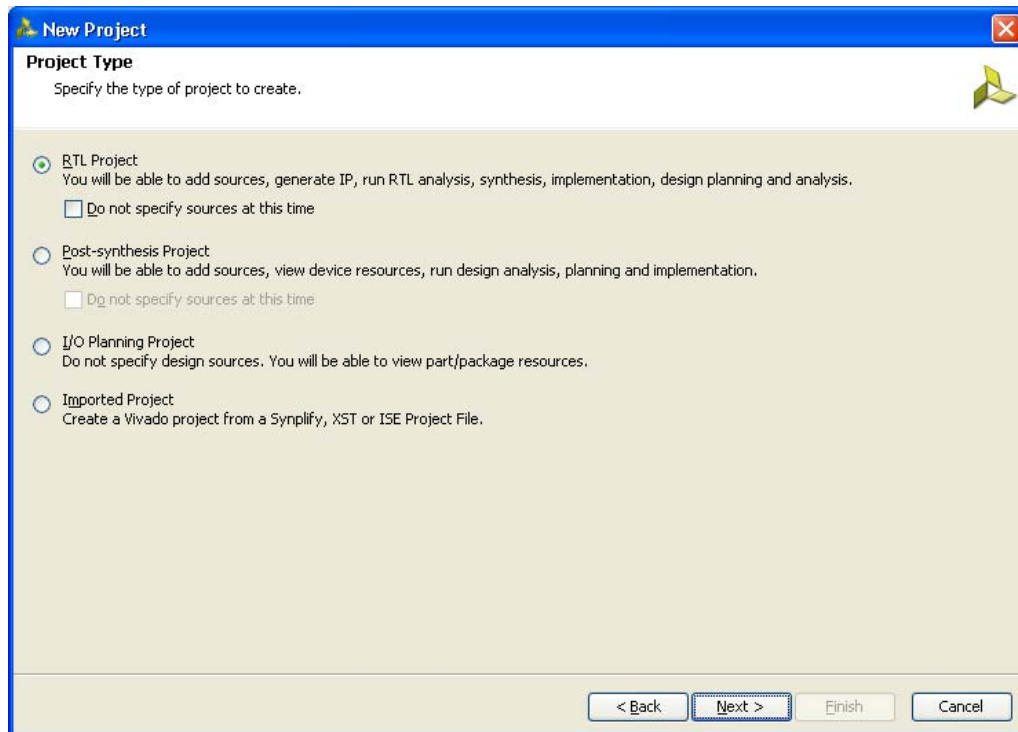


Figure 2-4: Project Type

5. Click **Next** to proceed to the **Add Sources** page (Figure 2-5). RTL files can be added to the project in this page. If the project was not created earlier, proceed to the next page.

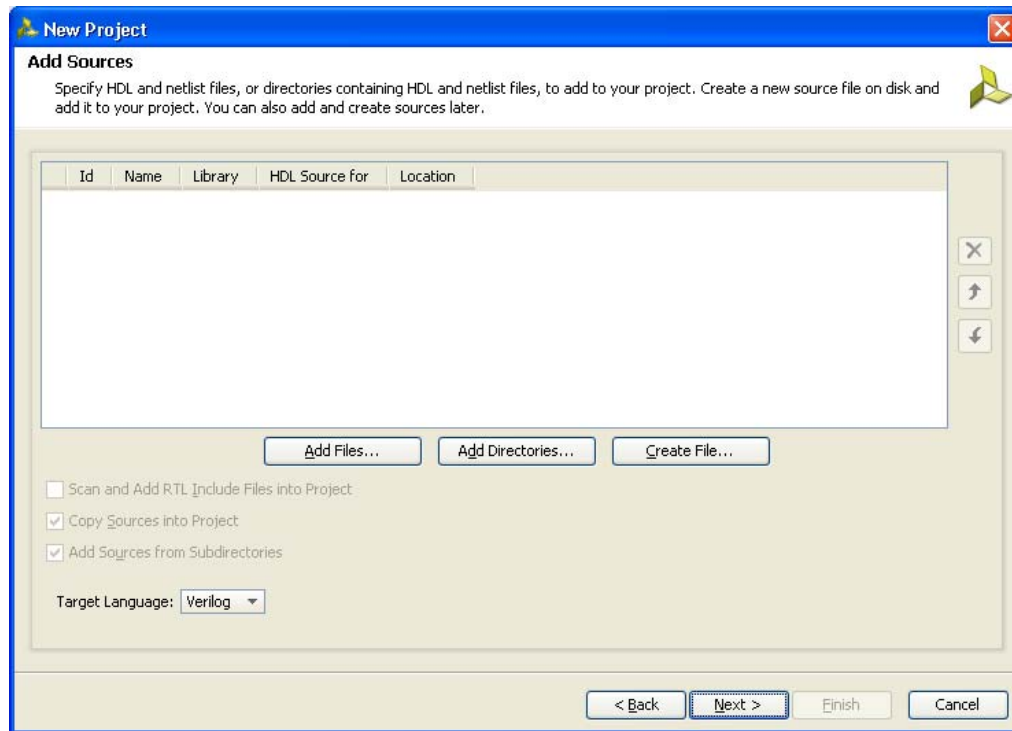


Figure 2-5: Add Sources

6. Click **Next** to open the **Add Existing IP (Optional)** page (Figure 2-6). If the IP is already created, the XCI file generated by the IP can be added to the project and the previous created IP files are automatically added to the project. If the IP was not created earlier, proceed to the next page.

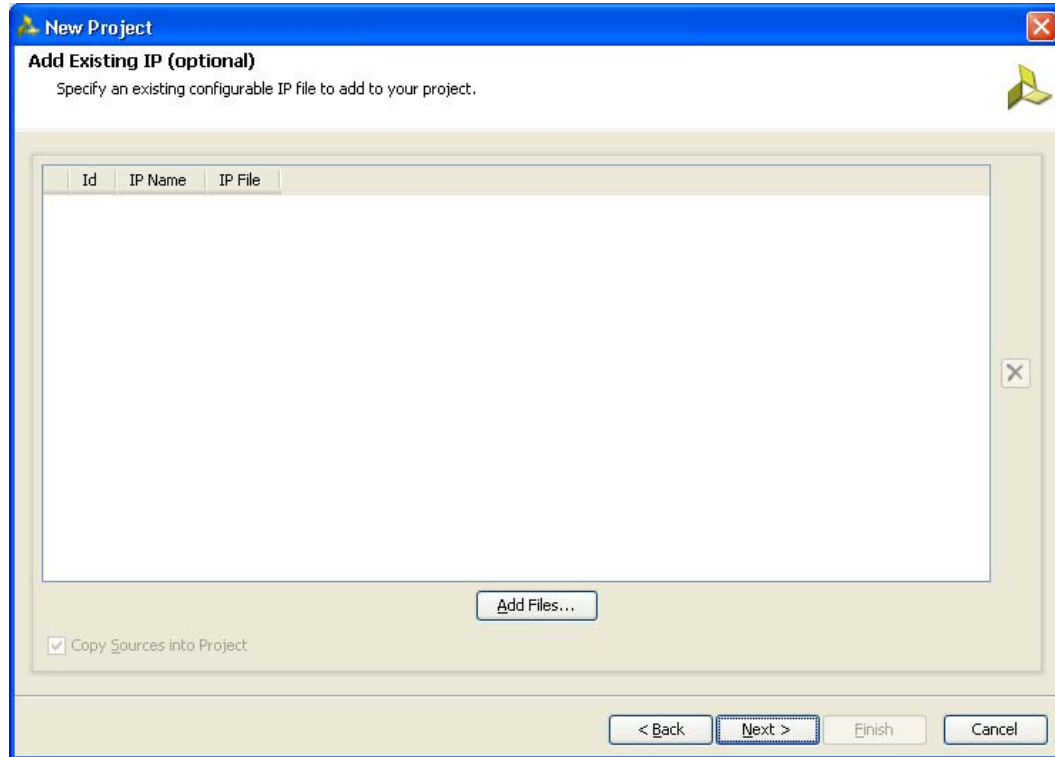


Figure 2-6: Add Existing IP (Optional)

7. Click **Next** to open the **Add Constraints (Optional)** page (Figure 2-7). If the constraints file exists in the repository, it can be added to the project. Proceed to the next page if the constraints file does not exist.

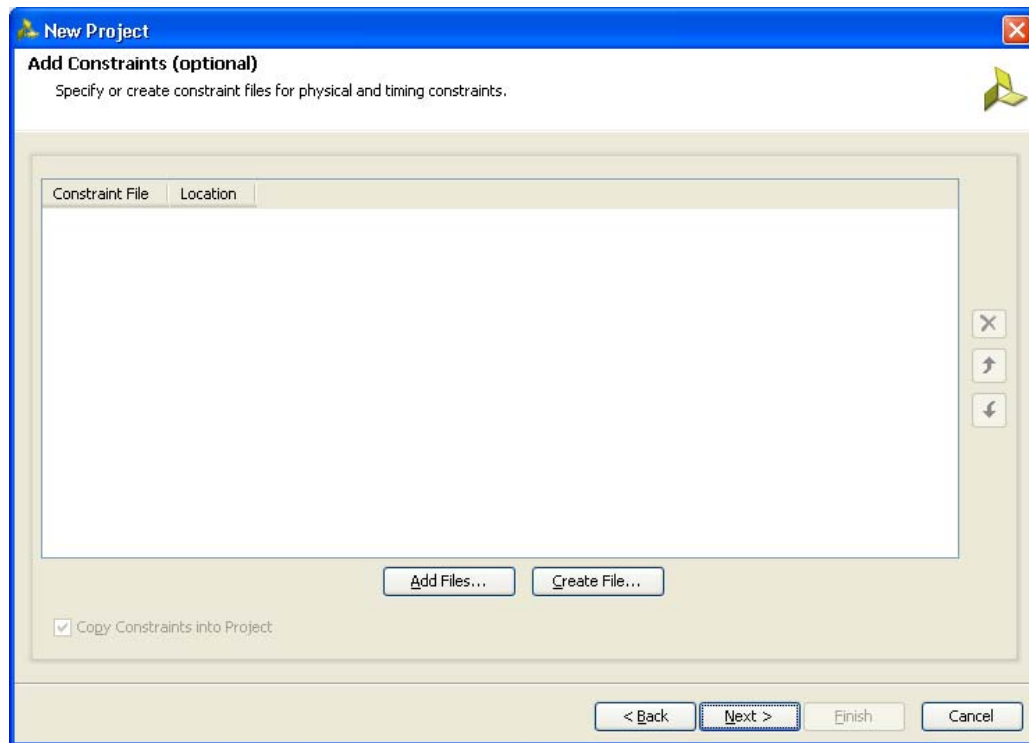


Figure 2-7: Add Constraints (Optional)

8. Click **Next** to proceed to the **Default Part** page (Figure 2-8) where the device that needs to be targeted can be selected. The **Default Part** page appears as shown in Figure 2-8.

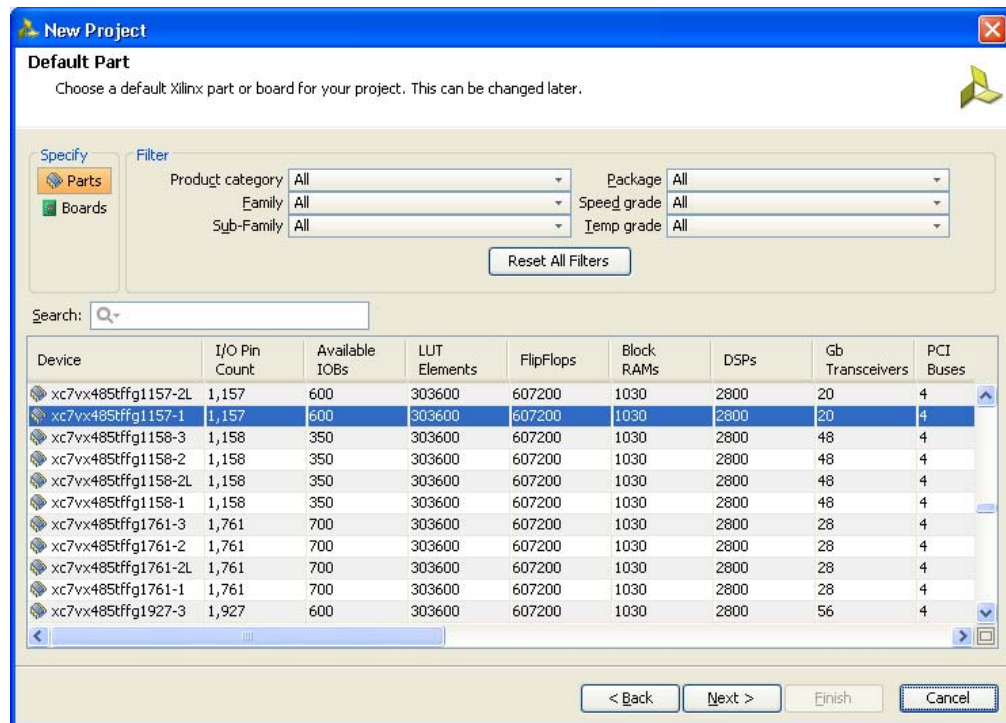


Figure 2-8: Default Part (Default Window)

Select the target **Family**, **Package**, and **Speed Grade**. The valid devices are displayed in the same page, and the device can be selected based on the targeted device (Figure 2-9).

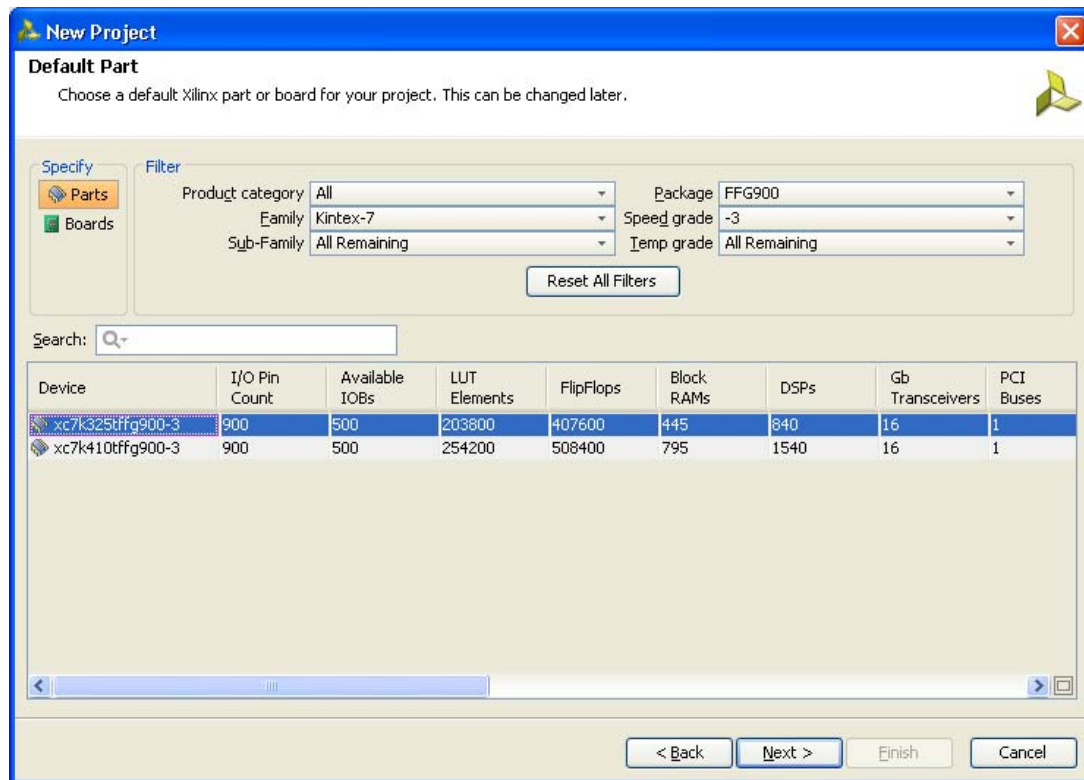


Figure 2-9: Default Part (Customized Window)

Apart from selecting the parts by using the **Parts** option, parts can be selected by choosing the **Boards** option, which brings up the evaluation boards supported by Xilinx (Figure 2-10). With this option, a design can be targeted for the various evaluation boards. If the XCI file of an existing IP was selected in an earlier step, the same part should be selected here.

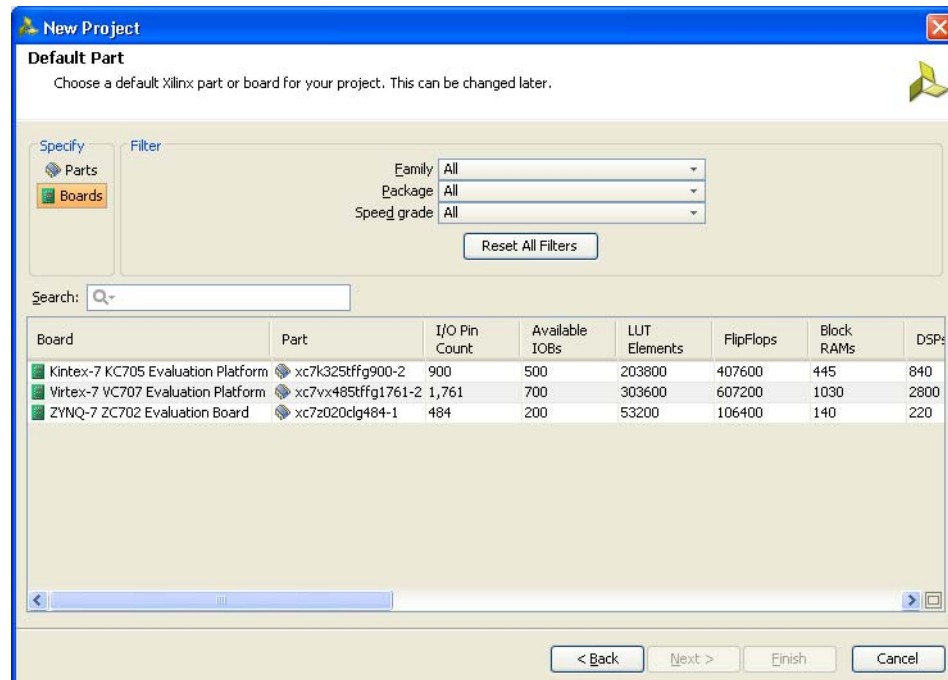


Figure 2-10: Default Part Boards Option

- Click **Next** to open the **New Project Summary** page (Figure 2-11). This includes the summary of selected project details.

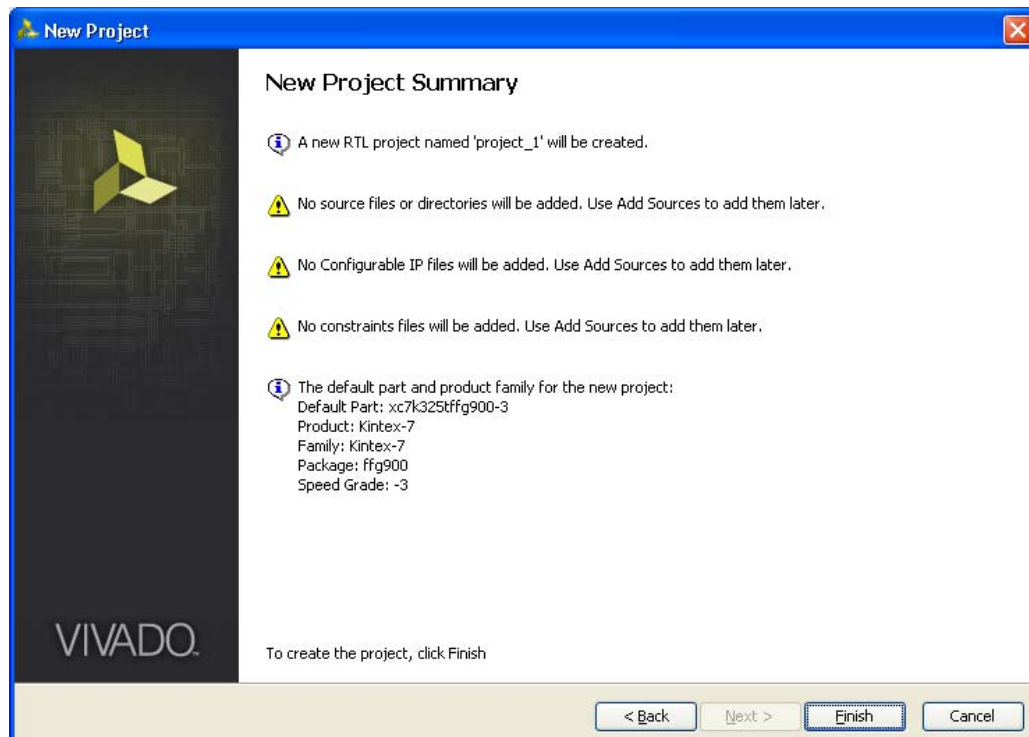


Figure 2-11: New Project Summary

- Click **Finish** to complete the project creation.

11. Click **IP Catalog** on the **Project Manager** window to open the Vivado IP catalog window. The IP catalog window appears on the right side panel (see Figure 2-12, highlighted in a red circle).
12. The MIG tool exists in the **Memories & Storage Elements > Memory Interface Generators** section of the IP catalog window (Figure 2-12) or you can search from the Search tool bar for the string "MIG."

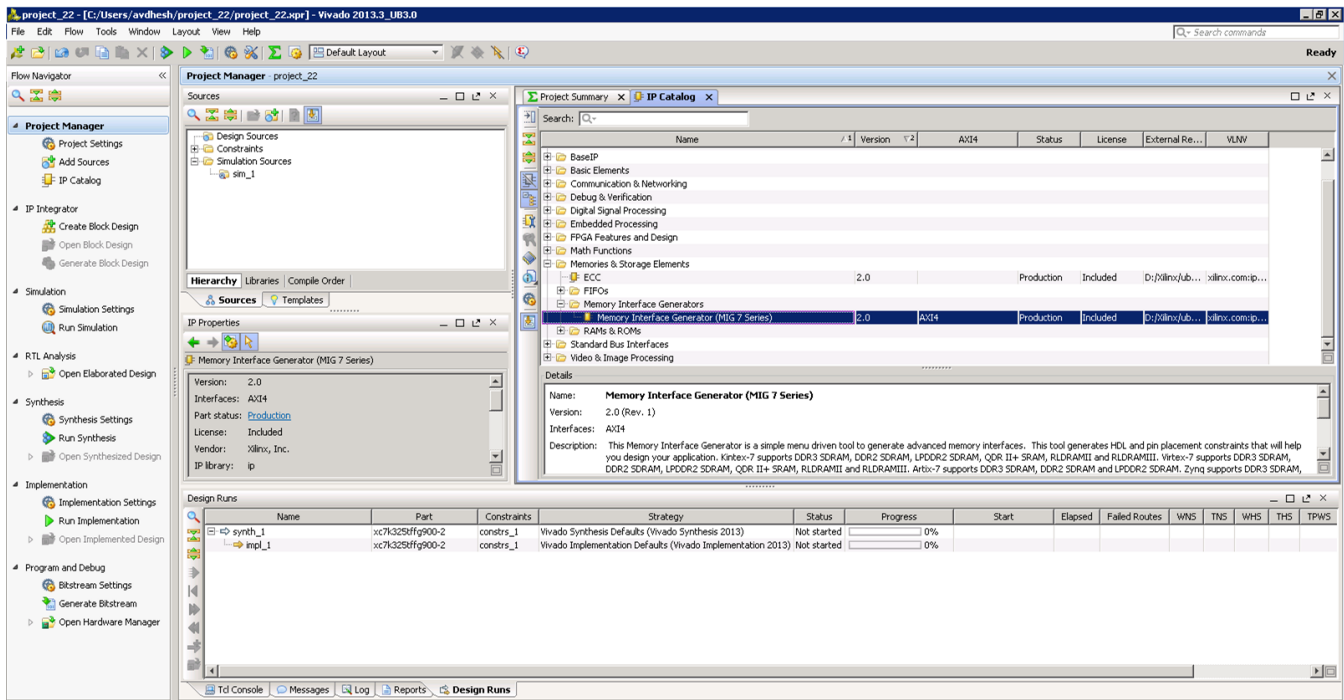


Figure 2-12: IP Catalog Window – Memory Interface Generator

13. Select **MIG 7 Series** to open the MIG tool (Figure 2-13).

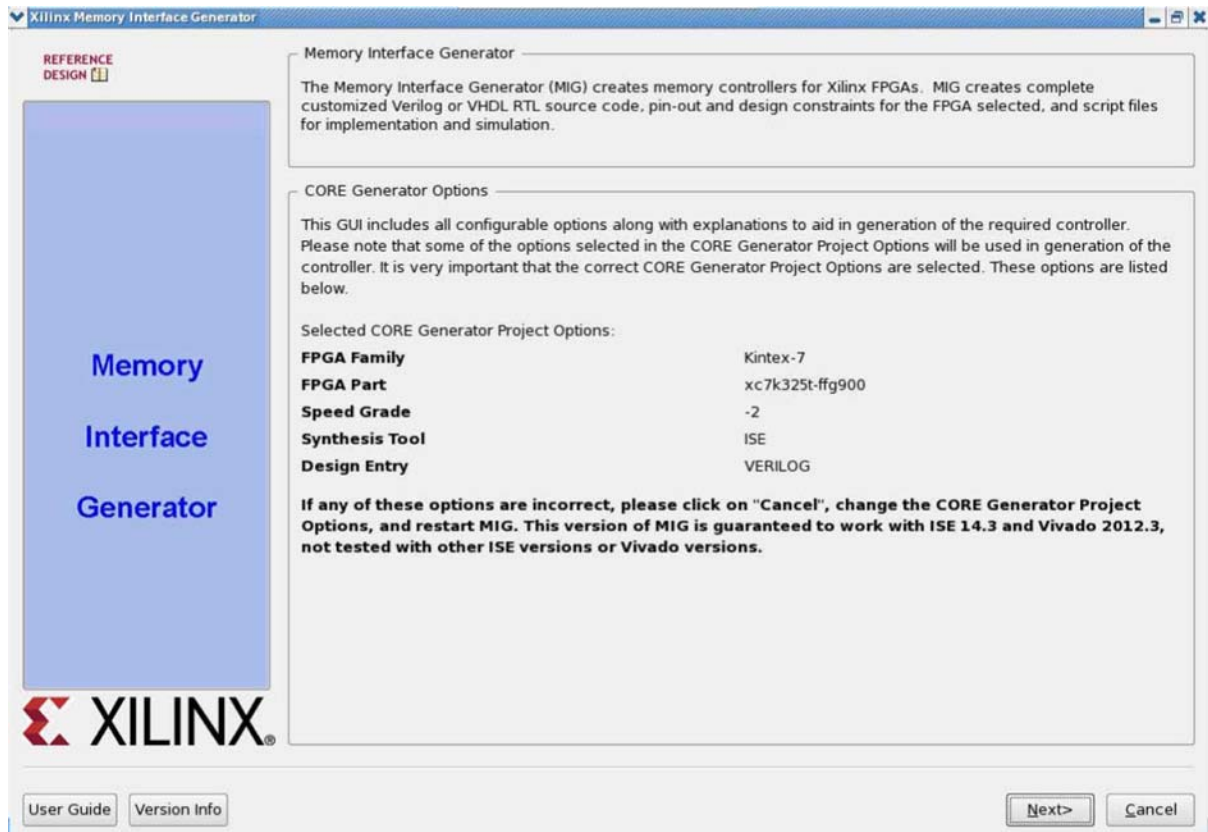


Figure 2-13: 7 Series FPGAs Memory Interface Generator FPGA Front Page

14. Click Next to display the **Output Options** page.


Customizing and Generating the Core



CAUTION! The Windows operating system has a 260-character limit for path lengths, which can affect the Vivado tools. To avoid this issue, use the shortest possible names and directory locations when creating projects, defining IP or managed IP projects, and creating block designs.

MIG Output Options

1. Select **Create Design** to create a new Memory Controller design. Enter a component name in the Component Name field (Figure 2-14).
2. Choose the number of controllers to be generated. This selection determines the replication of further pages.

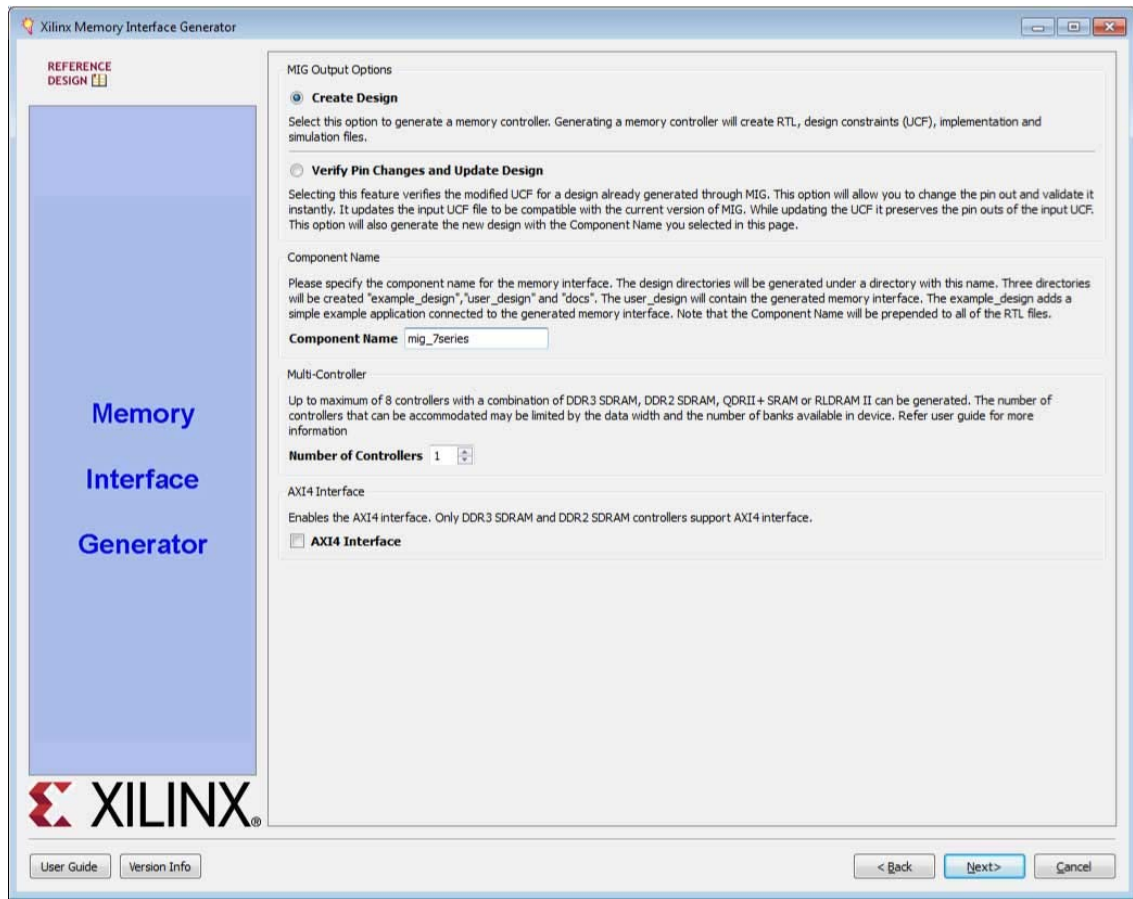

UG586_c1_09_120311

Figure 2-14: MIG Output Options

MIG outputs are generated with the folder name `<component name>`.




IMPORTANT: Only alphanumeric characters can be used for `<component name>`. Special characters cannot be used. This name should always start with an alphabetical character and can end with an alphanumeric character.

When invoked from Xilinx Platform Studio (XPS), the component name is corrected to be the IP instance name from XPS.

- Click **Next** to display the **Pin Compatible FPGAs** page.

Pin Compatible FPGAs

The **Pin Compatible FPGAs** page lists FPGAs in the selected family having the same package. If the generated pinout from the MIG tool needs to be compatible with any of these other FPGAs, this option should be used to select the FPGAs with which the pinout has to be compatible (Figure 2-15).

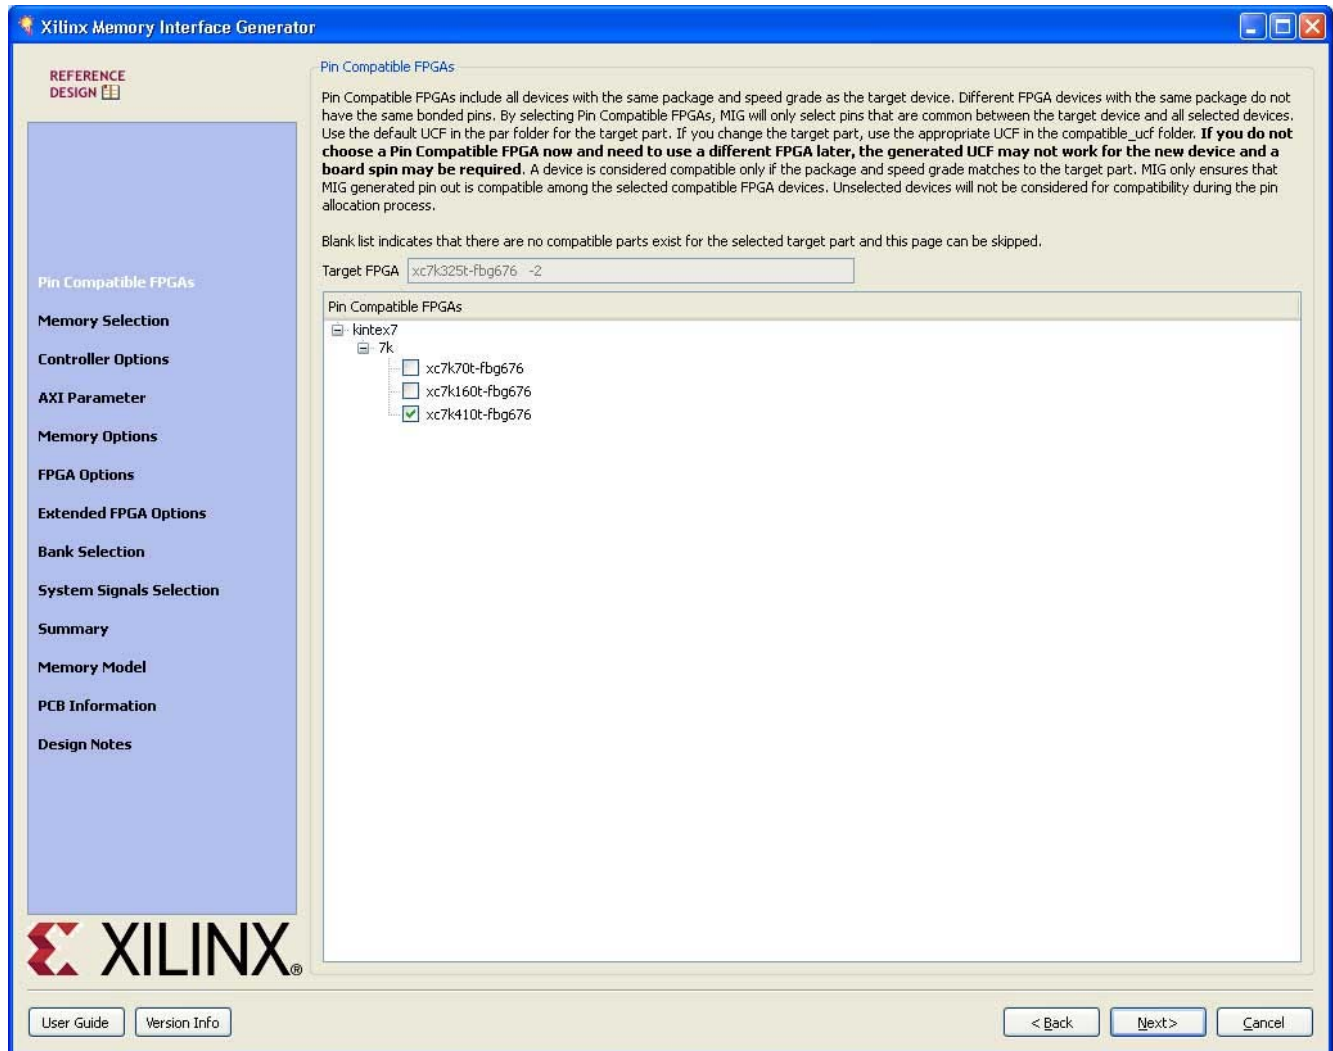

UG586_c1_10_110610

Figure 2-15: Pin-Compatible 7 Series FPGAs

1. Select any of the compatible FPGAs in the list. Only the common pins between the target and selected FPGAs are used by the MIG tool. The name in the text box signifies the target FPGA selected.
2. Click **Next** to display the **Memory Selection** page.

Creating the 7 Series FPGA QDR II+ SRAM Design

Memory Selection

This page displays all memory types that are supported by the selected FPGA family.

1. Select the QDR II+ SRAM controller type.
2. Click **Next** to display the **Controller Options** page

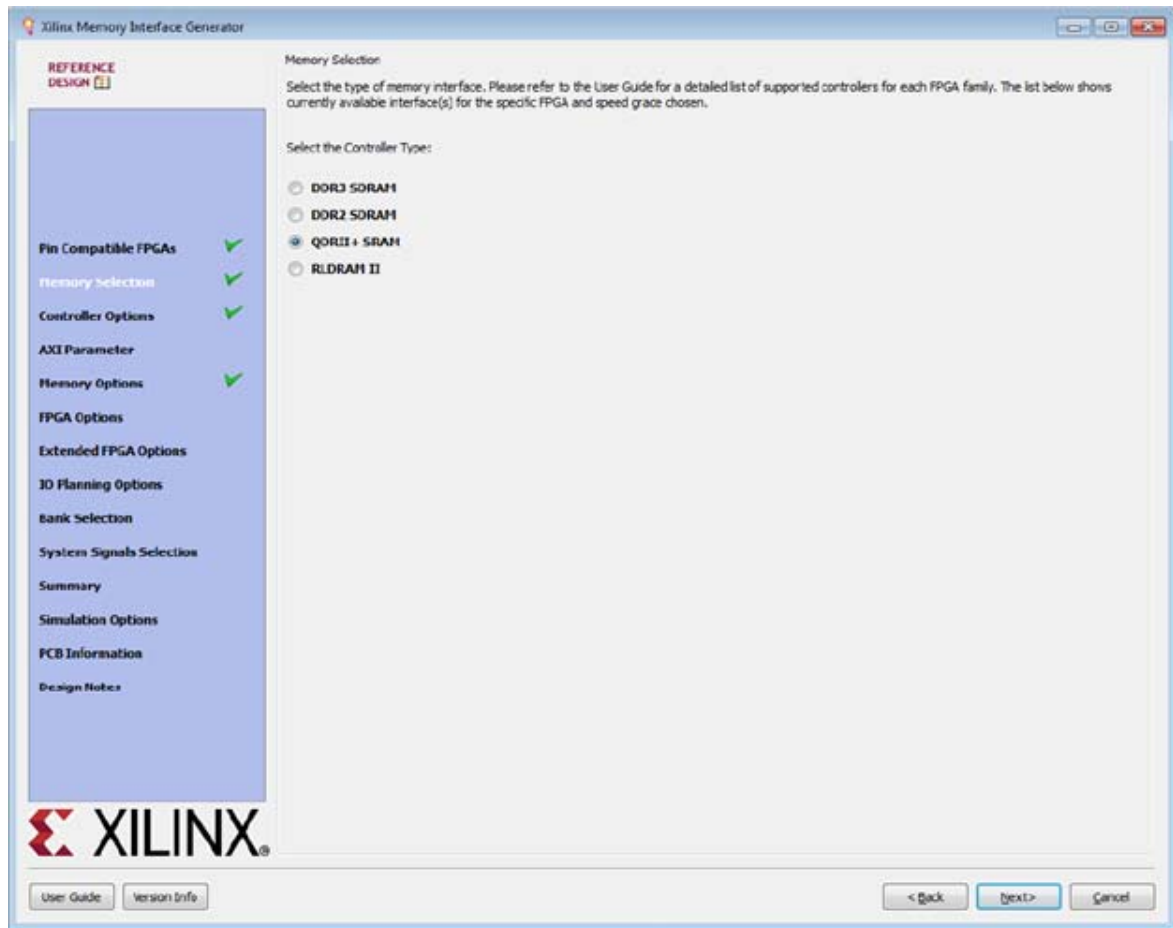


Figure 2-16: Memory Selection Page

QDR II+ SRAM designs do not support memory-mapped AXI4 interfaces.

Controller Options

This page shows the various controller options that can be selected.

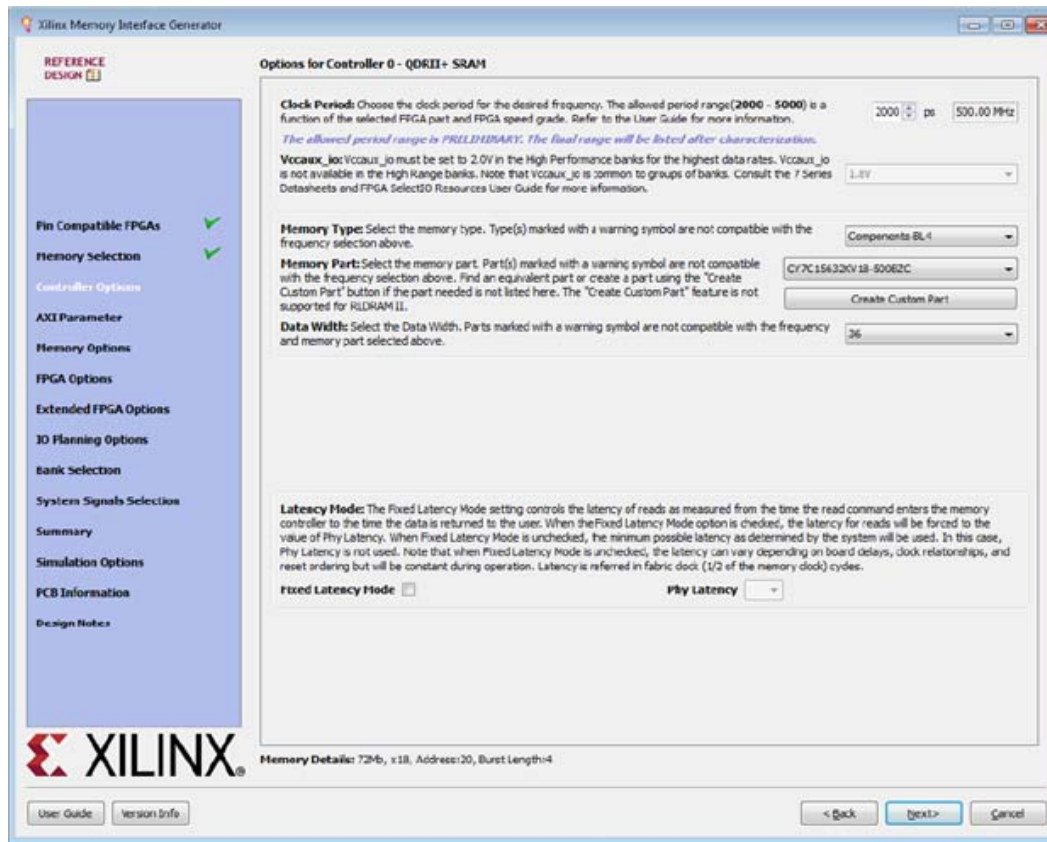


Figure 2-17: Controller Options Page

- **Frequency** – This feature indicates the operating frequency for all the controllers. The frequency block is limited by factors such as the selected FPGA and device speed grade.
- **VCCAUX_IO** – Set based on the period/frequency setting. 2.0V is required at the highest frequency settings in the High Performance column. The MIG tool automatically selects 2.0V when required. Either 1.8 or 2.0V can be used at lower frequencies. Groups of banks share the VCCAUX_IO supply. For more information, see the *7 Series FPGAs SelectIO™ Resources User Guide* (UG471) [Ref 2].
- **Memory Part** – This option selects the memory part for the design. Selections can be made from the list, or if the part is not listed, a new part can be created (**Create Custom Part**). The QDR II+ SRAM devices with read latency 2.0 and 2.5 clock cycles are supported by the design. If a desired part is not available in the list, you can generate or create an equivalent device and then modify the output to support the desired memory device.
- **Data Width** – The data width value can be selected here based on the memory part selected. The MIG tool supports values in multiples of the individual device data widths.

- **Latency Mode** – If fixed latency through the core is needed, the **Fixed Latency Mode** option allows you to select the desired latency. This option can be used if the user design needs a read response returned in a predictable number of clock cycles. To use this mode, select the **Fixed Latency Mode** box. After enabling fixed latency, the pull-down box allows you to select the number of cycles until the read response is returned to you. This value ranges from 21 to 30 cycles. Based on actual hardware conditions, if the latency seen through the system is higher, you need to modify this value accordingly in the top-level RTL file.

When **Fixed Latency Mode** is enabled, failures can occur if the actual read latency is larger than the specified **Fixed Latency** value. **Read Latency** can vary across byte lanes by as much as five clock cycles because of the command output path in the PHY control block and data input path across asynchronous `IN_FIFO`.

Note: Xilinx recommends adding five additional clocks to the minimum latency measured to determine the actual fixed latency value to be used. If **Fixed Latency Mode** is not used, the core uses the minimum number of cycles through the system.

- **Memory Details** – The bottom of the **Controller Options** page. [Figure 2-18](#) displays the details for the selected memory configuration.

Memory Details: 72Mb, x18, Address:20, Burst Length:4

Figure 2-18: Selected Memory Configuration Details

Create Custom Part

1. On the **Controller Options** page select the appropriate frequency. Either use the spin box or enter a valid value using the keyboard. Values entered are restricted based on the minimum and maximum frequencies supported.
2. Select the appropriate **Memory Part** from the list. If the required part or its equivalent is unavailable, a new memory part can be created. To create a custom part, click the **Create Custom Part** below the **Memory Part** pull-down menu. A new page appears, as shown in [Figure 2-19](#).

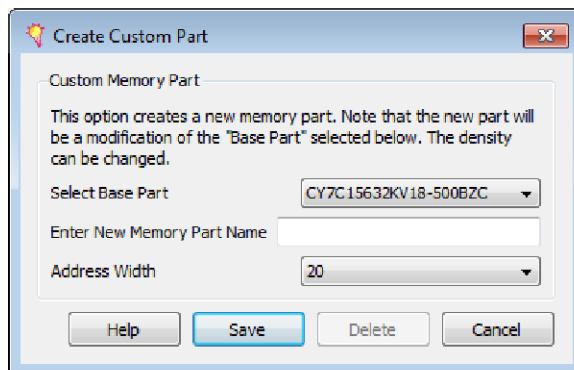


Figure 2-19: Create Custom Part Page

The **Create Custom Part** page includes all of the specifications of the memory component selected in the **Select Base Part** pull-down menu.

1. Enter the appropriate **Memory Part Name** in the text box.
2. Select the suitable base part from the **Select Base Part** list.
3. Select a suitable value for the Row Address.
4. After editing the required fields, click **Save**. The new part is saved with the selected name. This new part is added in the **Memory Parts** list on the **Controller Options** page. It is also saved into the database for reuse and to produce the design.
5. Click **Next** to display the **FPGA Options** page.

Memory Options

Figure 2-20 shows the **Memory Options** page.

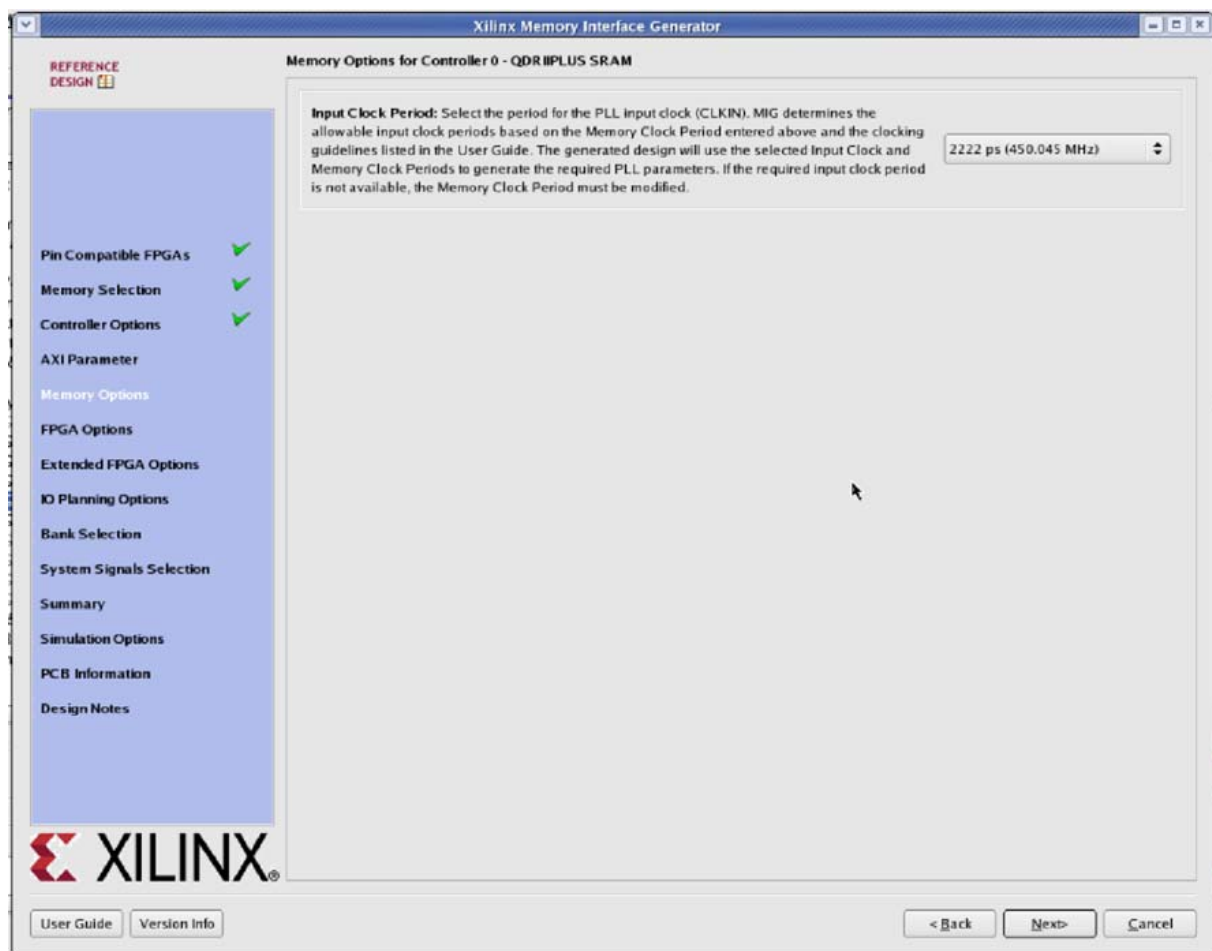


Figure 2-20: Memory Options Page

- **Input Clock Period** – The desired input clock period is selected from the list. These values are determined by the chosen memory clock period and the allowable limits of the PLL parameters. See [Clocking Architecture, page 322](#) for more information on the PLL parameter limits.

FPGA Options

Figure 2-21 shows the **FPGA Options** page.

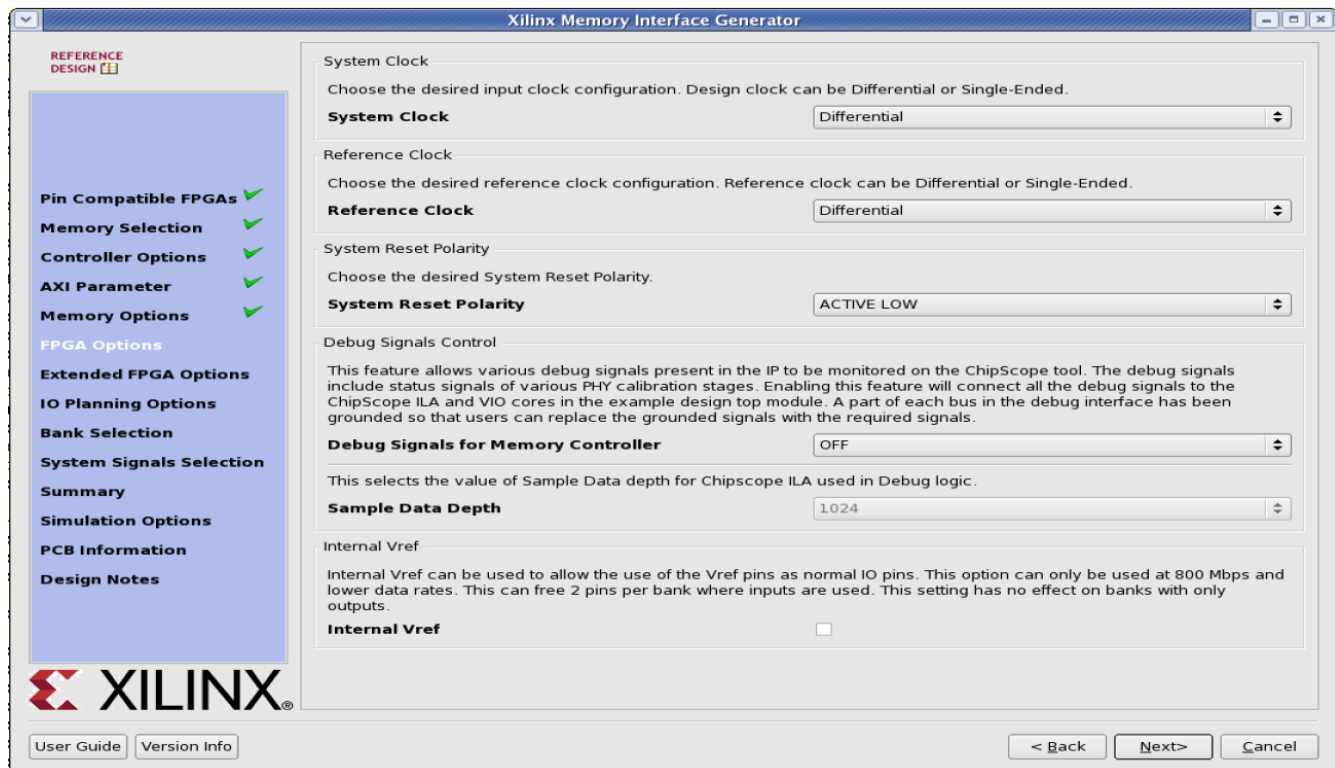


Figure 2-21: **FPGA Options Page**

- **System Clock** – This option selects the clock type (Single-Ended, Differential or No Buffer) for the `sys_clk` signal pair. When the **No Buffer** option is selected, IBUF primitives are not instantiated in RTL code and pins are not allocated for the system clock.

If the designs generated from MIG tool for the **No Buffer** option are implemented without performing changes, designs can fail in implementation due to IBUFs not instantiated for the `sys_clk_i` signal. So for **No Buffer** scenarios, `sys_clk_i` signal needs to be connected to an internal clock.

- **Reference Clock** – This option selects the clock type (Single-Ended, Differential, No Buffer, or Use System Clock) for the `clk_ref` signal pair. The **Use System Clock** option appears when the input frequency is between 199 and 200 MHz (that is, the Input Clock Period is between 5,025 ps (199 MHz) and 4,975 ps (201 MHz). When the **No Buffer** option is selected, IBUF primitives are not instantiated in RTL code and pins are not allocated for the reference clock.

If the designs generated from MIG tool for the **No Buffer** option are implemented without performing changes, designs can fail in implementation due to IBUFs not instantiated for the `ref_clk_i` signal. So for **No Buffer** scenarios, `ref_clk_i` signal needs to be connected to an internal clock.

- **System Reset Polarity** – The polarity for system reset (`sys_rst`) can be selected. If the option is selected as active-Low, the parameter `RST_ACT_LOW` is set to 1 and if set to active-High the parameter `RST_ACT_LOW` is set to 0.
- **Debug Signals Control** – Selecting this option enables calibration status and user port signals to be port mapped to the ILA and VIO in the `example_top` module. This helps in monitoring traffic on the user interface port with the Vivado Design Suite debug feature. Deselecting the **Debug Signals Control** option leaves the debug signals unconnected in the `example_top` module and no ILA/VIO modules are generated by the IP catalog. Additionally, the debug port is always disabled for functional simulations.
- **Sample Data Depth** – This option selects the Sample Data depth for the ILA module used in the Vivado debug logic. This option can be selected when the **Debug Signals for Memory Controller** option is ON.
- **Internal V_{REF} Selection** – Internal V_{REF} can be used for data group bytes to allow the use of the V_{REF} pins for normal I/O usage. Internal V_{REF} should only be used for data rates of 800 Mb/s or below.

Click **Next** to display the **Extended FPGA Options** page.

Extended FPGA Options

Figure 2-22 shows the **Extended FPGA Options** page.

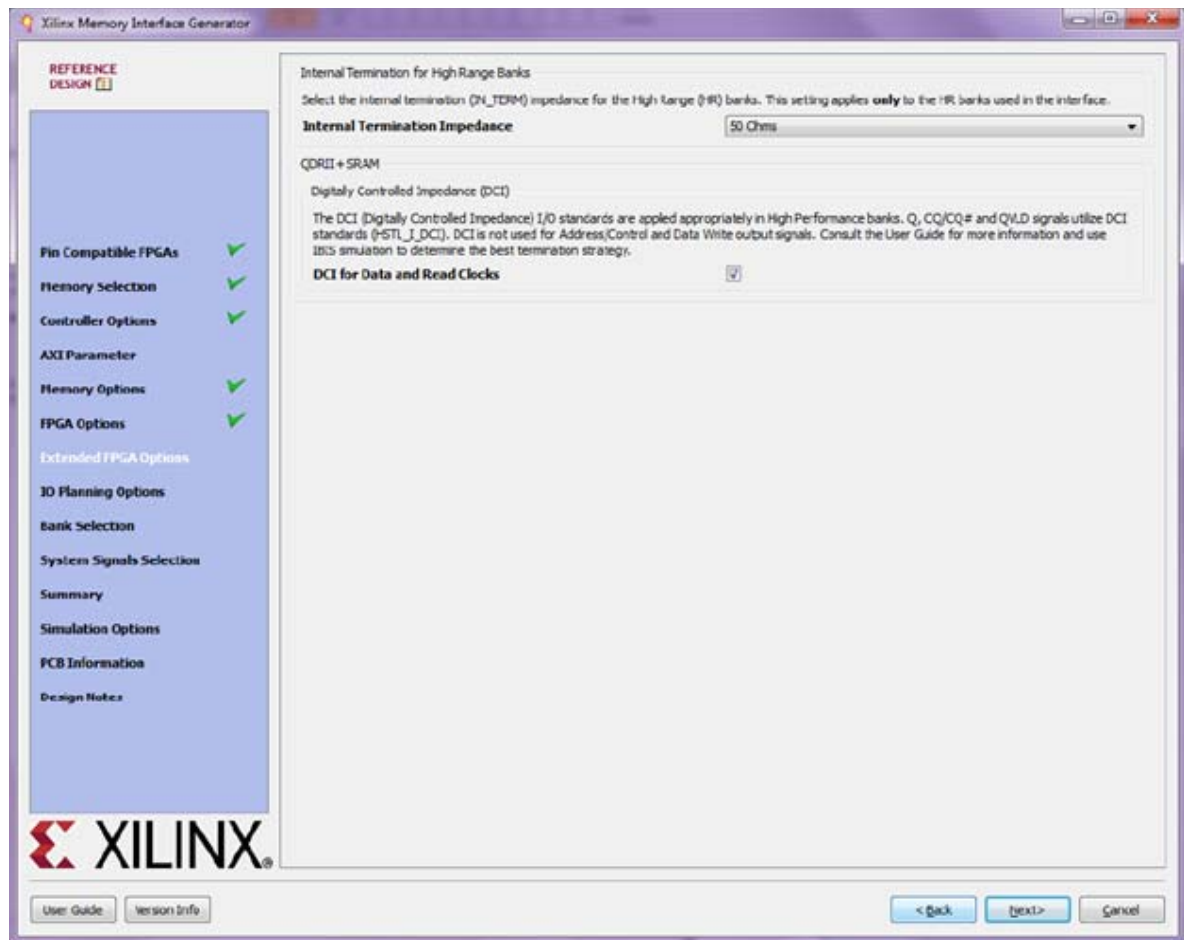


Figure 2-22: Extended FPGA Options Page

- **Digitally Controlled Impedance (DCI)** – When selected, this option internally terminates the signals from the QDR II+ SRAM read path. DCI is available in the High Performance Banks.
- **Internal Termination for High Range Banks** – The internal termination option can be set to 40, 50, or 60Ω or disabled. This termination is for the read datapath from the QDR II+ SRAM. This selection is only for High Range banks.

I/O Planning Options

Figure 2-23 shows the **I/O Planning Options** page.

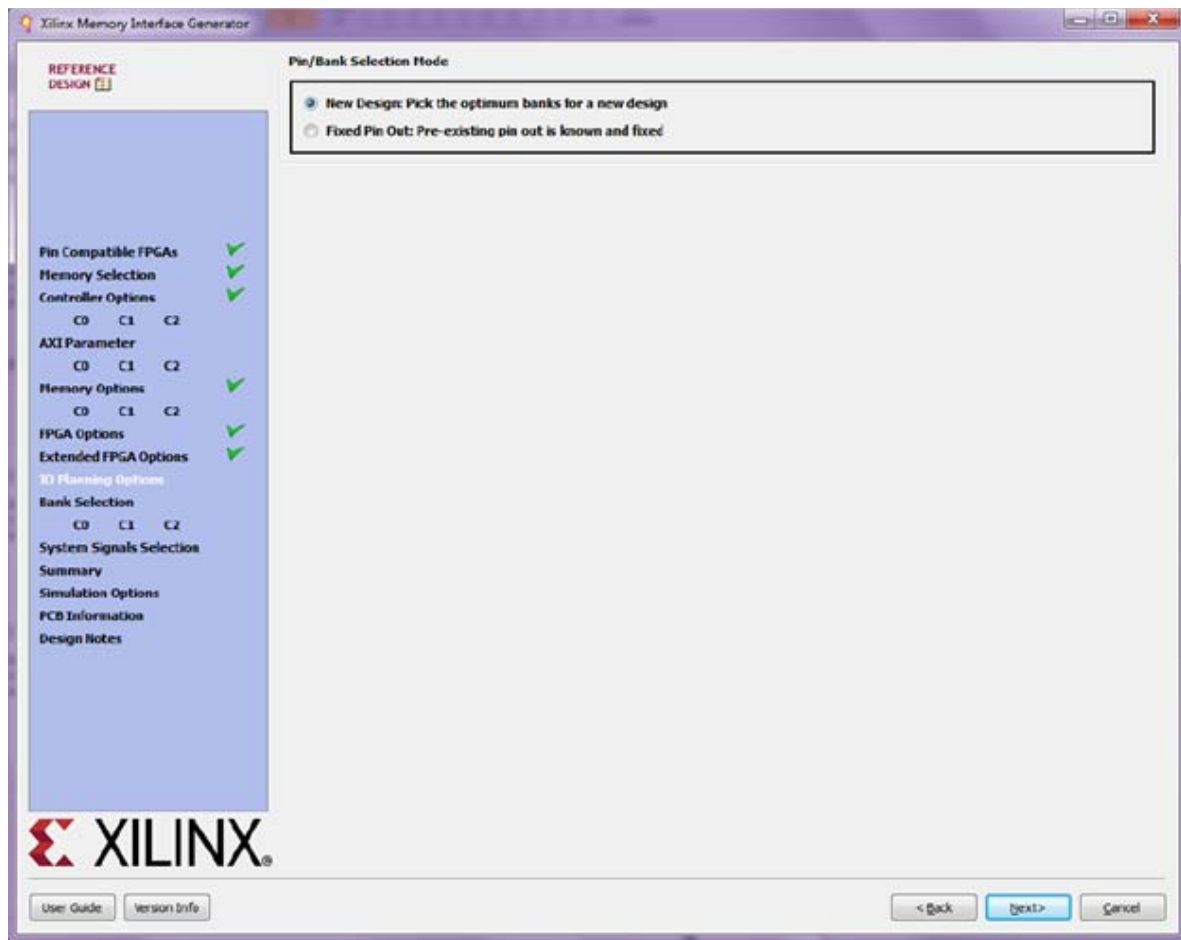


Figure 2-23: I/O Planning Options Page

- Pin/Bank Selection Mode** – This allows you to specify an existing pinout and generate the RTL for this pinout or pick banks for a new design. Figure 2-24 shows the options for using an existing pinout. You must assign the appropriate pins for each signal. A choice of each bank is available to narrow down the list of pins. It is not mandatory to select the banks prior to selection of the pins. Click **Validate** to check against the MIG pinout rules. You cannot proceed until the MIG DRC has been validated by clicking **Validate**.

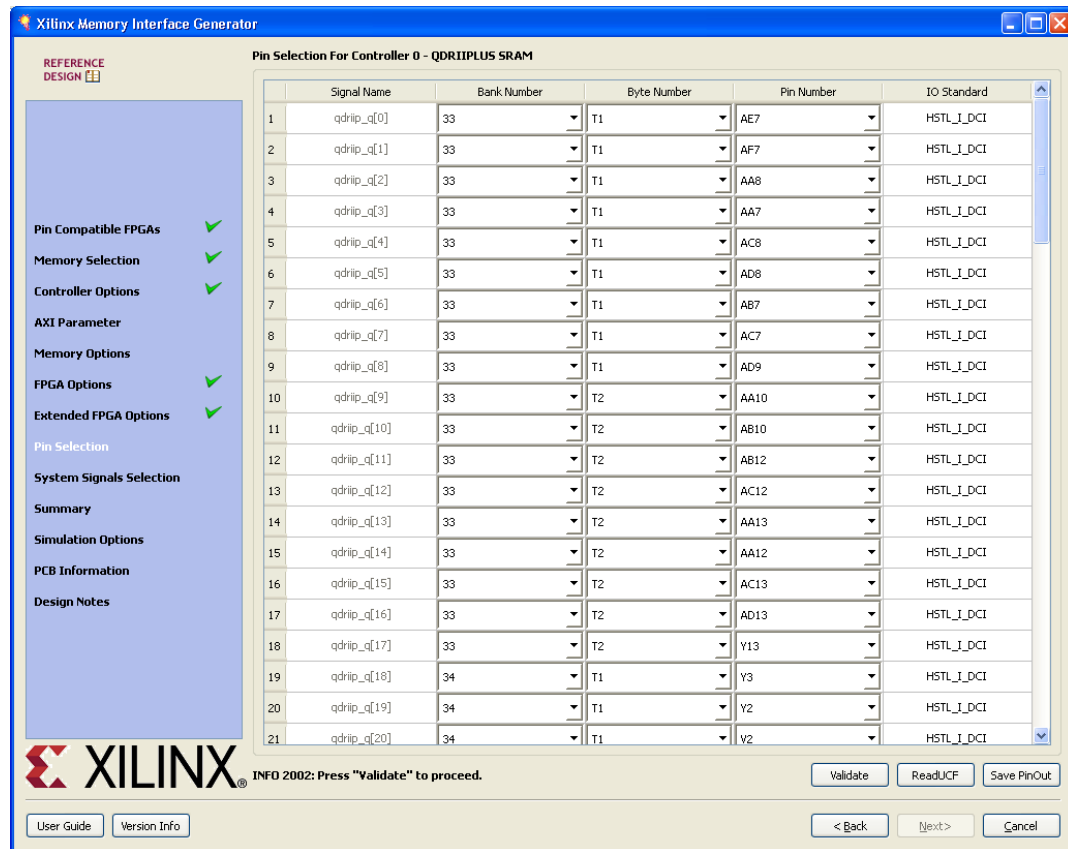


Figure 2-24: Pin/Bank Selection Mode

Bank Selection

This feature allows the selection of bytes for the memory interface. Bytes can be selected for different classes of memory signals, such as:

- Address and control signals
- Data Read signals
- Data Write signals

For customized settings, click **Deselect Banks** and select the appropriate bank and memory signals. Click **Next** to move to the next page if the default setting is used. To unselect the banks that are selected, click **Deselect Banks**. To restore the defaults, click **Restore Defaults**. VCCAUX_IO groups are shown for HP banks in devices with these groups using dashed lines. VCCAUX_IO is common to all banks in these groups. The memory interface must have the same VCCAUX_IO for all banks used in the interface. MIG automatically sets the VCCAUX_IO constraint appropriately for the data rate requested.

For devices implemented with SSI technology, the SLRs are indicated by a number in the header in each bank, for example, *SLR 1*. Interfaces cannot span across Super Logic Regions. Not all devices have Super Logic Regions.


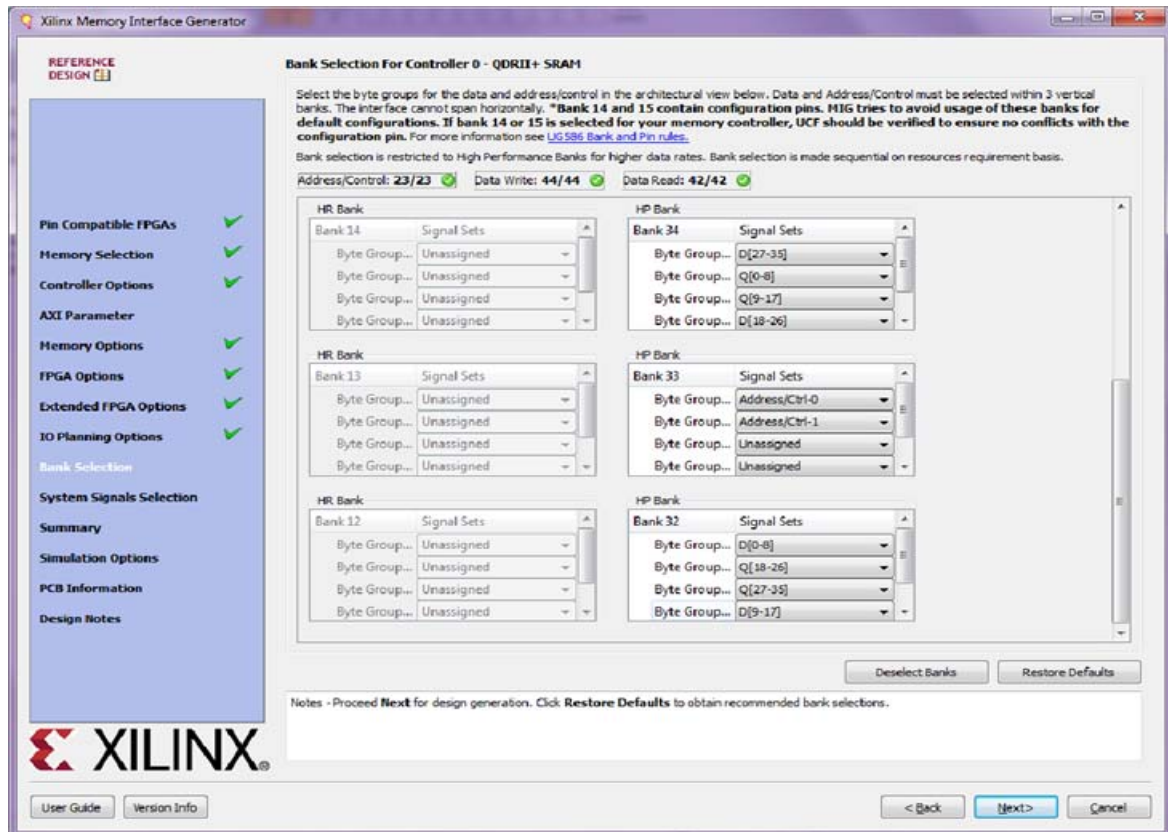


Figure 2-25: Bank Selection Page

System Pins Selection

Select the pins for the system signals on this page. The MIG tool allows the selection of either external pins or internal connections, as desired.

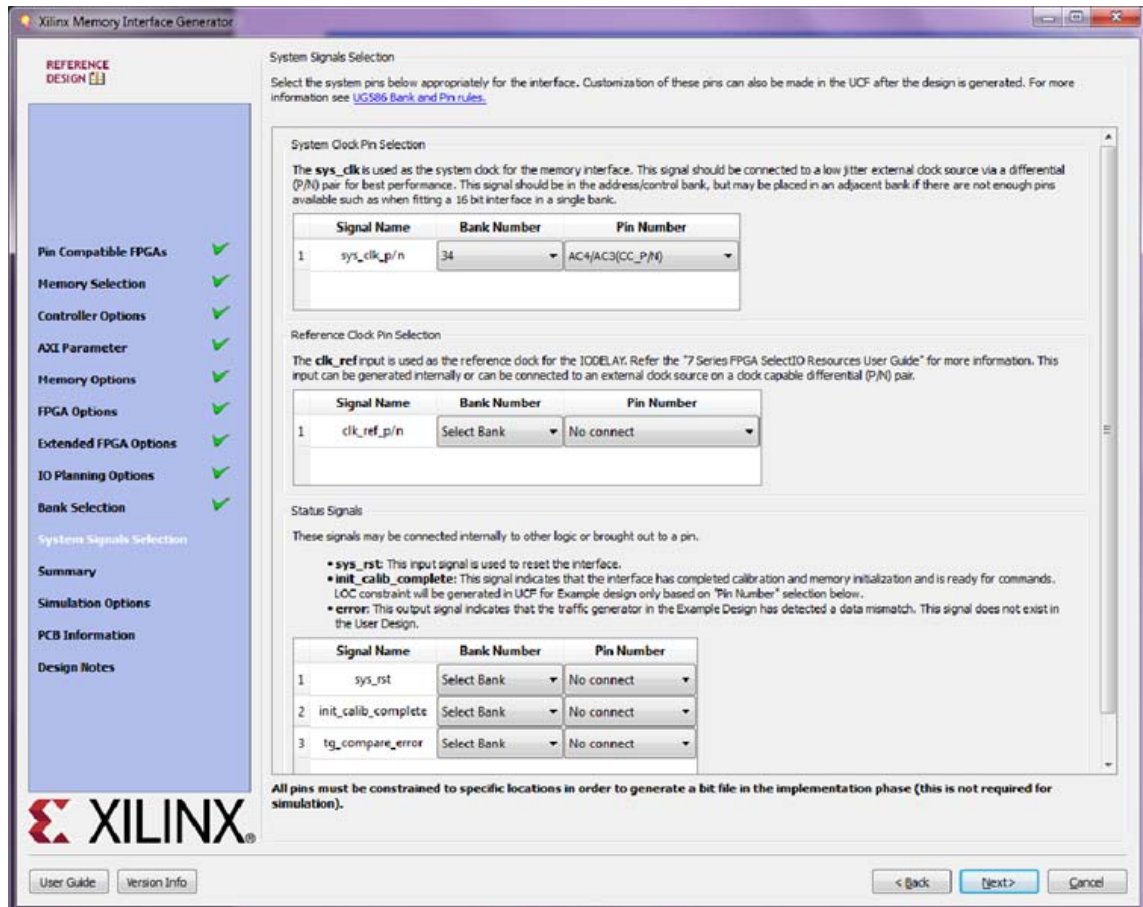

System Signals Selection

Select the system pins below appropriately for the interface. Customization of these pins can also be made in the UCF after the design is generated. For more information see [UG586 Bank and Pin rules](#).

System Clock Pin Selection

The **sys_clk** is used as the system clock for the memory interface. This signal should be connected to a low jitter external clock source via a differential (P/N) pair for best performance. This signal should be in the address/control bank, but may be placed in an adjacent bank if there are not enough pins available such as when fitting a 16 bit interface in a single bank.

Signal Name	Bank Number	Pin Number
1 sys_clk_p/n	34	AC4/AC3(CC_P/N)

Reference Clock Pin Selection

The **clk_ref** input is used as the reference clock for the IDELAY. Refer the "7 Series FPGA SelectIO Resources User Guide" for more information. This input can be generated internally or can be connected to an external clock source on a clock capable differential (P/N) pair.

Signal Name	Bank Number	Pin Number
1 clk_ref_p/n	Select Bank	No connect

Status Signals

These signals may be connected internally to other logic or brought out to a pin.

- sys_rst**: This input signal is used to reset the interface.
- init_calib_complete**: This signal indicates that the interface has completed calibration and memory initialization and is ready for commands. LOC constraint will be generated in UCF for Example design only based on "Pin Number" selection below.
- error**: This output signal indicates that the traffic generator in the Example Design has detected a data mismatch. This signal does not exist in the User Design.

Signal Name	Bank Number	Pin Number
1 sys_rst	Select Bank	No connect
2 init_calib_complete	Select Bank	No connect
3 tg_compare_error	Select Bank	No connect

All pins must be constrained to specific locations in order to generate a bit file in the implementation phase (this is not required for simulation).

Navigation: User Guide, Version Info, < Back, Next >, Cancel

Figure 2-26: System Pins Selection Page

- sys_clk** – This is the system clock input for the memory interface and is typically connected to a low-jitter external clock source. Either a single input or a differential pair can be selected based on the **System Clock** selection in the **FPGA Options** page (Figure 2-21). The **sys_clk** input must be in the same column as the memory interface. If this pin is connected in the same banks as the memory interface, the MIG tool selects an I/O standard compatible with the interface, such as DIFF_HSTL_I or HSTL_I. If **sys_clk** is not connected in a memory interface bank, the MIG tool selects an appropriate standard such as LVCMOS18 or LVDS. The XDC can be modified as desired after generation.
- clk_ref** – This is the reference frequency input for the IDELAY control. This is a 200 MHz input. The **clk_ref** input can be generated internally or connected to an external source. A single input or a differential pair can be selected based on the **System Clock** selection in the **FPGA Options** page (Figure 2-21). The I/O standard is selected in a similar way as **sys_clk** above.

- **sys_rst** – This is the asynchronous system reset input that can be generated internally or driven from a pin. The MIG tool selects an appropriate I/O standard for the input such as LVCMOS18 and LVCMOS25 for HP and HR banks, respectively. The default polarity of `sys_rst` pin is active-Low. The polarity of `sys_rst` pin varies based on the **System Reset Polarity** option chosen in **FPGA Options** page ([Figure 2-21](#)).
- **init_calib_complete** – This output indicates that the memory initialization and calibration is complete and that the interface is ready to use. The `init_calib_complete` signal is normally only used internally, but can be brought out to a pin if desired.
- **tg_compare_error** – This output indicates that the traffic generator in the example design has detected a data compare error. This signal is only generated in the example design and is not part of the user design. This signal is not typically brought out to a pin but can be, if desired.

Click **Next** to display the **Summary** page.

Summary

This page provides the complete details about the 7 series FPGA memory core selection, interface parameters, Vivado IP catalog options, and FPGA options of the active project.

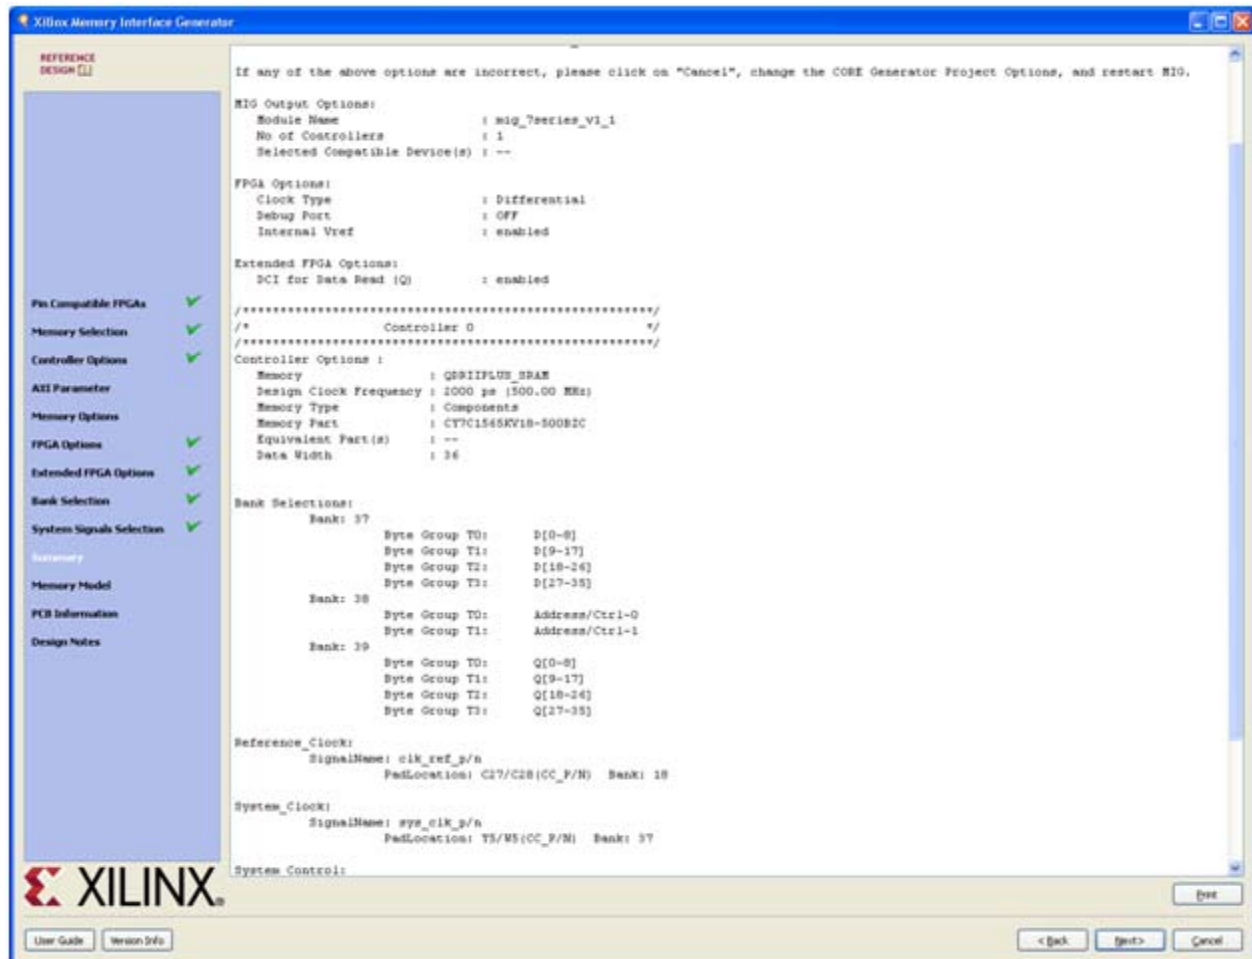


Figure 2-27: Summary Page

Click **Next** to move to the **PCB Information** page.

PCB Information

This page displays the PCB-related information to be considered while designing the board that uses the MIG tool generated designs. Click **Next** to move to the **Design Notes** page.

Design Notes

Click **Generate** to generate the design files. The MIG tool generates two output directories: `example_design` and `user_design`. After generating the design, the MIG GUI closes.

Finish

After the design is generated, a README page is displayed with additional useful information.

Click **Close** to complete the MIG tool flow.

Vivado Integrated Design Flow for MIG

1. After clicking **Generate**, the **Generate Output Products** window appears. This window has the **Out-of-Context Settings** as shown in [Figure 2-28](#).

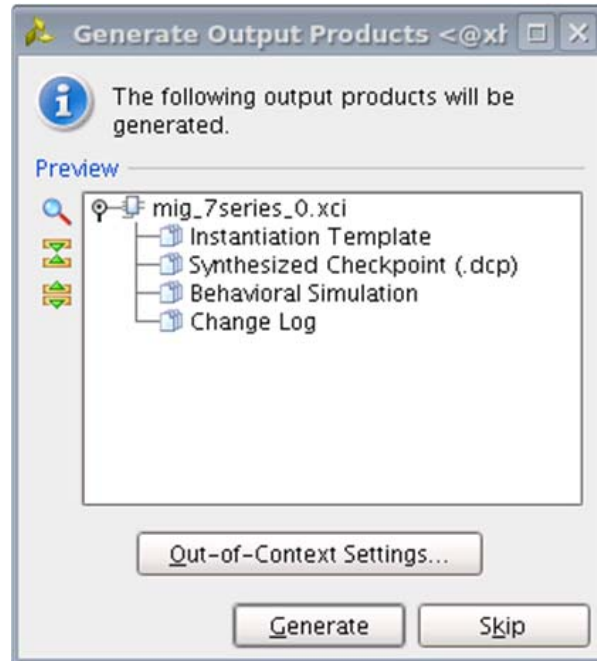


Figure 2-28: **Generate Output Products Window**

2. Click **Out-of-Context Settings** to configure generation of synthesized checkpoints. To enable the **Out-of-Context** flow, enable the check box. To disable the **Out-of-Context** flow, disable the check box. The default option is "enable" as shown in Figure 2-29.

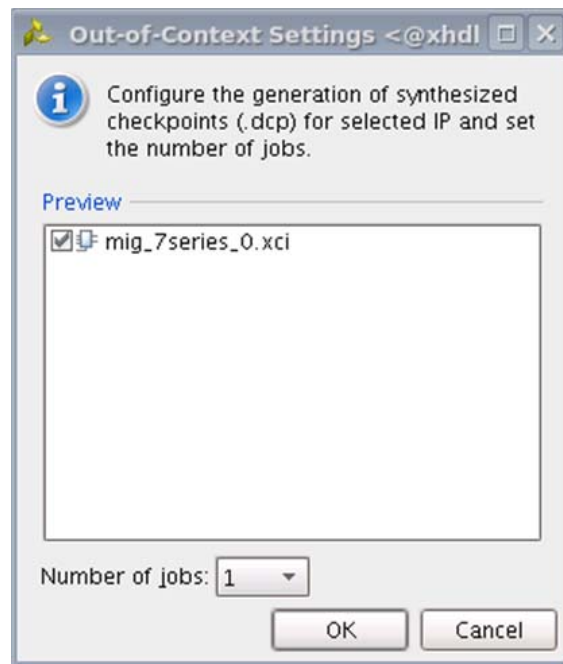


Figure 2-29: **Out-of-Context Settings Window**

3. MIG designs comply with "Hierarchical Design" flow in Vivado. For more information, see the *Vivado Design Suite User Guide: Hierarchical Design* (UG905) [Ref 5] and the *Vivado Design Suite Tutorial: Hierarchical Design* (UG946) [Ref 6].

4. After generating the MIG design, the project window appears as shown in [Figure 2-30](#).

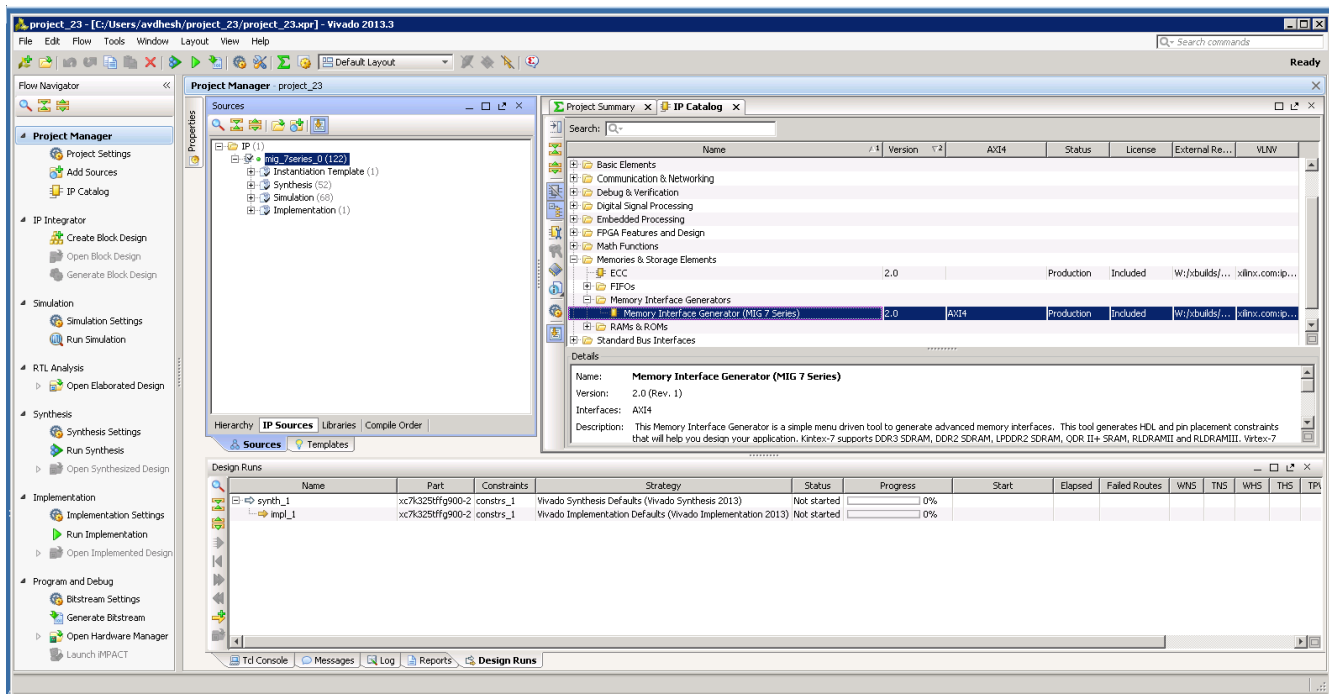


Figure 2-30: Vivado Tool Project Window (After IP Generation)

5. After project creation, the XCI file is added to the Project Hierarchy. The same view also displays the module hierarchies of the user design. The list of HDL and XDC files is available in the **IP Sources** view in the **Sources** window. Double-clicking on any module or file opens the file in the Vivado Editor. These files are read only.

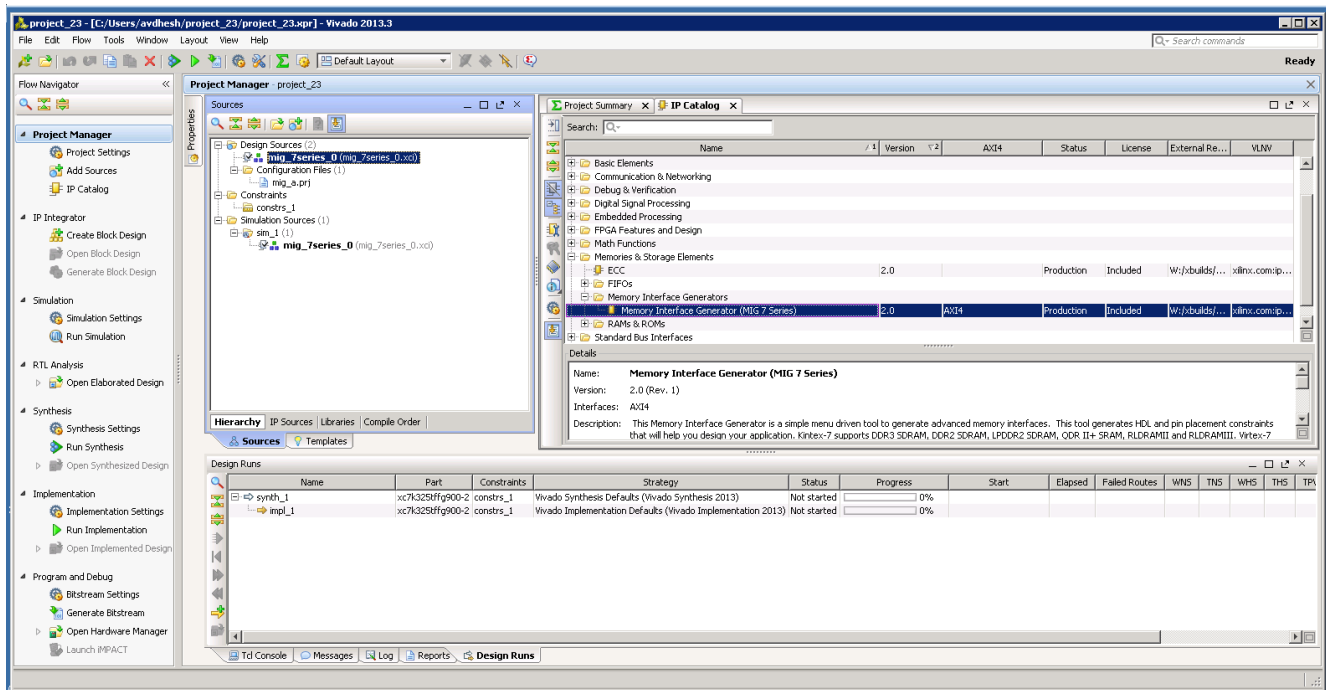


Figure 2-31: Vivado Tool Project Sources Window

Design generation from MIG can be generated using the **Create Design** flow or the **Verify Pin Changes** and **Update Design** flows. There is no difference between the flow when generating the design from the MIG tool. Irrespective of the flow by which designs are generated from the MIG tool, the XCI file is added to the Vivado tool project. The implementation flow is the same for all scenarios because the flow depends on the XCI file added to the project.

- All MIG generated user design RTL and XDC files are automatically added to the project. If files are modified and you wish to regenerate them, right-click the XCI file and select **Generate Output Products** (Figure 2-32).

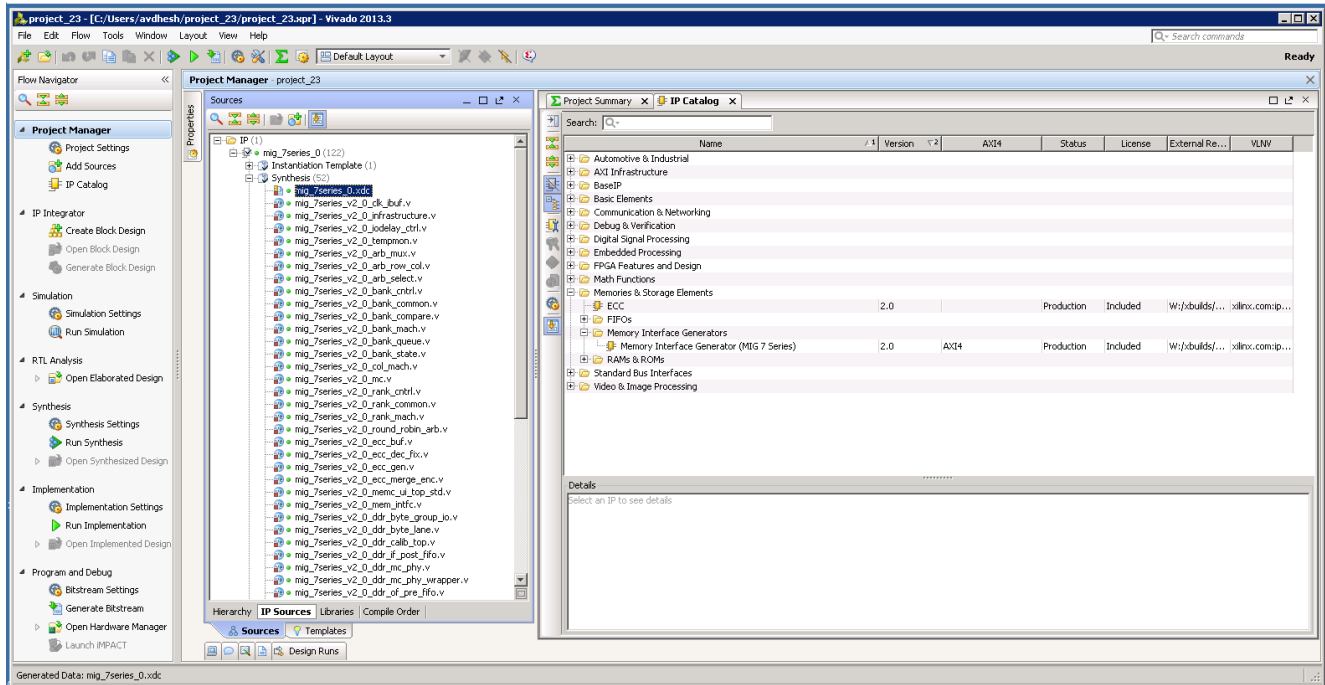


Figure 2-32: Generate RTL and Constraints

7. Clicking the **Generate Output Products** option brings up the **Manage Outputs** window (Figure 2-33).

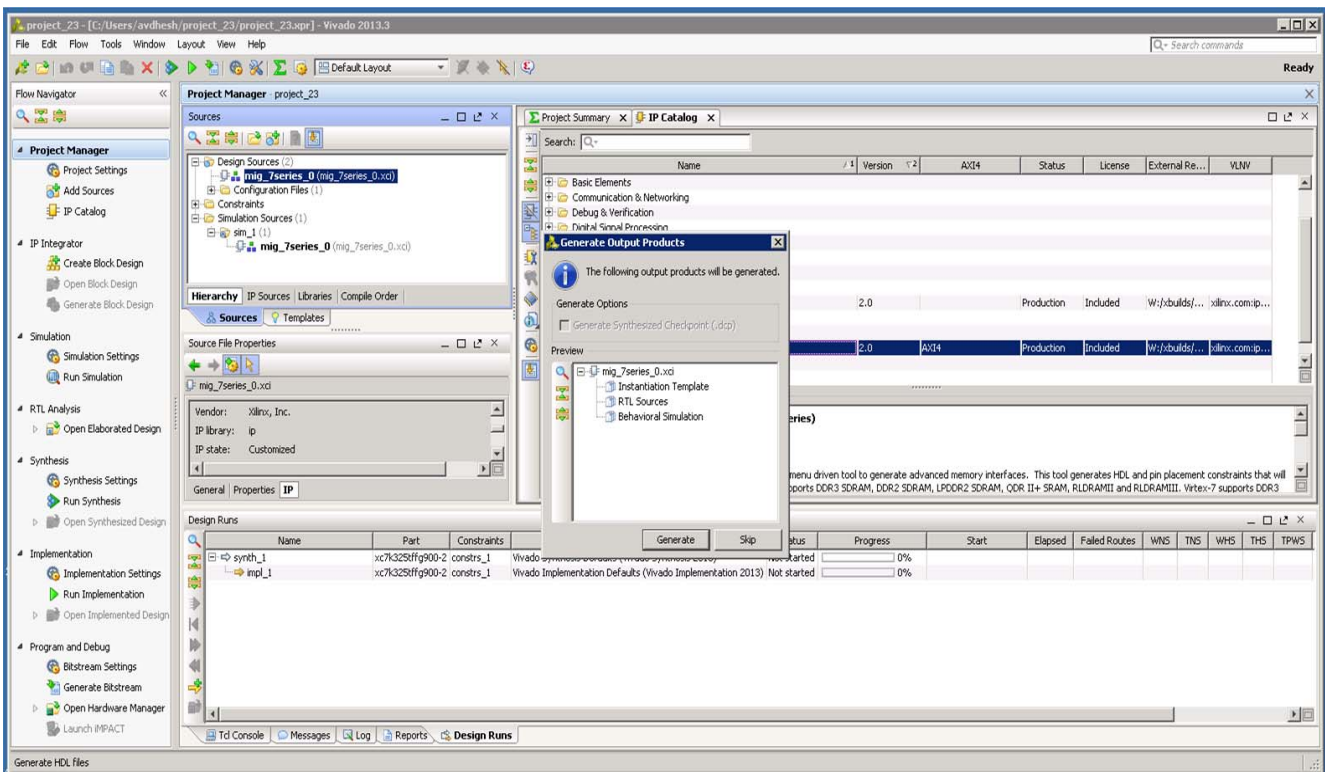


Figure 2-33: Generate Window

8. All user-design RTL and constraints files (XDC files) can be viewed in the **Sources > Libraries** tab (Figure 2-34).

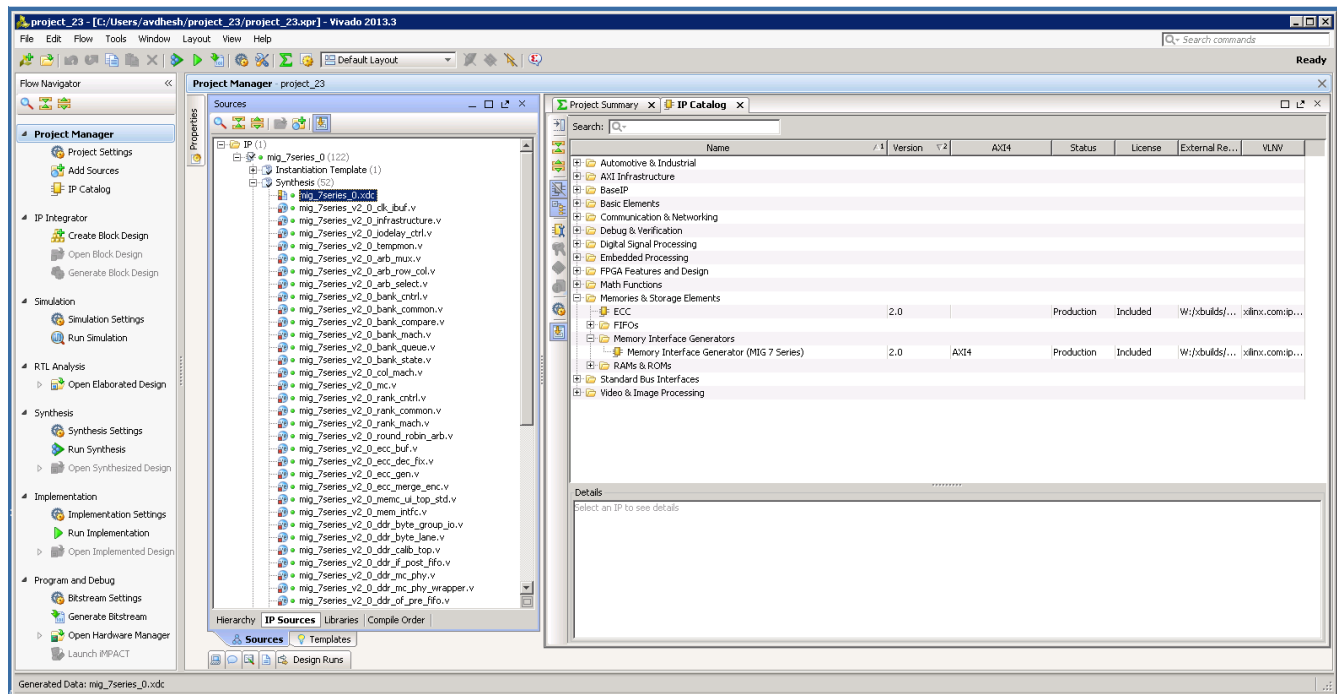


Figure 2-34: Vivado Project – RTL and Constraints Files

9. The Vivado Design Suite supports the **Open IP Example Design** flow. To create the example design using this flow, right-click the IP in the **Source Window**, as shown in Figure 2-35 and select.

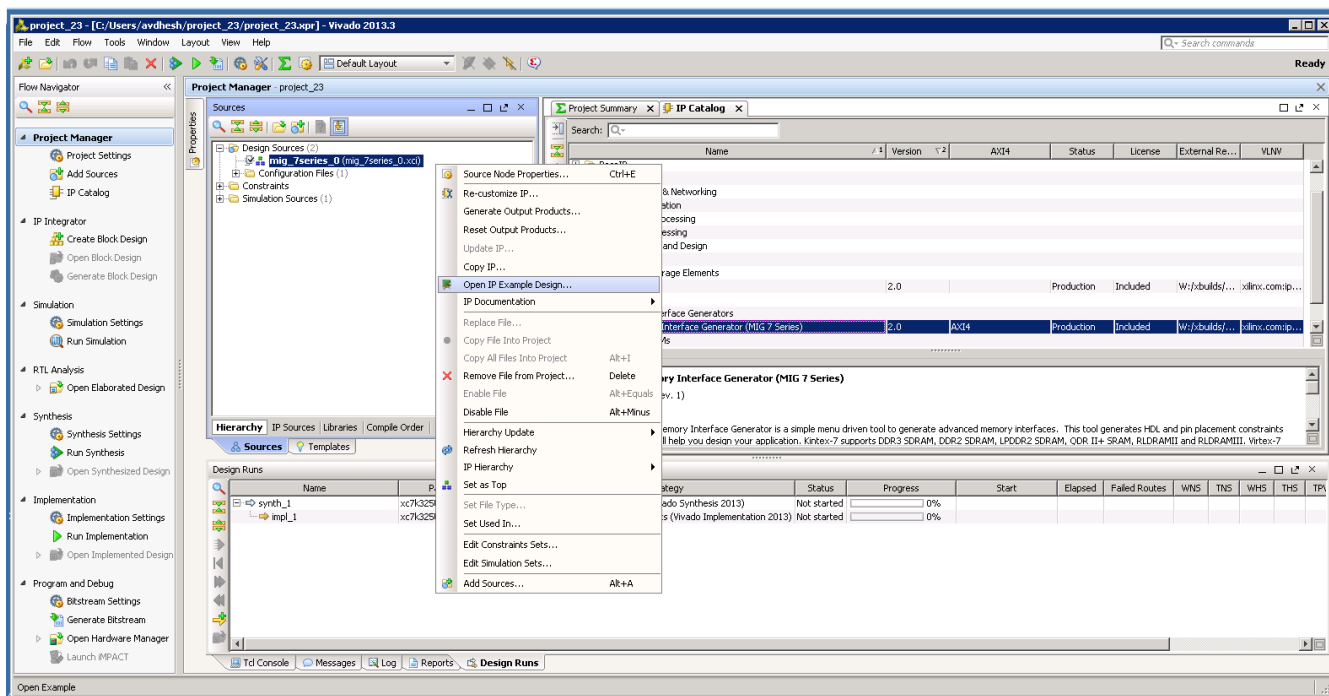


Figure 2-35: Open IP Example Design

- This option creates a new Vivado project. Selecting the menu brings up a dialog box, which guides you to the directory for a new design project. Select a directory (or use the defaults) and click **OK**.

This launches a new Vivado project with all example design files and a copy of the IP. This project has `example_top` as the Implementation top directory, and `sim_tb_top` as the Simulation top directory, as shown in Figure 2-36.

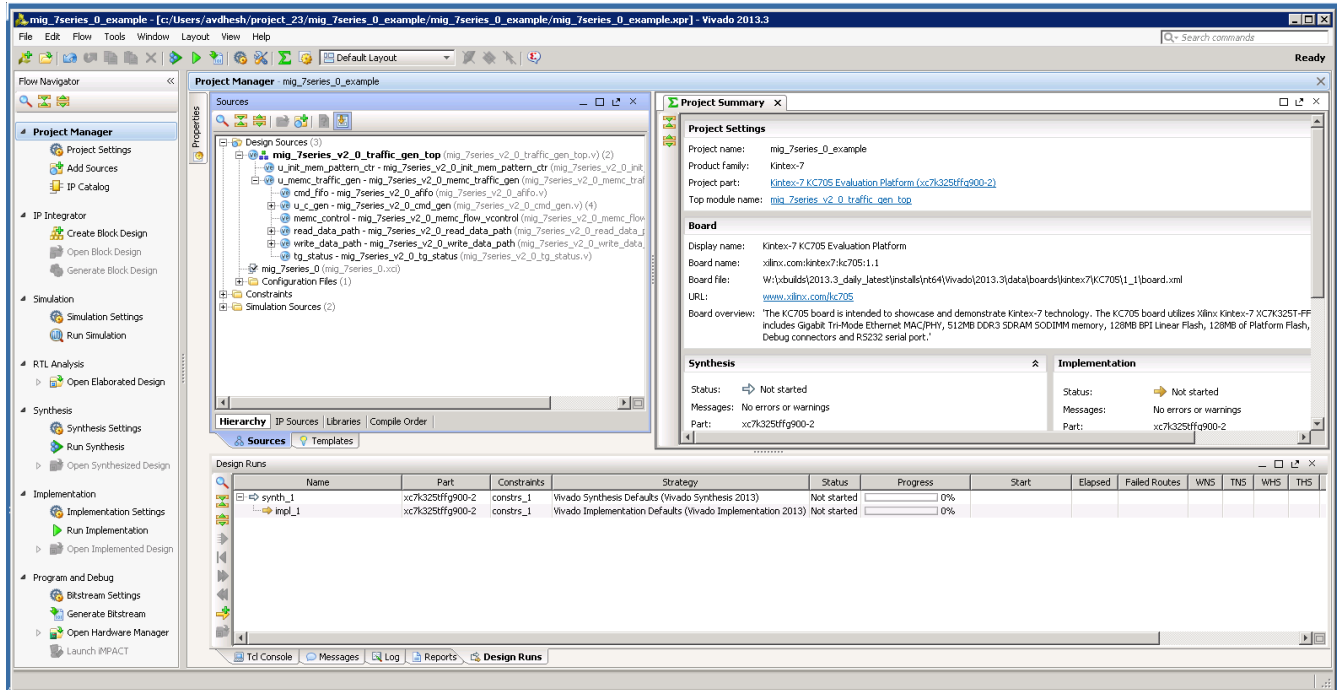


Figure 2-36: Example Design Project

11. Click **Generate Bitstream** under **Project Manager > Program and Debug** to generate the BIT file for the generated design.

The <project directory>/<project directory>.runs/ impl_1 directory includes all report files generated for the project after running the implementation. It is also possible to run the simulation in this project.

12. Recustomization of the MIG IP core can be done by using the **Recustomize IP** option. It is not recommended to recustomize the IP in the example_design project. The correct solution is to close the example_design project, go back to original project and customize there. Right-click the XCI file and click **Recustomize IP** (Figure 2-37) to open the MIG GUI and regenerate the design with the preferred options.

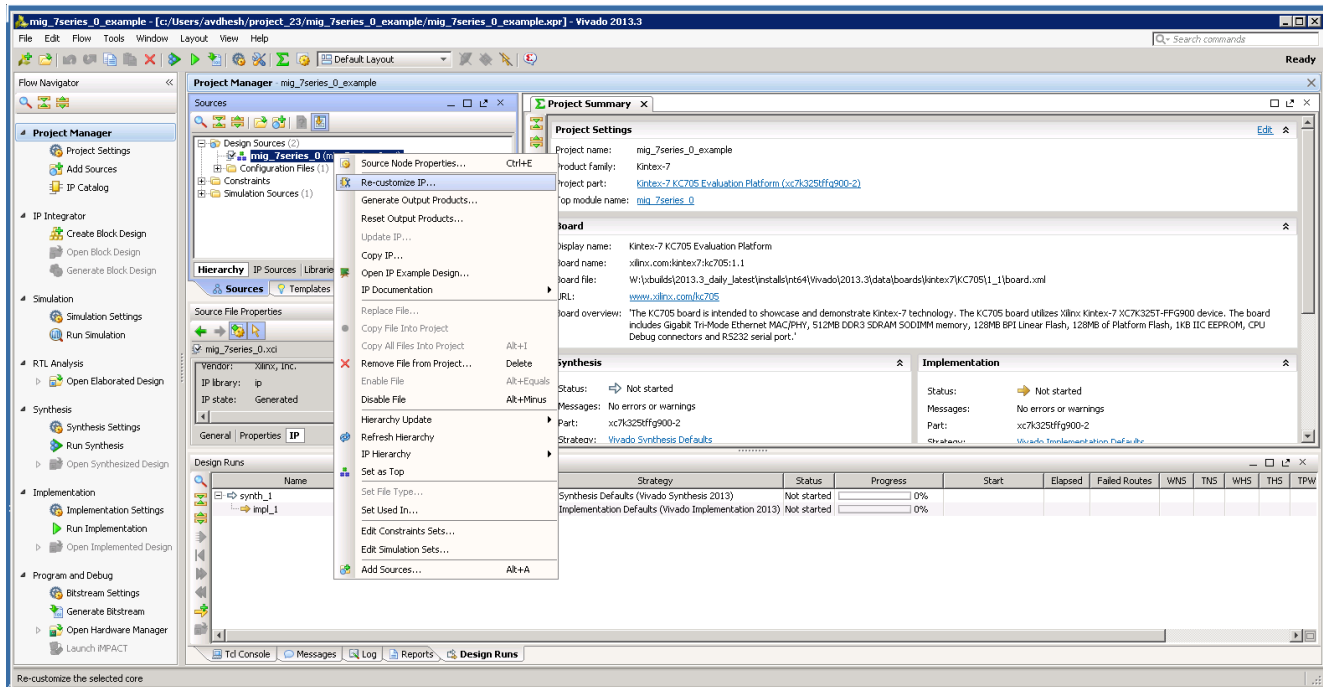


Figure 2-37: Recustomize IP

Directory Structure and File Descriptions


This section explains the MIG tool directory structure and provides detailed output file descriptions.

Output Directory Structure

The MIG tool places all output files and directories in a folder called `<component name>`, where `<component name>` was specified on the [MIG Output Options, page 285](#) of the MIG design creation flow.

The output directory structure of the selected Memory Controller (MC) design from the MIG tool is shown here. There are three folders created within the `<component name>` directory:

- docs
- example_design
- user_design

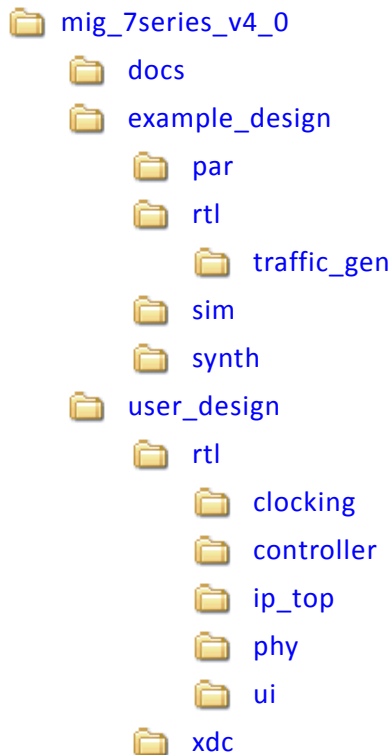

Directory and File Contents

The 7 series FPGAs core directories and their associated files are listed in this section for Vivado implementations.

<component name>/example_design/

The example_design directory structure contains all necessary RTL, constraints, and script files for simulation and implementation of the complete MIG example design with a test bench. The optional Vivado logic analyzer feature module is also included in this directory structure.

Table 2-1 lists the files in the example_design/rtl directory.

Table 2-1: Files in example_design/rtl Directory

Name	Description
example_top.v	This top-level module serves as an example for connecting the user design to the 7 series FPGA memory interface core.

Table 2-2 lists the files in the `example_design/rtl/traffic_gen` directory.

Table 2-2: Files in example_design/rtl/traffic_gen Directory

Name ⁽¹⁾	Description
<code>memc_traffic_gen.v</code>	This is the top-level module of the traffic generator.
<code>cmd_gen.v</code>	This is the command generator. This module provides independent control of generating the types of commands, addresses, and burst lengths.
<code>cmd_prbs_gen.v</code>	This pseudo-random binary sequence (PRBS) generator generates PRBS commands, addresses, and burst lengths.
<code>memc_flow_vcontrol.v</code>	This module generates flow control logic between the Memory Controller core and the <code>cmd_gen</code> , <code>read_data_path</code> , and <code>write_data_path</code> modules.
<code>read_data_path.v</code>	This is the top-level for the read datapath.
<code>read_posted_fifo.v</code>	This module stores the read command that is sent to the Memory Controller. Its FIFO output is used to generate expect data for read data comparisons.
<code>rd_data_gen.v</code>	This module generates timing control for reads and ready signals to <code>memc_flow_vcontrol.v</code> .
<code>write_data_path.v</code>	This is the top-level for the write datapath.
<code>wr_data_gen.v</code>	This module generates timing control for writes and ready signals to <code>memc_flow_vcontrol.v</code> .
<code>s7ven_data_gen.v</code>	This module generates different data patterns.
<code>a_fifo.v</code>	This is a synchronous FIFO using LUT RAMs.
<code>data_prbs_gen.v</code>	This 32-bit linear feedback shift register (LFSR) generates PRBS data patterns.
<code>init_mem_pattern_ctr.v</code>	This module generates flow control logic for the traffic generator.
<code>traffic_gen_top.v</code>	This module is the top-level of the traffic generator and comprises the <code>memc_traffic_gen</code> and <code>init_mem_pattern_ctr</code> modules.
<code>tg_prbs_gen.v</code>	This PRBS uses one too many feedback mechanisms because it always has a single level XOR (XNOR) for feedback. The TAP is chosen from the table listed in XAPP052, <i>Efficient Shift Registers, LFSR Counters, and Long Pseudo-Random Sequence Generators</i> . The TAPS position can be defined in a parameter.
<code>tg_status.v</code>	This module compares the memory read data against compare data generated from the <code>data_gen</code> module. The error signal is asserted if the comparison is not equal.
<code>vio_init_pattern_bram.v</code>	This module takes external defined data inputs as its block RAM init pattern. It allows users to change simple test data pattern without recompilation.

Notes:

1. All file names are prefixed with the MIG version number. For example, for the MIG 4.0 release module name of `memc_traffic_gen` in generated output is now `mig_7series_v4_0_memc_traffic_gen`.

Table 2-3 lists the files in the `example_design/sim` directory.

Table 2-3: Files in example_design/sim Directory

Name	Description
<code>ies_run.sh</code> ⁽¹⁾	Linux Executable file for simulating the design using IES simulator.
<code>vcs_run.sh</code> ⁽¹⁾	Linux Executable file for simulating the design using VCS simulator.
<code>readme.txt</code> ⁽¹⁾	Contains the details and prerequisites for simulating the designs using QuestaSim, IES, and VCS simulators.
<code>sim_tb_top.v</code>	This file is the simulation top-level file.

Notes:

1. The `ies_run.sh` and `vcs_run.sh` files are generated in the folder `mig_7series_0_example/mig_7series_0_example.srcs/sim_1/imports/sim` when the example design is created using **Open IP Example Design** for the design generated with **Component Name** entered in Vivado IDE as `mig_7series_0`.

<component_name>/user_design

The `user_design` folder contains the following:

- `rtl` and `xdc` folders
- Top-level wrapper module `<component_name>.v/vhd`
- Top-level modules `<component_name>_mig.v/vhd` and `<component_name>_mig_sim.v/vhd`

The top-level wrapper file `<component_name>.v/vhd` has an instantiation of top-level file `<component_name>_mig.v/vhd`. Top-level wrapper file has no parameter declarations and all the port declarations are of fixed width.

Top-level files `<component_name>_mig.v/vhd` and `<component_name>_mig_sim.v/vhd` have the same module name as `<component_name>_mig`. These two files are same in all respects except that the file `<component_name>_mig_sim.v/vhd` has parameter values set for simulation where calibration is in fast mode viz., `SIM_BYPASS_INIT_CAL = "FAST"` etc.



IMPORTANT: The top-level file `<component_name>_mig.v/vhd` is used for design synthesis and implementation, whereas the top-level file `<component_name>_mig_sim.v/vhd` is used in simulations.

The top-level wrapper file serves as an example for connecting the `user_design` to the 7 series FPGA memory interface core.

user_design/rtl/clocking

Table 2-4 lists the files in the `user_design/rtl/clocking` directory.

Table 2-4: Files in user_design/rtl/clocking Directory

Name ⁽¹⁾	Description
infrastructure.v	This module helps in clock generation and distribution.
clk_ibuf.v	This module instantiates the system clock input buffers.
iodelay_ctrl.v	This module instantiates the IDELAYCTRL primitive needed for IODELAY use.

Notes:

1. All file names are prefixed with the MIG version number. For example, for the MIG 4.0 release module name of clk_ibuf in generated output is now mig_7series_v4_0_clk_ibuf.

user_design/rtl/phy

Table 2-5 lists the files in the user_design/rtl/phy directory:

Table 2-5: Files in user_design/rtl/phy

Name ⁽¹⁾	Description
qdr_phy_top.v	This is the top-level module for the physical layer.
qdr_phy_write_top.v	This is the top-level wrapper for the write path.
qdr_rld_phy_read_top.v	This is the top-level of the read path.
qdr_rld_mc_phy.v	This module is a parameterizable wrapper instantiating up to three I/O banks each with 4-lane PHY primitives.
qdr_phy_write_init_sm.v	This module contains the logic for the initialization state machine.
qdr_phy_write_control_io.v	This module contains the logic for the control signals going to the memory.
qdr_phy_write_data_io.v	This module contains the logic for the data and byte writes going to the memory.
qdr_rld_prbs_gen.v	This PRBS module uses a many-to-one feedback mechanism for 2n sequence generation.
qdr_rld_phy_ck_addr_cmd_delay.v	This module contains the logic to provide the required delay on the address and control signals
qdr_rld_phy_rdlvl.v	This module contains the logic for stage 1 calibration.
qdr_rld_phy_read_stage2_cal.v	This module contains the logic for stage 2 calibration.
qdr_rld_phy_read_data_align.v	This module realigns the incoming data.
qdr_rld_phy_read_vld_gen.v	This module contains the logic to generate the valid signal for the read data returned on the user interface.
qdr_phy_byte_lane_map.v	This wrapper file handles the vector remapping between the mc_phy module ports and the user memory ports.
qdr_rld_phy_4lanes.v	This module is the parameterizable 4-lane PHY in an I/O bank.
qdr_rld_byte_lane.v	This module contains the primitive instantiations required within an output or input byte lane.

Table 2-5: Files in user_design/rtl/phy (Cont'd)

Name ⁽¹⁾	Description
qdr_rld_byte_group_io.v	This module contains the parameterizable I/O Logic instantiations and the I/O terminations for a single byte lane.

Notes:

1. All file names are prefixed with the MIG version number. For example, for the MIG 4.0 release module name of qdr_phy_top in generated output is now mig_7series_v4_0_qdr_phy_top.

<component name>/user_design/xdc

Table 2-6 lists the files in the user_design/xdc directory.

Table 2-6: Files in user_design/xdc Directory

Name	Description
<component name>.xdc	This file is the XDC for the core of the user design.

Verify Pin Changes and Update Design

This feature verifies the input XDC for bank selections, byte selections, and pin allocation. It also generates errors and warnings in a separate dialog box when you click **Validate** on the page. This feature is useful to verify the XDC for any pinout changes made after the design is generated from the MIG tool. You must load the MIG generated .prj file, the original .prj file without any modifications. In the Vivado IP catalog, the recustomization option should be selected to reload the project. The design is allowed to generate only when the MIG DRC is met. Ignore warnings about validating the pinout, which is the intent. Just validating the XDC is not sufficient; it is mandatory to proceed with design generation to get the XDC with updated clock and phaser-related constraints and RTL top-level module for various updated Map parameters.

The Update Design feature is required in the following scenarios:

- A pinout is generated using an older version of MIG and the design is to be revised to the current version of MIG. In MIG the pinout allocation algorithms have been changed for certain MIG designs.
- A pinout is generated independent of MIG or is modified after the design is generated. When a design is generated from MIG, the XDC and HDL code are generated with the correct constraints.

Here are the rules verified from the input XDC:

- If a pin is allocated to more than one signal, the tool reports an error. Further verification is not done if the XDC does not adhere to the uniqueness property.
- Verified common rules:
 - The interface can span across a maximum of three consecutive banks.


- Interface banks should reside in the same column of the FPGA.
- Interface banks should be either High Performance (HP) or High Range (HR). HP banks are used for the high frequencies.
- The chosen interface banks should have the same SLR region if the chosen device is of stacked silicon interconnect technology.
- V_{REF} I/Os should be used as GPIOs when an internal V_{REF} is used or if there are no inout and input ports in a bank.
- The I/O standard of each signal is verified as per the configuration chosen.
- The VCCAUX I/O of each signal is verified and provides a warning message if the provided VCCAUX I/O is not valid.
- Verified data read pin rules:
 - Pins related to one component should be allocated in one bank only.
 - The strobe pair (CQ) should be allocated to either the MRCC P or the MRCC N pin.
 - Read data pins cannot span more than the required byte lanes. For example, an 18-bit component should occupy only two byte lanes.
 - A byte lane should contain pins of only one read byte, for example, Q[8:0] or Q[17:9].
 - A byte lane should not contain pins of more than one component.
 - An FPGA byte lane should not contain pins related to two different strobe sets.
 - V_{REF} I/O can be used only when the internal V_{REF} is chosen.
- Verified data write pin rules:
 - Pins related to one component should be allocated in only one bank.
 - Write clocks (K/K#) pairs should be allocated to the DQS CC I/Os.
 - Write data pins cannot span more than the required byte lanes. For example, an 18-bit component should occupy only 2 byte lanes.
 - A byte lane should not contain pins of more than one component.
 - A byte lane should contain pins of only one write byte, for example, D[8:0] or D[17:9].
 - Irrespective of internal V_{REF} usage, V_{REF} pins can be used as GPIOs unless the bank contains other input signals.
- Verified address pin rules:
 - Address signals cannot mix with data bytes except for the `qdriip_dll_off_n` signal.
 - It can use any number of isolated byte lanes.

- Verified system pin rules:
 - System clock:
 - These pins should be allocated to either SR/MR CC I/O pair.
 - These pins must be allocated in the Memory banks column.
 - If the selected system clock type is single-ended, you need to check whether the reference voltage pins are unallocated in the bank or the internal V_{REF} is used.
 - Reference clock:
 - These pins should be allocated to either SR/MR CC I/O pair.
 - If the selected system clock type is single-ended, you need to check whether the reference voltage pins are unallocated in the bank or the internal V_{REF} is used.
 - Status signals:
 - The `sys_rst` signal should be allocated in the bank where the V_{REF} I/O is unallocated or the internal V_{REF} is used.
 - These signals should be allocated in the non-memory banks because the I/O standard is not compatible. The I/O standard type should be LVCMOS with the I/O voltage at 1.8V.
 - These signals can be allocated in any of the columns (there is no hard requirement because these signals should reside in a memory column); however, it is better to allocate closer to the chosen memory banks.

Core Architecture

Overview

Figure 2-38 shows a high-level block diagram of the 7 series FPGA QDR II+ SRAM interface solution. This figure shows both the internal FPGA connections to the client interface for initiating read and write commands, and the external interface to the memory device.

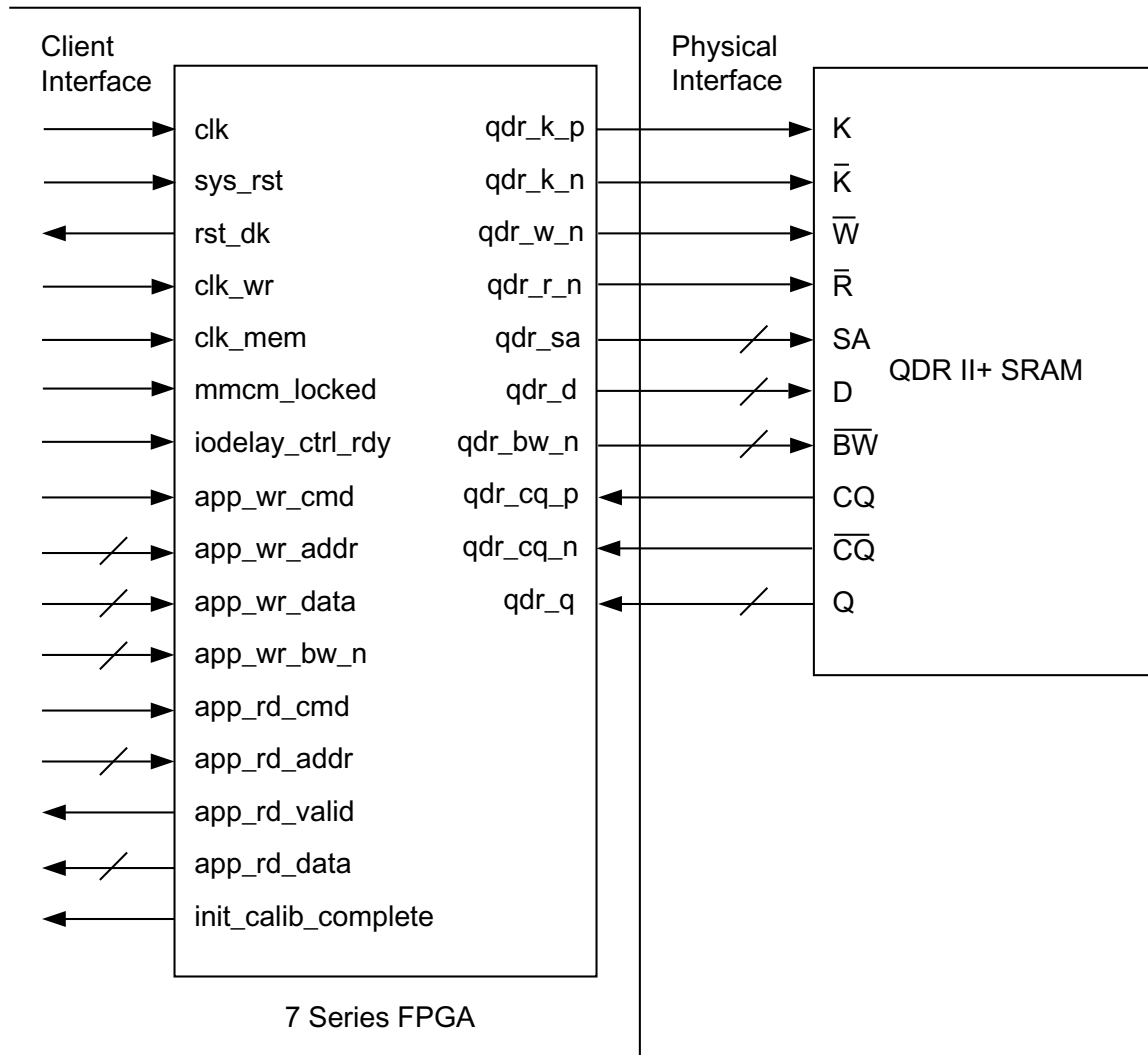


UG586_c2_34_090911

Figure 2-38: High-Level Block Diagram of QDR II+ Interface Solution

The PHY is composed of these elements, as shown in Figure 2-39:

- User interface
- Physical interface
 - a. Write path
 - b. Read datapath

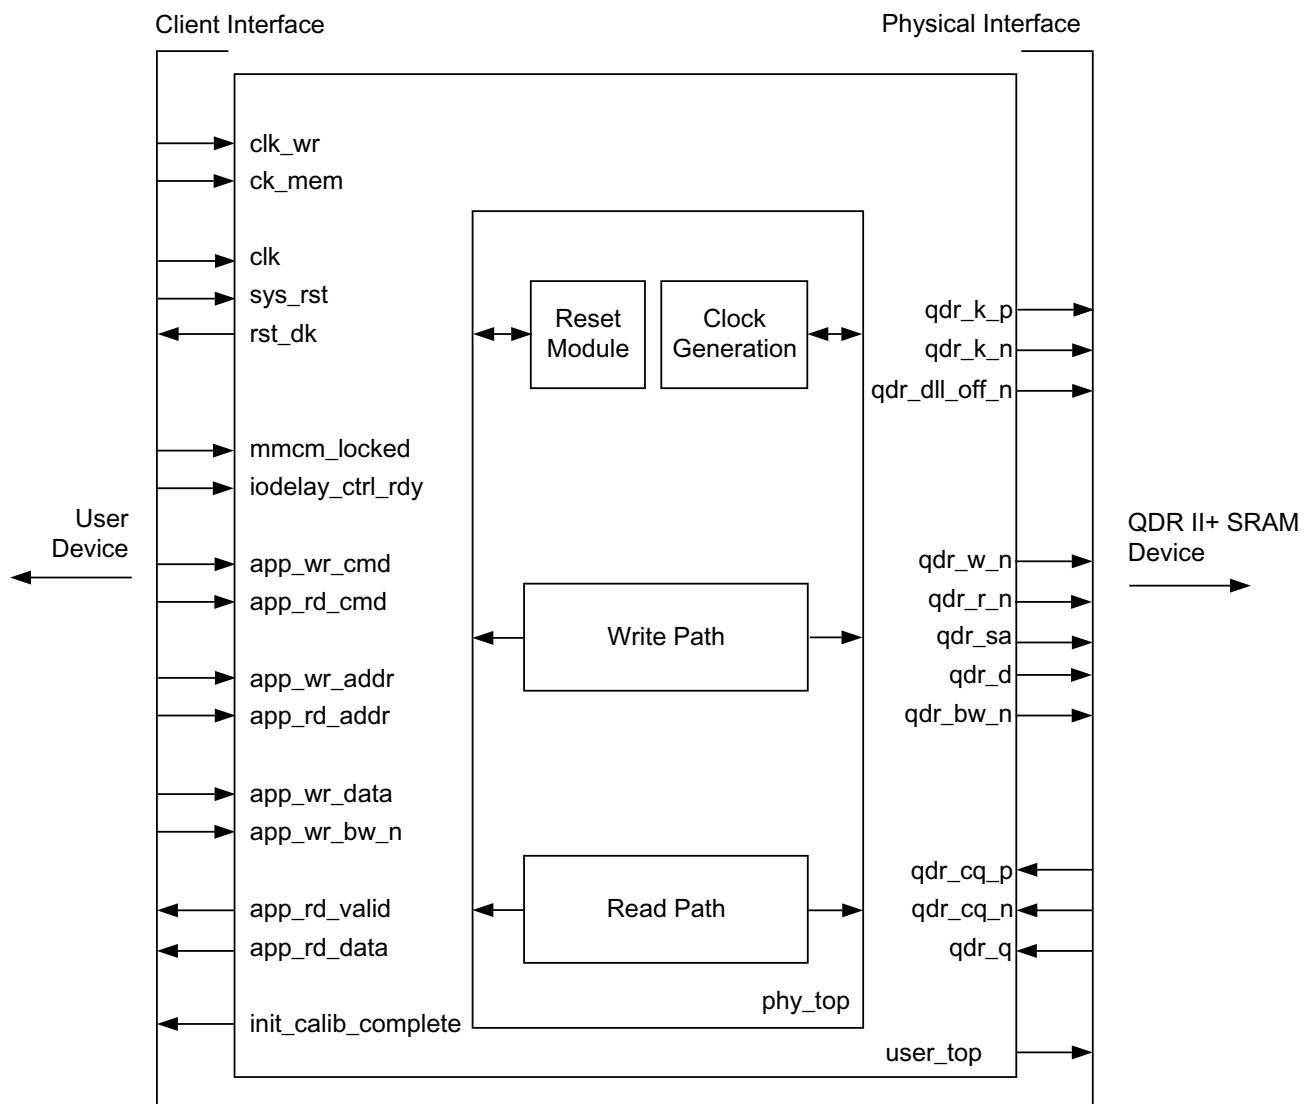

UG586_c2_35_090911

Figure 2-39: Components of the QDR II+ SRAM Memory Interface Solution

The client interface (also known as the user interface) uses a protocol based entirely on single data rate (SDR) signals to make read and write requests. For more details about this protocol, see the [User Interface](#) section. The physical interface generating the proper timing relationships and DDR signaling to communicate with the external memory device, while conforming to QDR II+ protocol and timing requirements. For more information, see the [Physical Interface](#) section.

Within the PHY, logic is broken up into read and write paths. The read path is responsible for calibration and providing read responses back to you with a corresponding valid signal. For more details about this process, see the [Calibration](#) section. The write path generates the QDR II+ signaling for generating read and write requests. This includes control signals, address, data, and byte writes.

User Interface

The client interface connects the 7 series FPGA user design to the QDR II+ SRAM solutions core to simplify interactions between you and the external memory device.

Command Request Signals

The client interface provides a set of signals used to issue a read or write command to the memory device. These signals are summarized in [Table 2-7](#). To accommodate for burst length four devices, the client interface contains ports for two read and two write transactions. When using burst length four, only the ports ending in zero should be used.

Table 2-7: Client Interface Request Signals

Signal	Direction	Description
init_calib_complete	Output	Calibration Done. This signal indicates to the user design that read calibration is complete and you can now initiate read and write requests from the client interface.
app_rd_addr0[ADDR_WIDTH – 1:0]	Input	Read Address. This bus provides the address to use for a read request. It is valid when app_rd_cmd0 is asserted.
app_rd_cmd0	Input	Read Command. This signal is used to issue a read request and indicates that the address on port 0 is valid.
app_rd_data0[DATA_WIDTH × BURST_LEN – 1:0]	Output	Read Data. This bus carries the data read back from the read command issued on app_rd_cmd0.
app_rd_valid0	Output	Read Valid. This signal indicates that data read back from memory is now available on app_rd_data0 and should be sampled.
app_rd_addr1[ADDR_WIDTH – 1:0]	Input	Read Address. This bus provides the address to use for a read request. It is valid when app_rd_cmd1 is asserted.

Table 2-7: Client Interface Request Signals (Cont'd)

Signal	Direction	Description
app_rd_cmd1	Input	Read Command. This signal is used to issue a read request and indicates that the address on port 1 is valid.
app_rd_data1[DATA_WIDTH × 2 – 1:0]	Output	Read Data. This bus carries the data read back from the read command issued on app_rd_cmd1.
app_rd_valid1	Output	Read Valid. This signal indicates that data read back from memory is now available on app_rd_data1 and should be sampled.
app_wr_addr0[ADDR_WIDTH – 1:0]	Input	Write Address. This bus provides the address for a write request. It is valid when app_wr_cmd0 is asserted.
app_wr_bw_n0[BW_WIDTH × BURST_LEN – 1:0]	Input	Write Byte Writes. This bus provides the byte writes to use for a write request. It is valid when app_wr_cmd0 is asserted. These enables are active-Low.
app_wr_cmd0	Input	Write Command. This signal is used to issue a write request and indicates that the corresponding sideband signals on write port 0 are valid.
app_wr_data0[DATA_WIDTH × BURST_LEN – 1:0]	Input	Write Data. This bus provides the data to use for a write request. It is valid when app_wr_cmd0 is asserted.
app_wr_addr1[ADDR_WIDTH – 1:0]	Input	Write Address. This bus provides the address for a write request. It is valid when app_wr_cmd1 is asserted.
app_wr_bw_n1[BW_WIDTH × 2 – 1:0]	Input	Write Byte Writes. This bus provides the byte writes to use for a write request. It is valid when app_wr_cmd1 is asserted. These enables are active-Low.
app_wr_cmd1	Input	Write Command. This signal is used to issue a write request and indicates that the corresponding sideband signals on write port 1 are valid.
app_wr_data1[DATA_WIDTH × 2 – 1:0]	Input	Write Data. This bus provides the data to use for a write request. It is valid when app_wr_cmd1 is asserted.

Interfacing with the Core through the Client Interface

The client interface protocol is the same for using the port 0 or port 1 interface signals and is shown in Figure 2-40.

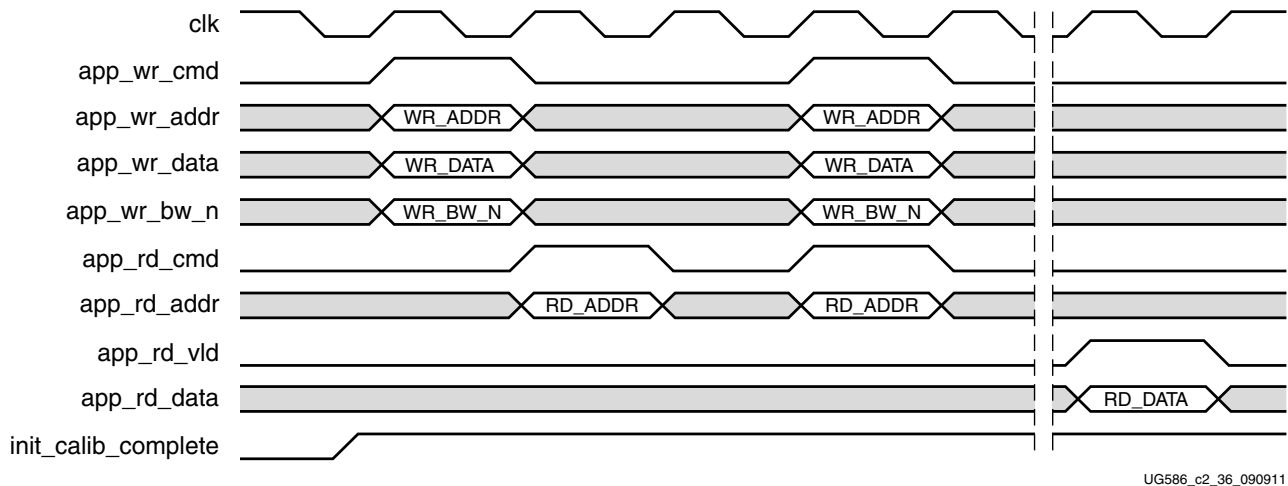


Figure 2-40: Components of the QDR II+ SRAM Memory Interface Solution

Before any requests can be made, the `init_calib_complete` signal must be asserted High, as shown in Figure 2-40, no read or write requests can take place, and the assertion of `app_wr_cmd` or `app_rd_cmd` on the client interface is ignored. A write request is issued by asserting `app_wr_cmd` as a single cycle pulse. At this time, the `app_wr_addr`, `app_wr_data`, and `app_wr_bw_n` signals must be valid.

On the following cycle, a read request is issued by asserting `app_rd_cmd` for a single cycle pulse. At this time, `app_rd_addr` must be valid. After one cycle of idle time, a read and write request are both asserted on the same clock cycle. In this case, the read to the memory occurs first, followed by the write.

Figure 2-40 also shows data returning from the memory device to the user design. The `app_rd_vld` signal is asserted, indicating that `app_rd_data` is now valid. This should be sampled on the same cycle that `app_rd_vld` is asserted because the core does not buffer returning data. If desired, you can add this functionality. The data returned is not necessarily from the read commands shown in Figure 2-40 and is solely to demonstrate protocol.

Clocking Architecture

The PHY design requires that a PLL module be used to generate various clocks. Both global and local clock networks are used to distribute the clock throughout the design.

The clock generation and distribution circuitry and networks drive blocks within the PHY that can be divided roughly into four separate general functions:

- Internal FPGA logic
- Write path (output) logic
- Read path (input) and delay logic
- IDELAY reference clock (200 MHz)

One MMCM and one PLL are required for the PHY. The PLL is used to generate the clocks for most of the internal logic, the input clocks to the phasers, and a synchronization pulse required to keep the PHASER blocks synchronized in a multi-I/O bank implementation.

The PHASER blocks require three clocks:

- **Memory Reference Clock** – The memory reference clock is required to be at the same frequency as that of the QDR II+ memory interface clock.
- **Frequency Reference Clock** – The frequency reference clock must be equal to the memory clock frequency for frequencies ≥ 400 MHz and 2x the memory clock frequency for frequencies < 400 MHz such that it meets the reference range requirement of 400 MHz to 1,066 MHz.
- **Phase Reference Clock from the PLL** – The phase reference clock is used in the read banks, and is generated using the memory read clock (CQ/CQ#) routed internally and provided to the Phaser logic to assist with data capture.

Figure 2-41 shows the clocking architecture.

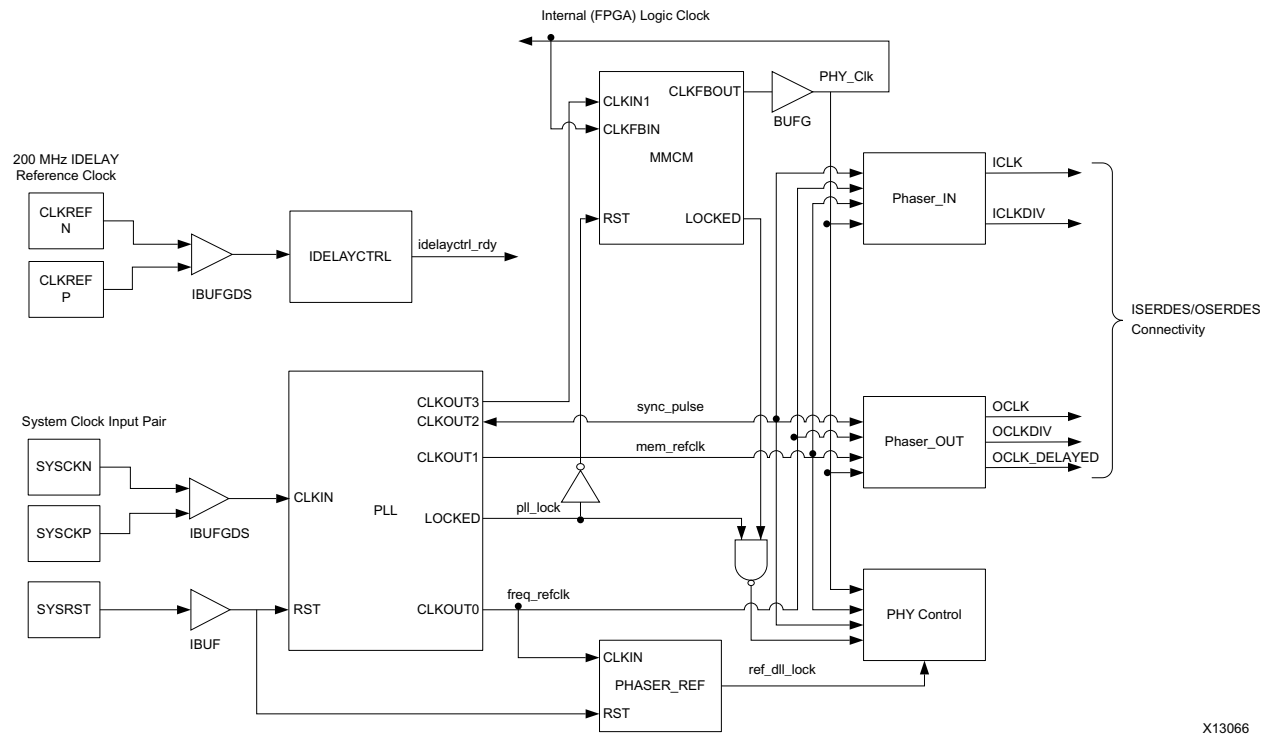


Figure 2-41: Clocking Architecture

The default setting for the PLL multiply (M) and divide (D) values is for the system clock input frequency to be equal to the memory clock frequency. This 1:1 ratio is not required. The PLL input divider (D) can be any value listed in the *7 Series FPGAs Clocking Resources User Guide* (UG472) [Ref 10] as long as the PLL2 operating conditions are met and the other constraints listed here are observed.

The PLL multiply (M) value must be between 1 and 16 inclusive. The PLL VCO frequency range must be kept in the range specified in the silicon data sheet. The `sync_pulse` must be 1/16 of the `mem_refclk` frequency and must have a duty cycle of 1/16 or 6.25%. For information on physical placement of the PLL and the System Clock CCIO input, see [Design Guidelines, page 342](#).

The internal FPGA logic clock generated by the PLL is clocked by a global clocking resource at half the frequency of the QDR II+ memory frequency.

A 200 MHz IDELAY reference clock must be supplied to the IDELAYCTRL module. The IDELAYCTRL module continuously calibrates the IDELAY elements in the I/O region to account for varying environmental conditions. The IP core assumes an external clock signal is driving the IDELAYCTRL module. If a PLL clock drives the IDELAYCTRL input clock, the PLL lock signal needs to be incorporated in the `rst_tmp_idelay` signal inside the IDELAY_CTRL module. This ensures that the clock is stable before being used.

Table 2-8 lists the signals used in the infrastructure module that provides the necessary clocks and reset signals required in the design.

Table 2-8: Infrastructure Clocking and Reset Signals

Signal	Direction	Description
mmcm_clk	Input	System clock input.
sys_rst	Input	Core reset from user application.
iodelay_ctrl_rdy	Input	IDELAYCTRL lock status.
clk	Output	Half frequency FPGA logic clock.
mem_refclk	Output	PLL output clock at same frequency as the memory clock.
freq_refclk	Output	PLL output clock to provide the FREQREFCLK input to the Phaser. The freq_refclk is generated such that its frequency is in the range of 400 MHz to 1,066 MHz.
sync_pulse	Output	PLL output generated at 1/16 of mem_Refclk and is a synchronization signal sent to the PHY hard blocks that are used in a multi-bank implementation.
pll_locked	Output	Locked output from PLLE2_ADV.
rstdiv0	Output	Reset output synchronized to internal FPGA logic half frequency clock.

Physical Interface

The physical interface is the connection from the FPGA memory interface solution to an external QDR II+ SRAM device. The I/O signals for this interface are shown in Table 2-9. These signals can be directly connected to the corresponding signals on the QDR II+ SRAM device.

Table 2-9: Physical Interface Signals

Signal	Direction	Description
qdr_cq_n	Input	QDR CQ# . This is the echo clock returned from the memory derived from qdr_k_n.
qdr_cq_p	Input	QDR CQ . This is the echo clock returned from the memory derived from qdr_k_p.
qdr_d	Output	QDR Data . This is the write data from the PHY to the QDR II+ memory device.
qdr_dll_off_n	Output	QDR DLL Off . This signal turns off the DLL in the memory device.
qdr_bw_n	Output	QDR Byte Write . This is the byte write signal from the PHY to the QDR II+ SRAM device.
qdr_k_n	Output	QDR Clock K# . This is the inverted input clock to the memory device.
qdr_k_p	Output	QDR Clock K . This is the input clock to the memory device.
qdr_q	Input	QDR Data Q . This is the data returned from reads to memory.
qdr_sa	Output	QDR Address . This is the address supplied for memory operations.
qdr_w_n	Output	QDR Write . This is the write command to memory.
qdr_r_n	Output	QDR Read . This is the read command to memory.

Interfacing with the Memory Device

Figure 2-42 shows the physical interface protocol for a four-word memory device.

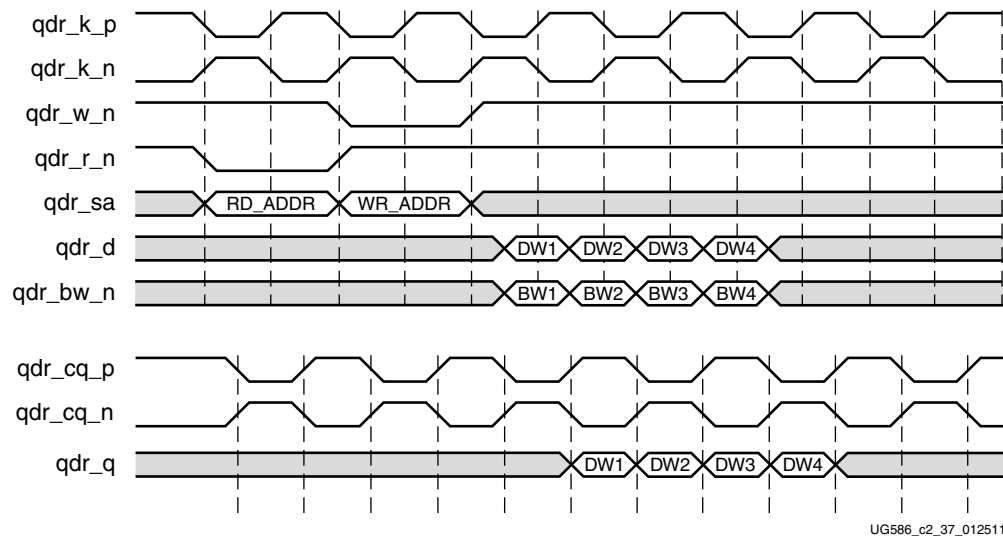


Figure 2-42: Four-Word Burst Length Memory Device Protocol

In four-word burst mode:

- The address is in SDR format
- All signals as input to the memory are center aligned with respect to `qdr_k_p`
- The data for a write request follows on the next rising edge of `qdr_k_p` after an assertion of `qdr_w_n`
- Byte writes are sampled along with data
- The `qdr_q` signal is edge aligned to `qdr_cq_p` and `qdr_cq_n`

PHY Architecture


The 7 series FPGA PHY is composed of dedicated blocks and soft calibration logic. The dedicated blocks are structured adjacent to one another with back-to-back interconnects to minimize the clock and datapath routing necessary to build high-performance physical layers.

Some of the dedicated blocks that are used in the QDR II+ SRAM PHY and their features are described as follows:

- I/Os available within each 7 series bank are grouped into four byte groups, where each byte group consists of up to 12 I/Os.

- PHASER_IN/PHASER_OUT blocks are available in each byte group and are multi-stage programmable delay line loops that can provide precision phase adjustment of the clocks. Dedicated clock within an I/O bank referred to as byte group clocks generated by the PHASERs help minimize the number of loads driven by the byte group clock drivers.
- OUT_FIFO and IN_FIFO are shallow 8-deep FIFOs available in each byte group and serve to transfer data from the FPGA logic domain to the I/O clock domain. OUT_FIFOs are used to store output data and address/controls that need to be sent to the memory while IN_FIFOs are used to store captured read data before transfer to the FPGA logic.

The [Pinout Requirements](#) section explains the rules that need to be followed while placing the memory interface signals inside the byte groups.

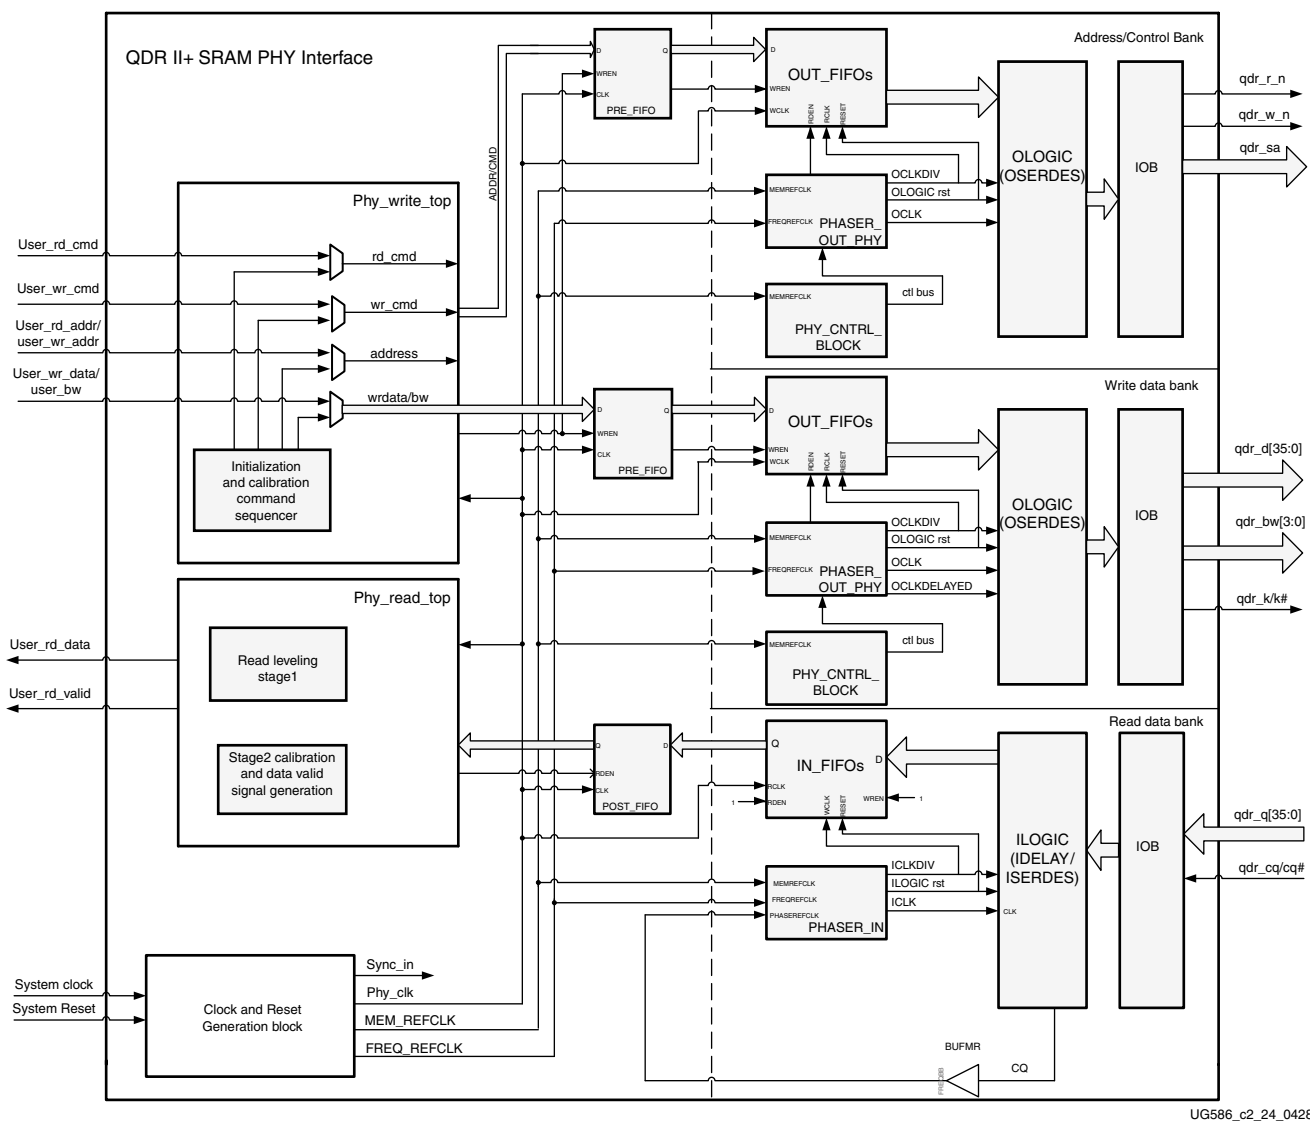

UG586_c2_24_042811

Figure 2-43: High-Level PHY Block Diagram for a 36-Bit QDR II+ Interface

Write Path

The write path to the QDR II+ SRAM includes the address, data, and control signals necessary to execute a write operation. The address signals in four-word burst length mode and control signals to the memory use SDR formatting. The write data values `qdr_d` and `qdr_bw_n` also use DDR formatting to achieve the required four-word burst within the given clock periods. [Figure 2-44](#) shows a high-level block diagram of the write path and its submodules.

Output Architecture


The output path of the QDR II+ interface solution uses OUT_FIFOs, PHASER_OUT_PHY, and OSERDES primitives available in the 7 series FPGAs. These blocks are used for clocking all outputs of the PHY to the memory device.

The PHASER_OUT provides the clocks required to clock out the outputs to the memory. It provides synchronized clocks for each byte group, to the OUT_FIFOs and to the OSERDES/ODDR. The PHASER_OUT generates the byte clock (OCLK), the divided byte clock (OCLKDIV), and a delayed byte clock (OCLK_DELAYED) for its associated byte group. The byte clock (OCLK) is the same frequency as the memory interface clock and the divided byte clock (OCLKDIV) is half the frequency of the memory interface clock. The byte clock (OCLK) is used to clock the Write data (D) and Byte write (BW) signals to the memory from the OSERDES. OCLK_DELAYED tap position is calibrated using a PHASER_OUT stage 2 and stage 3 delay to determine the center position of a bit window. The detail of the K clock calibration flow is described in the [Write Calibration](#) section.

PO stage 2 fine delay elements are used for either decrement or increment. The direction of PO stage 2 taps adjustment is determined during the K clock left edge detection as described above. A positive skew has the PO taps decreased until the correct calibration pattern is obtained. A negative skew has the PO taps increased until the correct calibration pattern is lost. After all of the other bytes have been deskewed, the OCLK_DELAY tap is moved to the calibrated position that has been obtained during the first part of write calibration.

The OUT_FIFOs serve as a temporary buffer to convert the write data from the FPGA logic domain to the PHASER clock domain, which clocks out the output data from the I/O logic. The FPGA logic writes into the OUT_FIFOs in the FPGA logic half-frequency clock based on the FULL flag output from the OUT_FIFO. The clocks required for operating the OUT_FIFOs and OSERDES are provided by the PHASER_OUT.


The clocking details of the write paths using PHASER_OUT are shown in [Figure 2-44](#).

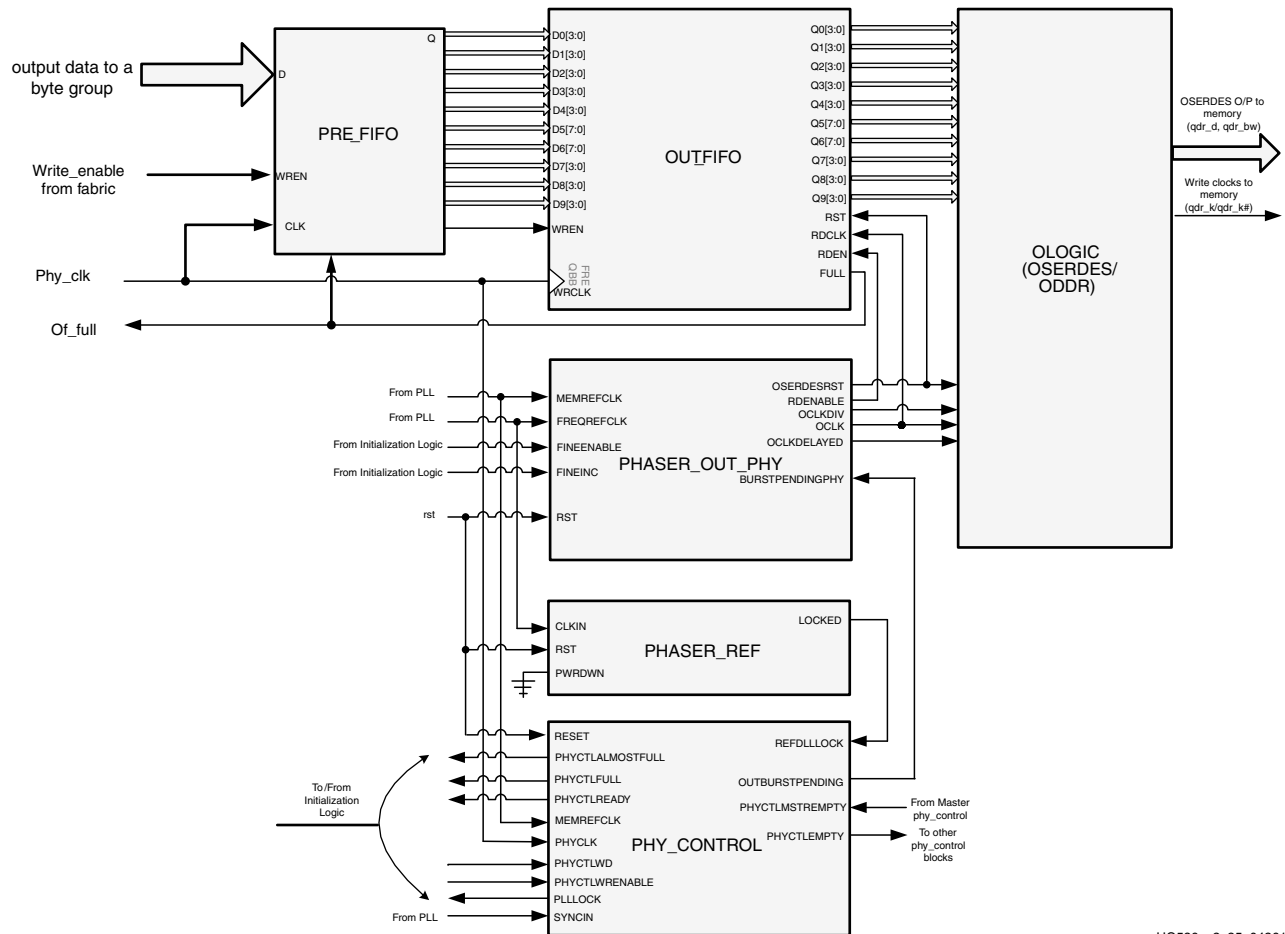

UG586_c2_25_042611

Figure 2-44: Write Path

The clocking details of the address/control using PHASER_OUT are shown in Figure 2-45.

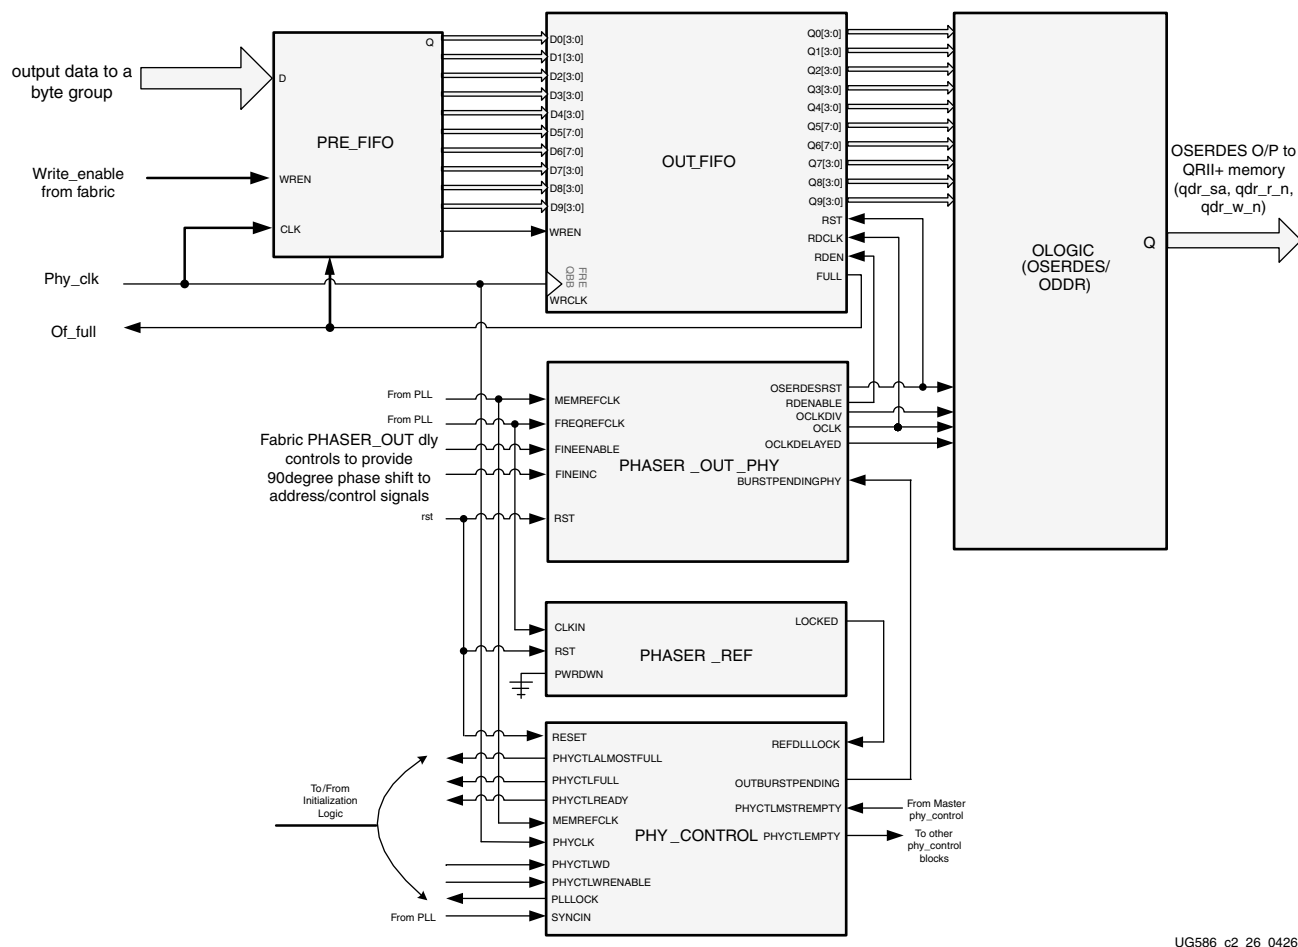

UG586_c2_26_042611

Figure 2-45: Address Path

Output Path

Because the address/command and write data are provided by the user backend, the QDR PHY transfers the signals from the FPGA logic domain to their internal PHASER clock domain and provides them from the OSERDES to the memory. The OUT_FIFOs are used mainly as domain transfer elements in the design, and therefore the write and read enables of the OUT_FIFO need to be constantly enabled. The PHY Control block helps with this requirement.

PHY Control Block

The QDR PHY uses the PHY Control block to interface to the OUT_FIFOs and PHASER_OUT_PHY. The PHY Control block helps to prevent the condition where one or more of the OUT_FIFOs are operating close to the EMPTY condition of the OUT_FIFO, which could potentially make the OUT_FIFO go EMPTY (based on how the WRCLK and RDCLK are aligned at the OUT_FIFO over voltage-temperature variations) thereby causing the OUT_FIFO to stall. The PHY Control block helps the OUT_FIFO to operate closer to the FULL condition of the OUT_FIFO.

The steps required for the initialization are as follows:

1. After PHY_CONTROL_READY is asserted, PHY_CONTROL is programmed with a *large* delay into the pc_phy_counters. The control word format is shown in [Table 2-10](#) and [Table 2-11](#).

Table 2-10: Control Word Format

Bits	35:32	31	30	29:25	24:23	22:17	16:15	14:12	11:8	7:3	2	1	0
Field	AO1	Major OP	Minor OP	Event Delay	Seq	Data Offset	IndexHi (Rank)	IndexLo (Bank)	AO0	Command Offset	Non-Data	Read	Data

Table 2-11: Control Word Decode

MajorOP	MinorOP	EventDelay	IndexHi	IndexLo	Registers
0-REGPRE	0 – REG	Register Data[4:0]	IndexHi[16] = Register Data[5] IndexHi[15] = Register Addr[3]	Register Address Bits [2:0]	4'b0000–4'b0011: Reserved 4'b0100: CTLCORR 4'b0101: RRDCNTR 4'b0110: REF2ACT 4'b0111: TFAW 4'b1000: A2ARD 4'b1001: A2AWR 4'b1010: PRE2ACT 4'b1011: ACT2PRE 4'b1100: RDA2ACT 4'b1101: RD2PRE 4'b1110: WRA2ACT 4'b1111: WR2PRE
	1 – PRE	5'b000xx – STALL	DC	DC	The STALL operation delays the issue of the Ready signal from pc_phy_counters to the sequencing state machines.
		5'b010xx – REF	Rank	DC	
		5'b100xx – PREBANK	Rank	Bank	
		5'b110xx – PREALL	Rank	DC	
		All others – NOP	DC	DC	
1-ACTRDWR	ACT	29:28: ACT Slot 27: AP 26:25: RDWR Slot	Rank	Bank	

The delay counter is used to delay the PHY Control block from fetching the next command from the PHY Control Word FIFO, and allows time for it to be filled to capacity. This FIFO needs to be prevented from going empty, because that stalls the PHY_CONTROL, and in turn leads to gaps in the read enable assertion for the OUT_FIFOs, which should be avoided.

The OUT_FIFO is used in ASYNC_MODE and in the 4x4 mode.

The PHY control word has these assignments:

- Control word [31:30] is set to 01.
 - Control word [29:25] is set to 5'b11111, which is the large delay programmed into the pc_phy_Counters.
 - A non-data command is issued by asserting control word[2].
 - Command and data offset are set to 0.
 - Phy_ctl_wr is set to 1 as long as the PHY Control Word FIFO (phy_ctl_fifo) is not FULL.
2. Entries are written into the OUT_FIFO (for command/address, and for write data); these entries are NOPs until the FULL condition is reached.
 3. After the FULL flag goes High with the ninth write, all writes to the FIFO are stopped until the FULL flag is deasserted (see [step 4](#)).
 4. Eventually, the PHY_CONTROL asserts RDENABLE for the OUT_FIFO (after the *large* delay has expired)
 5. After reads begin, the FULL flag is deasserted.
 6. Two clock cycles after FULL deassertion, begin writing again to the OUT_FIFO. Continue to provide Data commands to the PHY Control block. Control word[2:0] is set to 001.
 7. Now, both WRENABLE and RDENABLE are constantly asserted.

Pre-FIFO

When the OUT_FIFO is close to the ALMOST_FULL condition, with VT variations, it is likely that the OUT_FIFO(s) could momentarily be FULL, based on the wr/rd clock phase alignment. A low-latency pre-FIFO is used to store the command requests/write data from you and to help store the signals when the OUT_FIFO indeed goes FULL.

The OSERDES blocks available in every I/O helps to simplify the task of generating the proper clock, address, data, and control signaling for communication with the memory device. The flow through the OSERDES uses two different input clocks to achieve the required functionality. Data input ports D1/D2 or D3/D4 are clocked in using the clock provided on the CLKDIV input port (clk in this case), and then passed through a parallel-to-serial conversion block.

The OSERDES is used to clock all outputs from the PHY to the memory device. Upon exiting the OSERDES, all the output signals must be presented center aligned with respect to the generated clocks K/K#. For this reason, the PHASER_OUT block is also used in conjunction with the OSERDES to achieve center alignment. The output clocks that drive the address, and controls are shifted such that the output signals are center aligned to the K/K# clocks at the memory.

Read Path


The read path includes data capture using the memory provided read clocks and also ensuring that the read clock is centered within the data window to ensure that good margin is available during data capture. Before any read can take place, calibration must occur. Calibration is the main function of the read path and needs to be performed before the user interface can start transactions to the memory.

Data Capture

[Figure 2-46](#) shows a high-level block diagram of the path the read clock and the read data take from entering the FPGA until given to you. The read clock bypasses the ILOGIC and is routed through PHASERS within each byte group through multi-region BUFMRs. The BUFMR output can drive the PHASEREFCLK inputs of PHASERS in the immediate bank and also the PHASERS available in the bank above and below the current bank. The PHASER generated byte group clocks (ICLK, OCLK, and ICLKDIV) are then used to capture the read data (Q) available within the byte group using the ISERDES block. The calibration logic makes use of the fine delay increments available through the PHASER to ensure the byte group clocks are centered inside the read data window, ensuring maximum data capture margin.

The IN_FIFOs available in each byte group shown in [Figure 2-46](#) receive 4-bit data from each Q bit captured in the ISERDES in a given byte group and writes them into the storage array. The half-frequency PHASER_IN generated byte group clock, ICLKDIV, that captures the data in the ISERDES is also used to write the captured read data to the IN_FIFO. The write enables to the IN_FIFO are always asserted to enable data to be written in continuously.

A shallow, synchronous POST_FIFO is used at the receiving side of the IN_FIFO to enable captured data to be read out continuously from the FPGA logic, should a flag assertion occur in the IN_FIFO, which could potentially stall the flow of data from the IN_FIFO. Calibration also ensures that the read data is aligned to the rising edge of the FPGA logic half-frequency clock and that read data from all the byte groups have the same delay. For more details about the actual calibration and alignment logic, see the [Calibration](#) section.

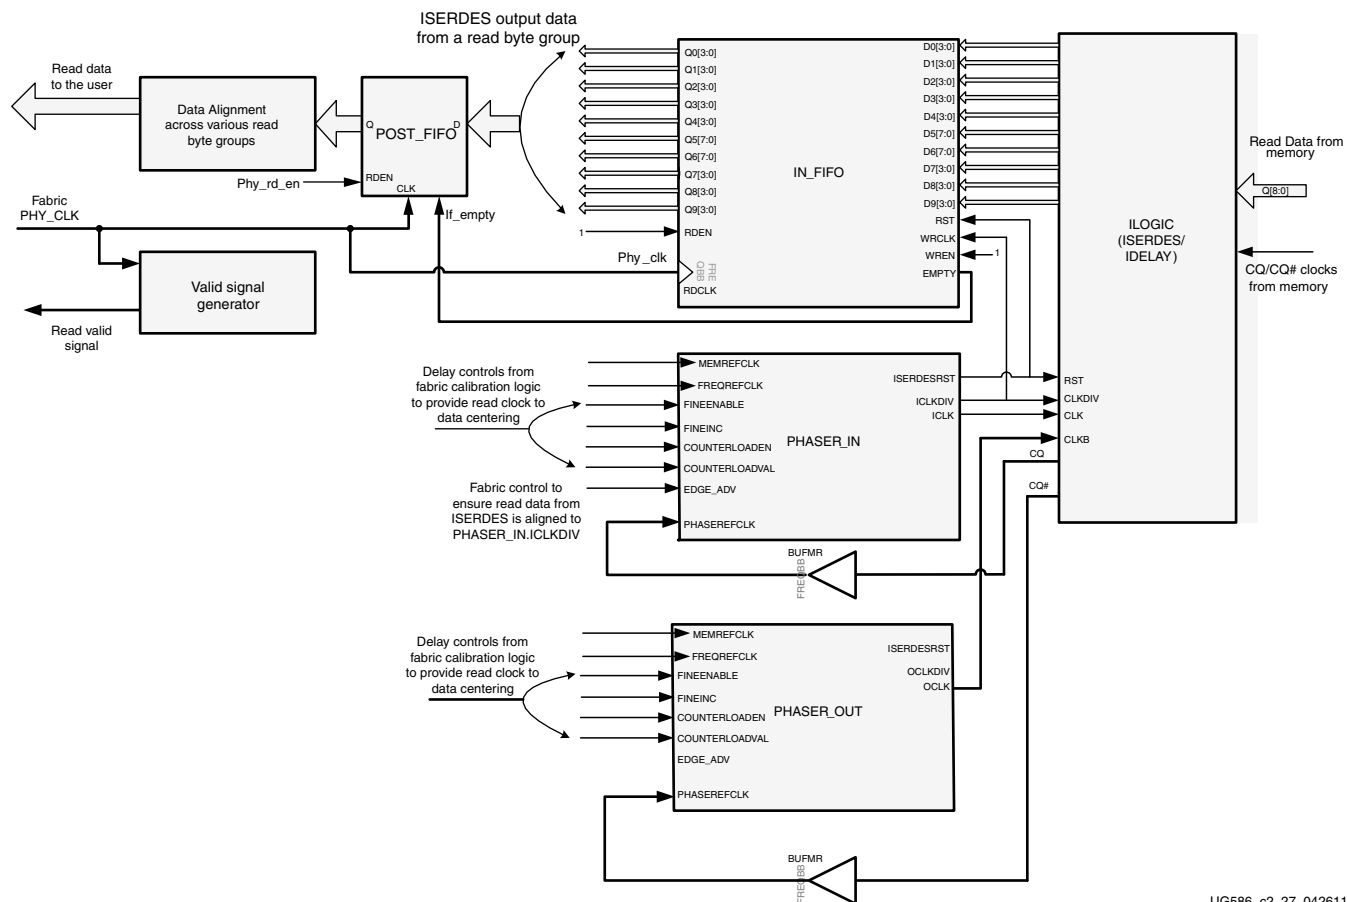

UG586_c2_27_042611

Figure 2-46: Read Datapath

Calibration

The calibration logic provides the required amount of delay on the read clock and read data to align the clock in the center of the data valid window. The centering of the clock is done using PHASERS which provide very fine resolution delay taps on the clock. Each PHASER_IN fine delay tap increments the clock by 1/64th of the data period.

Calibration begins after the echo clocks are stable from the memory device. The amount of time required to wait for the echo clocks to become stable is based upon the memory vendor and should be specified using the CLK_STABLE parameter to the core. Prior to this point, all read path logic is held in reset. Calibration is performed in two stages:

1. Calibration of read clock with respect to Q
2. Data alignment and valid generation

Calibration of Read Clock and Data

The PHASER_IN/PHASER_OUT clocks within each byte group are used to clock all ISERDES used to capture read data (Q) associated with the corresponding byte group. ICLKDIV is also the write clock for the read data IN_FIFOs. One PHASER_IN block is associated with a group of 12 I/Os. Each I/O bank in the 7 series FPGA has four PHASER_IN blocks, and hence four read data bytes can be placed in a bank.

Implementation Details

This stage of read leveling is performed one byte at a time where the read clock is center aligned to the corresponding read data in that byte group. At the start of this stage, a write command is issued to a specified QDR II+ SRAM address location with a specific data pattern. This write command is followed by back-to-back read commands to continuously read data back from the same address location that was written to.

The calibration logic reads data out of the IN_FIFO and records it for comparison. The calibration logic checks for the sequence of the data pattern read to determine the alignment of the clock with respect to the data. No assumption is made about the initial relationship between the capture clock and the data window at tap 0 of the fine delay line. The algorithm tries to align the rise and fall clocks to the left edge of their corresponding data window, by delaying the read data through the IDELAY element.

Next, the clocks are then delayed using the PHASER taps and centered within the corresponding data window. The PHASER_TAP resolution is based on the $FREQ_REF_CLK$ period and the per-tap resolution is equal to $(FREQ_REFCLK_PERIOD/2)/64$ ps. For memory interface frequencies ≥ 400 MHz, using the maximum of 64 PHASER taps can provide a delay of 1 data period or 1/2 the clock period. This enables the calibration logic to accurately center the clock within the data window.

For frequencies < 400 MHz, because $FREQ_REF_CLK$ has twice the frequency of the MEM_REF_CLK , the maximum delay that can be derived from the PHASER is 1/2 the data period or 1/4 the clock period. Hence for frequencies < 400 MHz, just using the PHASER delay taps might not be sufficient to accurately center the clock in the data window. So for these frequency ranges, a combination of both data delay using IDELAY taps and PHASER taps is used. The calibration logic determines the best possible delays, based on the initial clock-data alignment.

The next step is to increment the fine phase shift delay line of the PHASER_IN and PHASER_OUT blocks one tap at a time until a data mismatch is detected. The data read out of IN_FIFO after the required settling time is then compared with the recorded data at the previous tap value. This is repeated until a data mismatch is found, indicating the detection of a valid data window edge.

Complex pattern read calibration stage is added as the last stage of calibration to improve margin.

Data Alignment and Valid Generation

This phase of calibration:

- Ensures read data from all the read byte groups are aligned to the rising edge of the ISERDES CLKDIV capture clock
- Sets the latency for fixed-latency mode.
- Matches the latency for each memory when wider memories are derived from small memories.
- Sends the determined latency to the read valid generation logic.

After the read data capture clock centering is achieved, the calibration logic writes out a known data pattern to the QDR II+ memory and issues continuous reads back from the memory. This is done to determine whether the read data comes back aligned to the positive edge or negative edge of the ICLKDIV output of the PHASER_IN. If the captured data from a byte group is found aligned to the negative edge, this is then made to align to the positive edge by using the EDGE_ADV input to the PHASER_IN, which shifts the ICLKDIV output by one fast clock cycle.

The next stage is to generate the valid signal associated with the data on the client interface. During this stage of calibration, a single write of a known data pattern is written to memory and read back. Doing this allows the read logic to count how many cycles elapse before the expected data returns. The basic flow through this phase is:

1. Count cycles until the read data arrives for each memory device.
2. Determine what value to use as the fixed latency. This value can either be your set indicated value from the PHY_LATENCY parameter or the maximum latency across all memory devices.
3. Calibrate the generation of the read valid signal. Using the value determined in the previous step, delay the read valid signal to align with the read data for user.
4. Assert `cal_done`.

Write Calibration

When a write calibration is enabled for design that has memory frequency runs at 400 MHz or above, the results of read calibration data alignment are used to determine if a given setting is valid for correct write operation. After memory initialization, the read capture is first calibrated using this set pattern before moving on to calibrate the writes. There is no training register inside QDR II+ SRAM, the reads and writes cannot be independently verified.

At each step of write calibration, the alignment of the read clock (CQ/CQB) with Q is performed to ensure the correct capture of data. If the data alignment portion of read calibration is performed for a given byte lane and the expected result is not found, the write is assumed to have caused the failure. At each step of write calibration, the read calibration and associated logic are reset and restarted.

Bit window size of data byte lane with K clock (K-byte lane) is first determined by using PHASER_OUT stage 3 delay. Stage 3 tap starts increment from tap 0 until the left-edge is found. If expected pattern return at tap 0, tap 0 is set as left edge tap position.

After the left edge of the K-byte lane is detected, the K clock is kept at this left tap position to perform non-K-byte lanes alignment. All non-K-byte lanes are aligned to the left edge of K-byte lane using the PHASER_OUT stage 2 delay.

Then, K clock (K-byte lane) is moved to the right using the PHASER_OUT stage 3 delay to determine the aggregate right edge of all byte lanes. After the right edge of the data window is determined, the centering process of K clock in the window is performed using the PHASER_OUT stage3 delay.

Customizing the Core

The 7 series FPGAs QDR II+ SRAM interface solution is customizable to support several configurations. The specific configuration is defined by Verilog parameters in the top-level of the core. As per the OOC flow, none of the parameter values are passed down to the user design RTL file from the example design top RTL file. So, any design related parameter change is not reflected in the user design logic. The MIG tool should be used to regenerate a design when parameters need to be changed. These parameters are summarized in [Table 2-12](#).

Table 2-12: 7 Series FPGAs QDR II+ SRAM Memory Interface Solution Configurable Parameters

Parameter	Description	Options
MEM_TYPE	This is the memory address bus width	QDR2PLUS
CLK_PERIOD	This is the memory clock period (ps).	
BURST_LEN	This is the memory data burst length.	4
DATA_WIDTH	This is the memory data bus width and can be set through the MIG tool. A maximum DATA_WIDTH of 36 is supported.	
BW_WIDTH	This must be set to DATA_WIDTH/9	
NUM_DEVICES	This is the number of memory devices used.	
MEM_RD_LATENCY	This specifies the number of memory clock cycles of read latency of the memory device used. This is derived from the memory vendor data sheet.	2.0 2.5
FIXED_LATENCY_MODE	This indicates whether or not to use a predefined latency for a read response from the memory to the client interface.	0, 1
CPT_CLK_CQ_ONLY	This indicates only one of the read clocks provided by the memory (rise clock) is used for the data capture.	TRUE
PHY_LATENCY	This indicates the desired latency through the PHY for a read from the time the read command is issued until the read data is returned on the client interface.	
CLK_STABLE	This is the number of cycles to wait until the echo clocks are stable.	(See memory vendor data sheet)
IODELAY_GRP ⁽¹⁾	This is a unique name for the IODELAY_CTRL that is provided when multiple IP cores are used in the design.	
REFCLK_FREQ	This is the reference clock frequency for IDELAYCTRLs. This parameter should not be changed.	200.0
RST_ACT_LOW	This is the active-Low or active-High reset. This is set to 1 when System Reset Polarity option is selected as active-Low and set to 0 when the option is selected as active-High.	0, 1
IBUF_LPWR_MODE	This enables or disables low power mode for the input buffers.	ON OFF
IODELAY_HP_MODE	This enables or disables high-performance mode within the IODELAY primitive. When set to OFF, the IODELAY operates in low power mode at the expense of performance.	ON OFF

Table 2-12: 7 Series FPGAs QDR II+ SRAM Memory Interface Solution Configurable Parameters (Cont'd)

Parameter	Description	Options
SYSCLK_TYPE	This parameter indicates whether the system uses single-ended system clocks, differential system clocks, or is driven from an internal clock (No Buffer). Based on the selected CLK_TYPE, the clocks must be placed on the correct input ports. For differential clocks, sys_clk_p/sys_clk_n must be used. For single-ended clocks, sys_clk_i must be used. For the No Buffer option, sys_clk_i, which appears in the port list, needs to be driven from the internal clock.	DIFFERENTIAL SINGLE_ENDED NO_BUFFER
REFCLK_TYPE	This parameter indicates whether the system uses single-ended reference clocks, differential reference clocks, is driven from an internal clock (No Buffer), or can connect system clock inputs only (Use System Clock). Based on the selected CLK_TYPE, the clocks must be placed on the correct input ports. For differential clocks, clk_ref_p/clk_ref_n must be used. For single-ended clocks, clk_ref_i must be used. For the No Buffer option, clk_ref_i, which appears in port list, needs to be driven from an internal clock. For the Use System Clock option, clk_ref_i is connected to the system clock in the user design top module.	DIFFERENTIAL SINGLE_ENDED NO_BUFFER USE_SYSTEM_CLOCK
DIFF_TERM	This parameter indicates whether differential or non-differential termination is required for the system clock inputs.	TRUE FALSE
CLKIN_PERIOD	Input clock period.	–
CLKFBOUT_MULT	PLL voltage-controlled oscillator (VCO) multiplier. This value is set by the MIG tool based on the frequency of operation.	–
CLKOUT0_DIVIDE, CLKOUT1_DIVIDE, CLKOUT2_DIVIDE, CLKOUT3_DIVIDE	VCO output divisor for PLL outputs. This value is set by the MIG tool based on the frequency of operation.	–
CLKOUT0_PHASE	Phase of PLL output CLKOUT0. This value is set by the MIG based on the banks selected for memory interface pins and the frequency of operation.	–
DIVCLK_DIVIDE	PLLE2 VCO divisor. This value is set by the MIG tool based on the frequency of operation.	–
SIM_BYPASS_INIT_CAL	This simulation only parameter is used to speed up simulations.	FAST OFF

Table 2-12: 7 Series FPGAs QDR II+ SRAM Memory Interface Solution Configurable Parameters (Cont'd)

Parameter	Description	Options
DEBUG_PORT	Turning on the debug port allows for use with the VIO of the Vivado logic analyzer feature. This allows you to change the tap settings within the PHY based on those selected through the VIO. This parameter is always set to OFF in the <code>sim_tb_top</code> module of the <code>sim</code> folder, because debug mode is not required for functional simulation.	ON, OFF

Notes:

1. This parameter is prefixed with the module name entered in MIG during design generation. If the design is generated with the module name as `mig_7series_0`, then `IODELAY_GRP` parameter name is `mig_7series_0_IODELAY_MIG`.

Table 2-13 contains parameters set up by the MIG tool based on the pinout selected. When making pinout changes, Xilinx recommends rerunning the MIG tool to set up the parameters properly. See [Pinout Requirements, page 344](#). Mistakes to the pinout parameters can result in non-functional simulation, an unroutable design, and/or trouble meeting timing. These parameters are used to set up the PHY and route all the necessary signals to and from it. The parameters are calculated based on Data Write, Data Read, and Address/Control byte groups selected. These parameters do not consider the System Signals selection (that is, system clock, reference clock, and status signals).

Table 2-13: QDR II+ SRAM Memory Interface Solution Pinout Parameters

Parameter	Description	Example
BYTE_LANES_B0, BYTE_LANES_B1, BYTE_LANES_B2	Defines the byte lanes being used in a given I/O bank. A 1 in a bit position indicates a byte lane is used, and a 0 indicates unused. This parameter varies based on the pinout and should not be changed manually in generated design.	Ordering of bits from MSB to LSB is T0, T1, T2, and T3 byte groups. 4'b1101: For a given bank, three byte lanes are used, and one byte lane is not used.
CPT_CLK_SEL_B0, CPT_CLK_SEL_B1, CPT_CLK_SEL_B2	Three fields, one per possible I/O bank. Defines which read capture clocks are used for each byte lane in given bank. MRCC read capture clocks are placed in byte lanes 1 and/or 2, where parameter is defined for each data byte lane to indicate which read clock to use for the capture clock. 8 bits per byte lane, defined such that: <ul style="list-style-type: none"> • [7:4] – 0 (bank below), 1 (current bank), 2 (bank above) to indicate in which bank the clock is placed. • [3:0] – 1, 2 to indicate which of two capture clock sources This parameter varies based on the pinout and should not be changed manually in generated design.	32'h11_11_11_11 = Four data byte lanes, all using the clocks in the same bank. 32'h11_11_01_01 = Four data byte lanes, two lanes using the capture clock from the bank below (16'h01_01), two using the capture clock from the current bank (16'h11_11).

Table 2-13: QDR II+ SRAM Memory Interface Solution Pinout Parameters (Cont'd)

Parameter	Description	Example
DATA_CTL_B0, DATA_CTL_B1, DATA_CTL_B2	Defines mode of use of byte lanes in a given I/O bank. A 1 in a bit position indicates a byte lane is used for data, and a 0 indicates it is used for address/control. This parameter varies based on the pinout and should not be changed manually in generated design.	4'b1100: With respect to the BYTE_LANE example, two byte lanes are used for Data and one for Address/Control.
PHY_0_BITLANES, PHY_1_BITLANES, PHY_2_BITLANES	12-bit parameter per byte lane used to determine which I/O locations are used to generate the necessary PHY structures. This parameter is provided per bank. Except for the CQ_P/CQ_N, K_P/K_N, and DLL_OFF_N pins, all Data Write, Data Read, and Address/Control pins are considered for this parameter generation. This parameter varies based on the pinout and should not be changed manually in generated design.	This parameter denotes for all byte groups of a selected bank. All 12 bits are denoted for a byte lane and are ordered from MSB:LSB as BA98_7654_3210. For example, this parameter is 48'hFFE_FFF_000_2FF for one bank. 12'hDF6 (12'b1101_1111_0110): Bit lines 0, 3, and 9 are not used; the rest of the bits are used.
BYTE_GROUP_TYPE_B0, BYTE_GROUP_TYPE_B1, BYTE_GROUP_TYPE_B2	Defines the byte lanes for a given I/O bank as INPUT or OUTPUT. A 1 in a bit position indicates a byte lane contains INPUT pins, and a 0 indicates byte lane contains OUTPUT pins. This parameter varies based on the pinout and should not be changed manually in generated design.	4'b0110: Middle two byte lanes contain INPUT pins, and the other byte lanes contain OUTPUT pins.
K_MAP	Bank and byte lane position information for write clocks (K/K#). 8-bit parameter provided per pair of signals. <ul style="list-style-type: none"> [7:4] – Bank position. Values of 0, 1, or 2 are supported [3:0] – Byte lane position within a bank. Values of 0, 1, 2, or 3 are supported. This parameter varies based on the pinout and should not be changed manually in generated design.	Upper-most Data Write/Data Read or Address/Control byte group selected bank is referred as Bank 0 in parameters notation. Numbering of banks is 0, 1, and 2 from top to bottom. Byte groups T0, T1, T2, and T3 are numbered in parameters as 3, 2, 1, and 0, respectively. 48'h00_00_00_00_03_13: This parameter is denoted for 6 write clock pairs with 8 bits for each clock pin. In this case, only two write clock pairs are used. Ordering of parameters is from MSB to LSB (that is, K[0]/ K#[0] corresponds to the 8 LSBs of the parameter. 8'h13: K/K# placed in bank 1, byte lane 3. 8'h20: K/K# placed in bank 2, byte lane 0.

Table 2-13: QDR II+ SRAM Memory Interface Solution Pinout Parameters (Cont'd)

Parameter	Description	Example
CQ_MAP	Bank and byte lane position information for the read clocks (CQ/CQ#). See the K_MAP description. This parameter varies based on the pinout and should not be changed manually in generated design.	See the K_MAP example.
ADD_MAP	<p>Bank and byte lane position information for the address. 12-bit parameter provided per pin.</p> <ul style="list-style-type: none"> [11:8] – Bank position. Values of 0, 1, or 2 are supported. [7:4] – Byte lane position within a bank. Values of 0, 1, 2, or 3 are supported. [3:0] – Bit position within a byte lane. Values of [0, 1, 2, . . . , A, B] are supported. <p>This parameter varies based on the pinout and should not be changed manually in generated design.</p>	<p>Upper-most Data Write/Data Read or Address/Control byte group. The selected bank is referred to as Bank 0 in the parameters notation. Numbering of banks is 0, 1, and 2 from top to bottom.</p> <p>Byte groups T0, T1, T2, and T3 are numbered in parameters as 3, 2, 1, and 0, respectively. Bottom-most pin in a byte group is referred as '0' in MAP parameters.</p> <p>Bottom-most pin in a byte group is referred as '0' in the MAP parameters. Numbering is counted from 0 to 9 from the bottom-most pin to the top pin within a byte group by excluding DQS I/Os. DQS_N and DQS_P pins of a byte group are numbered as A and B, respectively.</p> <p>264'h000_000_239_238_237_236_23B_23A_235_234_233_232_231_230_229_228_227_226_22B_22A_225_224: This parameter is denoted for an Address width of 22 bits with 12 bits for each pin. In this example, the Address width is 20 bits. Ordering of parameters is from MSB to LSB (that is, SA[0] corresponds to the 12 LSBs of the parameter).</p> <p>12'h224: Address pin placed in bank 2, byte lane 2, at location 4.</p> <p>12'h11A: Address pin placed in bank 1, byte lane 1, at location A.</p>
RD_MAP	Bank and byte lane position information for the Read enable. See the ADD_MAP description. This parameter varies based on the pinout and should not be changed manually in generated design.	See the ADD_MAP example.
WR_MAP	Bank and byte lane position information for the Write enable. See the ADD_MAP description. This parameter varies based on the pinout and should not be changed manually in generated design.	See the ADD_MAP example.

Table 2-13: QDR II+ SRAM Memory Interface Solution Pinout Parameters (Cont'd)

Parameter	Description	Example
ADDR_CTL_MAP	Bank and byte lane position information for Address byte groups. Address requires three byte groups and this parameters denotes the byte groups in which all 3 Address byte groups are selected. See the K_MAP description. This parameter varies based on the pinout and should not be changed manually in generated design.	See the K_MAP example.
D0_MAP, D1_MAP, D2_MAP, D3_MAP, D4_MAP, D5_MAP, D6_MAP, D7_MAP	Bank and byte lane position information for the Data Write bus. See the ADD_MAP description. This parameter varies based on the pinout and should not be changed manually in generated design.	See the ADD_MAP example.
BW_MAP	Bank and byte lane position information for the Byte Write. See the ADD_MAP description. This parameter varies based on the pinout and should not be changed manually in generated design.	See the ADD_MAP example.
Q0_MAP, Q1_MAP, Q2_MAP, Q3_MAP, Q4_MAP, Q5_MAP, Q6_MAP, Q7_MAP	Bank and byte lane position information for the Data Read bus. See the ADD_MAP description. This parameter varies based on the pinout and should not be changed manually in generated design.	See the ADD_MAP example.

Design Guidelines

Design Rules

Memory types, memory parts, and data widths are restricted based on the selected FPGA, FPGA speed grade, and the design frequency. The final frequency ranges are subject to characterization results.

For general PCB routing guidelines, see [Appendix A, General Memory Routing Guidelines](#).

Bank Sharing Among Controllers

No unused part of a bank used in a memory interface is permitted to be shared with another memory interface. The dedicated logic that controls all the FIFOs and phasers in a bank is designed to only operate with a single memory interface and cannot be shared with other memory interfaces. With the exception of the shared address and control in the dual controller supported in MIG.

Trace Length Requirements

The trace lengths described here are for high-speed operation and can be relaxed depending on the application target bandwidth requirements. The package delay should be included when determining the effective trace length. Note that different parts in the same package have different internal package skew values. De-rate the minimum period appropriately in the **MIG Controller Options** page when different parts in the same package are used.

One method for determining the delay is to use the L and C values for each pin from the IBIS models. The delay value is determined as the square root of ($L \times C$).

Another method is to generate the package lengths using the Vivado Design Suite. The following commands generate a `csv` file that contains the package delay values for every pin of the device under consideration.

```
link_design -part <part_number>
write_csv <file_name>
```

For example, to obtain the package delay information for the 7 series FPGA XC7K160T-FF676, this command should be issued:

```
link_design -part xc7k160tffg676
write_csv flight_time
```

This generates a file named `flight_time.csv` in the current directory with package trace delay information for each pin. While applying specific trace-matching guidelines for the QDR II+ SRAM interface, this additional package delay term should be considered for the overall electrical propagation delay. Different die in the same package might have different delays for the same package pin. If this is expected, the values should be averaged appropriately. This decreases the maximum possible performance for the target device.

These rules indicate the maximum electrical delays between QDR II+ SRAM signals:

- The maximum electrical delay between any bit in the data bus, D, and its associated K/K# clocks should be ± 15 ps.
- The maximum electrical delay between any Q and its associated CQ/CQ# should be ± 15 ps.

- The maximum electrical delay between any address and control signals and the corresponding K/K# should be ± 50 ps.
- There is no relation between CQ and the K clocks. K should be matched with D, and CQ should be matched with Q (read data).

Pinout Requirements

Xilinx 7 series FPGAs are designed for very high-performance memory interfaces, and certain rules must be followed to use the QDR II+ physical layer. Xilinx 7 series FPGAs have dedicated logic for each byte group. Four byte groups are available in each 50-pin bank. Each 50-pin bank consists of four byte groups that contain one DQS Clock capable I/O pair and ten associated I/Os. Two pairs of Multi-region Clock-capable I/O (MRCC) pins are available in a bank, and are used for placing the read clocks (CQ and CQ#).

In a typical QDR II+ write bank configuration, 9 of these 10 I/Os are used for the Write data (D) and one is used for the byte write (BW). The write clocks (K/K#) use one of the DQS pairs inside the write bank. Within a read bank, the read data are placed on 9 of the 10 I/Os, and the CQ/CQ# clocks placed in the MRCC_P pins available inside the read bank.

Xilinx 7 series FPGAs have dedicated clock routing for high-speed synchronization that is routed vertically within the I/O banks. Thus, QDR II+ memory interfaces must be arranged in the banks vertically and not horizontally. In addition, the maximum height is three banks.

After generating a core through the MIG tool, the most optimal pinout has been selected for the design. Manual changes through the XDC are not recommended. However, if the XDC needs to be altered, the following rules must be taken into consideration:

- The write data bus (D) of a memory interface must be placed within a single bank. It is required to arrange the write data bus byte wise (nine bits wide) among the FPGA byte groups. All byte write (BW) signals of the interface are required to place in the same bank.
- K/K# clocks must be kept in the same bank as the write data bank. They should be placed on a DQS pin pair.
- The read data bus (Q) must be arranged byte wise (nine bits wide) among the FPGA byte groups. Xilinx recommends keeping the complete read data bus of a memory component within a single bank.
- The read data clocks (CQ and CQ#) must be placed on the two MRCC_P or MRCC_N pins available in the same bank as the read data or an adjacent bank to it. Xilinx recommends keeping the read data and read clocks in the same bank.
- All address/control signals must be placed within a single bank. The address bank should be placed adjacent to the data write (D) bank.
- The `d11_off_n` signal can be placed on any free I/O available in the banks used for the memory interface.

- Xilinx recommends keeping the system clock pins in the data write bank.



RECOMMENDED: *Although the MIG allows system clock selection to be in different super logic regions (SLRs), it is not recommended due to the additional clock jitter in this topology.*

System Clock, PLL Location, and Constraints

The PLL is required to be in the bank that supplies the clock to the memory to meet the specified interface performance. The system clock input is also strongly recommended to be in this bank. The MIG tool follows these two rules whenever possible. However, exceptions are possible where pins might not be available for the clock input in the bank as that of the PLL. In this case, the clock input needs to come from an adjacent bank through the frequency backbone to the PLL. The system clock input to the PLL must come from clock-capable I/Os.

The system clock input can only be used for an interface in the same column. The system clock input cannot be driven from another column. The additional PLL or MMCM and clock routing required for this induces too much additional jitter.

Unused outputs from the PLL can be used as clock outputs. Only the settings for these outputs can be changed. Settings related to the overall PLL behavior and the used outputs must not be disturbed. A PLL cannot be shared among interfaces.

See [Clocking Architecture, page 322](#) for information on allowed PLL parameters.

Configuration

The XDC contains timing, pin, and I/O standard information. The `sys_clk` constraint sets the operating frequency of the interface. It is set through the MIG GUI. This must be rerun if this constraint needs to be altered, because other internal parameters are affected. For example:

```
create_clock -period 1.875 [get_ports sys_clk_p]
```

The `clk_ref` constraint sets the frequency for the IDELAY reference clock, which is typically 200 MHz. For example:

```
create_clock -period 5 [get_ports clk_ref_p]
```

The I/O standards are set appropriately for the QDR II+ SRAM interface with LVCMOS15, HSTL15_I, HSTL15_I_DCI, DIFF_HSTL15_I, or DIFF_HSTL15_I_DCI, as appropriate. LVDS_25 is used for the system clock (`sys_clk`) and I/O delay reference clock (`clk_ref`). These standards can be changed, as required, for the system configuration. These signals are brought out to the top-level for system connection:

- **sys_rst** – This signal is the main system reset (asynchronous).
- **init_calib_complete** – This signal indicates when the internal calibration is done and that the interface is ready for use.
- **tg_compare_error** – This signal is generated by the example design traffic generator if read data does not match the write data.

These signals are all set to LVCMOS25 and can be altered as needed for the system design. They can be generated and used internally instead of being brought out to pins.

Some interfaces might need to have the system clock in a bank above or below the bank with the address/control and data. In this case, the MIG tool puts an additional constraint in the XDC. For example:

```
set_property CLOCK_DEDICATED_ROUTE BACKBONE [get_nets sys_clk_p]
set_property CLOCK_DEDICATED_ROUTE BACKBONE [get_pins -hierarchical *pll*CLKIN1]
```

It results in the following warning during PAR. This warning can be ignored.

```
WARNING:Place:1402 - A clock IOB / PLL clock component pair have been found that are
not placed at an optimal clock IOB / PLL site pair. The clock IOB component
<sys_clk_p> is placed at site <IOB_X1Y76>. The corresponding PLL component
<u_backbl6/u_infrastructure/plle2_i> is placed at site <PLLE2_ADV_X1Y2>. The clock
I/O can use the fast path between the IOB and the PLL if the IOB is placed on a Clock
Capable IOB site that has dedicated fast path to PLL sites within the same clock
region. You may want to analyze why this problem exists and correct it. This is
normally an ERROR but the CLOCK_DEDICATED_ROUTE constraint was applied on COMP.PIN
<sys_clk_p.PAD> allowing your design to continue. This constraint disables all clock
placer rules related to the specified COMP.PIN. The use of this override is highly
discouraged as it may lead to very poor timing results. It is recommended that this
error condition be corrected in the design.
```

Do not drive user clocks through the I/O clocking backbone from the region(s) containing the MIG generated memory interface to CMT blocks in adjacent regions due to resource limitations. For more information, see the *7 Series FPGAs Clocking Resources User Guide* (UG472) [Ref 10].

The MIG tool sets the VCCAUX_IO constraint based on the data rate and voltage input selected. The generated XDC has additional constraints as needed. For example:

```
# PadFunction: IO_L13P_T2_MRCC_37
set_property VCCAUX_IO DONTCARE [get_ports {sys_clk_p}]
set_property IOSTANDARD DIFF_HSTL_I [get_ports {sys_clk_p}]
set_property PACKAGE_PIN K22 [get_ports {sys_clk_p}]

# PadFunction: IO_L13N_T2_MRCC_37
set_property VCCAUX_IO DONTCARE [get_ports {sys_clk_n}]
set_property IOSTANDARD DIFF_HSTL_I [get_ports {sys_clk_n}]
set_property PACKAGE_PIN J22 [get_ports {sys_clk_n}]
```

For more information, see the *Xilinx Timing Constraints Guide* (UG612) [Ref 15].

For QDR II+ SRAM interfaces that have the memory system input clock (`sys_clk_p/sys_clk_n`) placed on CCIO pins within one of the memory banks, MIG assigns the DIFF_HSTL_I I/O standard (VCCO = 1.5V) to the CCIO pins. Because the same differential input receiver is used for both DIFF_HSTL_I and LVDS inputs, an LVDS clock source can be connected directly to the DIFF_HSTL_I CCIO pins. For more details on usage and required circuitry for LVDS and LVDS_25 I/O Standards, see the *7 Series FPGAs SelectIO™ Resources User Guide* (UG471) [Ref 2].

Termination

These recommendations apply to termination for QDR II+ SRAM:

- Simulation (using IBIS or other) is highly recommended. The loading of command and address signals depends on various factors, such as speed requirements and termination topology. Loading can be a limiting factor in reaching a performance target.
- Command and Address signals should be terminated to V_{TT} through a 50Ω resistor.
- Write Clock (K_P/N) does not require an external termination if ODT is available. If ODT is not available, each line should be terminated to V_{TT} through a 50Ω resistor.
- Write Data lines (D) do not require an external termination if ODT is available. If ODT is not available, each line should be terminated to V_{TT} through a 50Ω resistor.
- Read Clock (CQ) does not require an external termination and should use DCI. Set the DCI termination for each single-ended line to 50Ω .
- Read Data lines (Q, QVLD) do not require an external termination and should use DCI. Set the DCI termination to 50Ω .

I/O Standards

The MIG tool generates the appropriate XDC for the core with SelectIO™ interface standards based on the type of input or output to the 7 series FPGAs. These standards should not be changed. Table 2-14 contains a list of the ports together with the I/O standard used.

Table 2-14: I/O Standards

Signal ⁽¹⁾	Direction	I/O Standard
qdr_bw_n	Output	HSTL_I
qdr_cq_p, qdr_cq_n	Input	HSTL_I_DCI
qdr_d	Output	HSTL_I
qdr_k_p, qdr_k_n	Output	DIFF_HSTL_I
qdr_q	Input	HSTL_I_DCI
qdr_r_n	Output	HSTL_I

Table 2-14: I/O Standards (Cont'd)

Signal ⁽¹⁾	Direction	I/O Standard
qdr_sa	Output	HSTL_I
qdr_w_n	Output	HSTL_I

Notes:

1. All signals operate at 1.5V.

DCI (HP banks) or IN_TERM (HR banks) is required at the FPGA to meet the specified performance. Designs generated by the MIG tool use the DCI standards for Data Read (Q) and Read Clock (CQ_P and CQ_N) in the High-Performance banks. In the High-Range banks, the MIG tool uses the HSTL_I standard with the internal termination (IN_TERM) attribute chosen in the GUI.

Clocking

The 7 series FPGA MIG QDR II+ SRAM design has two clock inputs, the reference clock and the system clock. The reference clock drives the IODELAYCTRL components in the design, while the system clock input is used to create all MIG design clocks that are used to clock the internal logic, the frequency reference clocks to the phasers, and a synchronization pulse required for keeping PHY control blocks synchronized in multi-I/O bank implementations. For more information on clocking architecture, see [Clocking Architecture, page 322](#).

The MIG tool allows you to input the Memory Clock Period and then lists available Input Clock Periods that follow the supported clocking guidelines. Based on these two clock periods selections, the generated MIG core appropriately sets the PLL parameters. The MIG tool enables automatic generation of all supported clocking structures. For information on how to use the MIG tool to set up the desired clocking structure including input clock placement, input clock frequency, and IODELAYCTRL ref_clk generation, see [Creating the 7 Series FPGA QDR II+ SRAM Design, page 287](#).

Input Clock Guidelines



IMPORTANT: *The input system clock cannot be generated internally.*

- PLL Guidelines
 - CLKFBOUT_MULT_F (M) must be between 1 and 16 inclusive.
 - DIVCLK_DIVIDE (D, Input Divider) can be any value supported by the PLLE2 parameter.
 - CLKOUT_DIVIDE (O, Output Divider) must be 2 for 400 MHz and up operation and 4 for below 400 MHz operation.

- The above settings must ensure the minimum PLL VCO frequency (FVCOMIN) is met. For specifications, see the appropriate DC and Switching Characteristics Data Sheet. The *7 Series FPGAs Clocking Resources User Guide* (UG472) [Ref 10] includes the equation for calculating FVCO.
- The relationship between the input period and the memory period is $\text{InputPeriod} = (\text{MemoryPeriod} \times M) / (D \times D1)$.
- The clock input (`sys_clk`) can be input on any CCIO in the column where the memory interface is located; this includes CCIO in banks that do not contain the memory interface, but must be in the same column as the memory interface. The PLL must be located in the bank containing the clock sent to the memory. To route the input clock to the memory interface PLL, the CMT backbone must be used. With the MIG implementation, one spare interconnect on the backbone is available that can be used for this purpose.
 - MIG versions 1.4 and later allow this input clocking setup and properly drive the CMT backbone.
 - `CLOCK_DEDICATED_ROUTE = BACKBONE` constraint is used to implement CMT backbone, following warning message is expected. It can be ignored safely.

WARNING: [Place 30-172] Sub-optimal placement for a clock-capable IO pin and PLL pair. The flow will continue as the `CLOCK_DEDICATED_ROUTE` constraint is set to `BACKBONE`.

```
u_mig_7series_0/c0_u_clk_ibuf/diff_input_clk.u_ibufg_sys_clk (IBUFDS.0) is locked
to IOB_X0Y176
u_mig_7series_0/c0_u_infrastructure/plle2_i (PLLE2_ADV.CLKIN1) is locked to
PLLE2_ADV_X0Y1
u_mig_7series_0/c1_u_infrastructure/plle2_i (PLLE2_ADV.CLKIN1) is locked to
PLLE2_ADV_X0Y5
.....
```

- For QDR II+ SRAM interfaces that have the memory system input clock (`sys_clk`) placed on CCIO pins within one of the memory banks, MIG assigns the DIFF_HSTL_I I/O standard (VCCO = 1.5V) to the CCIO pins. Because the same differential input receiver is used for both DIFF_HSTL_I and LVDS inputs, an LVDS clock source can be connected directly to the DIFF_HSTL_I CCIO pins.
- It is acceptable to have differential inputs such as LVDS and LVDS_25 in I/O banks that are powered at voltage levels other than the nominal voltages required for the outputs of those standards (1.8V for LVDS outputs, and 2.5V for LVDS_25 outputs). However, these criteria must be met:
 - a. The optional internal differential termination is not used (`DIFF_TERM = FALSE`, which is the default value).

Note: This might require manually changing `DIFF_TERM` parameter located in the top-level module or setting this in the UCF or XDC.
 - b. The differential signals at the input pins meet the VIN requirements in the Recommended Operating Conditions table of the specific device family data sheet.

- c. The differential signals at the input pins meet the VIDIFF (min) requirements in the corresponding LVDS or LVDS_25 DC specifications tables of the specific device family data sheet.

One way to accomplish the above criteria is to use an external circuit that both AC-couples and DC-biases the input signals. The figure shows an example circuit for providing an AC-coupled and DC-biased circuit for a differential clock input. RDIFF provides the 100Ω differential receiver termination because the internal DIFF_TERM is set to FALSE. To maximize the input noise margin, all RBIAS resistors should be the same value, essentially creating a VICM level of VCCO/2. Resistors in the 10k to 100 kΩ range are recommended. The typical values for the AC coupling capacitors CAC are in the range of 100 nF. All components should be placed physically close to the FPGA inputs.

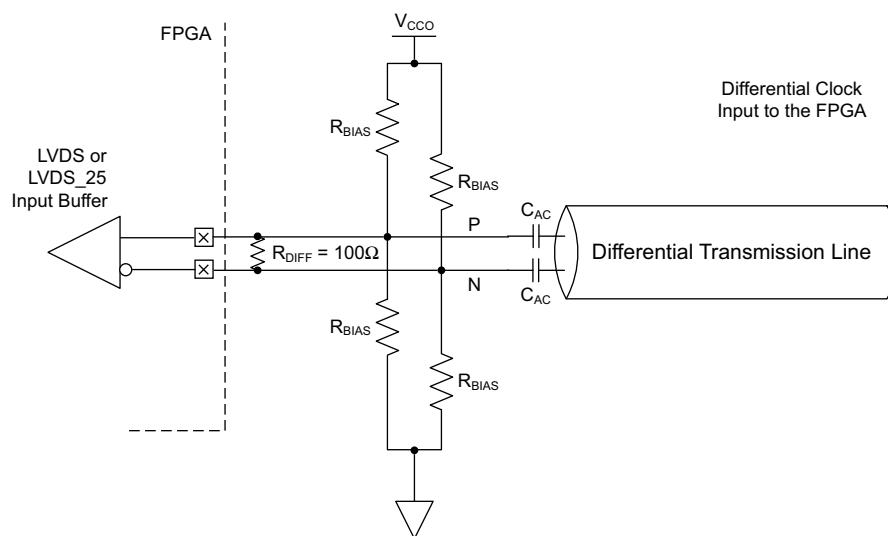


Figure 2-47: Example Circuit for AC-Coupled and DC-Biased Differential Clock Input

Note: The last set of guidelines on differential LVDS inputs are added within the LVDS and LVDS_25 (Low Voltage Differential Signaling) section of the *7 Series SelectIO Resources User Guide* (UG471) [Ref 2] in the next release of the document.

These guidelines are irrespective of Package, Column (HR/HP), or I/O Voltage.

Sharing sys_clk between Controllers

The MIG 7 series FPGA designs require `sys_clk` to be in the same I/O bank column as the memory interface to minimize jitter.

- **Interfaces Spanning I/O Columns** – A single `sys_clk` input cannot drive memory interfaces spanning multiple I/O columns. The input clock input must be in the same column as the memory interface to drive the PLL using the CMT Backbone, which minimizes jitter.
- **Interfaces in Single I/O Column** – If the memory interfaces are entirely contained within the same I/O column, a common `sys_clk` can be shared among the interfaces.

The `sys_clk` can be input on any CCIO in the column where the memory interfaces are located. This includes CCIO in banks that do not contain the memory interfaces, but must be in the same column as the memory interfaces.

Information on Sharing BUFG Clock (`phy_clk`)

The MIG 7 series QDR II+ SRAM design includes an MMCM which outputs the `phy_clk` on a BUFG route. It is not possible to share this clock amongst multiple controllers to synchronize the user interfaces. This is not allowed because the timing from the FPGA logic to the PHY Control block must be controlled. This is not possible when the clock is shared amongst multiple controllers. The only option for synchronizing user interfaces amongst multiple controllers is to create an asynchronous FIFO for clock domain transfer.

Information on Sync_Pulse

The MIG 7 series QDR II+ SRAM design includes one PLL that generates the necessary design clocks. One of these outputs is the `sync_pulse`. The sync pulse clock is 1/16 of the `mem_refclk` frequency and must have a duty cycle distortion of 1/16 or 6.25%. This clock is distributed across the low skew clock backbone and keeps all PHASER_IN/_OUT and PHY_Control blocks in sync with each other. The signal is sampled by the `mem_refclk` in both the PHASER_INs/_OUTs and PHY_Control blocks. The phase, frequency, and duty cycle of the `sync_pulse` is chosen to provide the greatest setup and hold margin across PVT.

Debugging QDR II+ SRAM Designs

This section defines a step-by-step debugging procedure to assist in the identification and resolution of any issues that might arise during each phase of the memory interface design process.

Note: The overall read latency of the MIG 7 series QDR II+ core is dependent on how the Memory Controller is configured, but most critically on the target traffic/access pattern and the number of commands already in the pipeline before the read command is issued. Read latency is measured from the point where the read command is accepted by the user or native interface. Simulation should be run to analyze read latency.

Introduction

The QDR II+ memory interfaces in Virtex-7 FPGAs simplify the challenges associated with memory interface design. However, every application environment is unique and proper due diligence is required to ensure a robust design. Careful attention must be given to functional testing through simulation, proper synthesis and implementation, adherence to PCB layout guidelines, and board verification through IBIS simulation and signal integrity analysis.

This section defines a step-by-step debugging procedure to assist in the identification and resolution of any issues that might arise during each phase of the design process. Details are provided on:

- Functional verification using the UNISIM simulation models
- Design implementation verification
- Board layout verification
- Using the QDR II+ SRAM physical layer to debug board-level issues
- General board-level debug techniques

The two primary issues encountered during verification of a memory interface are:

- Calibration not completing properly
- Data corruption during normal operation

Problems might be seen in simulation, hardware, or both due to various root causes.

Figure 2-48 shows the overall flow for debugging problems associated with these two general types of issues.

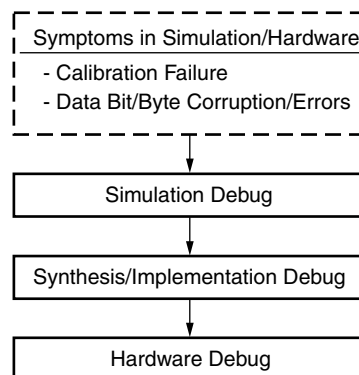


Figure 2-48: Virtex-7 FPGA QDR II+ SRAM MIG Tool Debug Flowchart

Debug Tools

Many tools are available to debug memory interface design issues. This section indicates which resources are useful for debugging a given situation.

Example Design

QDR II+ SRAM design generation using the MIG tool produces an example design and a user design. The example design includes a synthesizable test bench that has been fully verified in simulation and hardware. This design can be used to observe the behavior of the MIG tool design and can also aid in identifying board-related problems.

Debug Signals

The MIG tool includes a Debug Signals Control option on the FPGA Options screen. Enabling this feature allows calibration, tap delay, and read data signals to be monitored using the Vivado logic analyzer feature. Selecting this option port maps the debug signals to VIO modules of the Vivado logic analyzer feature in the design top module.

Sample debug logic by connecting the debug ports to the Vivado Design Suite debug feature modules (that is, ILA and VIO) is provided in the example design top (example_top) module with a Debug Signals for Memory Controller option value of "ON." In User Design top, all debug port signals are grouped under a few buses and provided in the port list.

To confirm that all debug ports are connected to various modules, look at the reference example design top module. The debug ports generated in the User Design top module for Debug Port enable designs are "qdriip_ila0_data," "qdriip_ila0_trig," "qdriip_ila1_data," "qdriip_ila1_trig," "qdriip_vio2_async_in," and "qdriip_vio2_sync_out."

Vivado Design Suite Debug Feature

The Vivado Design Suite debug feature inserts logic analyzer, bus analyzer, and VIO software cores directly into the design. Supported versions of ILA and VIO are 3.0. The debug feature also allows you to set trigger conditions to capture application and MIG debug signals in hardware. Captured signals can be analyzed through the Vivado logic analyzer feature. For more information about the Vivado logic analyzer, software is available in the *Vivado Design Suite User Guide: Programming and Debugging* (UG908) [Ref 16].



IMPORTANT: *The Integrated Logic Analyzer (ILA) operates on a synchronous clock and cannot be triggered during reset. Instead, set the trigger on an ILA signal to look for a rising edge ("R") or falling edge ("F") with the radix value of the signal set to "Binary." With this trigger setting, the trigger can be armed. When the reset is applied and released, the trigger captures the desired ILA results.*

Simulation Debug

Figure 2-49 shows the debug flow for simulation.

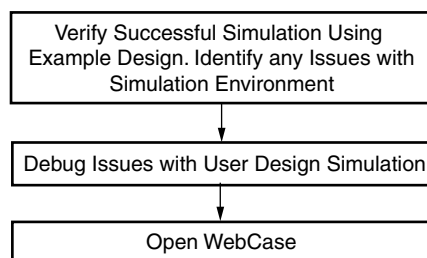


Figure 2-49: Simulation Debug Flowchart

Verifying the Simulation Using the Example Design

The example design generated by the MIG tool includes a simulation test bench and parameter file based on memory selection in the MIG tool.

The QuestaSim, Vivado Simulator, IES, and VCS simulation tools are used for verification of MIG IP core at each software release. Script files to run simulations with IES and VCS simulators are generated in MIG generated output. Simulations using QuestaSim and Vivado simulators can be done through Vivado Tcl Console commands or in Vivado IDE.



IMPORTANT: *Other simulation tools can be used for MIG IP core simulation but are not specifically verified by Xilinx.*

Simulation Flow Using IES and VCS Script Files

To run the simulation, go to this directory:

```
<project_dir>/<Component_Name>_example/<component
name>_example.srcs/sim_1/imports/sim
```

For a project created with the name set as `project_1` and the Component Name entered in Vivado IDE as `mig_7series_0`, go to the directory as follows:

```
project_1/mig_7series_0_example/mig_7series_0_example.srcs/sim_1/im
ports/sim
```

IES and VCS simulation scripts are meant to be executed only in Linux operating systems.

The `ies_run.sh` and `vcs_run.sh` files are the executable files for running simulations using IES and VCS simulators respectively. Library files should be added to the `ies_run.sh` and `vcs_run.sh` files respectively. See the `readme.txt` file for details regarding simulations using IES and VCS.

Simulation Flow Using Vivado Simulator

1. In the **Open IP Example Design** Vivado project, under **Flow Navigator**, select **Simulation Settings** (Figure 2-50).

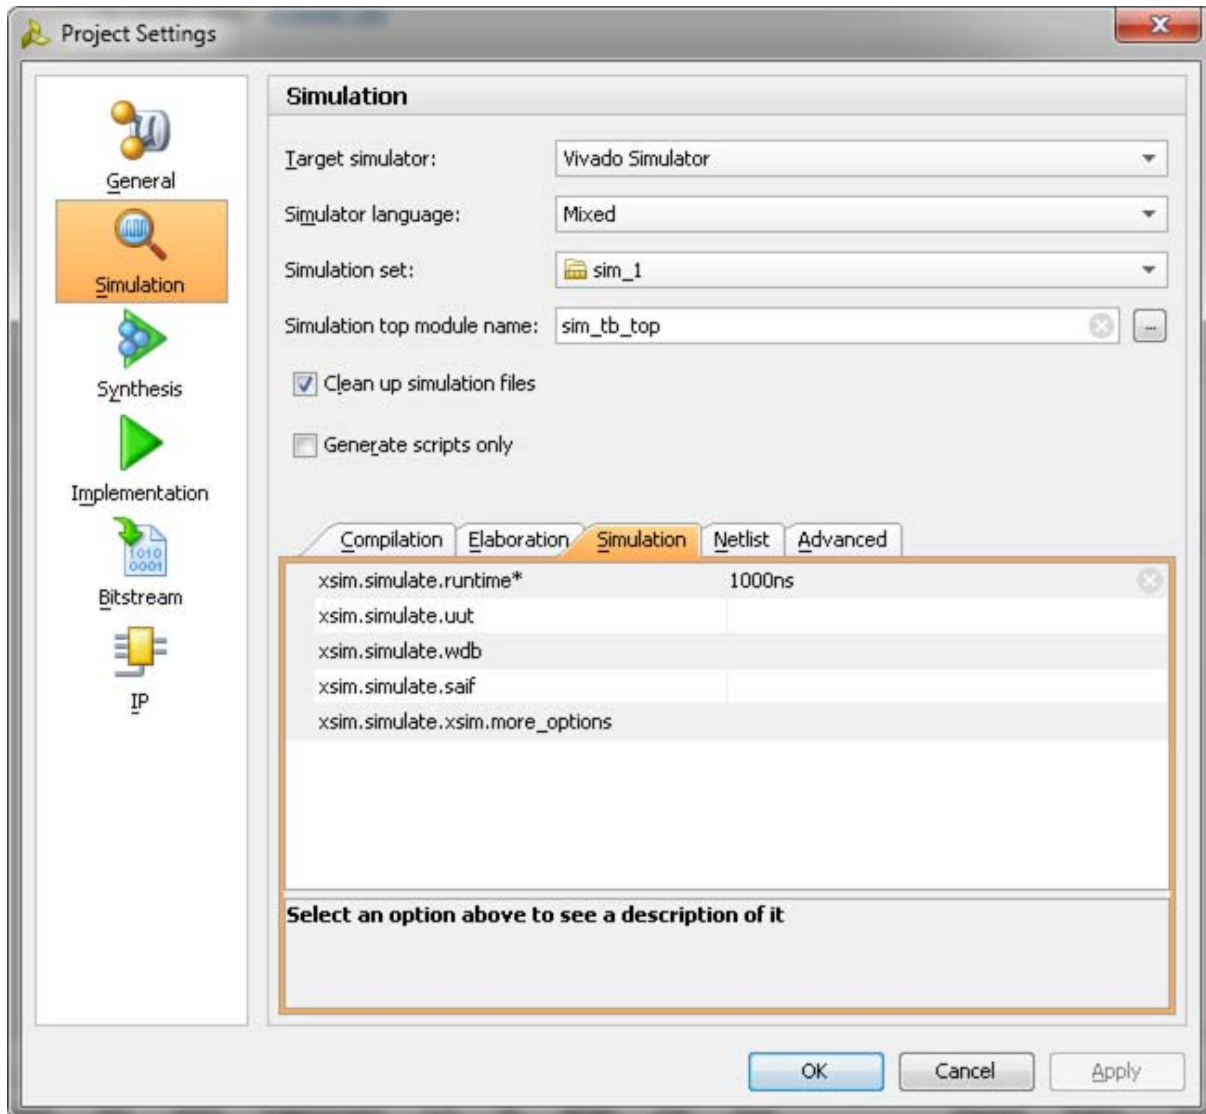


Figure 2-50: Simulation with Vivado Simulator

2. Under the **Simulation** tab as shown in Figure 2-50, set the `xsim.simulate.runtime` as 1 ms (there are simulation RTL directives which stop the simulation after certain period of time, which is less than 1 ms). Apply the settings and select **OK**.

3. In the **Flow Navigator** window, select **Run Simulation** and select **Run Behavioral Simulation** as shown in Figure 2-51.

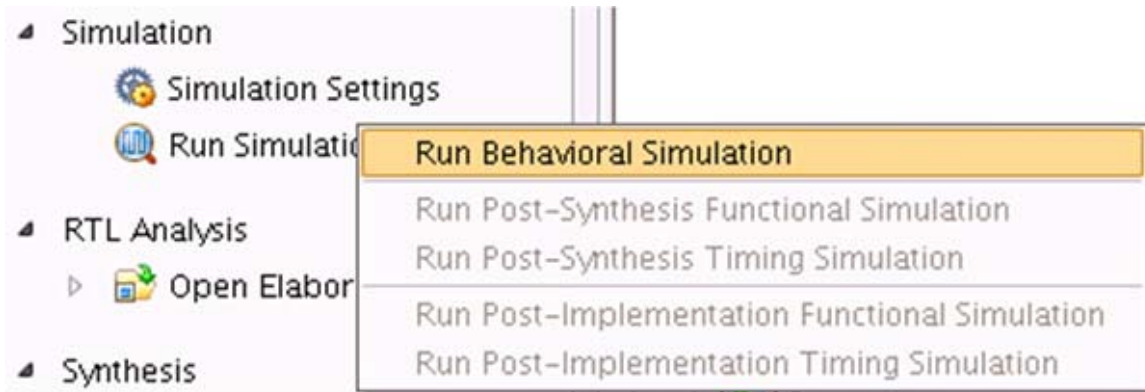


Figure 2-51: Run Behavioral Simulation

Simulation Flow Using QuestaSim

1. In the **Open IP Example Design** Vivado project, under **Flow Navigator** select **Simulation Settings**.
2. Select **Target simulator** as QuestaSim/ModelSim.
 - a. Browse to the **Compiled libraries location** and set the path on **Compiled libraries location** option.
 - b. Under the **Simulation** tab, set the `modelsim.simulate.runtime` to 1 ms (there are simulation RTL directives which stop the simulation after certain period of time, which is less than 1 ms), set `modelsim.simulate.vsim.more_options` to `-novopt` as shown in Figure 2-50.
3. Apply the settings and select **OK**.

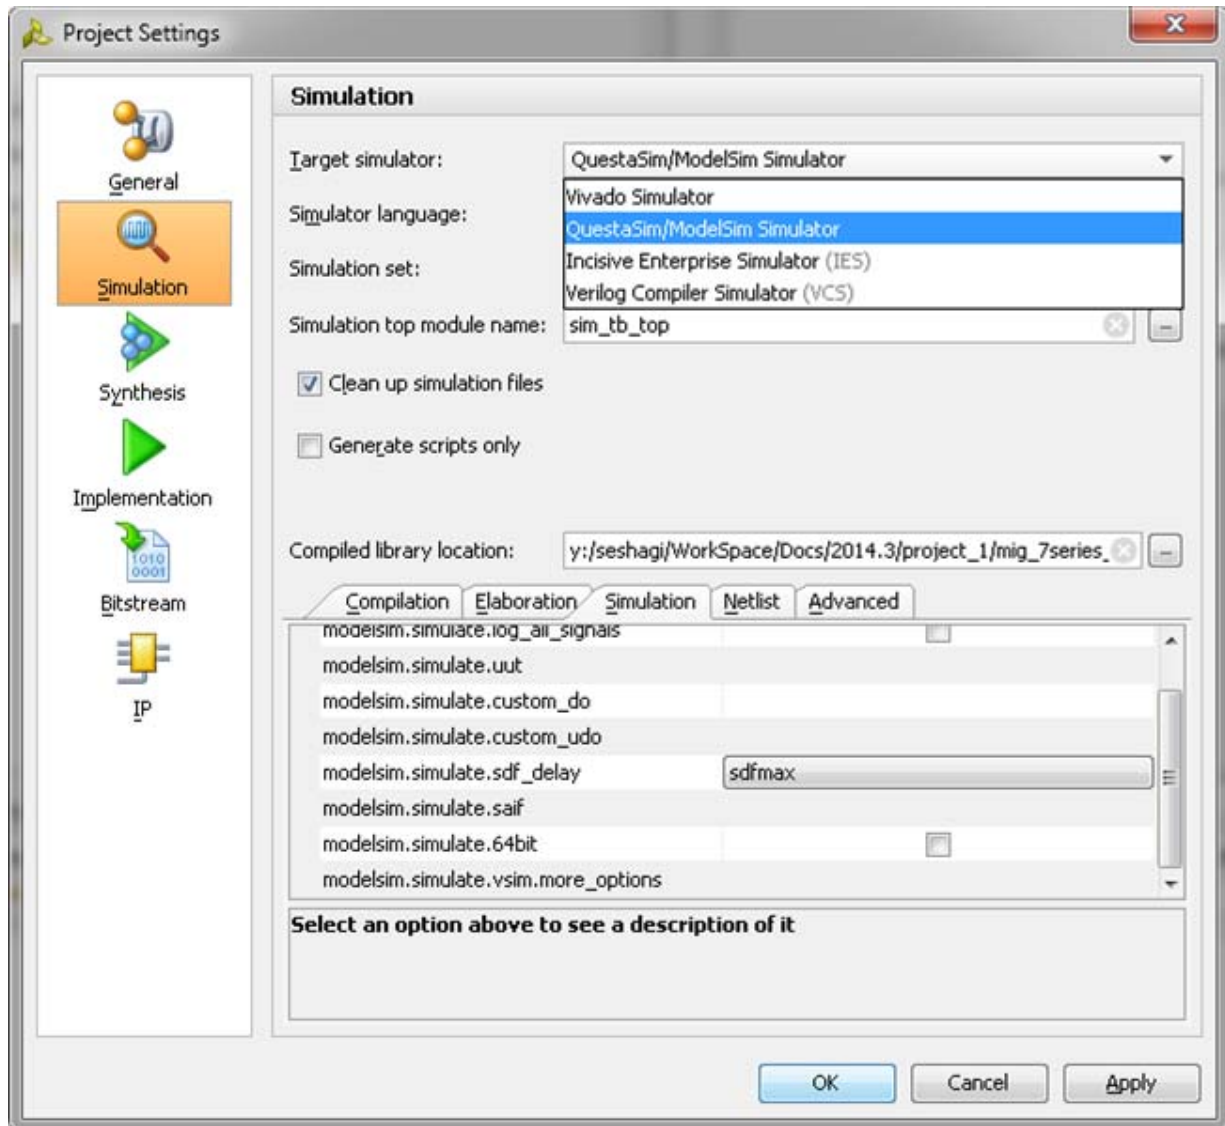


Figure 2-52: Simulation with QuestaSim

4. In the **Flow Navigator** window, select **Run Simulation** and select **Run Behavioral Simulation** as shown in Figure 2-51.
5. Vivado invokes QuestaSim and simulations are run in the QuestaSim tool. For more information, see the *Vivado Design Suite User Guide: Logic Simulation* (UG900) [Ref 8].

Simulation Flow Using VCS

1. In the **Open IP Example Design Vivado** project, under **Flow Navigator** select **Simulation Settings**.
2. Select **Target simulator** as Verilog Compiler Simulator (VCS).
 - a. Browse to the **Compiled libraries location** and set the path on **Compiles libraries location** option.

- b. Under the **Compilation** tab, set the `vcs.compile.vlogan.more_options` to `-sverilog`.
 - c. Under the **Simulation** tab, set the `vcs.simulate.runtime` to 1 ms (there are simulation RTL directives which stop the simulation after a certain period of time which is less than 1 ms) as shown in Figure 2-53.
3. Apply the settings and select **OK**.

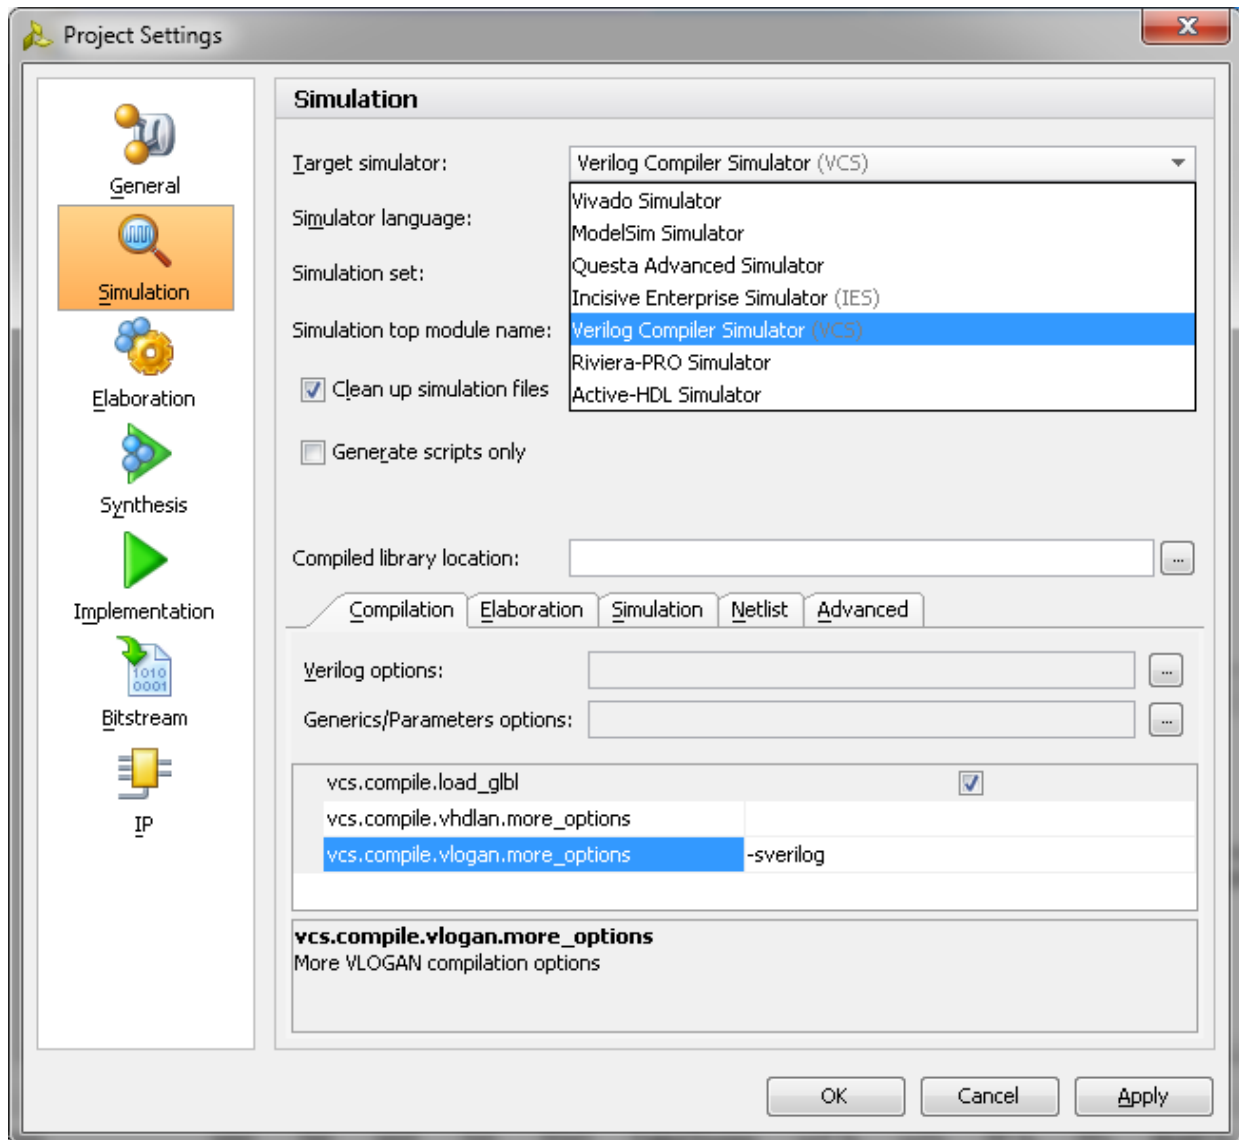


Figure 2-53: Simulation with VCS

4. In the **Flow Navigator** window, select **Run Simulation** and select **Run Behavioral Simulation** as shown in Figure 2-51.
5. Vivado invokes VCS and simulations are run in the VCS tool. For more information, see the *Vivado Design Suite User Guide: Logic Simulation* (UG900) [Ref 8].

Simulation Flow Using IES

1. In the **Open IP Example Design Vivado** project, under **Flow Navigator** select **Simulation Settings**.
2. Select **Target simulator** as Incisive Enterprise Simulator (IES).
 - a. Browse to the **Compiled libraries location** and set the path on **Compiles libraries location** option.
 - b. Under the **Compilation** tab, set the `ies.compile.ncvlog.more_options` to `-sv`.
 - c. Under the **Elaboration** tab, set the `ies.elaborate.ncelab.more_options` to `-namemap_mixgen`.
 - d. Under the **Simulation** tab, set the `ies.simulate.runtime` to 1 ms (there are simulation RTL directives which stop the simulation after certain period of time which is less than 1 ms) as shown in [Figure 2-54](#).

3. Apply the settings and select **OK**.

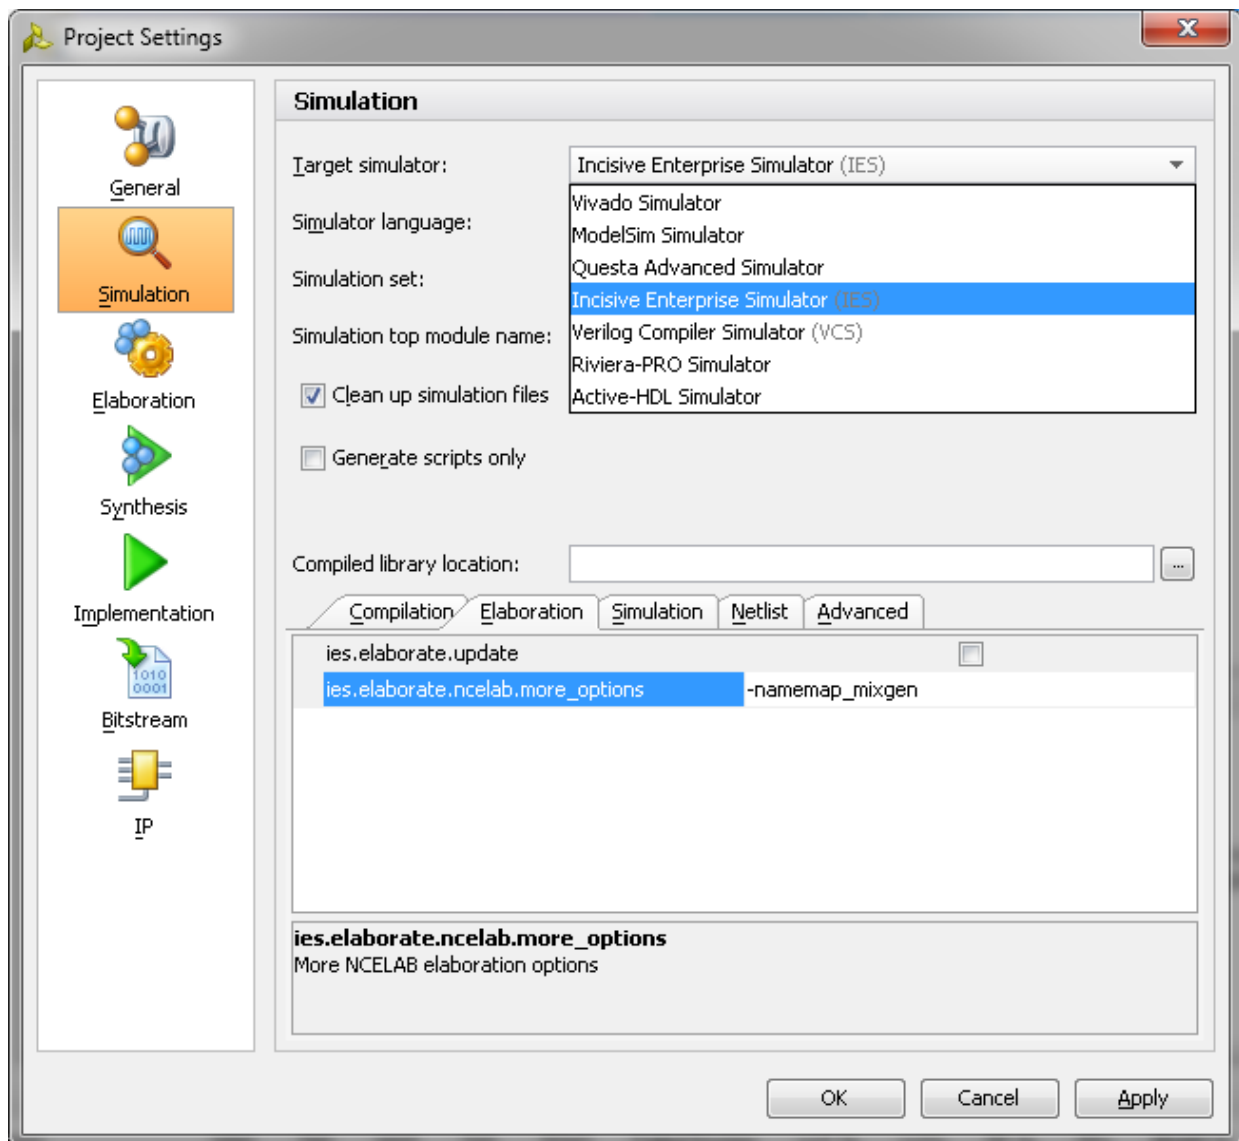


Figure 2-54: Simulation with IES

4. In the **Flow Navigator** window, select **Run Simulation** and select **Run Behavioral Simulation** as shown in [Figure 2-51](#).
5. Vivado invokes IES and simulations are run in the IES tool. For more information, see the *Vivado Design Suite User Guide: Logic Simulation* (UG900) [\[Ref 8\]](#).

Note: MIG does not generate memory model files for QDR II+ designs. Appropriate memory model should be added to the **Simulation Sources** under **Sources** window of the **Open IP Example Design** project.

For Samsung Memory models appropriate define values should be added to the memory model itself. Vivado settings does not allow applying define values explicitly on memory models.

For detailed information on setting up Xilinx libraries, see COMPLIB in the *Command Line Tools User Guide* (UG628) [Ref 17] and the *Synthesis and Simulation Design Guide* (UG626) [Ref 18]. For simulator tool support, see the *Zynq-7000 AP SoC and 7 Series Devices Memory Interface Solutions Data Sheet* (DS176) [Ref 1].

A working example design simulation completes memory initialization and runs traffic in response to the test bench stimulus. Successful completion of memory initialization and calibration results in the assertion of the `cal_done` signal. When this signal is asserted, the Traffic Generator takes control and begins executing writes and reads according to its parameterization.

Table 2-15 shows the signals and parameters of interest, respectively, during simulation.

Table 2-15: Signals of Interest During Simulation

Signal Name Usage	Description
tg_compare_error	This signal indicates a mismatch between the data written from the UI and data received during a read on the UI. This signal is a part of the example design. A single error asserts this signal; it is held until the design is reset.
tg_cmp_error	This signal indicates a mismatch between the data written from the UI and the data received during a read on the UI. This signal is part of the example design. This signal is asserted each time a data mismatch occurs.
app_wr_cmd	This signal indicates that the write address and write data are valid for a write command
app_wr_addr	This is the address provided for the write command
app_wr_data	This is the write data for a write command
app_wr_bw_n	This signal is the byte write control
app_rd_cmd	This signal indicates that the read address is valid for a read command
app_rd_addr	This address is provided for the read command
app_rd_data	This read data is returned from the memory device
app_rd_valid	This signal is asserted when app_rd_data is valid

Memory Initialization

The QDR II+ memories do not require an elaborate initialization procedure. However, you must ensure that the `DoFF_n` signal is provided to the memory as required by the vendor. The QDR II+ SRAM interface design provided by the MIG tool drives the `DoFF_n` signal from the FPGA. After the internal MMCM has locked after a wait period of 200 μ s, the `DoFF_n` signal is asserted High. After `DoFF_n` is asserted and following `CLK_STABLE` (set to 2,048) number of CQ clock cycles, commands are issued to the memory.

For memory devices that require the `DoFF_n` signal to be terminated at the memory and not be driven from the FPGA, you must perform the required termination procedure.

Calibration

Calibration completes read leveling, write calibration, and read enable calibration. This is completed over two stages. This sequence successfully completes when the `cal_done` signal is asserted. For more details, see [Physical Interface](#), page 324.

The first stage performs per-bit read leveling calibration. The data pattern used during this stage is `00FF00FF00FFFF00`. The data pattern is first written to the memory, as shown in [Figure 2-55](#).

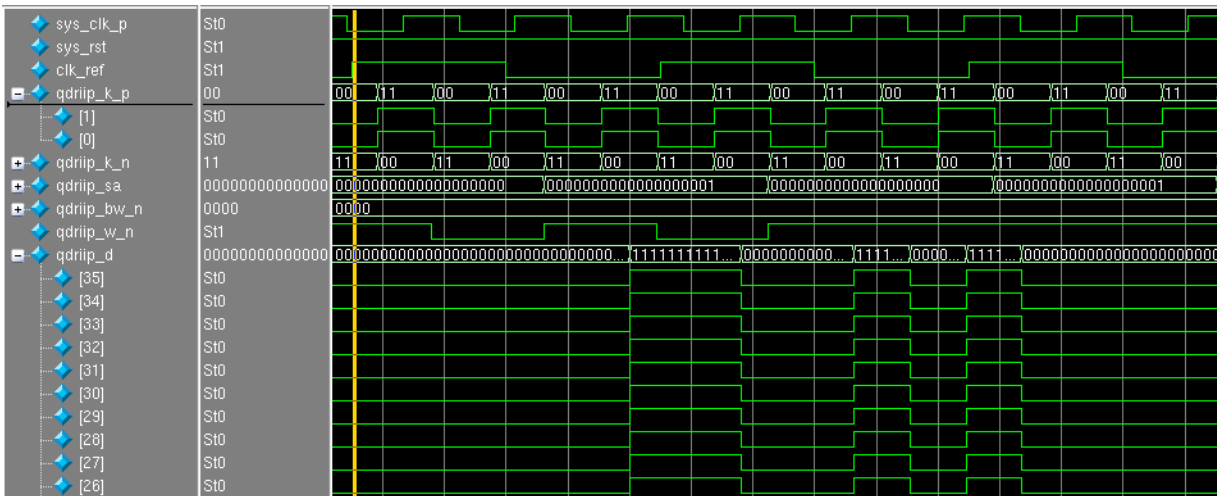


Figure 2-55: Writes for First Stage Read Calibration

This pattern is then continuously read back while the per-bit calibration is completed, as shown in [Figure 2-56](#).

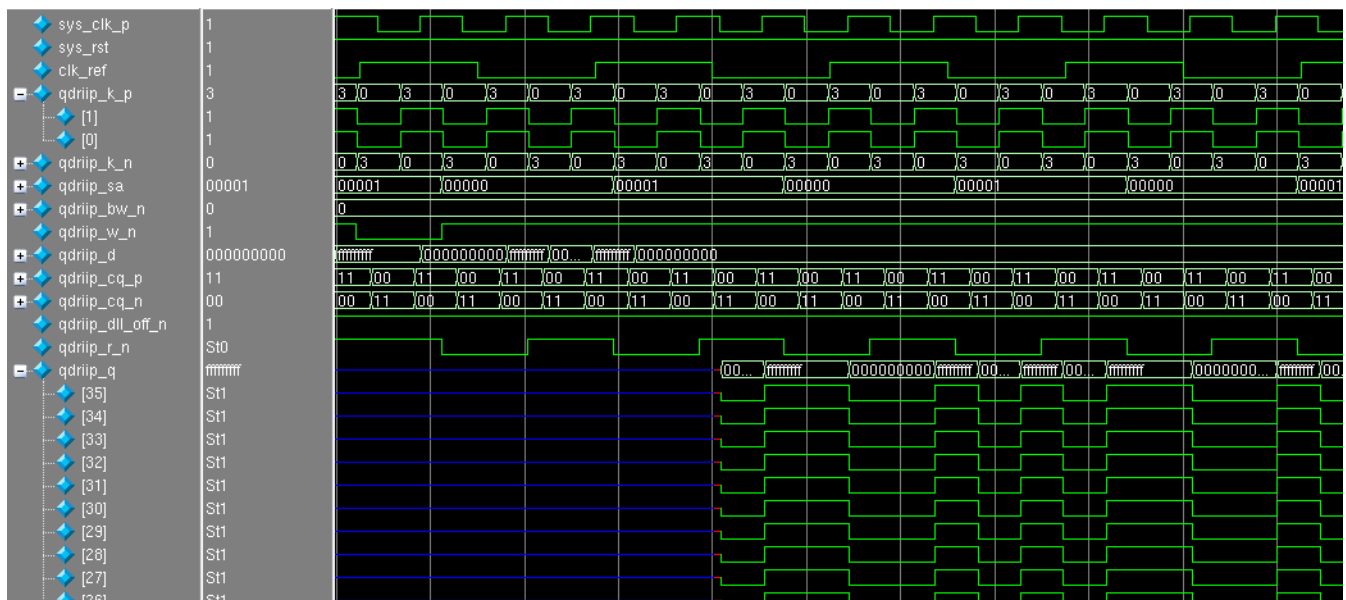


Figure 2-56: Reads for First Stage Read Calibration

The second stage performs a read enable calibration. The data pattern used during this stage is ..55..AA. The data pattern is first written to the memory, and then read back for the read enable calibration, as shown in Figure 2-57.

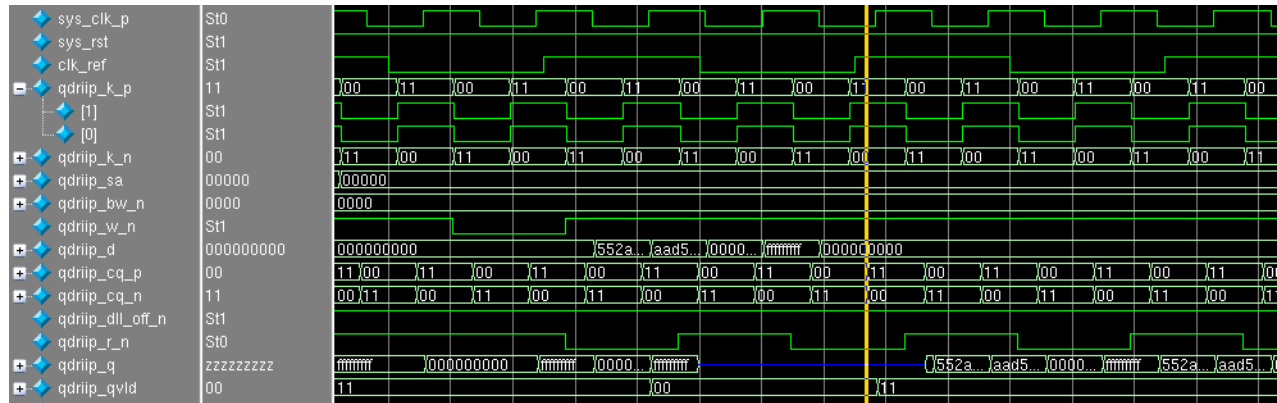


Figure 2-57: Write and Read for Second Stage Read Calibration

An additional read is performed so the read bus is driven to a different value. This is mostly required in hardware to make sure that the read calibration can distinguish the correct data pattern.

After second stage calibration completes, cal_done is asserted, signifying successful completion of the calibration process.

Test Bench

After cal_done is asserted, the test bench takes control, writing to and reading from the memory. The data written is compared to the data read back. Any mismatches trigger an assertion of the error signal. Figure 2-58 shows a successful implementation of the test bench with no assertions on error.

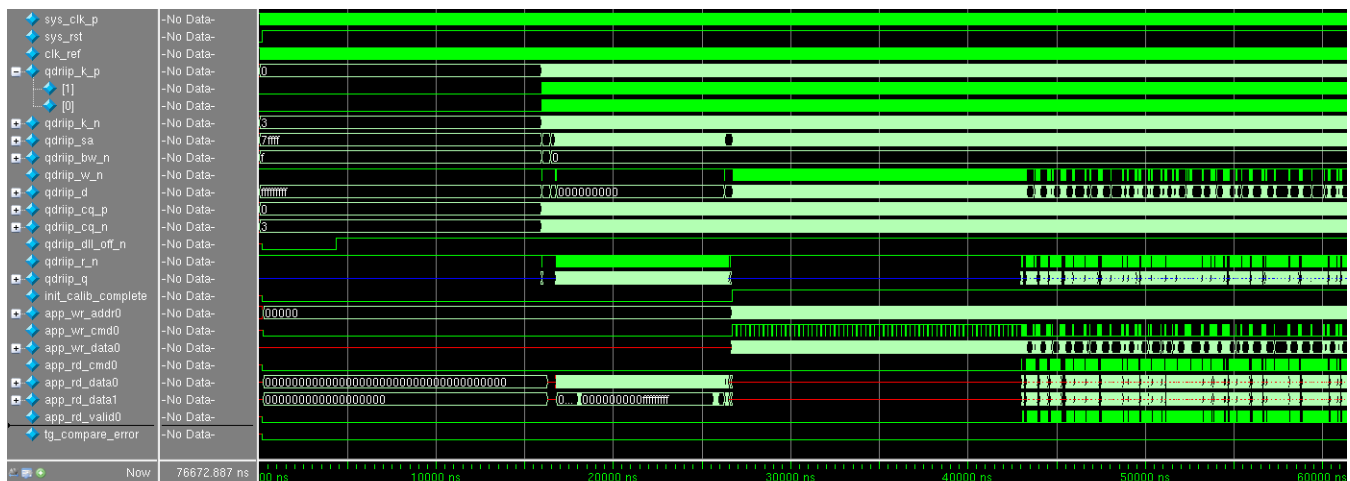


Figure 2-58: Test Bench Operation After Completion of Calibration

Proper Write and Read Commands

When sending write and read commands, you must properly assert and deassert the corresponding UI inputs. See [User Interface, page 319](#) and [Interfacing with the Core through the Client Interface, page 321](#) for full details. The test bench design provided within the example design can be used as a further source of proper behavior on the UI.

To debug data errors on the QDR II+ SRAM interface, it is necessary to pull the UI signals into the simulation waveform.

In the QuestaSim Instance window, highlight **u_ip_top** to display the necessary UI signals in the **Objects** window, as shown in [Figure 2-59](#). Highlight the user interface signals noted in [Table 2-15, page 361](#), right-click, and select **Add > To Wave > Selected Signals**.

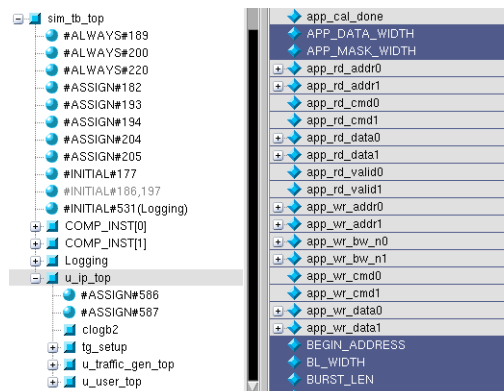


Figure 2-59: QuestaSim Instance Window

[Figure 2-60](#) and [Figure 2-61](#) show example waveforms of a write and read on both the user interface and the QDR II+ interface.

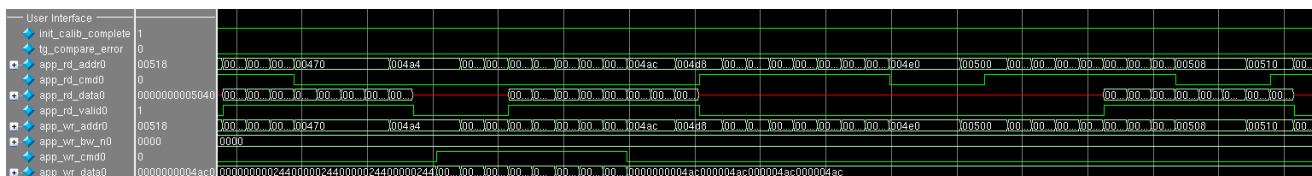


Figure 2-60: User Interface Write and Read

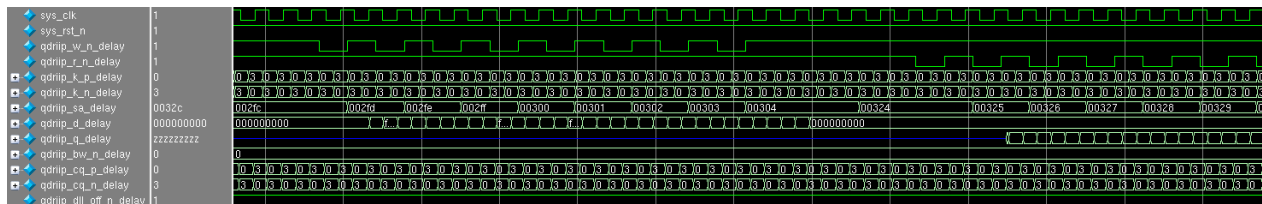


Figure 2-61: QDR II+ Interface Write and Read

Synthesis and Implementation Debug

Figure 2-62 shows the debug flow for synthesis and implementation.

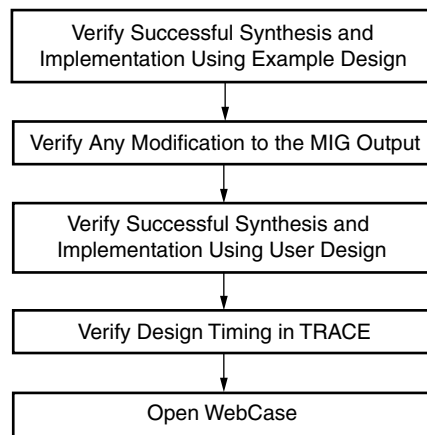


Figure 2-62: **Synthesis and Implementation Debug Flowchart**



IMPORTANT: *The standard synthesis flow for Synplify is not supported for the core.*

Verify Successful Synthesis and Implementation

The example design and user design generated by the MIG tool include synthesis/implementation script files and .xdc files. These files should be used to properly synthesize and implement the targeted design and generate a working bitstream.

Verify Modifications to the MIG Tool Output

The MIG tool allows you to select the FPGA banks for the memory interface signals. Based on the banks selected, the MIG tool outputs a XDC with all required location constraints. This file is located in both the `example_design/par` and `user_design/constraints` directories and should not be modified.

The MIG tool outputs open source RTL code parameterized by top-level HDL parameters. These parameters are set by the MIG tool and should not be modified manually. If changes are required, such as decreasing or increasing the frequency, the MIG tool should be rerun to create an updated design. Manual modifications are not supported and should be verified independently in behavioral simulation, synthesis, and implementation.

Identifying and Analyzing Timing Failures

The MIG tool QDR II+ SRAM designs have been verified to meet timing using the example design across a wide range of configurations. However, timing violations might occur, such as when integrating the MIG tool design with your specific application logic.

Any timing violations that are encountered must be isolated. The timing report output by TRACE (.twx/.twr) should be analyzed to determine if the failing paths exist in the MIG tool QDR II+ SRAM design or the UI (backend application) to the MIG tool design. If failures are encountered, you must ensure the build options (that is, XST, MAP, PAR) specified in the file are used.

If failures still exist, Xilinx has many resources available to aid in closing timing. The PlanAhead™ tool [Ref 19] improves performance and quality of the entire design. The *Xilinx Timing Constraints User Guide* (UG612) [Ref 15] provides valuable information on all available Xilinx constraints.

Hardware Debug

Figure 2-63 shows the debug flow for hardware.

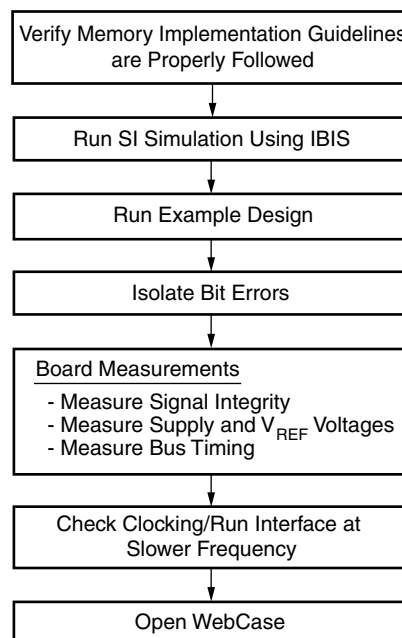


Figure 2-63: Hardware Debug Flowchart

Clocking

The external clock source should be measured to ensure frequency, stability (jitter), and usage of the expected FPGA pin. You must ensure that the design follows all clocking guidelines. If clocking guidelines have been followed, the interface should be run at a slower speed. Not all designs or boards can accommodate slower speeds. Lowering the frequency increases the marginal setup or hold time, or both, due to PCB trace mismatch, poor signal integrity, or excessive loading. When lowering the frequency, the MIG tool should be rerun to regenerate the design with the lower clock frequency. Portions of the calibration logic are sensitive to the CLK_PERIOD parameter; thus, manual modification of the parameter is discouraged.

Verify Board Pinout

You should ensure that the pinout provided by the MIG tool is used without modification. Then, the board schematic should be compared to the `<design_name>.pad` report generated by PAR. This step ensures that the board pinout matches the pins assigned in the implemented design.

Run Signal Integrity Simulation with IBIS Models

To verify that board layout guidelines have been followed, signal integrity simulations must be run using the I/O buffer information specification (IBIS). These simulations should always be run for both pre-board and post-board layouts. The purpose of running these simulations is to confirm the signal integrity on the board.

The ML561 Hardware-Simulation Correlation chapter of the *Virtex-5 FPGA ML561 Memory Interfaces Development Board User Guide* (UG199) [Ref 20] can be used as a guideline. This chapter provides a detailed look at signal integrity correlation results for the ML561 board. It can be used as an example for signal integrity analysis. It also provides steps to create a design-specific IBIS model to aid in setting up the simulations. While this guide is specific to Virtex-5 devices and the ML561 development board, the principles therein can be applied to MIG designs with 7 series FPGAs.

Run the Example Design

The example design provided with the MIG tool is a fully verified design that can be used to test the memory interface on the board. It rules out any issues with the backend logic interfacing with the MIG tool core. In addition, the test bench provided by the MIG tool can be modified to send out different data patterns that test different board-level concerns.

Debugging Common Hardware Issues

When calibration failures and data errors are encountered in hardware, the Vivado logic analyzer feature should be used to analyze the behavior of MIG tool core signals. For more information about the Vivado logic analyzer, software is available in the *Vivado Design Suite User Guide: Programming and Debugging* (UG908) [Ref 16].

A good starting point in hardware debug is to load the provided `example_design` onto the board in question. This is a known working solution with a test bench design that checks for data errors. This design should complete successfully with the assertion of `cal_done` and no assertions of `compare_error`. Assertion of `cal_done` signifies successful completion of calibration while no assertions of `compare_error` signifies that the data is written to and read from the memory compare with no data errors.

The `cmp_err` signal can be used to indicate if a single error was encountered or if multiple errors are encountered. With each error encountered, `cmp_err` is asserted so that the data can be manually inspected to help track down any issues.

Isolating Bit Errors

An important hardware debug step is to try to isolate when and where the bit errors occur. Looking at the bit errors, these should be identified:

- Are errors seen on data bits belonging to certain CQ clock groups?
- Are errors seen on accesses to certain addresses of memory?
- Do the errors only occur for certain data patterns or sequences?

This can indicate a shorted or open connection on the PCB. This can also indicate an SSO or crosstalk issue. It might be necessary to isolate whether the data corruption is due to writes or reads. This case can be difficult to determine because if writes are the cause, read back of the data is bad as well. In addition, issues with control or address timing affect both writes and reads.

Some experiments that can be tried to isolate the issue are:

- If the errors are intermittent, have the design issue a small initial number of writes, followed by continuous reads from those locations. If the reads intermittently yield bad data, there is a potential read issue.
- Check/vary only write timing:
 - Check that the external termination resistors are populated on the PCB.
 - Use ODELAY to vary the phase of D relative to the K clocks.
- Vary only read timing:
 - Check the IDELAY values after calibration. Look for variations between IDELAY values. IDELAY values should be very similar for Qs in the same CQS group.
 - Vary the IDELAY taps after calibration for the bits that are returning bad data.

This affects only the read capture timing.

Debugging the Core

The Debug port is a set of input and output signals that either provide status (outputs) or allow you to make adjustments as the design is operating (inputs). When generating the QDR II+ SRAM design through the MIG tool, an option is provided to turn the Debug Port on or off. When the Debug port is turned off, the outputs of the debug port are still generated but the inputs are ignored.

When the Debug port is turned on, the inputs are valid and must be driven to a logical value. Driving the signals incorrectly on the debug port might cause the design to fail or have less read data capture margin.

When running the core in hardware, a few key signals should be inspected to determine the status of the design. The `dbg_phy_status` bus described in [Table 2-16](#) consists of status bits for various stages of calibration. Checking the `dbg_phy_status` bus gives initial information that can aid in debugging an issue that might arise, determining which portion of the design to look at, or looking for some common issues.

Table 2-16: Physical Layer Simple Status Bus Description

Debug Port Signal	Name	Description	If Issues Arise
<code>dbg_phy_status[0]</code>	<code>rst_wr_clk</code>	FPGA logic reset based on PLL lock and system input reset	If this signal stays asserted, check your clock source and system reset input
<code>dbg_phy_status[1]</code>	<code>io_fifo_rden_cal_done</code> & <code>po_ck_addr_cmd_delay_done</code>	I/O FIFO initialization to ensure the I/O FIFOs are in an almost full condition and the phaser out delay to provide the 90° phase shift to address/control signals are done	Check if the PHY control ready signal is asserted
<code>dbg_phy_status[2]</code>	<code>init_done</code>	QDR II+ SRAM initialization sequence is complete	N/A ⁽¹⁾
<code>dbg_phy_status[3]</code>	<code>cal_stage1_start</code>	Stage 1 read calibration start signal	N/A
<code>dbg_phy_status[4]</code>	<code>edge_adv_cal_done</code>	Stage 1 calibration is complete and edge_adv calibration is complete	Stage 1 calibration did not happen right. Make sure valid read data is seen during stage1 calibration.
<code>dbg_phy_status[5]</code>	<code>cal_stage2_start</code>	Latency calibration start signal after <code>pi_edge_adv</code> calibration is completed.	If this signal does not go High, then stage 1 has not completed. Make sure the expected data is being returned from the memory.
<code>dbg_phy_status[6]</code>	<code>cal_stage2_start</code> & <code>cal_done</code>	Latency calibration start signal	N/A
<code>dbg_phy_status[7]</code>	<code>Cal_done</code>	Calibration complete	N/A

Notes:

1. N/A indicates that as long as previous stages have completed, this stage is also completed.

The read calibration results are provided as part of the Debug port as various output signals. These signals can be used to capture and evaluate the read calibration results.

Read calibration uses the IODELAY to align the capture clock in the data valid window for captured data. The algorithm shifts the IODELAY values and looks for edges of the data valid window on a per-byte basis as part of the calibration procedure.

Margin Check

Debug signals are provided to move either clocks or data to verify functionality and to confirm sufficient margin is available for reliable operation. These signals can also be used to check for signal integrity issues affecting a subset of signals or to deal with trace length mismatches on the board. To verify read window margin, enable the debug port when generating a design in the MIG tool and use the provided example design. The steps to follow are:

1. Open the Vivado hardware session and program the FPGA under test with generated BIT and LTX files.
2. Verify that calibration completes (`init_calib_complete` should be asserted) and no errors currently exist in the example design (both `tg_compare_error` and `dbg_cmp_err` should be Low).
3. To measure margin with PRBS8 pattern, set VIO signals with the listed values in the `traffic_gen_top` instance in `example_top`:

```
vio_modify_enable = 'd1
vio_data_mode_value = 'd7
vio_addr_mode_value = 'd3
vio_instr_mode_value = 'd4
vio_bl_mode_value = 'd2
vio_fixed_bl_value = 'd128
vio_fixed_instr_value = 'd1
vio_data_mask_gen = 'd0
```

4. Assert `vio_dbg_clear_error` or system reset.
5. Select a given byte lane using `dbg_byte_sel`.
6. Observe the tap values on PHASER_IN for the selected byte lane using `dbg_pi_counter_read_val`.
7. Increment the tap values on PHASER_IN until an error occurs (`tg_compare_error` should be asserted) using `dbg_pi_f_inc`. Record how many phaser taps it took to get an error from the starting location. This value is the tap counts to reach one side of the window for the entire byte lane.
8. Decrease the tap values on PHASER_IN using `dbg_pi_f_dec` back to the starting value.
9. Clear the error recorded previously by asserting `vio_dbg_clear_error`.

10. Decrement the PHASER_IN taps using `dbg_pi_f_dec` to find the other edge of the window until another error occurs (`tg_compare_error` should be asserted).
11. Record those results, return the PHASER_IN taps to the starting location, and clear the error again (`vio_dbg_clear_error`).

This technique uses the error signal that is common for the entire interface, so any marginality in another bit or byte not being tested might affect the results. For better results, a per-bit error signal should be used. PHASER_IN taps need to be converted into a common unit of time to properly analyze the results.

Automated Margin Check

Manually moving taps to verify functionality is useful to check issue bits or bytes, but it can be difficult to step through an entire interface looking for issues. For this reason, the QDR II+ SRAM Memory Interface Debug port contains automated window checking that can be used to step through the entire interface. A state machine is used to take control of the debug port signals and report results of the margin found per-bit. Currently, the automated window check only uses PHASER_IN to check window sizes, so depending on the tap values after calibration, the left edge of the read data window might not be found properly.

To measure margin with PRBS8 traffic pattern, set VIO signals with the listed values in the `traffic_gen_top` instance in `example_top`:

```
vio_modify_enable = 'd1
vio_data_mode_value = 'd7
vio_addr_mode_value = 'd3
vio_instr_mode_value = 'd4
vio_bl_mode_value = 'd2
vio_fixed_bl_value = 'd128
vio_fixed_instr_value = 'd1
vio_data_mask_gen = 'd0
```

Next, assert `vio_dbg_clear_error` or assert system reset before proceeding with automated margin check. The steps to follow for automated margin check include:

1. Start automated window check by issuing a single pulse on the VIO signal `dbg_win_start`.
2. The VIO signal `dbg_win_active` indicates that the automated window check is in progress. The signals `dbg_pi_f_inc` and `dbg_pi_f_dec` must not be used when `dbg_win_active` is asserted.

3. The current bit and byte being measured are indicated by the VIO signals `dbg_win_current_bit` and `dbg_win_current_byte`, respectively.
4. To get the left and right tap counts for a completed bit, select the desired bit using VIO signal `dbg_win_bit_select` and observe the results on `dbg_win_left_ram_out` and `dbg_win_right_ram_out`, respectively.

Table 2-17 lists the signals associated with this automated window checking functionality.

Table 2-17: Debug Window Port Signals

Signal	Description
<code>dbg_win_start</code>	Single pulse that starts the <code>chk_win</code> state machine. Use the Vivado logic debug VIO module to control this.
<code>dbg_win_bit_select[6:0]</code>	Manual bit selection for reporting of results. The results are provided on <code>dbg_win_left_ram_out</code> and <code>dbg_win_right_ram_out</code> for the bit indicated.
<code>dbg_win_active</code>	Flag to indicate <code>chk_win</code> is active and measuring read window margins. While active, the state machine has control over the debug port signals.
<code>vio_dbg_clear_error</code>	Clear error control signal controlled by <code>chk_win</code> .
<code>dbg_win_current_bit[6:0]</code>	Feedback to indicate which bit is currently being monitored during automatic window checking.
<code>dbg_win_current_byte[3:0]</code>	Feedback to indicate which byte is currently being monitored (and used to select the byte lane controls with <code>dbg_byte_sel</code>).
<code>dbg_win_left_ram_out [WIN_SIZE – 1:0]</code>	PHASER_IN tap count to reach the left edge of the read window for a given bit.
<code>dbg_win_right_ram_out [WIN_SIZE – 1:0]</code>	PHASER_IN tap count to reach the right edge of the read window for a given bit.
<code>dbg_pi_f_inc</code>	<code>chk_win</code> control signal to increment PHASER_IN. This signal should be used only when <code>dbg_win_active</code> is deasserted.
<code>dbg_pi_f_dec</code>	<code>chk_win</code> control signal to decrease PHASER_IN. This signal should be used only when <code>dbg_win_active</code> is deasserted.

DEBUG_PORT Signals

The top-level wrapper, `user_top`, provides several output signals that can be used to debug the core if the debug option is checked when generating the design through the MIG tool. Each debug signal output begins with `dbg_`. The `DEBUG_PORT` parameter is always set to OFF in the `sim_tb_top` module of the `sim` folder, which disables the debug option for functional simulations. These signals and their associated data are described in Table 2-18.

Table 2-18: DEBUG_PORT Signal Descriptions

Signal	Direction	Description
dbg_phy_wr_cmd_n[1:0]	Output	This active-Low signal is the internal wr_cmd used for debug with the Vivado logic analyzer feature.
dbg_phy_rd_cmd_n[1:0]	Output	This active-Low signal is the internal rd_cmd used for debug with the Vivado logic analyzer feature.
dbg_phy_addr[ADDR_WIDTH × 4 – 1:0]	Output	Control address bus used for debug with the Vivado logic analyzer feature.
dbg_phy_wr_data[DATA_WIDTH × 4 – 1:0]	Output	Data being written that is used for debug with the Vivado logic analyzer feature.
dbg_phy_init_wr_only	Input	When this input is High, the state machine in qdr_phy_write_init_sm stays at the write calibration pattern to QDR II+ memory. This verifies calibration write timing. This signal must be Low for normal operation.
dbg_phy_init_rd_only	input	When this input is High, the state machine in qdr_phy_write_init_sm stays at read calibration state from QDR II+ memory. This verifies calibration read timing and returned calibration data. This signal must be Low for normal operation.
dbg_byte_sel	Input	This input selects the corresponding byte lane and you set the phaser/IDELAY tap controls
dbg_pi_f_inc	Input	This signal increments the PHASER_IN generated ISERDES clk that is used to capture rising data
dbg_pi_f_dec	Input	This signal decrements the PHASER_IN generated ISERDES clk that is used to capture rising data
dbg_po_f_inc	Input	This signal increments the PHASER_OUT generated OSERDES clk that is used to capture falling data
dbg_po_f_dec	Input	This signal increments the PHASER_OUT generated OSERDES clk that is used to capture falling data
dbg_phy_pi_fine_cnt	Output	This output indicates the current PHASER_IN tap count position
dbg_phy_po_fine_cnt	Output	This output indicates the current PHASER_OUT tap count position
dbg_cq_num	Output	This signal indicates the current CQ/CQ# being calibrated
dbg_q_bit	Output	This signal indicates the current Q being calibrated
dbg_valid_lat[4:0]	Output	Latency in cycles of the delayed read command
dbg_q_tapcnt	Output	Current Q tap setting for each device
dbg_inc_latency	Output	This output indicates that the latency of the corresponding byte lane was increased to ensure proper alignment of the read data to the user interface.
dbg_error_max_latency	Output	This signal indicates that the latency could not be measured before the counter overflowed. Each device has one error bit.

Table 2-18: **DEBUG_PORT** Signal Descriptions (*Cont'd*)

Signal	Direction	Description
dbg_error_adj_latency	Output	This signal indicates that the target PHY_LATENCY could not be achieved
dbg_align_rd0 [DATA_WIDTH – 1:0]	Output	This bus shows the captured output of the first rising data
dbg_align_rd1 [DATA_WIDTH – 1:0]	Output	This bus shows the captured output of the second rising data
dbg_align_fd0 [DATA_WIDTH – 1:0]	Output	This bus shows the captured output of the first falling data
dbg_align_fd1 [DATA_WIDTH – 1:0]	Output	This bus shows the captured output of the second falling data
dbg_cmplx_rd_loop	Input	When High, complex read level continues forever.
dbg_cmplx_rd_lane[2:0]	Input	Selects the lane to hang on when dbg_cmplx_rd_loop == 'b1.
dbg_K_left_shift_right	Input	Shifts the location of the left edge sent to the POC right.
dbg_K_right_shift_left	Input	Shifts the location of the right edge sent to the POC left.
dbg_cmplx_wr_loop	Input	When High, complex write pattern is written indefinitely.

Write Init Debug Signals

Table 2-19 indicates the mapping between the write init debug signals on the dbg_wr_init bus and debug signals in the PHY. All signals are found within the qdr_phy_write_init_sm module and are all valid in the clk domain.

Table 2-19: **Write Init Debug Signal Map**

Bits	PHY Signal Name	Description
dbg_wr_init[14:0]	phy_init_r	One hot state machine.
dbg_wr_init[18:15]	phase_valid	Per byte lane comparison results.
dbg_wr_init[22:19]	lanes_solid_r	Comparison success post threshold per lane.
dbg_wr_init[23]	po_delay_done	Phaser out adjustment complete.
dbg_wr_init[24]	rdlvl_stg1_done	Read level cycle complete.
dbg_wr_init[25]	rdlvl_stg1_start	Start read level calibration.
dbg_wr_init[26]	edge_adv_cal_start	Start cycle (edge) alignment.
dbg_wr_init[27]	edge_adv_cal_done	Edge alignment complete.
dbg_wr_init[28]	cal_stage2_start	Start latency calibration.
dbg_wr_init[29]	read_cal_done	Latency calibration complete.
dbg_wr_init[30]	rst_stg1_r	Reset read level block.
dbg_wr_init[31]	rst_stg2_r	Reset edge and latency calibration logic.
dbg_wr_init[32]	suppress_stg1	All bytes successfully read leveled. Suppress further read levels.

Table 2-19: Write Init Debug Signal Map (Cont'd)

Bits	PHY Signal Name	Description
dbg_wr_init[36:33]	seen_valid_r	Successful read level recorded per lane.
dbg_wr_init[37]	qdr_edge_adv_err	Edge advance timeout.
dbg_wr_init[38]	qdr_stg2_err	Latency calibration timeout.
dbg_wr_init[39]	rst_samp_cnt	Reset sample counters.

Read Stage 1 Calibration Debug Signals

Table 2-20 indicates the mapping between bits within the `dbg_rd_stage1_cal` bus and debug signals in the PHY. All signals are found within the `qdr_rld_phy_rdlvl` module and are all valid in the `clk` domain.

Table 2-20: Read Stage 1 Debug Signal Map

Bits	PHY Signal Name	Description
dbg_rd_stage1_cal[2:0]	sm_r	Read level main state machine.
dbg_rd_stage1_cal[7:6]	seq_sm_r	Read level sequence state bits.
dbg_rd_stage1_cal[14:12]	rdlvl_work_lane_r	Lane currently undergoing read level calibration.
dbg_rd_stage1_cal[15]	rdlvl_stg1_start	Write side signal causing read level block to start.
dbg_rd_stage1_cal[16]	rdlvl_stg1_done	Read level block signals completion.
dbg_rd_stage1_cal[17]	rdlvl_stg1_start	Write side signal causing read level to copy first lane result across all lanes.
dbg_rd_stage1_cal[25:18]	rdlvl_stg1_cal_bytes_r	Lanes for which write side is requesting calibration.
dbg_rd_stage1_cal[31]	cmplx_rdc_start	Write side signal causing read level to do complex cal.
dbg_rd_stage1_cal[32]	cmplx_rd_data_valid	Write side signal informing read level that complex read data is valid.
dbg_rd_stage1_cal[48:41]	rd_data_comp_r	Per byte comparison results for complex calibration.
dbg_rd_stage1_cal[56:49]	iserdes_comp_r	Per byte comparison results for simple calibration.
dbg_rd_stage1_cal[57]	rdlvl_lane_match	Overall comparison result for both simple and complex.
dbg_rd_stage1_cal[66:61]	largest_left_edge	Phaser in taps when the right most left edge was found.
dbg_rd_stage1_cal[72:67]	smallest_right_edge	Phaser in taps when the left most right edge was found.
dbg_rd_stage1_cal[78:73]	mem_out_dec	Output of static compensation ROM.
dbg_rd_stage1_cal[81]	rdlvl_pi_stg2_f_incdec	Controls directing of phaser in stepping.
dbg_rd_stage1_cal[82]	rdlvl_pi_en_stg2_f	Phaser in step command.
dbg_rd_stage1_cal[85:83]	pi_lane_r	Lane to which phaser in commands apply.
dbg_rd_stage1_cal[91]	prev_match_r	Previous sample matched.
dbg_rd_stage1_cal[96:92]	match_out_r	idelay of last detected invalid to valid match transition.
dbg_rd_stage1_cal[102:97]	samp_cnt_r	Sample counter.
dbg_rd_stage1_cal[108:103]	samps_match_r	Cumulative sample match count.

Table 2-20: Read Stage 1 Debug Signal Map (Cont'd)

Bits	PHY Signal Name	Description
dbg_rd_stage1_cal[109]	samp_result_held_r	Result from previous sample cycle.
dbg_rd_stage1_cal[154+:40]	simp_dlyval_r	Five bits per lane dlyval results for simple pattern.
dbg_rd_stage1_cal[194+:48]	simp_left_r	Six bits per lane left results for simple pattern.
dbg_rd_stage1_cal[194+:48]	simp_right_r	Six bits per lane right results for simple pattern.
dbg_rd_stage1_cal[194+:48]	simp_center_r	Six bits per lane center results for simple pattern.
dbg_rd_stage1_cal[378+:48]	cmplx_left_r	Six bits per lane left results for complex pattern.
dbg_rd_stage1_cal[426+:48]	cmplx_right_r	Six bits per lane right results for complex pattern.
dbg_rd_stage1_cal[474+:48]	cmplx_center_r	Six bits per lane center results for complex pattern.
dbg_rd_stage1_cal[682+:48]	simp_left_63	Left edge result is 63 for simple pattern, one bit per lane.
dbg_rd_stage1_cal[690+:48]	cmplx_left_63	Left edge result is 63 for complex pattern, one bit per lane.
dbg_rd_stage1_cal[698+:48]	simp_right_63	Right edge result is 63 for simple pattern, one bit per lane.
dbg_rd_stage1_cal[706+:48]	cmplx_right_63	Right edge result is 63 for complex pattern, one bit per lane.
dbg_rd_stage1_cal[522+:72]	rd_data_lane_r	Aligned PHY data for lane currently undergoing calibration.
dbg_rd_stage1_cal[594+:72]	iserdes_lane_r	Raw PHY data for lane currently undergoing calibration.
dbg_rd_stage1_cal[714+:72]	cmplx_rd_burst_bytes	Complex data to compare against memory read data.
dbg_rd_stage1_cal[786+:9]	bit_comp	Cumulative compare per bit.
dbg_rd_stage1_cal[795+:8]	simp_min_eye_r	Minimum eye detected per lane simple pattern.
dbg_rd_stage1_cal[803+:8]	cmplx_min_eye_r	Minimum eye detected per lane complex pattern.

Read Stage 2 Calibration Debug

Table 2-21 indicates the mapping between bits within the dbg_rd_stage2_cal bus and debug signals in the PHY. All signals are found within the qdr_rld_phy_read_stage2_cal module and are all valid in the clk domain.

Table 2-21: Read Stage 2 Debug Signal Map

Bits	PHY Signal Name	Description
dbg_stage2_cal[0]	en_mem_latency	Signal to enable latency measurement
dbg_stage2_cal[5:1]	latency_cntr[0]	Indicates the latency for the first byte lane in the interface
dbg_stage2_cal[6]	rd_cmd	Internal rd_cmd for latency calibration
dbg_stage2_cal[7]	latency_measured[0]	Indicates latency has been measured for byte lane 0
dbg_stage2_cal[8]	bl4_rd_cmd_int	Indicates calibrating for burst length of 4 data words
dbg_stage2_cal[9]	bl4_rd_cmd_int_r	Internal register stage for burst 4 read command

Table 2-21: Read Stage 2 Debug Signal Map (Cont'd)

Bits	PHY Signal Name	Description
dbg_stage2_cal[10]	edge_adv_cal_start	Indicates start of edge_adv calibration, to see if the pi_edge_adv signal needs to be asserted
dbg_stage2_cal[11]	rd0_vld	Indicates valid ISERDES read data for the byte being calibrated (indicated by byte_cnt)
dbg_stage2_cal[12]	fd0_vld	Indicates valid ISERDES read data for the byte being calibrated (indicated by byte_cnt)
dbg_stage2_cal[13]	rd1_vld	Indicates valid ISERDES read data for the byte being calibrated (indicated by byte_cnt)
dbg_stage2_cal[14]	fd1_vld	Indicates valid ISERDES read data for the byte being calibrated (indicated by byte_cnt)
dbg_stage2_cal[15]	phase_vld	Valid data is seen for the particular byte for the byte being calibrated (indicated by byte_cnt)
dbg_stage2_cal[16]	rd0_bslip_vld	Indicates valid ISERDES read data requiring bitslip for the byte being calibrated (indicated by byte_cnt)
dbg_stage2_cal[17]	fd0_bslip_vld	Indicates valid ISERDES read data requiring bitslip for the byte being calibrated (indicated by byte_cnt)
dbg_stage2_cal[18]	rd1_bslip_vld	Indicates valid ISERDES read data requiring bitslip for the byte being calibrated (indicated by byte_cnt)
dbg_stage2_cal[19]	fd1_bslip_vld	Indicates valid ISERDES read data requiring bitslip for the byte being calibrated (indicated by byte_cnt)
dbg_stage2_cal[20]	phase_bslip_vld	Valid data is seen when bitslip applied to read data for the byte being calibrated (indicated by byte_cnt)
dbg_stage2_cal[21]	clkdiv_phase_cal_done_4r	Indicates data validity complete, proceed to assert the pi_edge_adv signal if needed
dbg_stage2_cal[22]	pi_edge_adv	Phaser control signal to advance the Phaser clock, ICLKDIV by one fast clk cycle. Only used for nCK_PER_CLK == 2.
dbg_stage2_cal[25:23]	byte_cnt[2:0]	Indicates the byte that is being checked for data validity
dbg_stage2_cal[26]	inc_byte_cnt	Internal signal to increment to the next byte
dbg_stage2_cal[29:27]	pi_edge_adv_wait_cnt	Counter to wait between asserting the phaser control signal, pi_edge_adv signal in the various byte lanes.
dbg_stage2_cal[30]	bitslip	FPGA logic bitslip control signal, indicates when the logic shifts the data alignment. Only used for nCK_PER_CLK == 4.
dbg_stage2_cal[31]	rd2_vld	Indicates valid ISERDES read data for the byte being calibrated (indicated by byte_cnt). Only valid for nCK_PER_CLK == 4.
dbg_stage2_cal[32]	fd2_vld	Indicates valid ISERDES read data for the byte being calibrated (indicated by byte_cnt). Only valid for nCK_PER_CLK == 4.
dbg_stage2_cal[33]	rd3_vld	Indicates valid ISERDES read data for the byte being calibrated (indicated by byte_cnt). Only valid for nCK_PER_CLK == 4.

Table 2-21: Read Stage 2 Debug Signal Map (Cont'd)

Bits	PHY Signal Name	Description
dbg_stage2_cal[34]	fd3_vld	Indicates valid ISERDES read data for the byte being calibrated (indicated by byte_cnt). Only valid for nCK_PER_CLK == 4.
dbg_stage2_cal[35]	latency_measured[1]	Indicates latency has been measured for byte lane 1
dbg_stage2_cal[36]	latency_measured[2]	Indicates latency has been measured for byte lane 2
dbg_stage2_cal[37]	latency_measured[3]	Indicates latency has been measured for byte lane 3
dbg_stage2_cal[38]	error_adj_latency	Indicates error when target PHY_LATENCY cannot be achieved
dbg_stage2_cal[127:39]	Reserved	Reserved

CLOCK_DEDICATED_ROUTE Constraints

System Clock

If the SRCC/MRCC I/O pin and PLL are not allocated in the same bank, the CLOCK_DEDICATED_ROUTE constraint must be set to BACKBONE. QDR II+ SRAM manages these constraints for designs generated with the **System Clock** option selected as **Differential/Single-Ended** (at **FPGA Options > System Clock**).

If the design is generated with the **System Clock** option selected as **No Buffer** (at **FPGA Options > System Clock**), the CLOCK_DEDICATED_ROUTE constraints based on the SRCC/MRCC I/O and PLL allocation needs to be handled manually for the IP flow. QDR II+ SRAM does not generate clock constraints in the XDC file for the **No Buffer** configurations. You must take care of the clock constraints for the **No Buffer** configurations in the IP flow.

Reference Clock

If the SRCC/MRCC I/O pin and MMCM are not allocated in the same bank, the CLOCK_DEDICATED_ROUTE constraint is set to FALSE. Reference clock is a 200 MHz clock source used to drive IODELAY CTRL logic (through an additional MMCM). This clock is not utilized, CLOCK_DEDICADE_ROUTE (as they are limited in number), hence the FALSE value is set. QDR II+ SRAM manages these constraints for designs generated with the **System Clock** option selected as **Differential/Single-Ended** (at **FPGA Options > System Clock**).

If the design is generated with the **System Clock** option selected as **No Buffer** (at **FPGA Options > System Clock**), the CLOCK_DEDICATED_ROUTE constraints based on SRCC/MRCC I/O and MMCM allocation needs to be handled manually for the IP flow. QDR II+ SRAM does not generate clock constraints in the XDC file for the **No Buffer** configurations. You must take care of the clock constraints for the **No Buffer** configurations in the IP flow.

RLDRAM II and RLDRAM 3 Memory Interface Solutions

Introduction

The RLDRAM II and RLDRAM 3 Memory Interface Solutions (MIS) are a Memory Controller and physical layer for interfacing Xilinx® 7 series FPGAs user designs to RLDRAM II and RLDRAM 3 devices. An RLDRAM II/RLDRAM 3 device can transfer up to two, four, or eight words of data per request and are commonly used in applications such as look-up tables (LUTs), L3 cache, and graphics.

The RLDRAM II/RLDRAM 3 memory solutions core is composed of a user interface (UI), Memory Controller (MC), and physical layer (PHY). It takes simple user commands and converts them to the RLDRAM II/RLDRAM 3 protocol before sending them to the memory. Unique capabilities of the 7 series FPGAs allow the PHY to maximize performance and simplify read data capture within the FPGA. The full solution is complete with a synthesizable reference design.

This chapter describes the core architecture and information about using, customizing, and simulating a LogiCORE™ IP RLDRAM II/RLDRAM 3 memory interface core for the 7 series FPGAs.

Although this soft Memory Controller core is a fully verified solution with guaranteed performance, termination and trace routing rules for PCB design need to be followed to have the best design. For detailed board design guidelines, see [Design Guidelines](#), page 466.



IMPORTANT: *RLDRAM II and RLDRAM 3 designs currently do not support memory-mapped AXI4 interfaces.*

For detailed information and updates about the 7 series FPGAs RLDRAM II and RLDRAM 3 interface cores, see the appropriate 7 series FPGAs data sheet [\[Ref 13\]](#) and the *Zynq-7000 AP SoC and 7 Series FPGAs Memory Interface Solutions Data Sheet* (DS176) [\[Ref 1\]](#).



IMPORTANT: *Memory Interface Solutions v4.0 only supports the Vivado® Design Suite. The ISE® Design Suite is not supported in this version.*

Using MIG in the Vivado Design Suite

This section provides the steps to generate the Memory Interface Generator (MIG) IP core using the Vivado Design Suite and run implementation.

1. Start the Vivado Design Suite (see [Figure 3-1](#)).

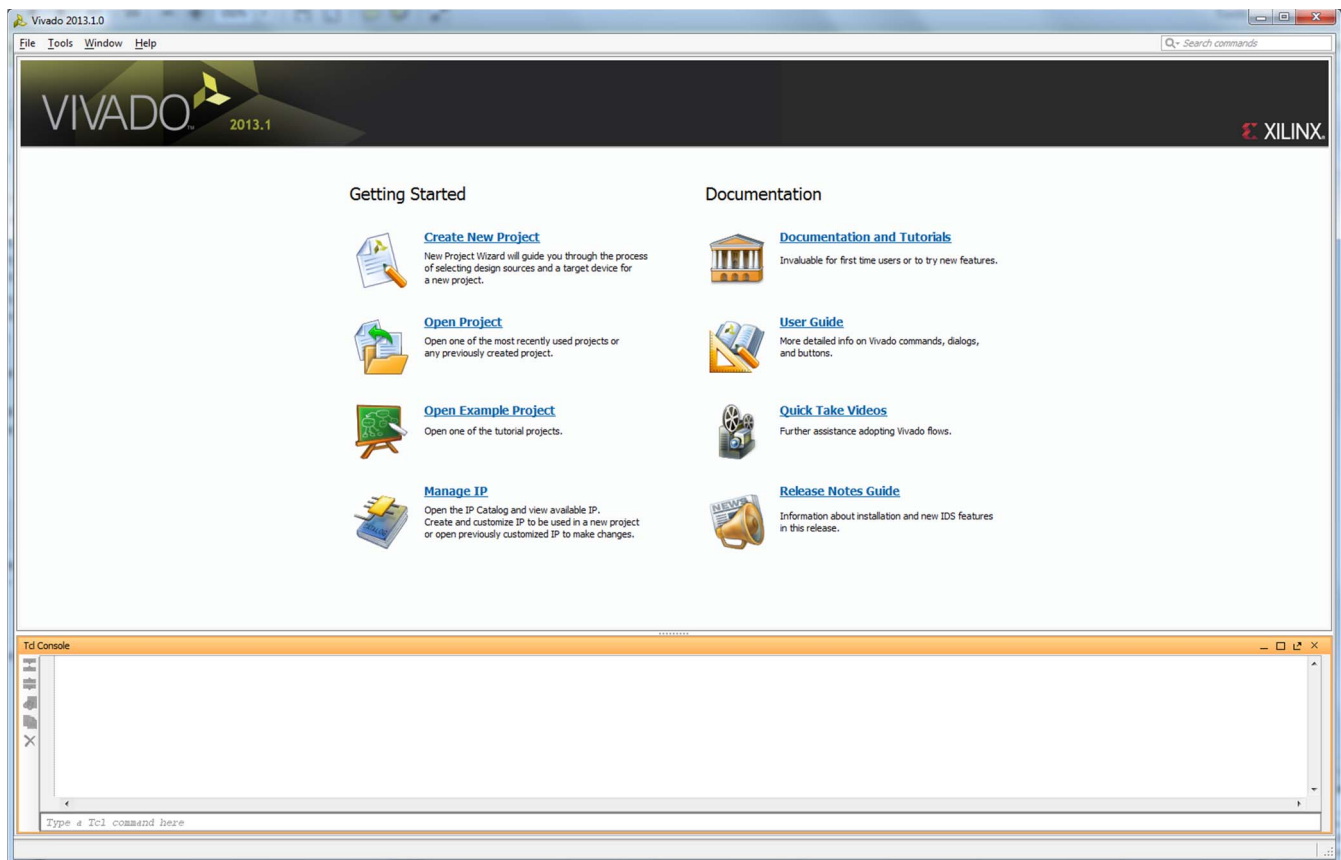


Figure 3-1: Vivado Design Suite

2. To create a new project, click the **Create New Project** option shown in [Figure 3-1](#) to open the page as shown in [Figure 3-2](#).

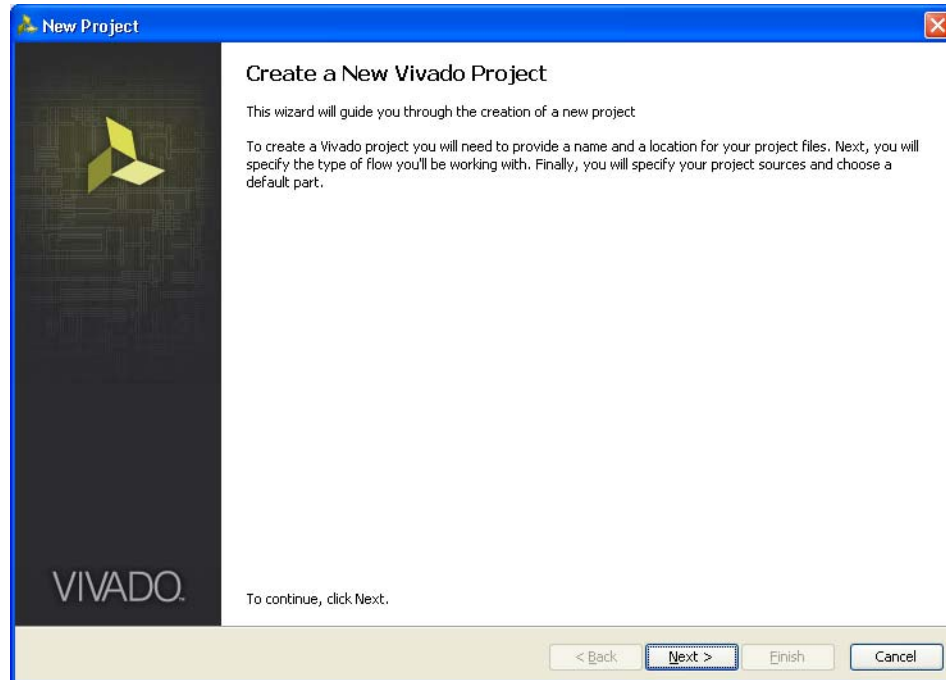


Figure 3-2: Create a New Vivado Tool Project

3. Click **Next** to proceed to the **Project Name** page (Figure 3-3). Enter the **Project Name** and **Project Location**. Based on the details provided, the project is saved in the directory.

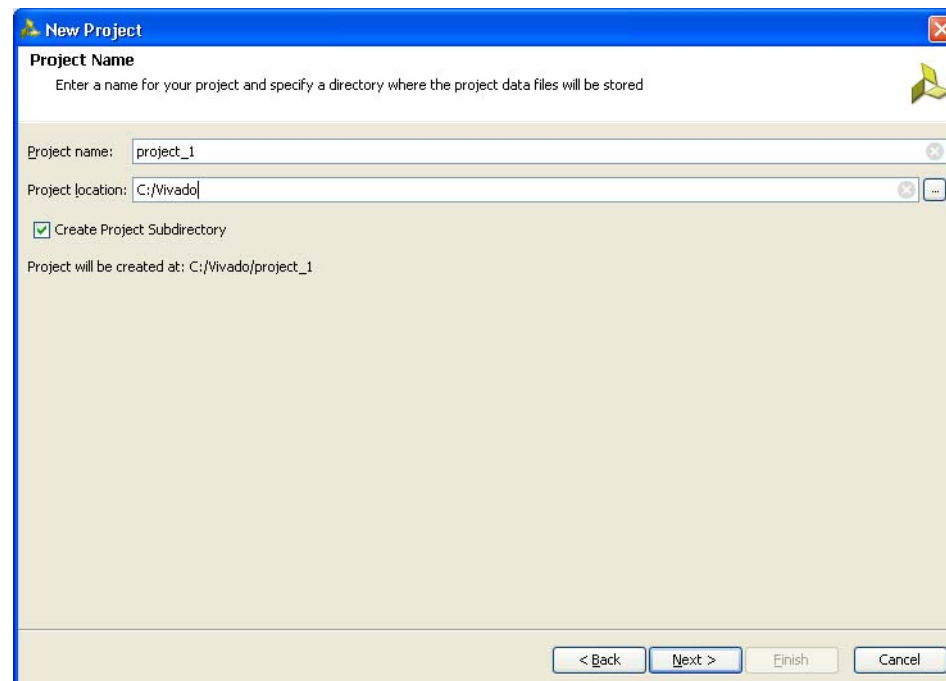


Figure 3-3: Project Name

- Click **Next** to proceed to the **Project Type** page (Figure 3-4). Select the **Project Type** as **RTL Project** because MIG deliverables are RTL files.

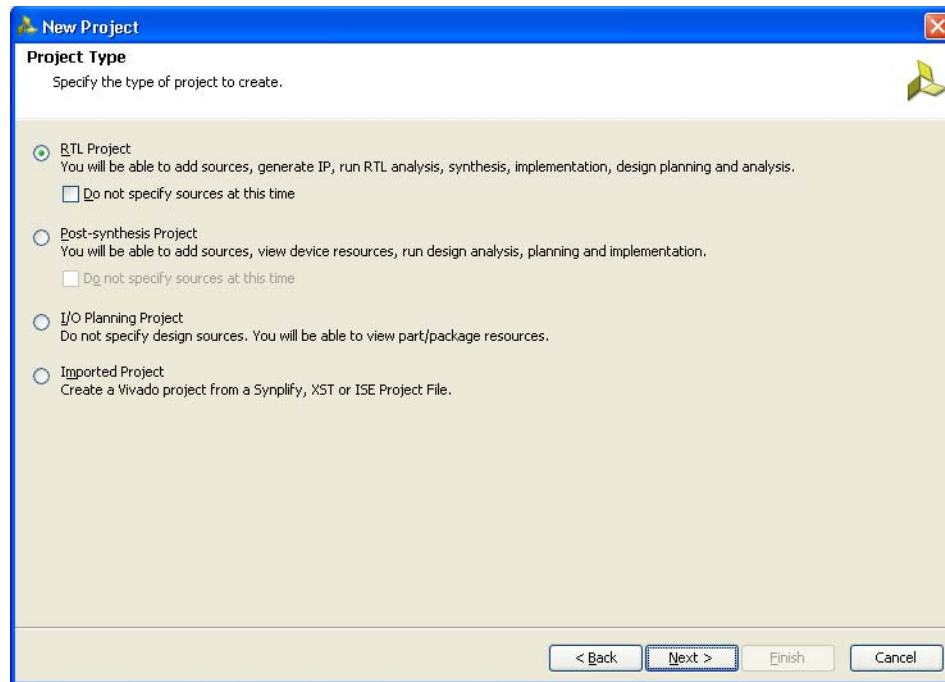


Figure 3-4: Project Type

- Click **Next** to proceed to the **Add Sources** page (Figure 3-5). RTL files can be added to the project in this page. If the project was not created earlier, proceed to the next page.

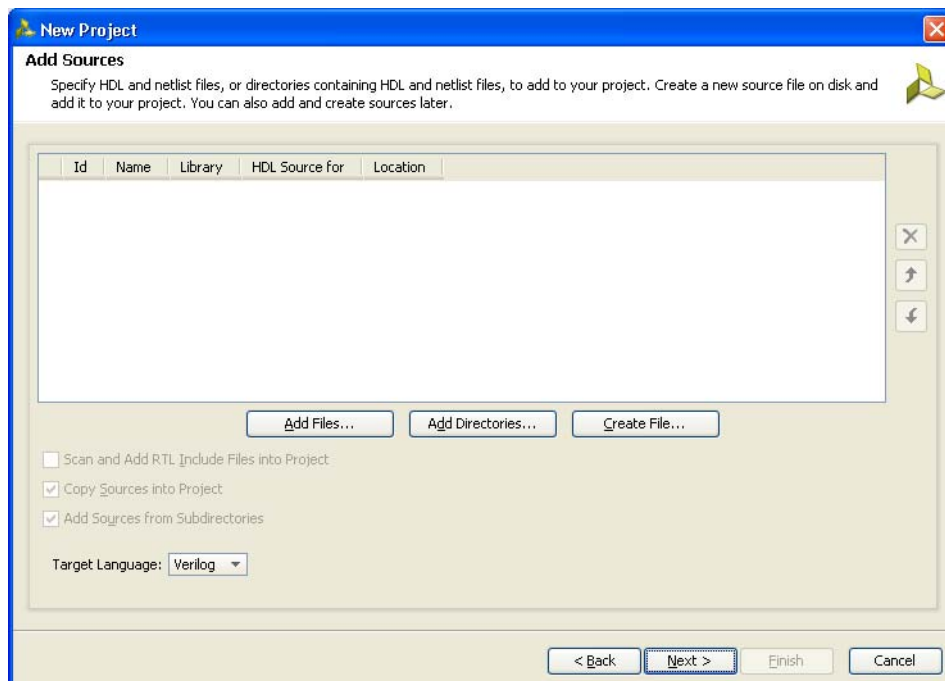


Figure 3-5: Add Sources

6. Click **Next** to open the **Add Existing IP (Optional)** page (Figure 3-6). If the IP is already created, the XCI file generated by the IP can be added to the project and the previous created IP files are automatically added to the project. If the IP was not created earlier, proceed to the next page.

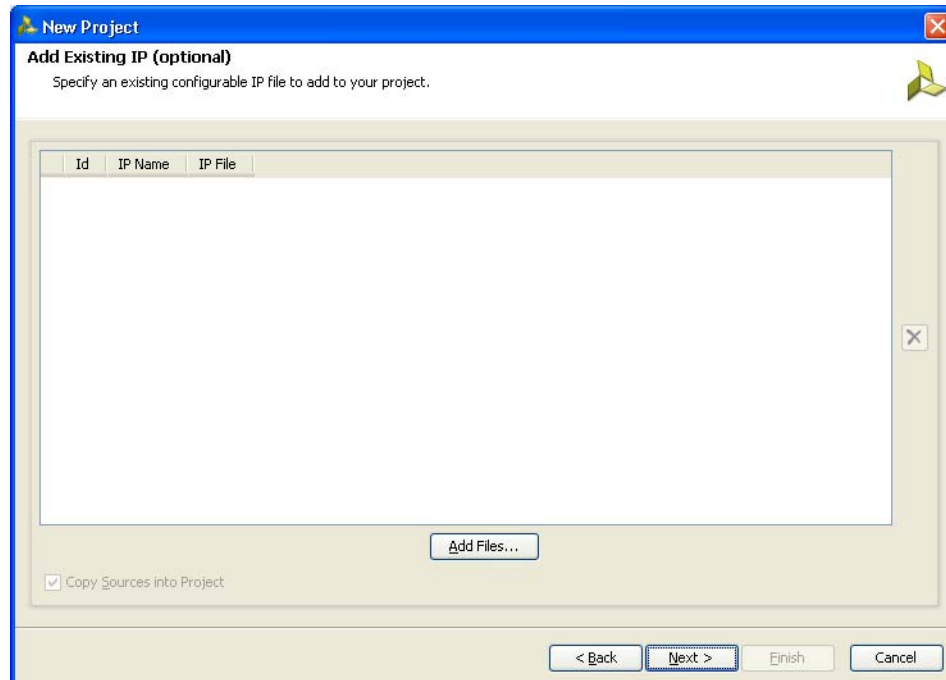


Figure 3-6: Add Existing IP (Optional)

7. Click **Next** to open the **Add Constraints (Optional)** page (Figure 3-7). If the constraints file exists in the repository, it can be added to the project. Proceed to the next page if the constraints file does not exist.

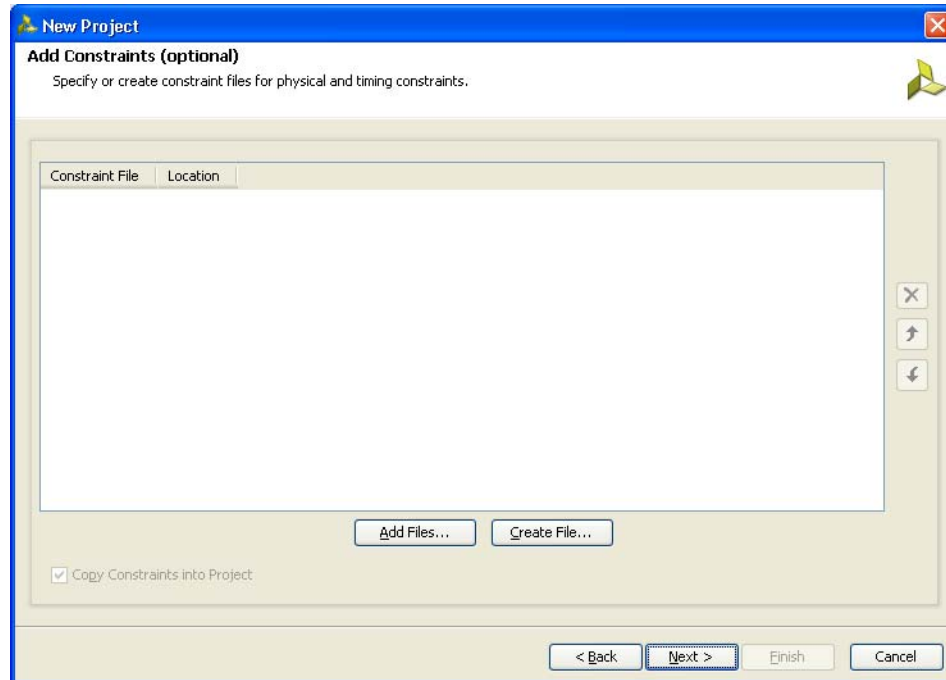


Figure 3-7: Add Constraints (Optional)

- Click **Next** to proceed to the **Default Part** page (Figure 3-8) where the device that needs to be targeted can be selected. The **Default Part** page appears as shown in Figure 3-8.

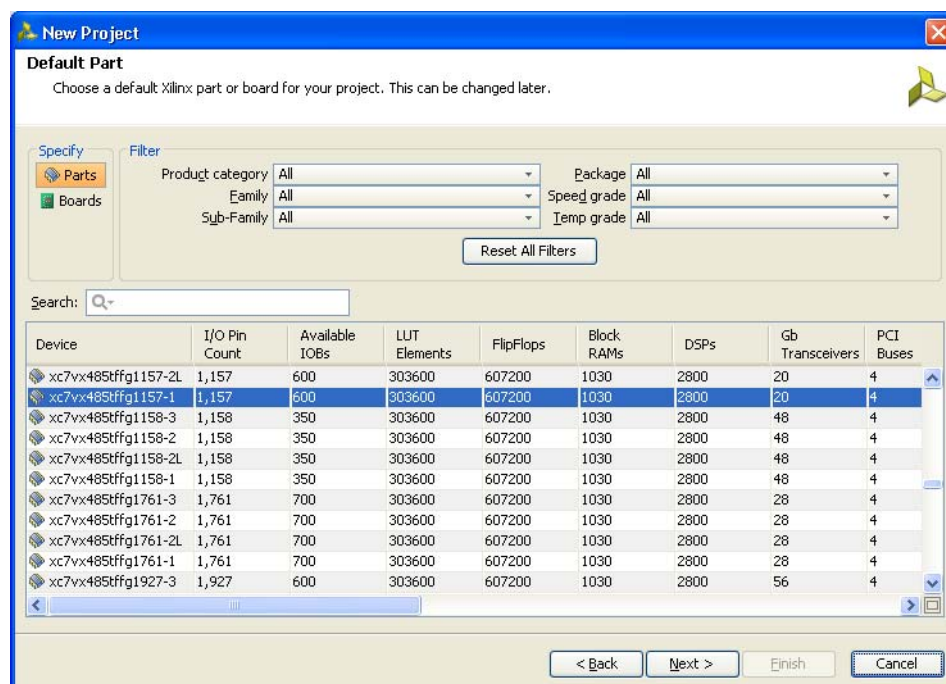


Figure 3-8: Default Part (Default Window)

Select the target **Family**, **Package**, and **Speed Grade**. The valid devices are displayed in the same page, and the device can be selected based on the targeted device (Figure 3-9).

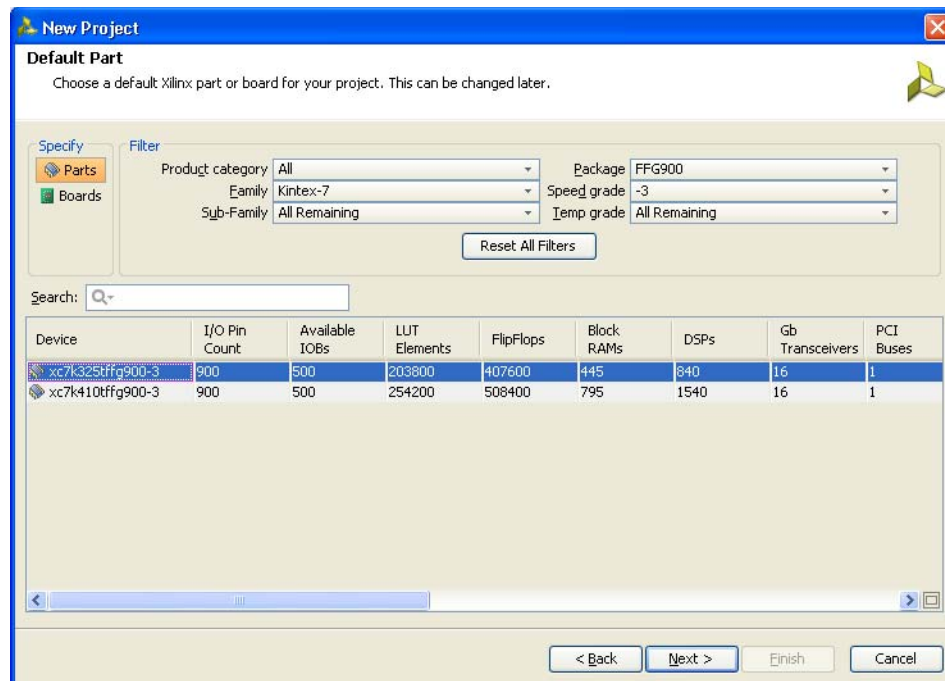


Figure 3-9: Default Part (Customized Window)

Apart from selecting the parts by using **Parts** option, parts can be selected by choosing the **Boards** option, which brings up the evaluation boards supported by Xilinx (Figure 3-10). With this option, design can be targeted for the various evaluation boards. If the XCI file of an existing IP was selected in an earlier step, the same part should be selected here.

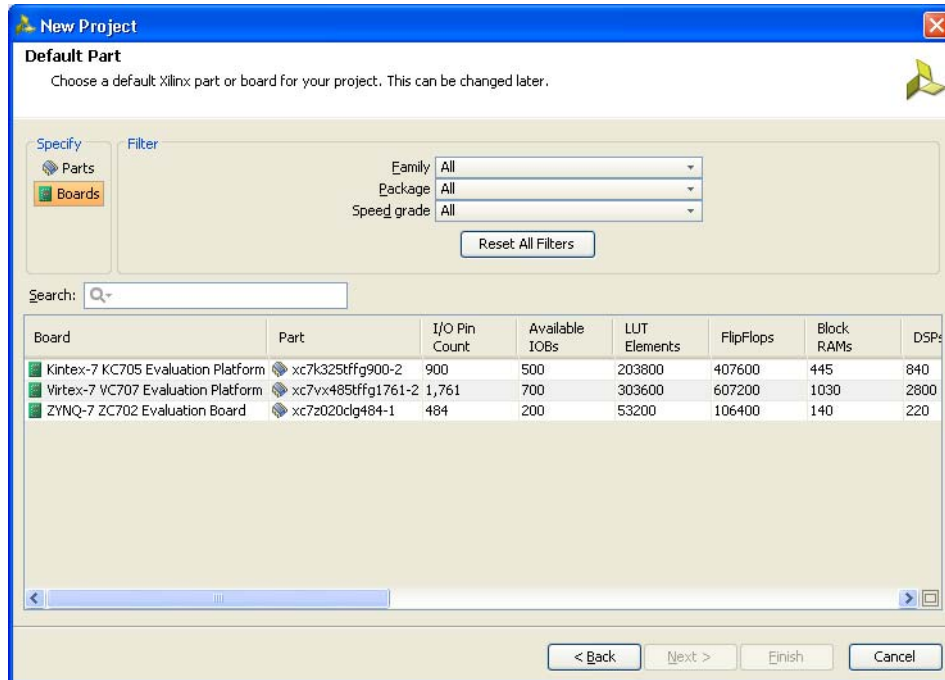


Figure 3-10: Default Part Boards Option

- Click **Next** to open the **New Project Summary** page (Figure 3-11). This includes the summary of selected project details.

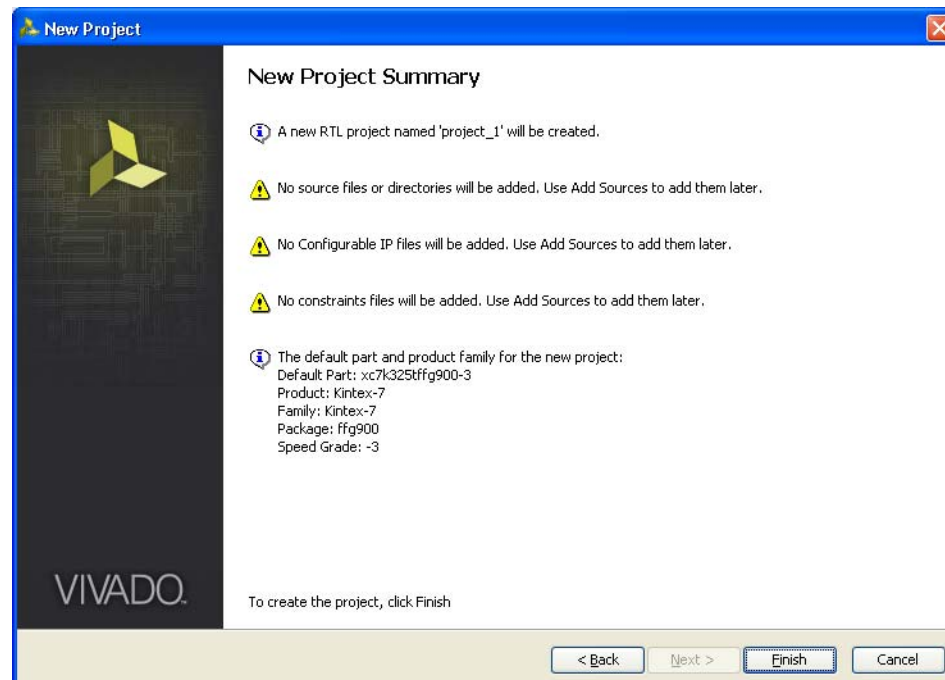


Figure 3-11: New Project Summary

- Click **Finish** to complete the project creation.

11. Click **IP Catalog** on the **Project Manager** window to open the Vivado IP catalog window. The IP catalog window appears on the right side panel (see Figure 3-12, highlighted in a red circle).
12. The MIG tool exists in the **Memories & Storage Elements > Memory Interface Generators** section of the IP catalog window (Figure 3-12) or you can search from the Search tool bar for the string "MIG."

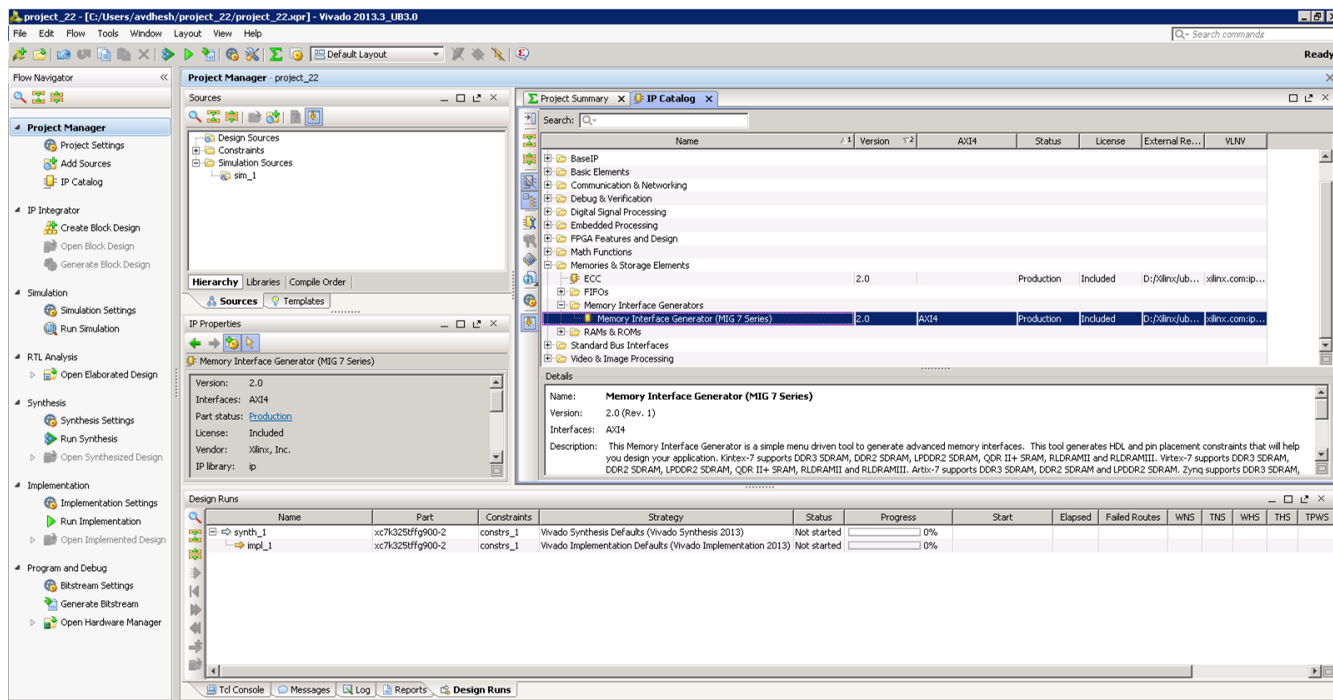


Figure 3-12: IP Catalog Window – Memory Interface Generator

13. Select **MIG 7 Series** to open the MIG tool (Figure 3-13).

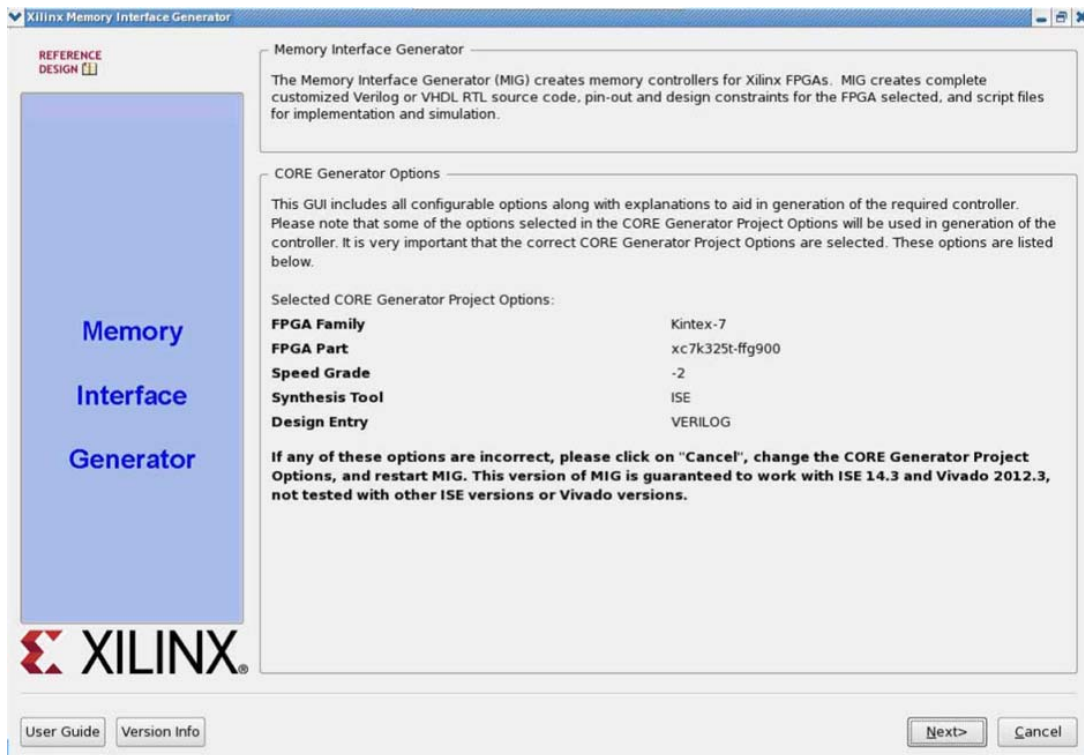


Figure 3-13: 7 Series FPGAs Memory Interface Generator FPGA Front Page

14. Click **Next** to display the **Output Options** page.


Customizing and Generating the Core



CAUTION! The Windows operating system has a 260-character limit for path lengths, which can affect the Vivado tools. To avoid this issue, use the shortest possible names and directory locations when creating projects, defining IP or managed IP projects, and creating block designs.

MIG Output Options

1. Select **Create Design** to create a new Memory Controller design. Enter a component name in the Component Name field (Figure 3-14).
2. Choose the number of controllers to be generated. This option determines the replication of further pages.

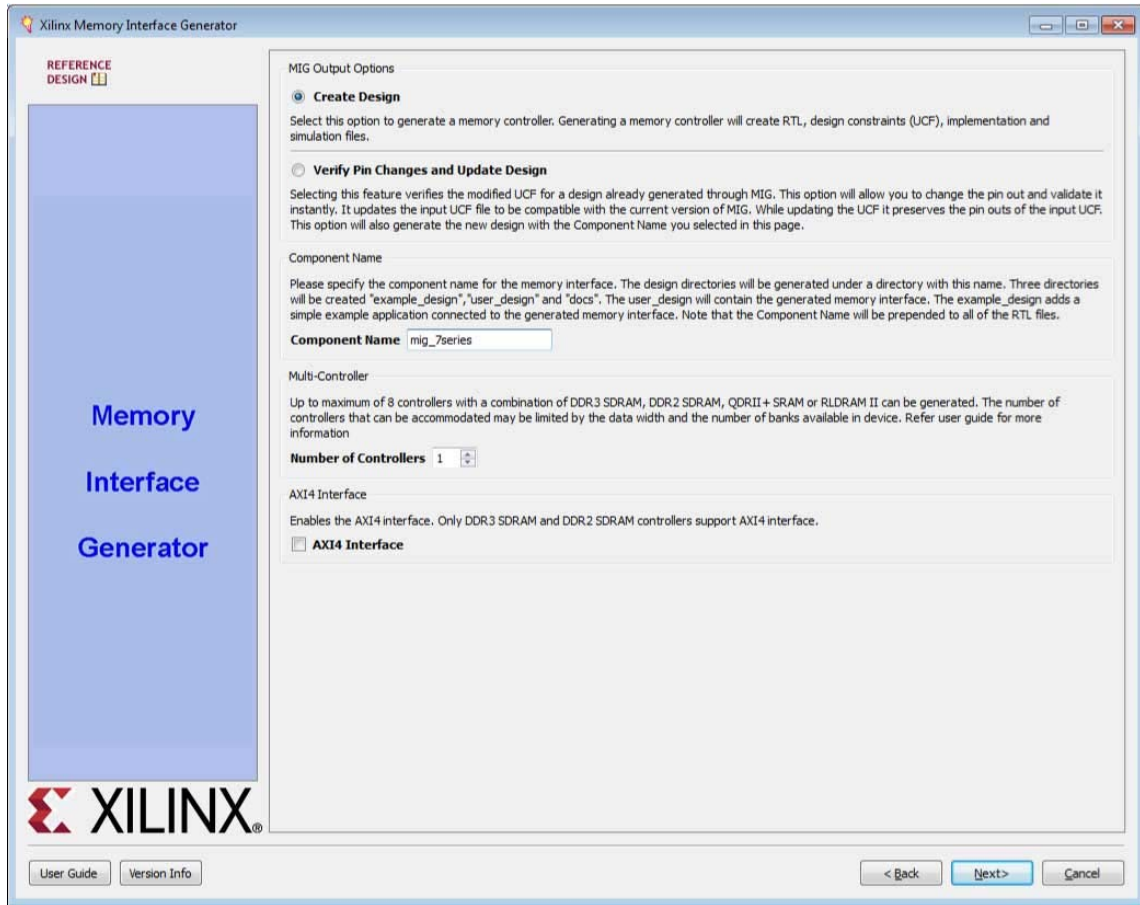

UG586_c1_09_120311

Figure 3-14: MIG Output Options

MIG outputs are generated with the folder name `<component name>`.



IMPORTANT: Only alphanumeric characters can be used for `<component name>`. Special characters cannot be used. This name should always start with an alphabetical character and can end with an alphanumeric character.

When invoked from Xilinx Platform Studio (XPS), the component name is corrected to be the IP instance name from XPS.

3. Click **Next** to display the **Pin Compatible FPGAs** page.

Pin Compatible FPGAs

The **Pin Compatible FPGAs** page lists FPGAs in the selected family having the same package. If the generated pinout from the MIG tool needs to be compatible with any of these other FPGAs, this option should be used to select the FPGAs with which the pinout has to be compatible (Figure 3-15).

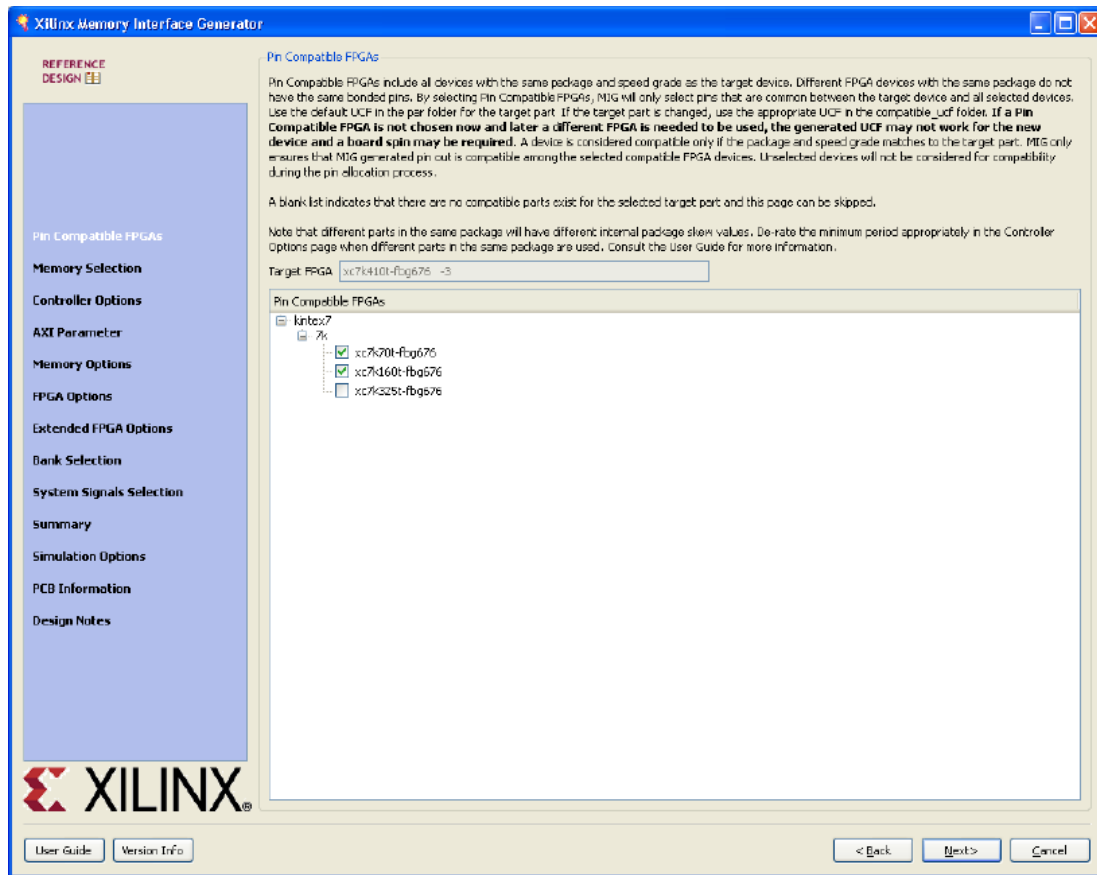


Figure 3-15: Pin-Compatible 7 Series FPGAs

1. Select any of the compatible FPGAs in the list. Only the common pins between the target and selected FPGAs are used by the MIG tool. The name in the text box signifies the target FPGA selected.
2. Click **Next** to display the **Memory Selection** page.

Creating the 7 Series FPGAs RLD RAM II/RLD RAM 3 Memory Design

Memory Selection

This page displays all memory types that are supported by the selected FPGA family.

1. Select the RLD RAM II or RLD RAM 3 controller type.
2. Click **Next** to display the **Controller Options** page.

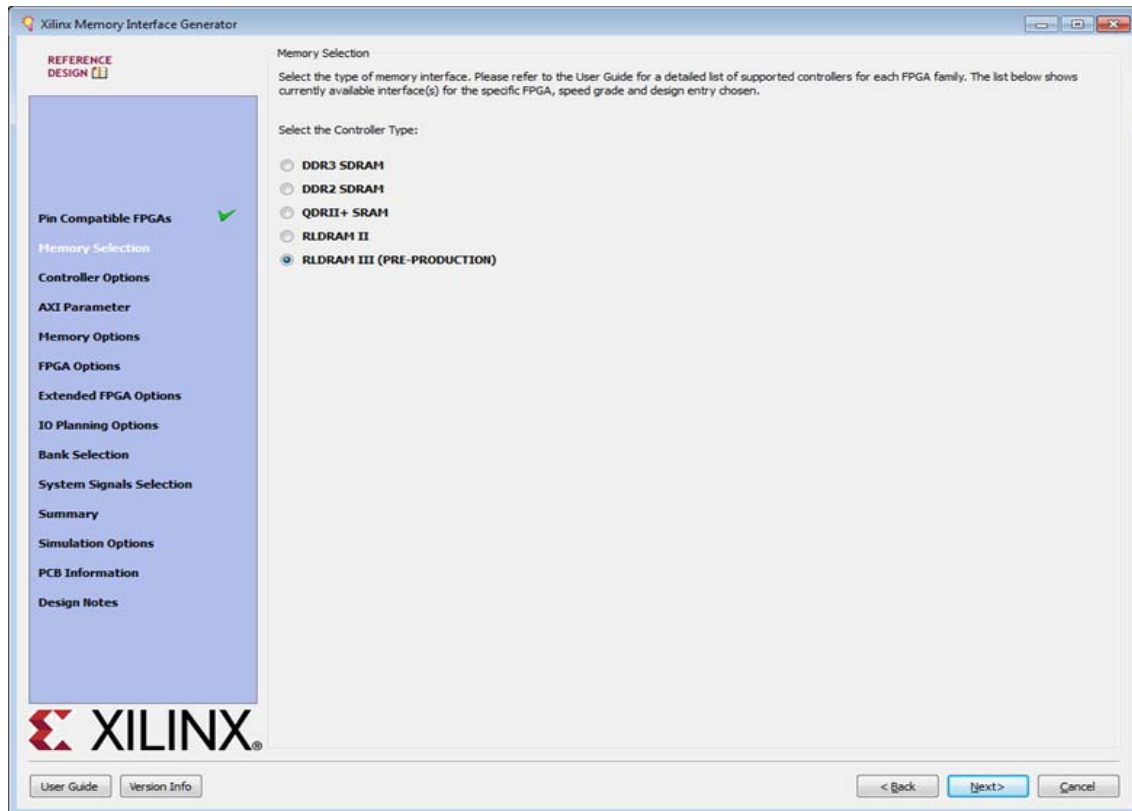


Figure 3-16: Memory Selection Page

RLDRAM II and RLDRAM 3 designs currently do not support memory-mapped AXI4 interfaces.

Controller Options

This page shows the various controller options that can be selected.

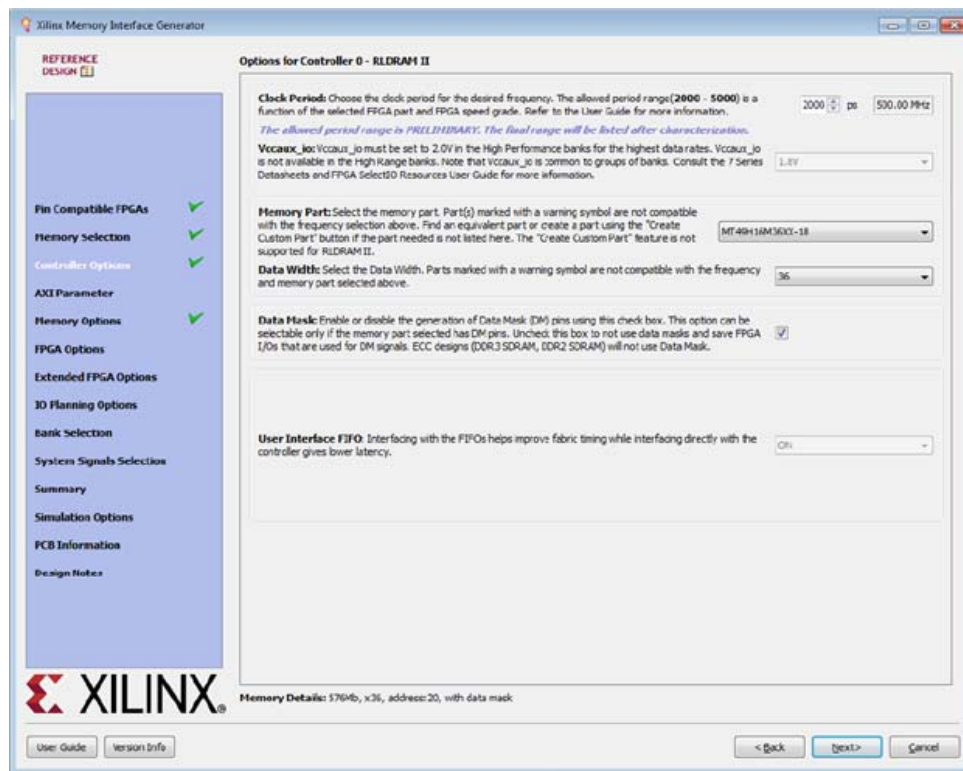


Figure 3-17: Controller Options Page

- **Frequency** – This feature indicates the operating frequency for all the controllers. The frequency block is limited by factors such as the selected FPGA and device speed grade.
- **PHY to Controller Clock Ratio** – This feature determines the ratio of the physical layer (memory) clock frequency to the controller and user interface clock frequency. The user interface data bus width of the 2:1 ratio is four times the width of the physical memory interface width, while the bus width of the 4:1 ratio is eight times the physical memory interface width. RLDRAM II must use 2:1 while RLDRAM 3 must use 4:1.
- **VCCAUX_IO** – Set based on the period/frequency setting. 2.0V is required at the highest frequency settings in the High Performance column. The MIG tool automatically selects 2.0V when required. Either 1.8 or 2.0V can be used at lower frequencies. Groups of banks share the VCCAUX_IO supply. For more information, see the *7 Series FPGAs SelectIO™ Resources User Guide* (UG471) [Ref 2].
- **Memory Part** – This option selects the memory part for the design. Selections can be made from the list, or if the part is not listed, a new part can be created (**Create Custom Part**). If a desired part is not available in the list, you can generate or create an equivalent device and then modify the output to support the desired memory device.

- **Data Width** – The data width value can be selected here based on the memory part selected. The MIG tool supports values in multiples of the individual device data widths.
- **Data Mask** – This option allocates data mask pins when selected. This option should be deselected to deallocate data mask pins and increase pin efficiency.
- **Memory Details** – The bottom of the **Controller Options** page. [Figure 3-18](#) displays the details for the selected memory configuration.

Memory Details: 576Mb, x36, address:20, with data mask

Figure 3-18: Selected Memory Configuration Details

Memory Options

This feature allows the selection of various memory mode register values, as supported by the controller specification ([Figure 3-19](#)).

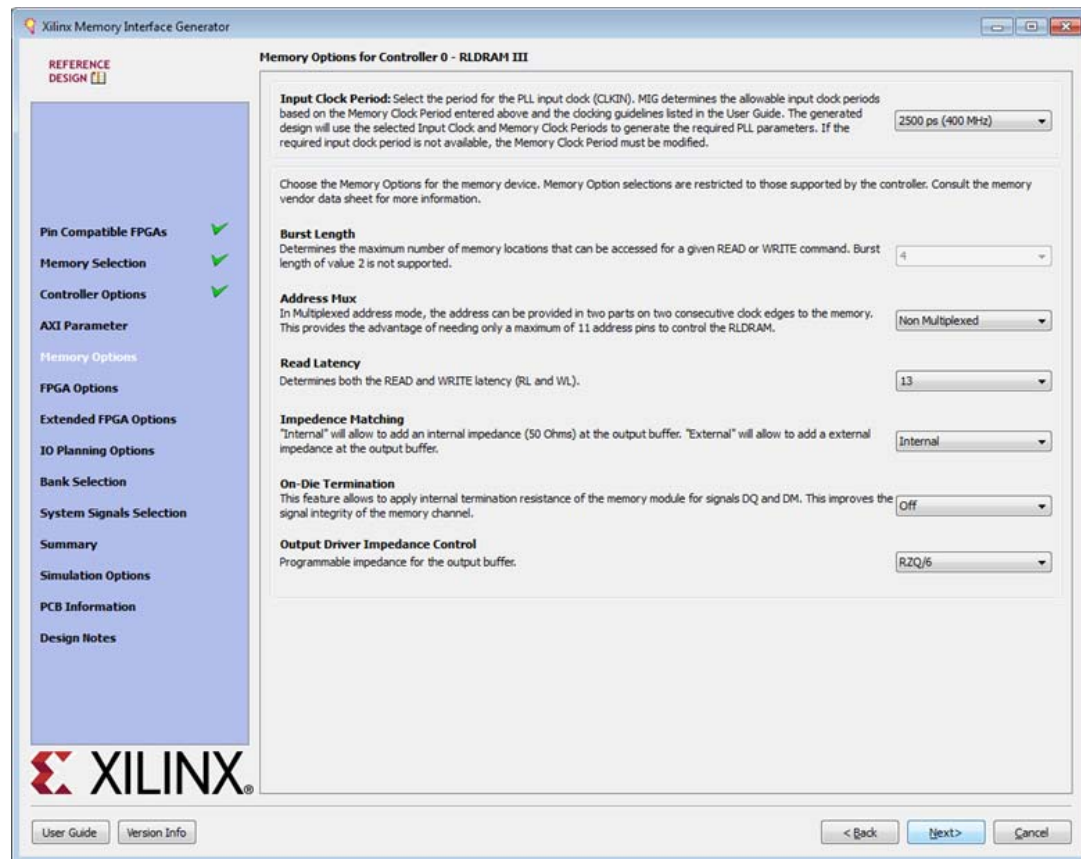


Figure 3-19: Memory Options Page

The Mode register value is loaded into the Load Mode register during initialization.

- **Input Clock Period** – The desired input clock period is selected from the list. These values are determined by the chosen memory clock period and the allowable limits of the PLL parameters. See [Clocking Architecture, page 434](#) for more information on the PLL parameter limits.
- **Configuration** – (RLDRAM II only). This option sets the configuration value associated with write and read latency values. Available values of 1, 2, and 3 are controlled based on the selected design frequency.
- **Burst Length** – This option sets the length of a burst for a single memory transaction. This option is a trade-off between granularity and bandwidth and should be determined based on the application. Values of 4 and 8 are available for RLDRAM II, and 2, 4, and 8 are allowed for RLDRAM 3.
- **Address Multiplexing** – This option minimizes the number of address pins required for a design, because the address is provided using less pins but over two consecutive clock cycles. This option is not supported with a burst length of two.
- **Impedance Matching** – This option determines how the memory device tunes its outputs, either by an internal setting or using an external reference resistor connected to the ZQ input of the memory device.
- **On-Die Termination** – This option is used to apply termination to the DQ and DM signals at the memory device during write operations. When set, the memory device dynamically switches off ODT when driving the bus during a read command. For RLDRAM II this can only be off or on, but for RLDRAM 3 when a value must be selected, either RZQ/6, RZQ/4, or RZQ/2.
- **Output Driver Impedance Control** – Not available for RLDRAM II. MRS setting in the DRAM that selects the impedance of the output buffers during reads.

Click **Next** to display the **FPGA Options** page.

FPGA Options

Figure 3-20 shows the **FPGA Options** page.

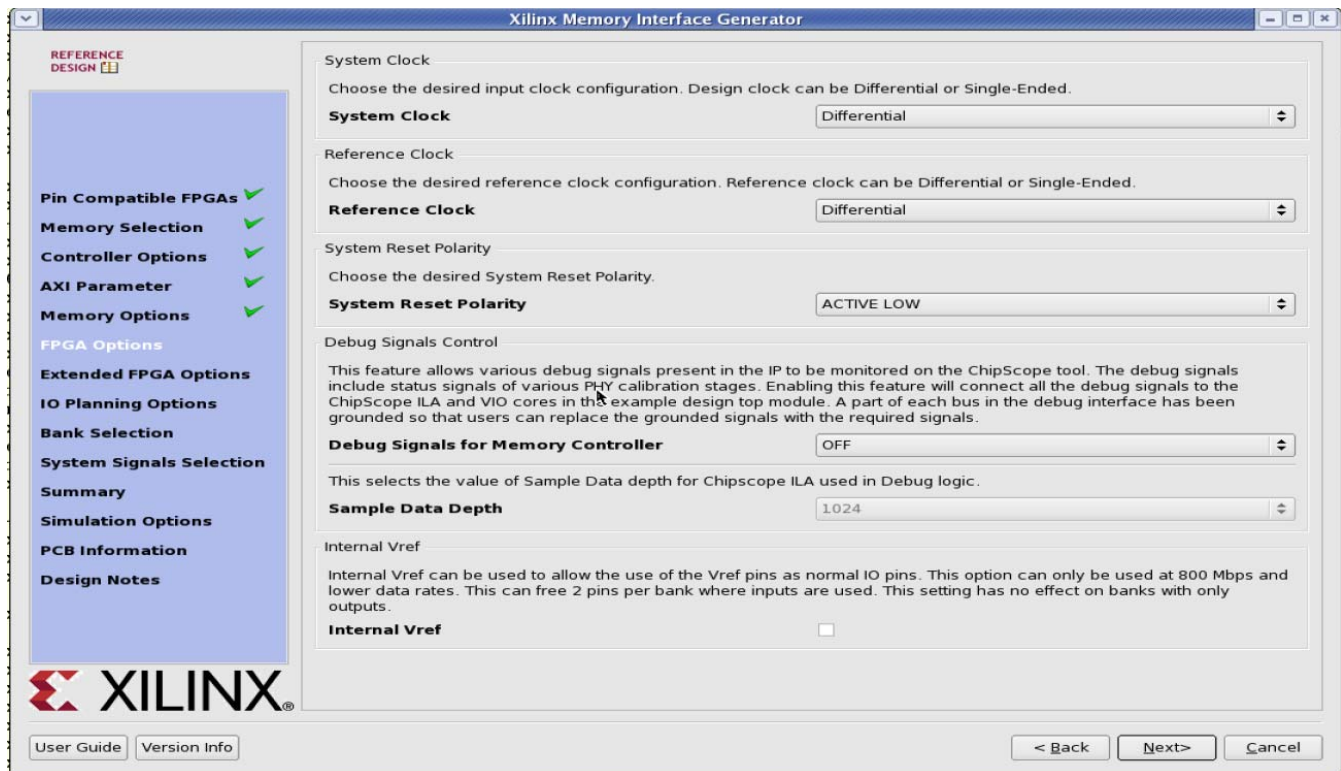


Figure 3-20: **FPGA Options Page**

- **System Clock** – This option selects the clock type (Single-Ended, Differential, or No Buffer) for the `sys_clk` signal pair. When the **No Buffer** option is selected, IBUF primitives are not instantiated in RTL code and pins are not allocated for the system clock.

If the designs generated from MIG for the **No Buffer** option are implemented without performing changes, designs can fail in implementation due to IBUFs not instantiated for the `sys_clk_i` signal. So for **No Buffer** scenarios, `sys_clk_i` signal needs to be connected to an internal clock.

- **Reference Clock** – This option selects the clock type (Single-Ended, Differential, No Buffer, or Use System Clock) for the `clk_ref` signal pair. The **Use System Clock** option appears when the input frequency is between 199 and 201 MHz (that is, the Input Clock Period is between 5,025 ps (199 MHz) and 4,975 ps (201 MHz)). When the **No Buffer** option is selected, IBUF primitives are not instantiated in RTL code and pins are not allocated for the reference clock.

If the designs generated from MIG for the **No Buffer** option are implemented without performing changes, designs can fail in implementation due to IBUFs not instantiated for the `ref_clk_i` signal. So for **No Buffer** scenarios, `ref_clk_i` signal needs to be connected to an internal clock.

- **System Reset Polarity** – The polarity for system reset (`sys_rst`) can be selected. If the option is selected as active-Low, the parameter `RST_ACT_LOW` is set to 1 and if set to active-High the parameter `RST_ACT_LOW` is set to 0.
- **Debug Signals Control** – Selecting this option enables calibration status and user port signals to be port mapped to the ILA and VIO in the `example_top` module. This helps in monitoring traffic on the user interface port with the Vivado Design Suite debug feature. Deselecting the **Debug Signals Control** option leaves the debug signals unconnected in the `example_top` module and no ILA/VIO modules are generated by the IP catalog. Additionally, the debug port is always disabled for functional simulations.
- **Sample Data Depth** – This option selects the Sample Data depth for the ILA module used in the Vivado debug logic. This option can be selected when the **Debug Signals for Memory Controller** option is ON.
- **Internal V_{REF} Selection** – Internal V_{REF} can be used for data group bytes to allow the use of the V_{REF} pins for normal I/O usage. Internal V_{REF} should only be used for data rates of 800 Mb/s or below.

Click **Next** to display the **Extended FPGA Options** page.

Extended FPGA Options

Figure 3-21 shows the **Extended FPGA Options** page.

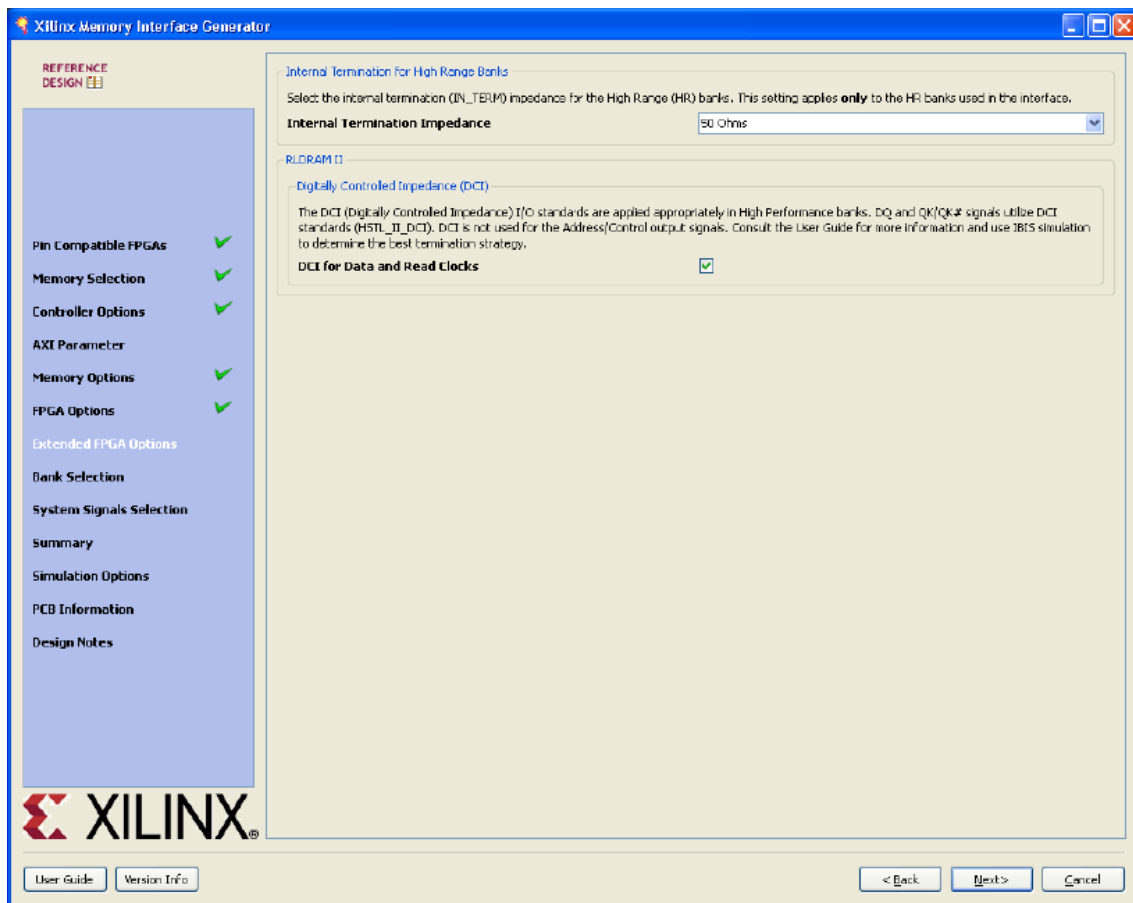


Figure 3-21: Extended FPGA Options Page

- **Digitally Controlled Impedance (DCI)** – When selected, this option internally terminates the signals from the RLDRAM II read path. DCI is available in the High Performance Banks.
- **Internal Termination for High Range Banks** – The internal termination option can be set to 40, 50, or 60Ω or disabled. This termination is for the RLDRAM II and RLDRAM 3 read path. This selection is only for High Range banks.

Bank Selection

This feature allows the selection of bytes for the memory interface. Bytes can be selected for different classes of memory signals, such as:

- Address and control signals
- Data Read signals
- Data Write signals

For customized settings, click **Deselect Banks** and select the appropriate bank and memory signals. Click **Next** to move to the next page if the default setting is used. To unselect the banks that are selected, click **Deselect Banks**. To restore the defaults, click **Restore Defaults**. VCCAUX_IO groups are shown for HP banks in devices with these groups using dashed lines. VCCAUX_IO is common to all banks in these groups. The memory interface must have the same VCCAUX_IO for all banks used in the interface. MIG automatically sets the VCCAUX_IO constraint appropriately for the data rate requested.

For devices implemented with SSI technology, the SLRs are indicated by a number in the header in each bank, for example, *SLR 1*. Interfaces cannot span across Super Logic Regions. Not all devices have Super Logic Regions.

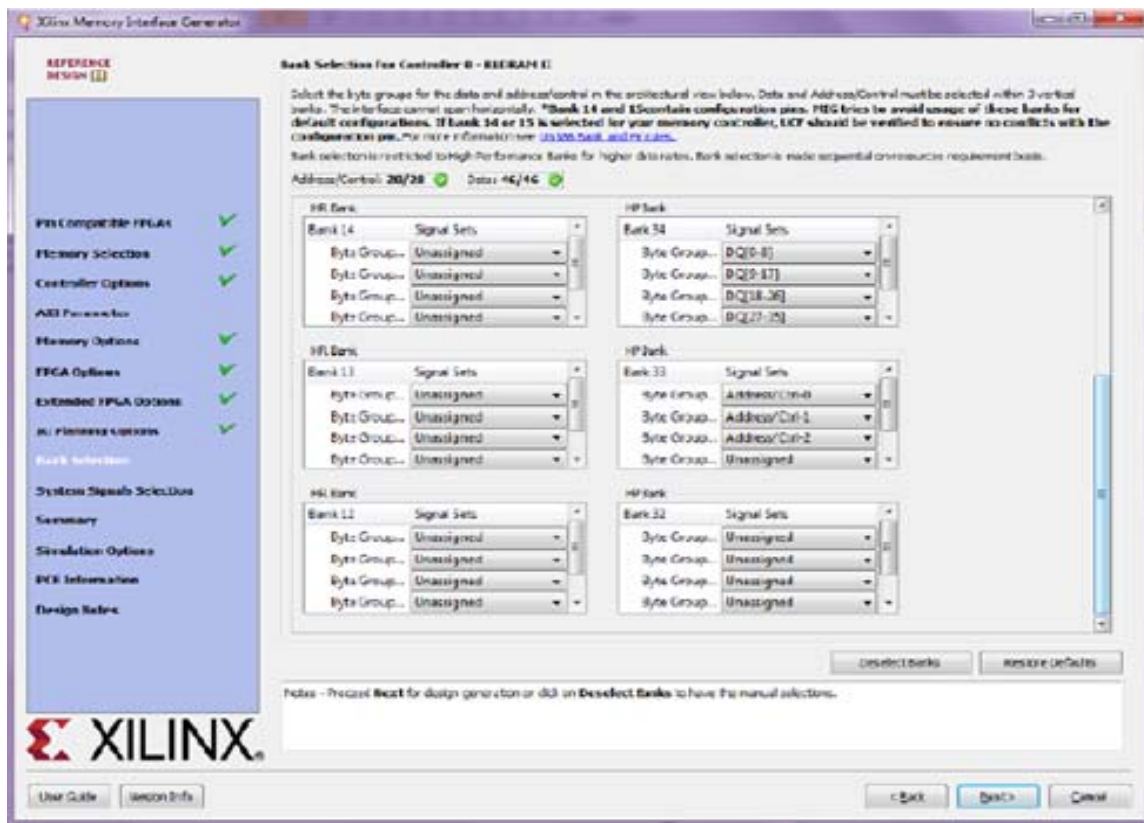


Figure 3-22: Bank Selection Page

System Pins Selection

Figure 3-23 shows the **System Pins Selection** page.

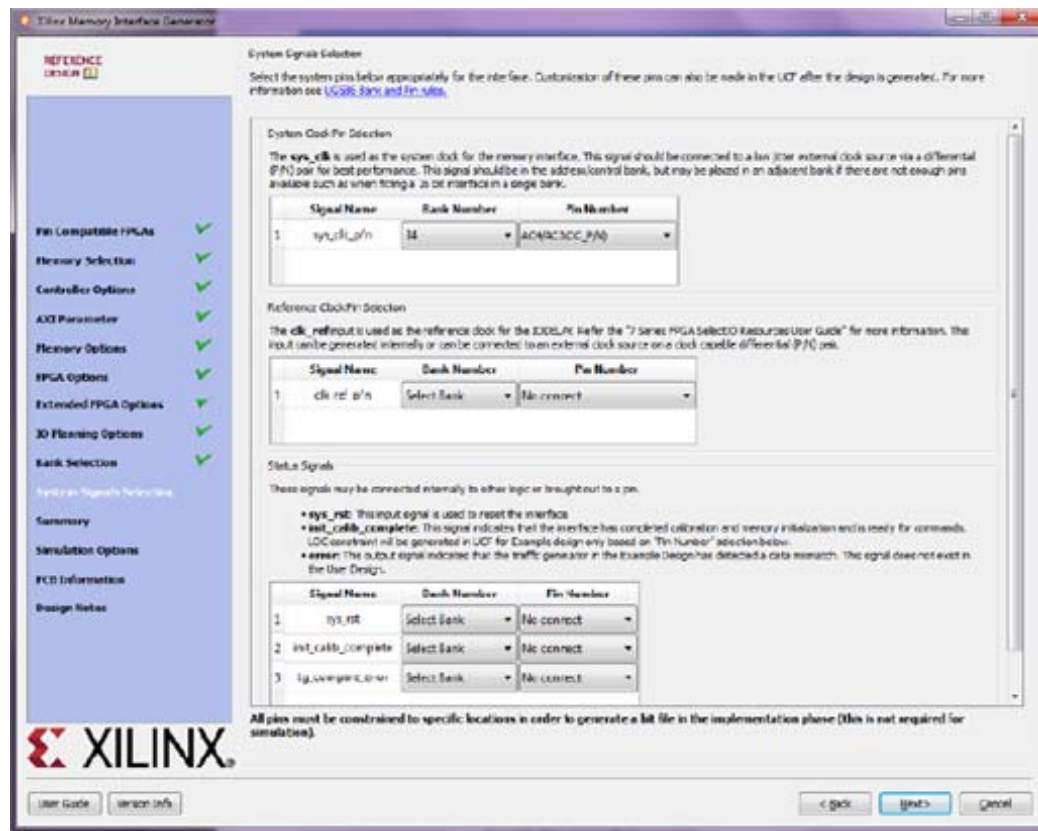


Figure 3-23: **System Pins Selection Page**

Select the pins for the system signals on this page. The MIG tool allows the selection of either external pins or internal connections, as desired.

- sys_clk** – This is the system clock input for the memory interface and is typically connected to a low-jitter external clock source. Either a single input or a differential pair can be selected based on the **System Clock** selection in the **FPGA Options** page (Figure 3-20). The `sys_clk` input must be in the same column as the memory interface. If this pin is connected in the same banks as the memory interface, the MIG tool selects an I/O standard compatible with the interface, such as `DIFF_HSTL_I` or `HSTL_I`. If `sys_clk` is not connected in a memory interface bank, the MIG tool selects an appropriate standard such as `LVC MOS18` or `LVDS`. The XDC can be modified as desired after generation.
- clk_ref** – This is the reference frequency input for the IDELAY control. This is a 200 MHz input. The `clk_ref` input can be generated internally or connected to an external source. A single input or a differential pair can be selected based on the **System Clock** selection in the **FPGA Options** page (Figure 3-20). The I/O standard is selected in a similar way as `sys_clk` above.

- **sys_rst** – This is the asynchronous system reset input that can be generated internally or driven from a pin. The MIG tool selects an appropriate I/O standard for the input such as LVCMOS18 and LVCMOS25 for HP and HR banks, respectively. The default polarity of `sys_rst` pin is active-Low. The polarity of `sys_rst` pin varies based on the **System Reset Polarity** option chosen in **FPGA Options** page ([Figure 3-20](#)).
- **init_calib_complete** – This output indicates that the memory initialization and calibration is complete and that the interface is ready to use. The `init_calib_complete` signal is normally only used internally, but can be brought out to a pin if desired.
- **tg_compare_error** – This output indicates that the traffic generator in the example design has detected a data compare error. This signal is only generated in the example design and is not part of the user design. This signal is not typically brought out to a pin but can be, if desired.

Click **Next** to display the **Summary** page.

Summary

This page ([Figure 3-24](#)) provides the complete details about the memory core selection, interface parameters, Vivado IP catalog options, and FPGA options of the active project.

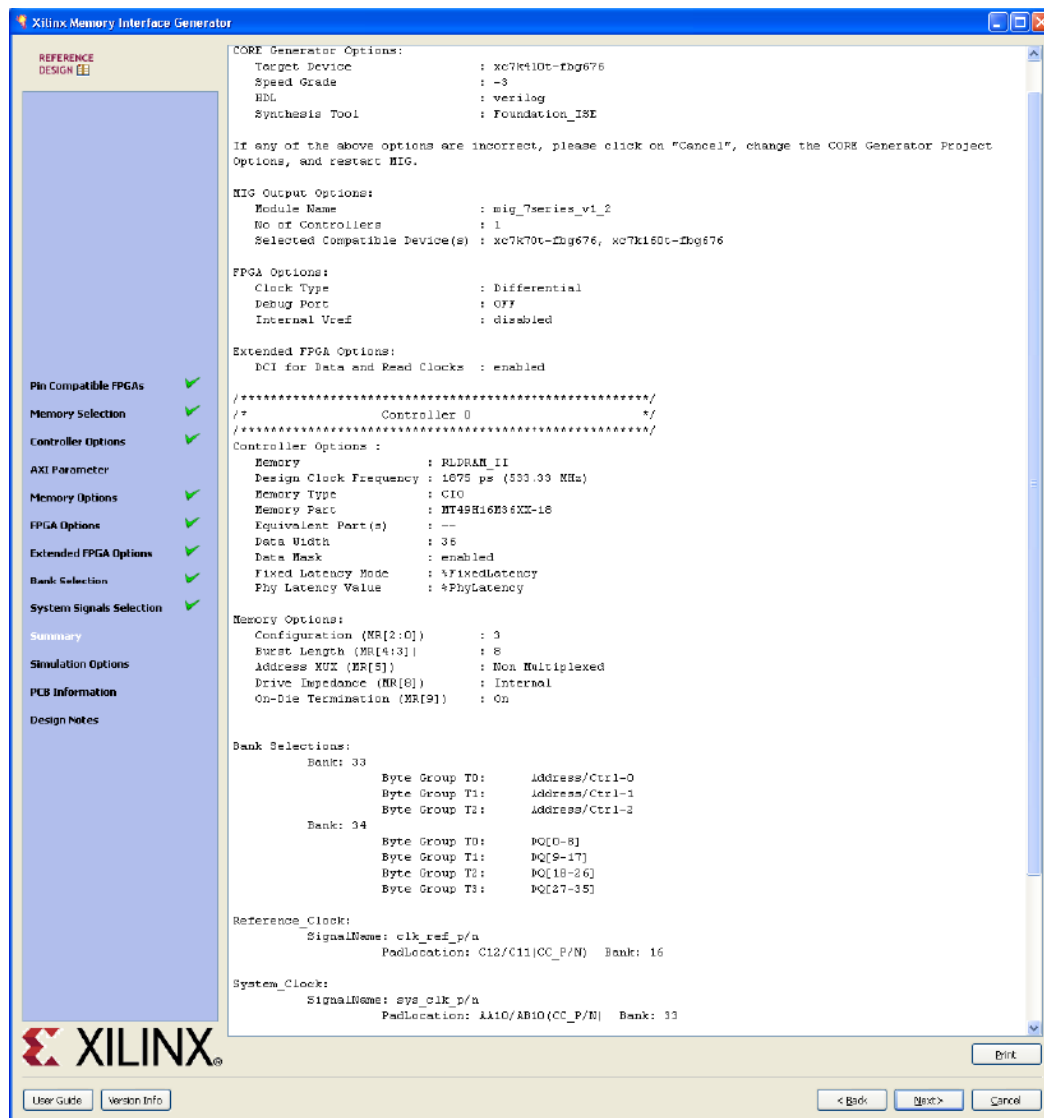


Figure 3-24: Summary Page

Click **Next** to move to **PCB Information** page.

PCB Information

This page displays the PCB-related information to be considered while designing the board that uses the MIG tool generated designs. Click **Next** to move to the **Design Notes** page.

Design Notes

Click **Generate** to generate the design files. The MIG tool generates two output directories: `example_design` and `user_design`. After generating the design, the MIG GUI closes.

Finish

After the design is generated, a README page is displayed with additional useful information.

Click **Close** to complete the MIG tool flow.

Vivado Integrated Design Flow for MIG

1. After clicking **Generate**, the **Generate Output Products** window appears. This window has the **Out-of-Context Settings** as shown in Figure 3-25.

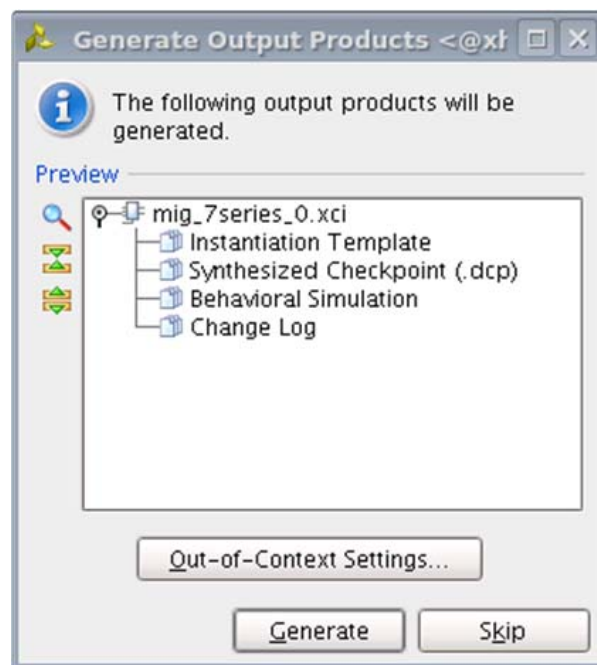


Figure 3-25: Generate Output Products Window

2. Click **Out-of-Context Settings** to configure generation of synthesized checkpoints. To enable the **Out-of-Context** flow, enable the check box. To disable the **Out-of-Context** flow, disable the check box. The default option is "enable" as shown in [Figure 3-26](#).

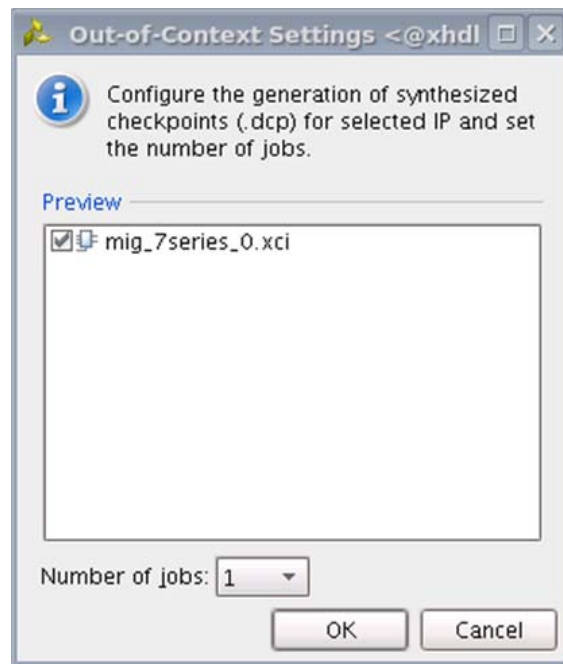


Figure 3-26: **Out-of-Context Settings Window**

3. MIG designs comply with "Hierarchical Design" flow in Vivado. For more information, see the *Vivado Design Suite User Guide: Hierarchical Design* (UG905) [\[Ref 5\]](#) and the *Vivado Design Suite Tutorial: Hierarchical Design* (UG946) [\[Ref 6\]](#).

- After generating the MIG design, the project window appears as shown in [Figure 3-27](#).

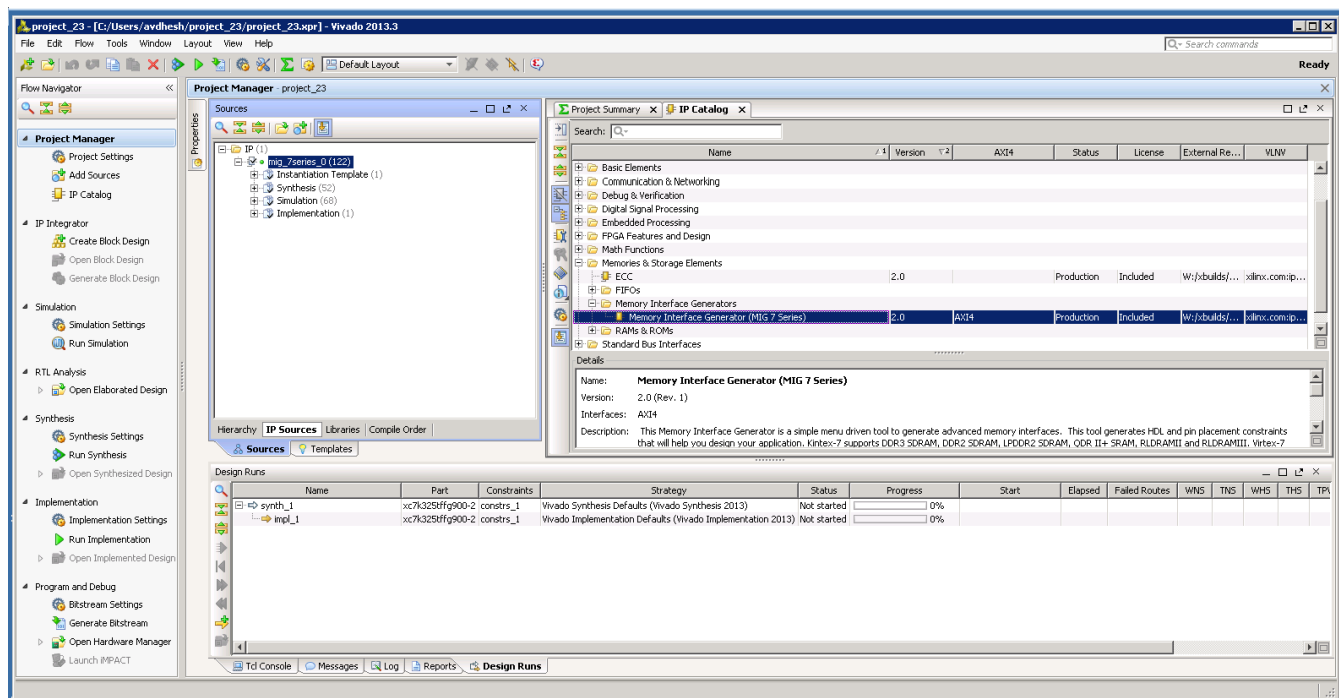


Figure 3-27: Vivado Tool Project Window (After IP Generation)

- After project creation, the XCI file is added to the Project Hierarchy. The same view also displays the module hierarchies of the user design. The list of HDL and XDC files is available in the **IP Sources** view in the **Sources** window. Double-clicking on any module or file opens the file in the Vivado Editor. These files are read only.

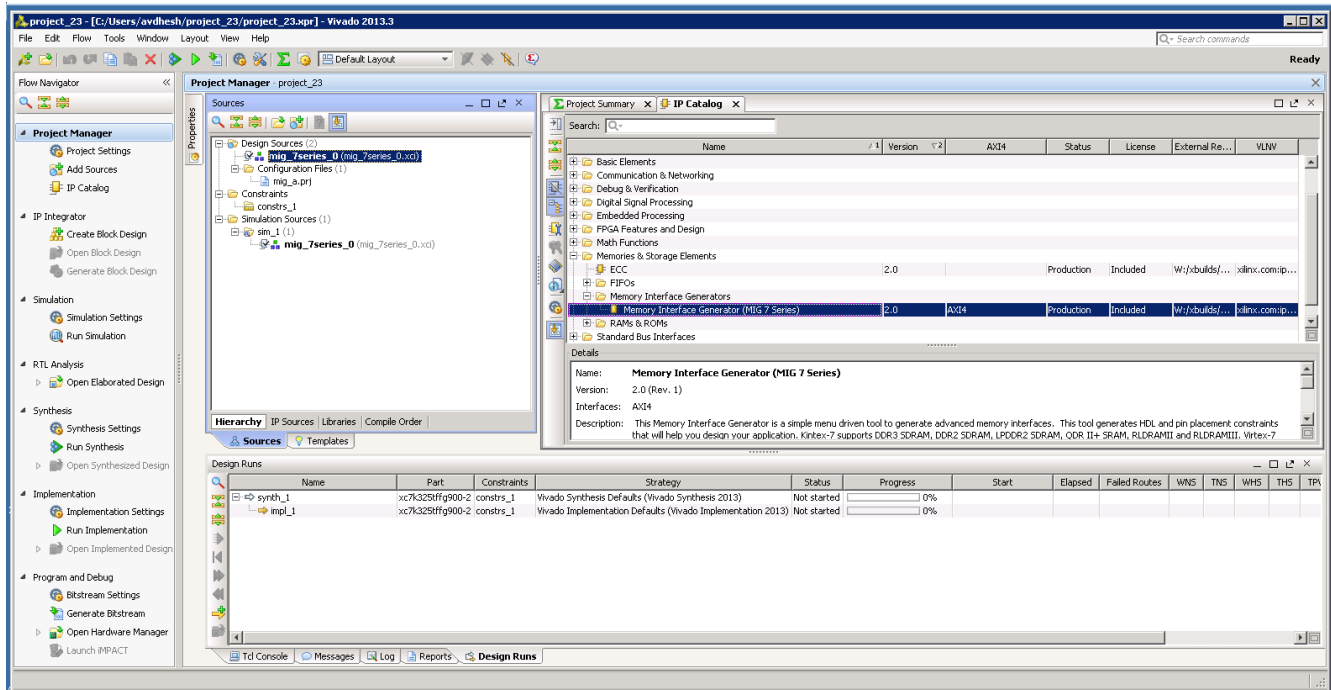


Figure 3-28: Vivado Tool Project Sources Window

Design generation from MIG can be generated using the **Create Design** flow or the **Verify Pin Changes** and **Update Design** flows. There is no difference between the flow when generating the design from the MIG tool. Irrespective of the flow by which designs are generated from the MIG tool, the XCI file is added to the Vivado tool project. The implementation flow is the same for all scenarios because the flow depends on the XCI file added to the project.

6. All MIG generated user design RTL and XDC files are automatically added to the project. If files are modified and you wish to regenerate them, right-click the XCI file and select **Generate Output Products** (Figure 3-29).

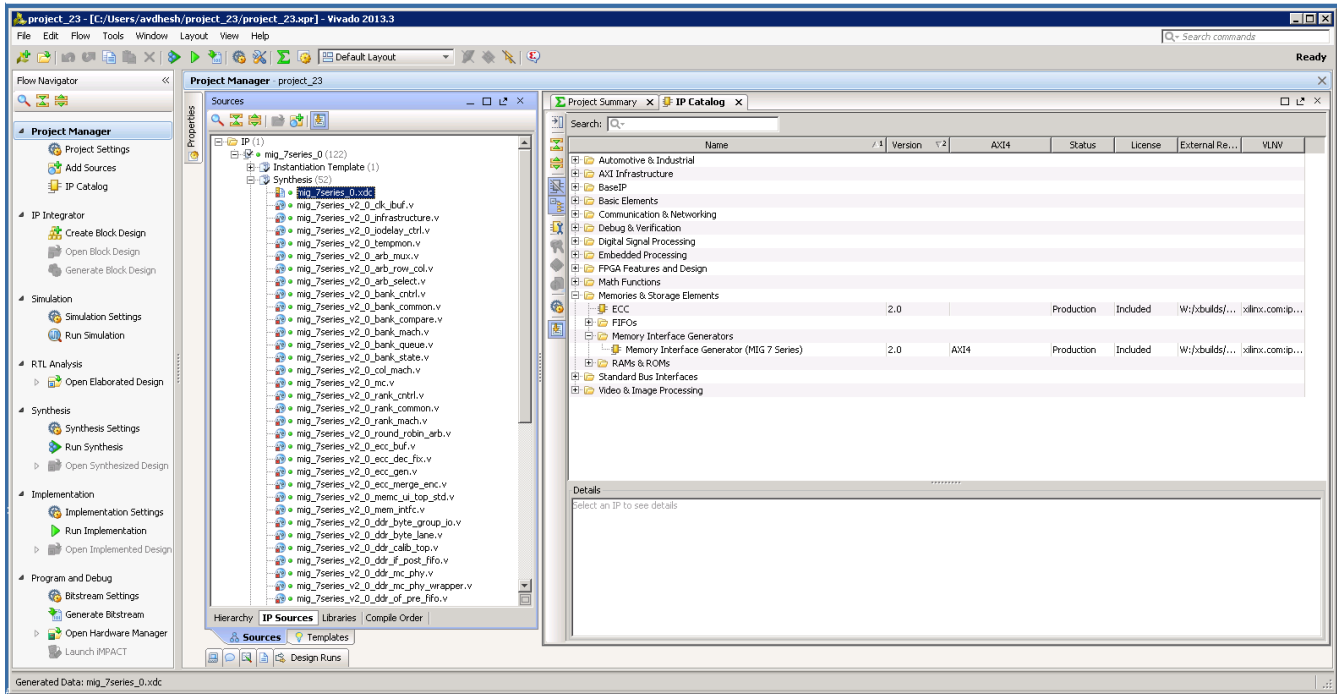


Figure 3-29: Generate RTL and Constraints

7. Clicking **Generate Output Products** option brings up the **Manage Outputs** window (Figure 3-30).

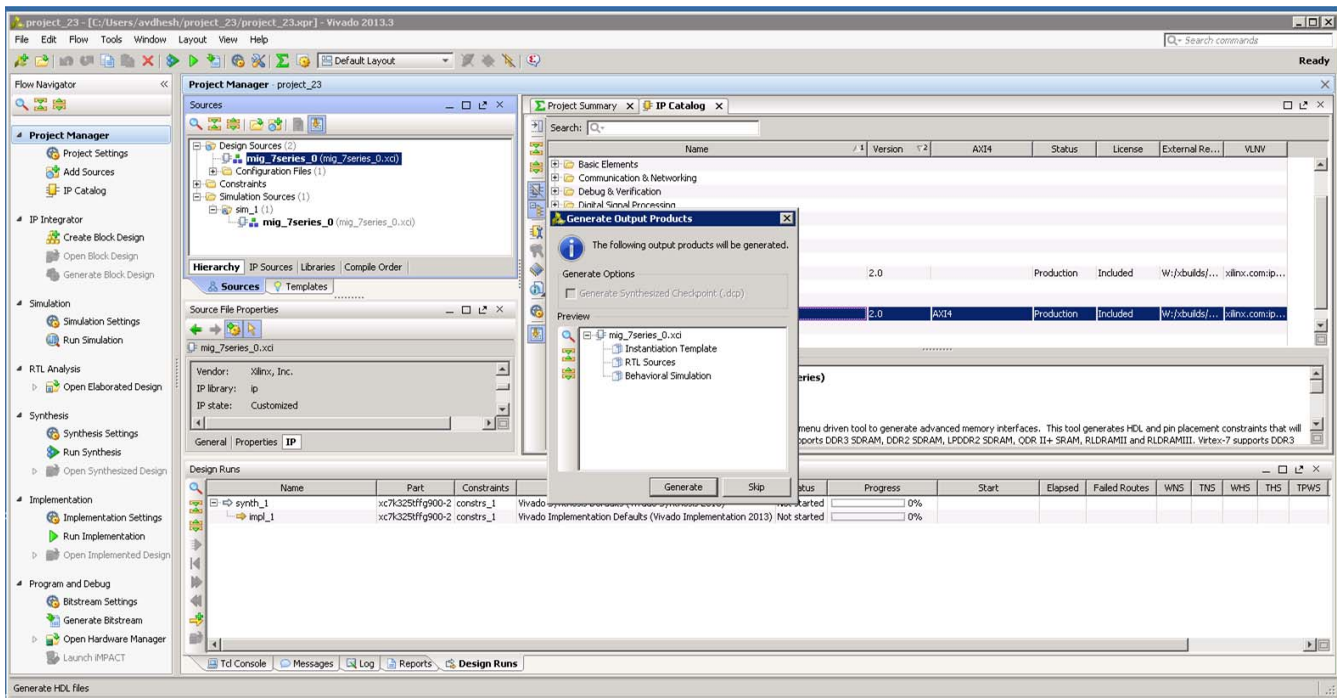


Figure 3-30: Generate Window

8. All user-design RTL files and constraints files (XDC files) can be viewed in the **Sources > Libraries** tab (Figure 3-31).

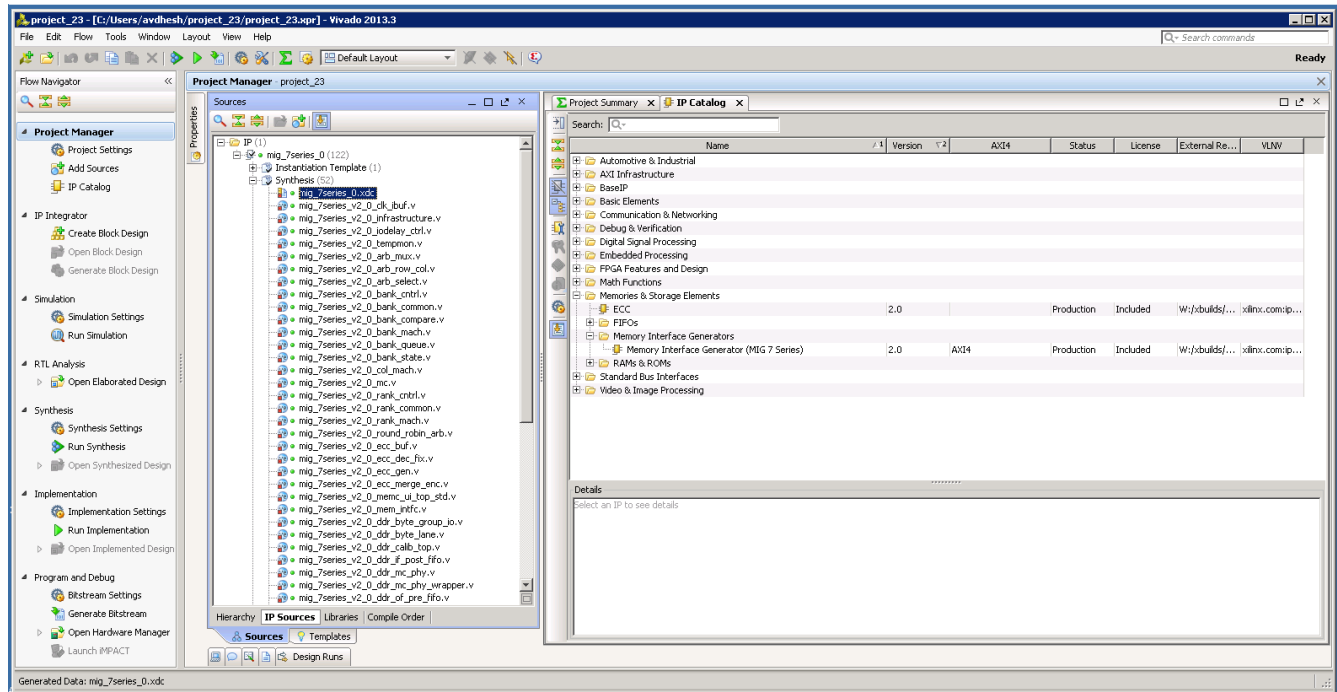


Figure 3-31: Vivado Project – RTL and Constraints Files

9. The Vivado Design Suite supports **Open IP Example Design** flow. To create the example design using this flow right-click the IP in the **Source Window**, as shown in Figure 3-32 and select.

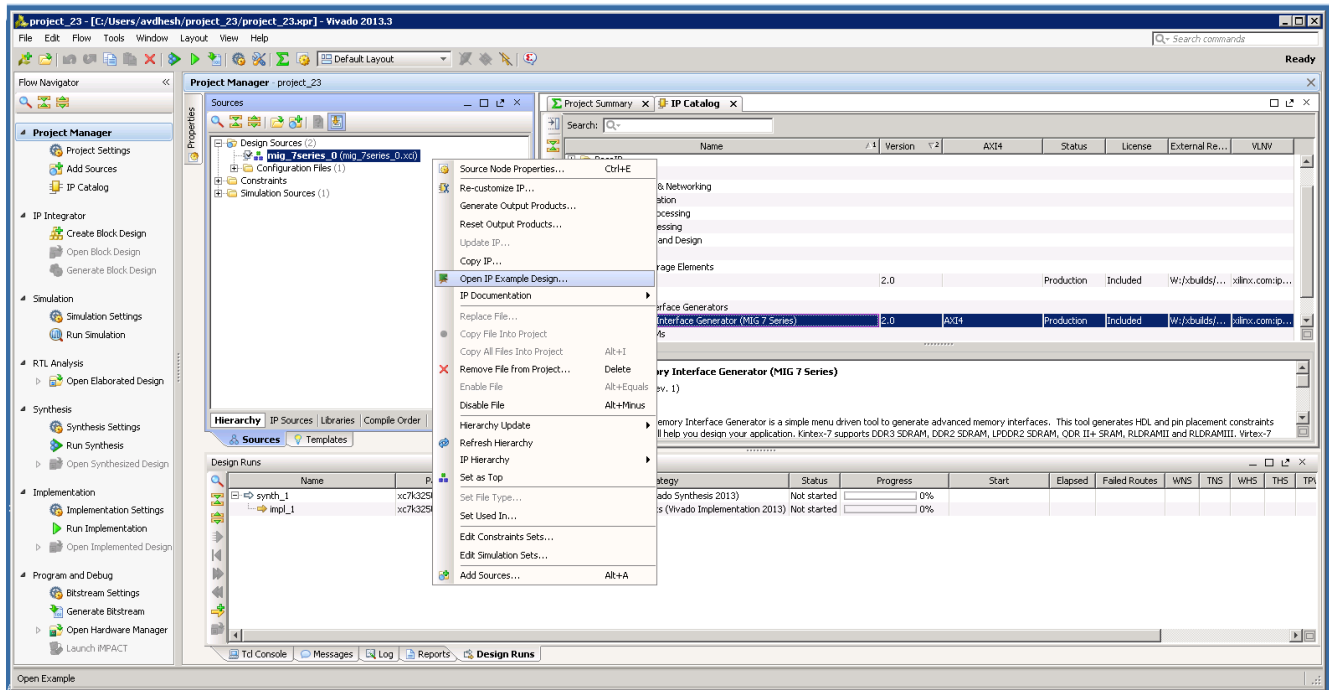


Figure 3-32: Open IP Example Design

10. This option creates a new Vivado project. Selecting the menu brings up a dialog box, which guides you to the directory for a new design project. Select a directory (or use the defaults) and click **OK**.

This launches a new Vivado project with all example design files and a copy of the IP. This project has `example_top` as the Implementation top directory, and `sim_tb_top` as the Simulation top directory, as shown in Figure 3-33.

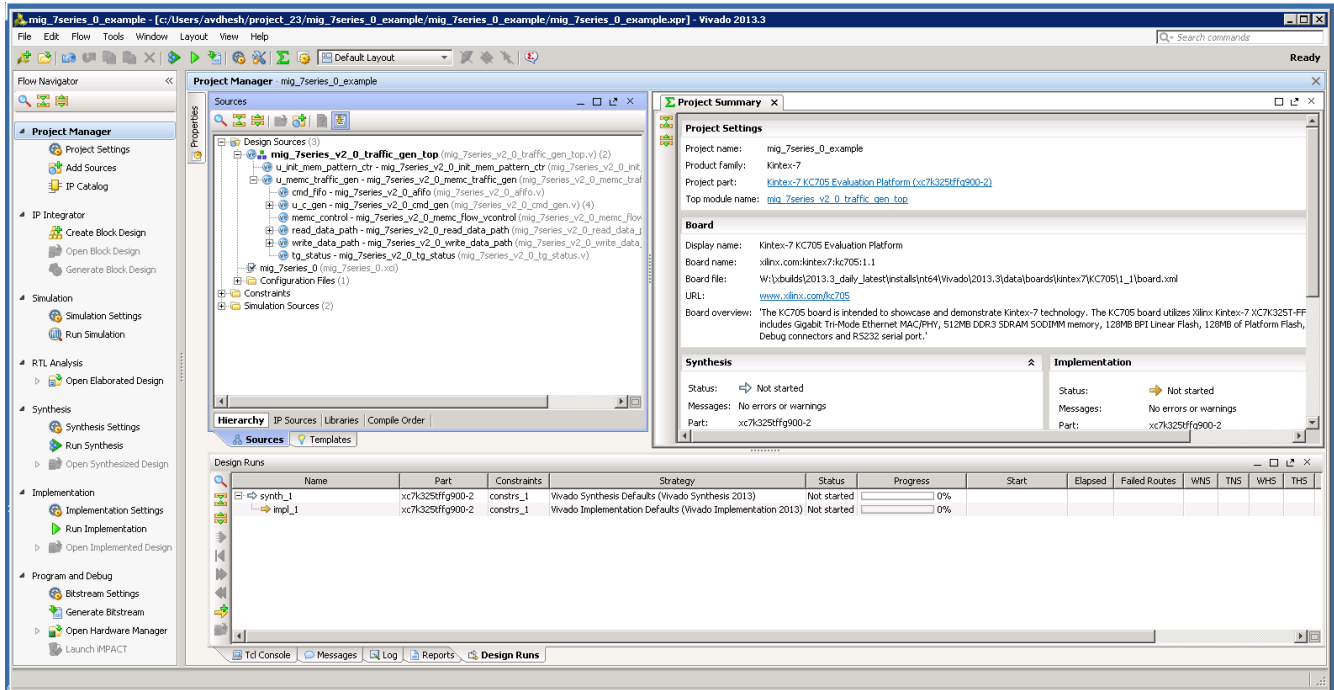


Figure 3-33: Example Design Project

- Click **Generate Bitstream** under **Project Manager > Program and Debug** to generate the BIT file for the generated design.

The <project directory>/<project directory>.runs/ impl_1 directory includes all report files generated for the project after running the implementation. It is also possible to run the simulation in this project.

- Recustomization of the MIG IP core can be done by using the **Recustomize IP** option. It is not recommended to recustomize the IP in the example_design project. The correct solution is to close the example_design project, go back to original project and customize there. Right-click the XCI file and click **Recustomize IP** (Figure 3-34) to open the MIG GUI and regenerate the design with the preferred options.

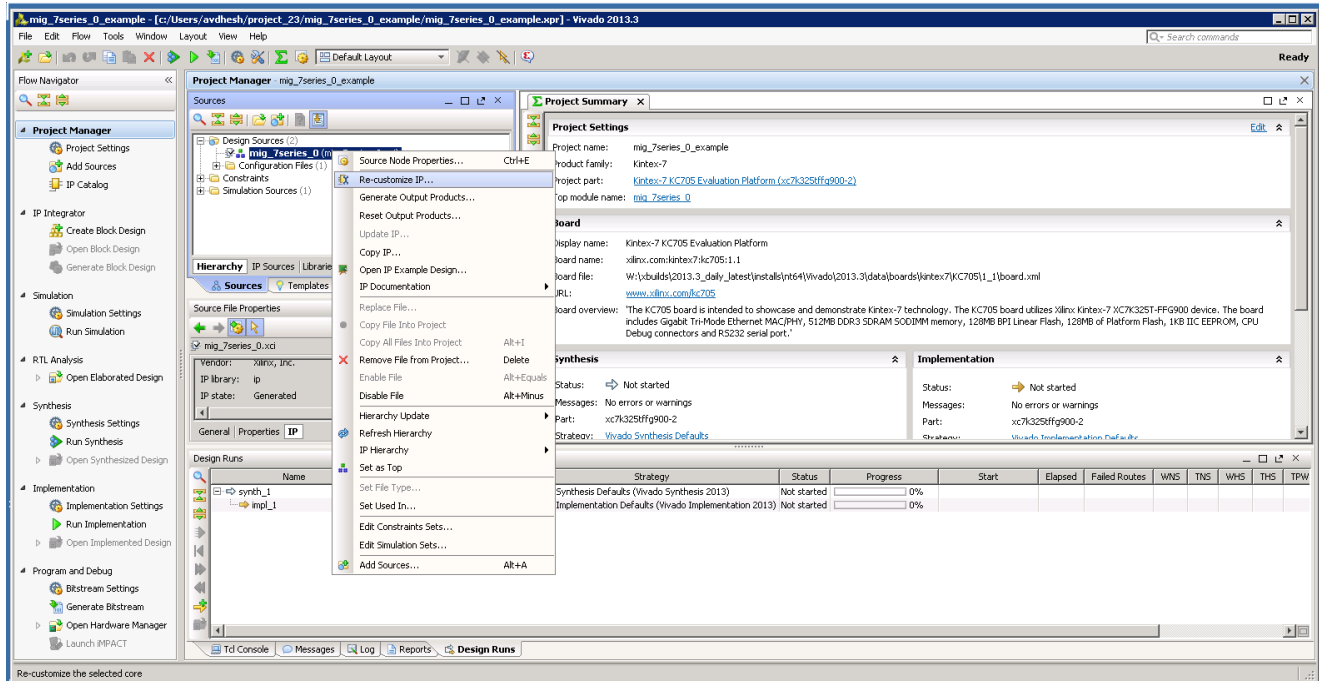


Figure 3-34: Recustomize IP

Directory Structure and File Descriptions


This section explains the MIG tool directory structure and provides detailed output file descriptions.

Output Directory Structure

The MIG tool places all output files and directories in a folder called `<component name>`, where `<component name>` was specified on the [MIG Output Options, page 388](#) of the MIG design creation flow.

The output directory structure of the selected Memory Controller (MC) design from the MIG tool is shown here. There are three folders created within the `<component name>` directory:

- docs
- example_design
- user_design

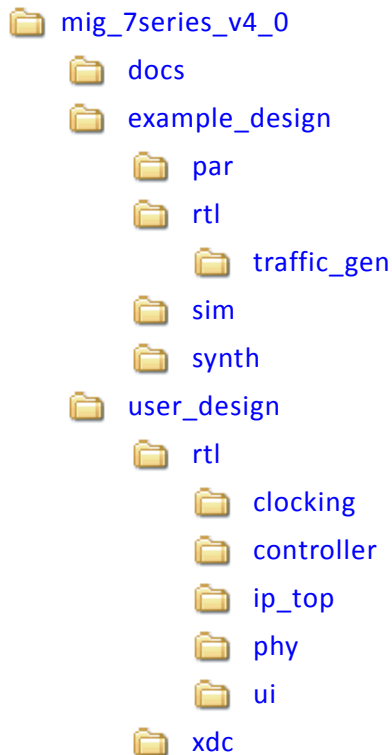

Directory and File Contents

The 7 series FPGAs core directories and their associated files are listed in this section for Vivado implementations.

<component name>/example_design/

The example_design directory structure contains all necessary RTL, constraints, and script files for simulation and implementation of the complete MIG example design with a test bench.

Table 3-1 lists the files in the example_design/rtl directory.

Table 3-1: Files in example_design/rtl Directory

Name	Description
example_top.v	This top-level module serves as an example for connecting the user design to the 7 series FPGAs memory interface core.

Table 3-2 lists the files in the `example_design/rtl/traffic_gen` directory.

Table 3-2: Files in example_design/rtl/traffic_gen Directory

Name ⁽¹⁾	Description
<code>memc_traffic_gen.v</code>	This is the top-level of the traffic generator.
<code>cmd_gen.v</code>	This is the command generator. This module provides independent control of generating the types of commands, addresses, and burst lengths.
<code>cmd_prbs_gen.v</code>	This is a pseudo-random binary sequence (PRBS) generator for generating PRBS commands, addresses, and burst lengths.
<code>memc_flow_vcontrol.v</code>	This module generates flow control logic between the Memory Controller core and the <code>cmd_gen</code> , <code>read_data_path</code> , and <code>write_data_path</code> modules.
<code>read_data_path.v</code>	This is the top-level for the read datapath.
<code>read_posted_fifo.v</code>	This module stores the read command sent to the Memory Controller; its FIFO output is used to generate expected data for read data comparisons.
<code>rd_data_gen.v</code>	This module generates timing control for reads and ready signals to <code>mem_flow_vcontrol.v</code> .
<code>write_data_path.v</code>	This is the top-level for the write datapath.
<code>wr_data_g.v</code>	This module generates timing control for writes and ready signals to <code>mem_flow_vcontrol.v</code> .
<code>s7ven_data_gen.v</code>	This module generates different data patterns.
<code>a_fifo.v</code>	This is a synchronous FIFO using LUT RAMs.
<code>data_prbs_gen.v</code>	This is a 32-bit linear feedback shift register (LFSR) for generating PRBS data patterns.
<code>init_mem_pattern_ctr.v</code>	This module generates flow control logic for the traffic generator.
<code>traffic_gen_top.v</code>	This module is the top-level of the traffic generator and comprises the <code>memc_traffic_gen</code> and <code>init_mem_pattern_ctr</code> modules.

Notes:

1. All file names are prefixed with the MIG version number. For example, for the MIG 4.0 release module name of `cmd_gen` in generated output is now `mig_7series_v4_0_cmd_gen`.

Table 3-3 lists the files in the `example_design/sim` directory.

Table 3-3: Files in example_design/sim Directory

Name	Description
<code>ies_run.sh</code> ⁽¹⁾	Linux Executable file for simulating the design using IES simulator.
<code>vcs_run.sh</code> ⁽¹⁾	Linux Executable file for simulating the design using VCS simulator.
<code>readme.txt</code> ⁽¹⁾	Contains the details and prerequisites for simulating the designs using QuestaSim, IES, and VCS simulators.

Table 3-3: Files in example_design/sim Directory (Cont'd)

Name	Description
sim_tb_top.v	This file is the simulation top-level file.

Notes:

1. The ies_run.sh and vcs_run.sh files are generated in the folder mig_7series_0_example/mig_7series_0_example.srscs/sim_1/imports/sim when the example design is created using **Open IP Example Design** for the design generated with **Component Name** entered in Vivado IDE as mig_7series_0.

<component name>/user_design/

The user_design folder contains the following:

- rtl and xdc folders
- Top-level wrapper module <component_name>.v/vhd
- Top-level modules <component_name>_mig.v/vhd and <component_name>_mig_sim.v/vhd

The top-level wrapper file <component_name>.v/vhd has an instantiation of top-level file <component_name>_mig.v/vhd. Top-level wrapper file has no parameter declarations and all the port declarations are of fixed width.

Top-level files <component_name>_mig.v/vhd and <component_name>_mig_sim.v/vhd have the same module name as <component_name>_mig. These two files are same in all respects except that the file <component_name>_mig_sim.v/vhd has parameter values set for simulation where calibration is in fast mode viz., SIM_BYPASS_INIT_CAL = "FAST" etc.



IMPORTANT: The top-level file <component_name>_mig.v/vhd is used for design synthesis and implementation, whereas the top-level file <component_name>_mig_sim.v/vhd is used in simulations.

The top-level wrapper file serves as an example for connecting the user_design to the 7 series FPGA memory interface core.

user_design/rtl/controller

Table 3-4 lists the files in the user_design/rtl/controller directory.

Table 3-4: Files in user_design/rtl/controller Directory

Name ⁽¹⁾	Description
rld_mc.v	This module implements the Memory Controller.

Notes:

1. All file names are prefixed with MIG version number. For example, for the MIG 4.0 release module name of rld_mc in generated output is now mig_7series_v4_0_rld_mc.

user_design/rtl/ui

Table 3-5 lists the files in the user_design/rtl/ui directory.

Table 3-5: Files in user_design/rtl/ui Directory

Name ⁽¹⁾	Description
rld_ui_top.v	This is the top-level wrapper for the user interface.
rld_ui_wr.v	This module generates the FIFOs used to buffer write data for the user interface.
rld_ui_addr.v	This module generates the FIFOs used to buffer address and commands for the user interface.

Notes:

1. All file names are prefixed with the MIG version number. For example, for the MIG 4.0 release module name of rld_ui_top in generated output is now mig_7series_v4_0_rld_ui_top.

user_design/rtl/phy

Table 3-6 lists the files in the user_design/rtl/phy directory.

Table 3-6: Files in user_design/rtl/phy Directory

Name ⁽¹⁾	Description
rld_phy_top.v	This is the top-level module for the physical layer file.
rld_phy_write_top.v	This is the top-level wrapper for the write path.
qdr_rld_phy_read_top.v	This is the top-level of the read path.
qdr_rld_mc_phy.v	This module is a parameterizable wrapper instantiating up to three I/O banks each with four-lane PHY primitives.
rld_phy_write_init_sm.v	This module contains the logic for the initialization state machine.
rld_phy_write_control_io.v	This module contains the logic for the control signals going to the memory.
rld_phy_write_data_io.v	This module contains the logic for the data and byte writes going to the memory.
qdr_rld_prbs_gen.v	This PRBS module uses a many-to-one feedback mechanism for 2n sequence generation.
qdr_rld_phy_ck_addr_cmd_delay.v	This module contains the logic to provide the required delay on the address and control signals.
qdr_rld_phy_rdlvl.v	This module contains the logic for stage 1 calibration.
qdr_rld_phy_read_stage2_cal.v	This module contains the logic for stage 2 calibration.
qdr_rld_phy_read_data_align.v	This module realigns the incoming data.
qdr_rld_phy_read_vld_gen.v	This module contains the logic to generate the valid signal for the read data returned on the user interface.
rld_phy_byte_lane_map.v	This module handles the vector remapping between the mc_phy module ports and the user memory ports.

Table 3-6: Files in user_design/rtl/phy Directory (Cont'd)

Name ⁽¹⁾	Description
qdr_rld_phy_4lanes.v	This module is the parameterizable four-lane PHY in an I/O bank.
qdr_rld_byte_lane.v	This module contains the primitive instantiations required within an output or input byte lane.
qdr_rld_byte_group_io.v	This module contains the parameterizable I/O logic instantiations and the I/O terminations for a single byte lane.
rld_phy_write_cal.v	This module contains the logic for performing write calibration.

Notes:

1. All file names are prefixed with the MIG version number. For example, for the MIG 4.0 release module name of rld_phy_top in generated output is now mig_7series_v4_0_rld_phy_top.

user_design/rtl/xdc

Table 3-7 lists the files in the user_design/xdc directory.

Table 3-7: Files in user_design/xdc Directory

Name	Description
<component name>.xdc	This file is the XDC for the core of the user design.

Verify Pin Changes and Update Design

This feature verifies the input XDC for bank selections, byte selections, and pin allocation. It also generates errors and warnings in a separate dialog box when you click **Validate** on the page. This feature is useful to verify the XDC for any pinout changes made after the design is generated from the MIG tool. You must load the MIG generated .prj file, the original .prj file without any modifications, and the XDC that needs to be verified. In the Vivado IP catalog, the recustomization option should be selected to reload the project. The design is allowed to generate only when the MIG DRC is met. Ignore warnings about validating the pinout, which is the intent. Just validating the XDC is not sufficient; it is mandatory to proceed with design generation to get the XDC with updated clock and phaser related constraints and RTL top-level module for various updated Map parameters.

The Update Design feature is required in the following scenarios:

- A pinout is generated using an older version of MIG and the design is to be revised to the current version of MIG. In MIG the pinout allocation algorithms have been changed for certain MIG designs.
- A pinout is generated independent of MIG or is modified after the design is generated. When a design is generated from MIG, the XDC and HDL code are generated with the correct constraints.

Here are the rules verified from the input XDC:

- If a pin is allocated to more than one signal, the tool reports an error. Further verification is not done if the XDC does not adhere to the uniqueness property.
- Verified common rules:
 - The interface can span across a maximum of three consecutive banks.
 - Interface banks should reside in the same column of the FPGA.
 - Interface banks should be either High Performance (HP) or High Range (HR). HP banks are used for the high frequencies.
 - The chosen interface banks should have the same SLR region if the chosen device is of stacked silicon interconnect technology.
 - V_{REF} I/Os should be used as GPIOs when an internal V_{REF} is used or if there are no input and input ports in a bank.
 - The I/O standard of each signal is verified as per the configuration chosen.
 - The VCCAUX I/O of each signal is verified and provides a warning message if the provided VCCAUX I/O is not valid.
- Verified data pin rules:
 - Pins related to one strobe set should reside in the same byte group.
 - Write clocks (DK/DK#) should be allocated to the DQS I/O pair.
 - Read clocks (QK/QK#) should be allocated to the MRCC pins for RLDRAM II and should be allocated to DQS I/O pair for RLDRAM 3.
 - Data (DQ) pins should not be allocated to DQS N pin.
 - An FPGA byte lane should not contain pins related to two different strobe sets.
 - V_{REF} I/O can be used only when the internal V_{REF} is chosen.
- Verified address pin rules:
 - Address signals cannot mix with data bytes.
 - It can use any number of isolated byte lanes
- Verified system pin rules:
 - System clock:
 - These pins should be allocated to either SR/MR CC I/O pair.
 - These pins must be allocated in the Memory banks column.
 - If the selected system clock type is single-ended, you need to check whether the reference voltage pins are unallocated in the bank or the internal V_{REF} is used.

- Reference clock:
 - These pins should be allocated to either SR/MR CC I/O pair.
 - If the selected system clock type is single-ended, you need to check whether the reference voltage pins are unallocated in the bank or the internal V_{REF} is used.
- Status signals:
 - The `sys_rst` signal should be allocated in the bank where the V_{REF} I/O is unallocated or the internal V_{REF} is used.
 - These signals should be allocated in the non-memory banks because the I/O standard is not compatible. The I/O standard type should be LVCMOS with at least 1.8V.
 - These signals can be allocated in any of the columns (there is no hard requirement because these signals should reside in a memory column); however, it is better to allocate closer to the chosen memory banks.

Quick Start Example Design

Overview

After the core is successfully generated, the example design HDL can be processed through the Xilinx implementation toolset.

Implementing the Example Design

For more information on using an IP example design, see the *Vivado Design Suite User Guide: Designing with IP* (UG896) [\[Ref 7\]](#).

Simulating the Example Design (for Designs with the Standard User Interface)

The MIG tool provides a synthesizable test bench to generate various traffic data patterns to the Memory Controller (MC). This test bench consists of a `rld_memc_ui_top` wrapper, a `traffic_generator` that generates traffic patterns through the user interface to a `rld_ui_top` core, and an infrastructure core that provides clock resources to the `rld_memc_ui_top` core. A block diagram of the example design test bench is shown in [Figure 3-35](#).

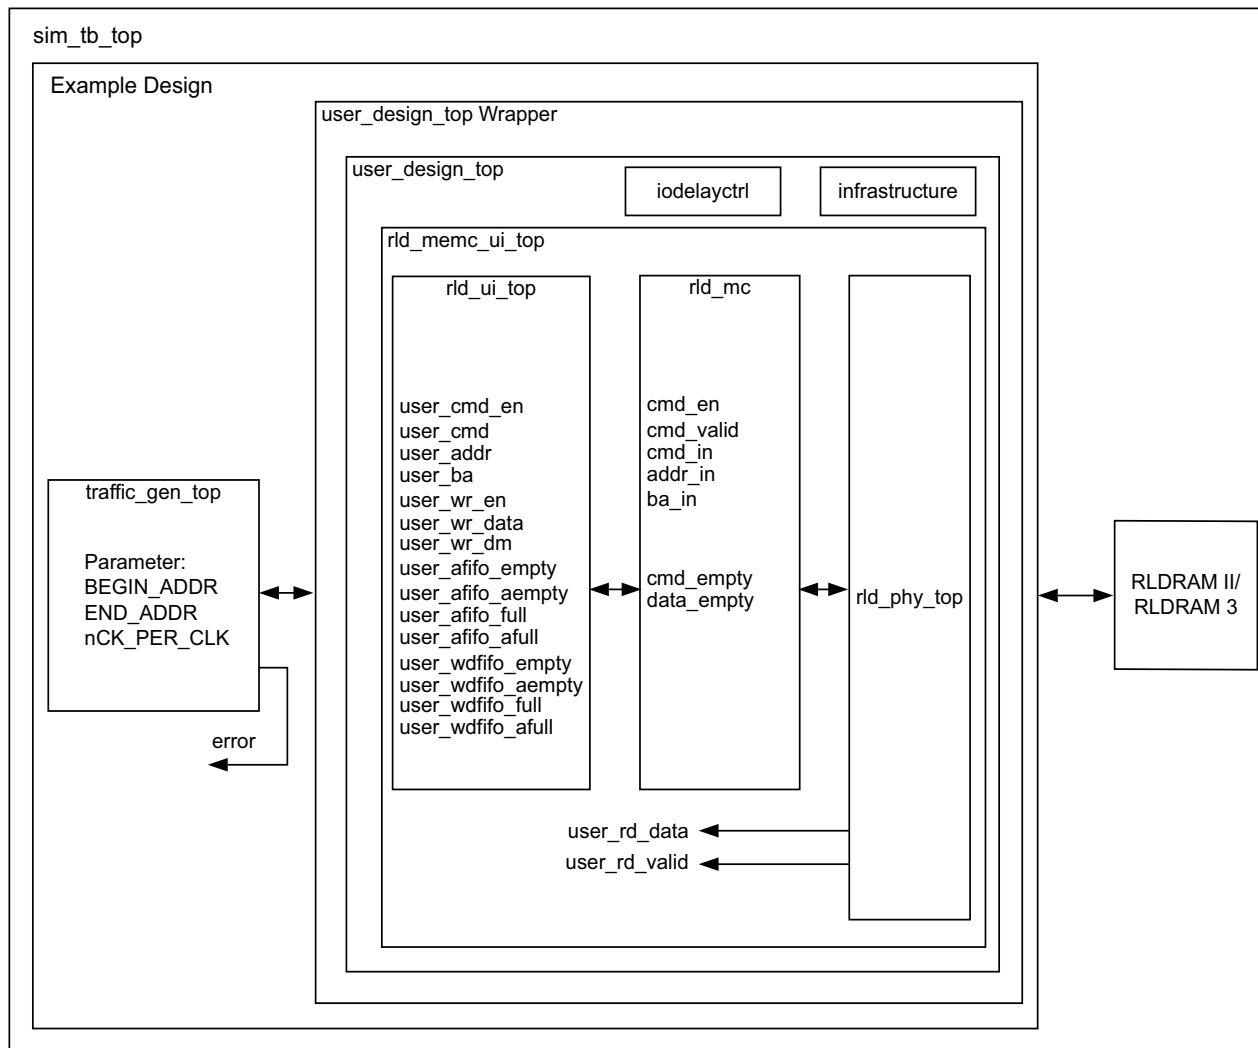


Figure 3-35: Synthesizable Example Design Block Diagram

[illegible]

Memory user interface asserts `user_rd_valid` to indicate valid data is returning from memory.

Figure 3-36: User Interface Read and Write Cycle

Traffic Generator Operation

The traffic generator module contained within the synthesizable test bench can be parameterized to create various stimulus patterns for the memory design. It can produce repetitive test patterns for verifying design integrity as well as pseudo-random data streams that model real-world traffic.

You can define the address range through the `BEGIN_ADDRESS` and `END_ADDRESS` parameters. The Init Memory Pattern Control block directs the traffic generator to step sequentially through all the addresses in the address space, writing the appropriate data value to each location in the memory device as determined by the selected data pattern. By default, the test bench uses the address as the data pattern, but the data pattern in this example design can be modified using `vio_data_mode` signals that can be modified within the Vivado logic analyzer feature.

When the memory has been initialized, the traffic generator begins stimulating the user interface port to create traffic to and from the memory device. By default, the traffic generator sends pseudo-random commands to the port, meaning that the instruction sequences (R/W, R, W) and addresses are determined by PRBS generator logic in the traffic generator module.

The read data returning from the memory device is accessed by the traffic generator through the user interface read data port and compared against internally generated “expect” data. If an error is detected (that is, there is a mismatch between the read data and expected data), an error signal is asserted and the readback address, readback data, and expect data are latched into the error_status outputs.

Modifying the Example Design

The provided example_top design comprises traffic generator modules and can be modified to tailor different command and data patterns. A few high-level parameters can be modified in the example_top.v/vhd module. Table 3-8 describes these parameters.

Table 3-8: Traffic Generator Parameters Set in the example_top Module

Parameter	Description	Value
FAMILY	Indicates the family type.	“VIRTEX7”
MEMORY_TYPE	Indicate the Memory Controller type.	Current support is DDR2 SDRAM, DDR3 SDRAM, QDR II+ SRAM, and RLD RAM II.
nCK_PER_CLK	This is the Memory Controller clock to DRAM clock ratio. This parameter should not be changed.	RLD RAM II: 2 RLD RAM 3: 4
NUM_DQ_PINS	The is the total memory DQ bus width.	This parameter supports DQ widths from 8 to a maximum of 72 in increments of 9. The available maximum DQ width is frequency dependent on the selected memory device.
MEM_BURST_LEN	This is the memory data burst length.	This must be set to 8.
MEM_COL_WIDTH	This is the number of memory column address bits.	This must be set to 10.
DATA_WIDTH	This is the user interface data bus width.	$2 \times \text{nCK_PER_CLK} \times \text{NUM_DQ_PINS}$
ADDR_WIDTH	This is the memory address bus width.	
MASK_SIZE	This parameter specifies the mask width in the user interface data bus.	This must be set to DATA_WIDTH/8.
PORT_MODE	Sets the port mode.	BI_MODE: Generate a WRITE data pattern and monitor the READ data for comparison.
BEGIN_ADDRESS	Sets the memory start address boundary.	This parameter defines the start boundary for the port address space. The least-significant Bits[3:0] of this value are ignored.
END_ADDRESS	Sets the memory end address boundary.	This parameter defines the end boundary for the port address space. The least-significant Bits[3:0] of this value are ignored.

Table 3-8: Traffic Generator Parameters Set in the example_top Module (Cont'd)

Parameter	Description	Value
PRBS_EADDR_MASK_POS	Sets the 32-bit AND MASK position.	This parameter is used with the PRBS address generator to shift random addresses down into the port address space. The END_ADDRESS value is ANDed with the PRBS address for bit positions that have a 1 in this mask.
PRBS_SADDR_MASK_POS	Sets the 32-bit OR MASK position.	This parameter is used with the PRBS address generator to shift random addresses up into the port address space. The START_ADDRESS value is ORed with the PRBS address for bit positions that have a 1 in this mask
CMD_PATTERN	This parameter sets the command pattern circuits to be generated. For a larger device, the CMD_PATTERN can be set to "CGEN_ALL." This parameter enables all supported command pattern circuits to be generated. However, it is sometimes necessary to limit a specific command pattern because of limited resources in a smaller device.	Valid settings for this signal are: <ul style="list-style-type: none"> • CGEN_FIXED – The address, burst length, and instruction are taken directly from the fixed_addr_i, fixed_bl_i, and fixed_instr_i inputs. • CGEN_SEQUENTIAL – The address is increased sequentially, and the increment is determined by the data port size. • CGEN_PRBS – A 32-stage Linear Feedback Shift register (LFSR) generates pseudo-random addresses, burst lengths, and instruction sequences. The seed can be set from the 32-bit cmd_seed input. • CGEN_ALL (default) – This option turns on all of the options above and allows addr_mode_i, instr_mode_i, and bl_mode_i to select the type of generation during run time.

Table 3-8: Traffic Generator Parameters Set in the example_top Module (Cont'd)

Parameter	Description	Value
DATA_PATTERN	This parameter sets the data pattern circuits to be generated through RTL logic. For larger devices, the DATA_PATTERN can be set to "DGEN_ALL," enabling all supported data pattern circuits to be generated. In hardware, the data pattern is selected and/or changed using vio_data_value_mode. The pattern can only be changed when DATA_PATTERN is set to DGEN_ALL.	Valid settings for this parameter are: <ul style="list-style-type: none"> • ADDR (default) – The address is used as a data pattern. • HAMMER – All 1s are on the DQ pins during the rising edge of DQS, and all 0s are on the DQ pins during the falling edge of DQS. • WALKING1 – Walking 1s are on the DQ pins and the starting position of 1 depends on the address value. • WALKING0 – Walking 0s are on the DQ pins and the starting position of 0 depends on the address value. • NEIGHBOR – The Hammer pattern is on all DQ pins except one. The address determines the exception pin location. • PRBS – A 32-stage LFSR generates random data and is seeded by the starting address. • DGEN_ALL – This option turns on all available options: <ul style="list-style-type: none"> 0x1: FIXED – 32 bits of fixed_data. 0x2: ADDRESS – 32 bits address as data. 0x3: HAMMER 0x4: SIMPLE8 – Simple 8 data pattern that repeats every 8 words. 0x5: WALKING1s – Walking 1s are on the DQ pins. 0x6: WALKING0s – Walking 0s are on the DQ pins. 0x7: PRBS – A 32-stage LFSR generates random data. This mode only works with either a PRBS address or a SEQUENTIAL address pattern. 0x9: SLOW HAMMER – This is the slow MHz hammer data pattern. 0xA: PHY_CALIB pattern – 0xFF, 00, AA, 55, 55, AA, 99, 66. This mode only generates READ commands at address zero.
CMDS_GAP_DELAY	This parameter allows pause delay between each user burst command.	Valid values: 0 to 32.
SEL_VICTIM_LINE	Select a victim DQ line whose state is always at logic High.	This parameter only applies to the Hammer pattern. Valid settings for this parameter are 0 to NUM_DQ_PINS. When value = NUM_DQ_PINS, all DQ pins have the same Hammer pattern.

Table 3-8: Traffic Generator Parameters Set in the example_top Module (Cont'd)

Parameter	Description	Value
EYE_TEST	Force the traffic generator to only generate writes to a single location, and no read transactions are generated.	Valid settings for this parameter are "TRUE" and "FALSE." When set to "TRUE," any settings in vio_instr_mode_value are overridden.

Notes:

1. The traffic generator might support more options than are available in the FPGA Memory Controller. The settings must match supported values in the Memory Controller.

The command patterns `instr_mode_i`, `addr_mode_i`, `bl_mode_i`, and `data_mode_i` of the `traffic_gen` module can each be set independently. The provided `init_mem_pattern_ctr` module has interface signals that allow you to modify the command pattern in real-time using the Vivado logic analyzer feature virtual I/O (VIO) core.

This is the varying command pattern:

1. Set `vio_modify_enable` to 1.
2. Set `vio_addr_mode_value` to:
 - 1: Fixed_address.
 - 2: PRBS address.
 - 3: Sequential address.
3. Set `vio_bl_mode_value` to:
 - 1: Fixed bl.
 - 2: PRBS bl. If `bl_mode` value is set to 2, the `addr_mode` value is forced to 2 to generate the PRBS address.
4. Set `vio_data_mode_value` to:
 - 0: Reserved.
 - 1: FIXED data mode. Data comes from the `fixed_data_i` input bus.
 - 2: DGEN_ADDR (default). The address is used as the data pattern.
 - 3: DGEN_HAMMER. All 1s are on the DQ pins during the rising edge of DQS, and all 0s are on the DQ pins during the falling edge of DQS.
 - 4: DGEN_NEIGHBOR. All 1s are on the DQ pins during the rising edge of DQS except one pin. The address determines the exception pin location.

5: DGEN_WALKING1. Walking 1s are on the DQ pins. The starting position of 1 depends on the address value.

6: DGEN_WALKING0. Walking 0s are on the DQ pins. The starting position of 0 depends on the address value.

7: DGEN_PRBS. A 32-stage LFSR generates random data and is seeded by the starting address. The PRBS data pattern only works together with a PRBS address or a sequential address.

Core Architecture

Overview

Figure 3-37 shows a high-level block diagram of the RLDRAM II and RLDRAM 3 memory interface solution. This figure shows both the internal FPGA connections to the client interface for initiating read and write commands, and the external interface to the memory device.

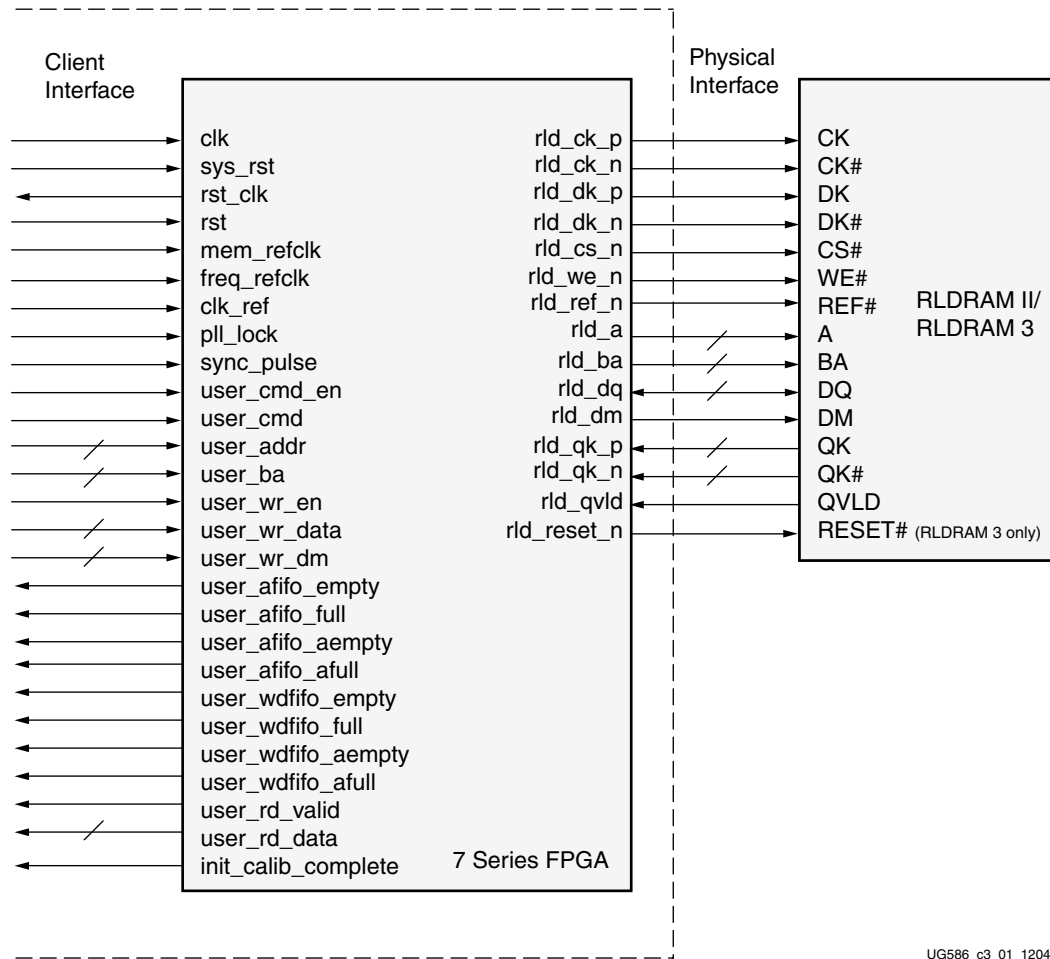


Figure 3-37: High-Level Block Diagram of RLD RAM II/RLD RAM 3 Interface Solution

The core is composed of these elements, as shown in [Figure 3-38](#):

- Client Interface
- Memory Controller
- Physical Interface
- Read Path
- Write Path

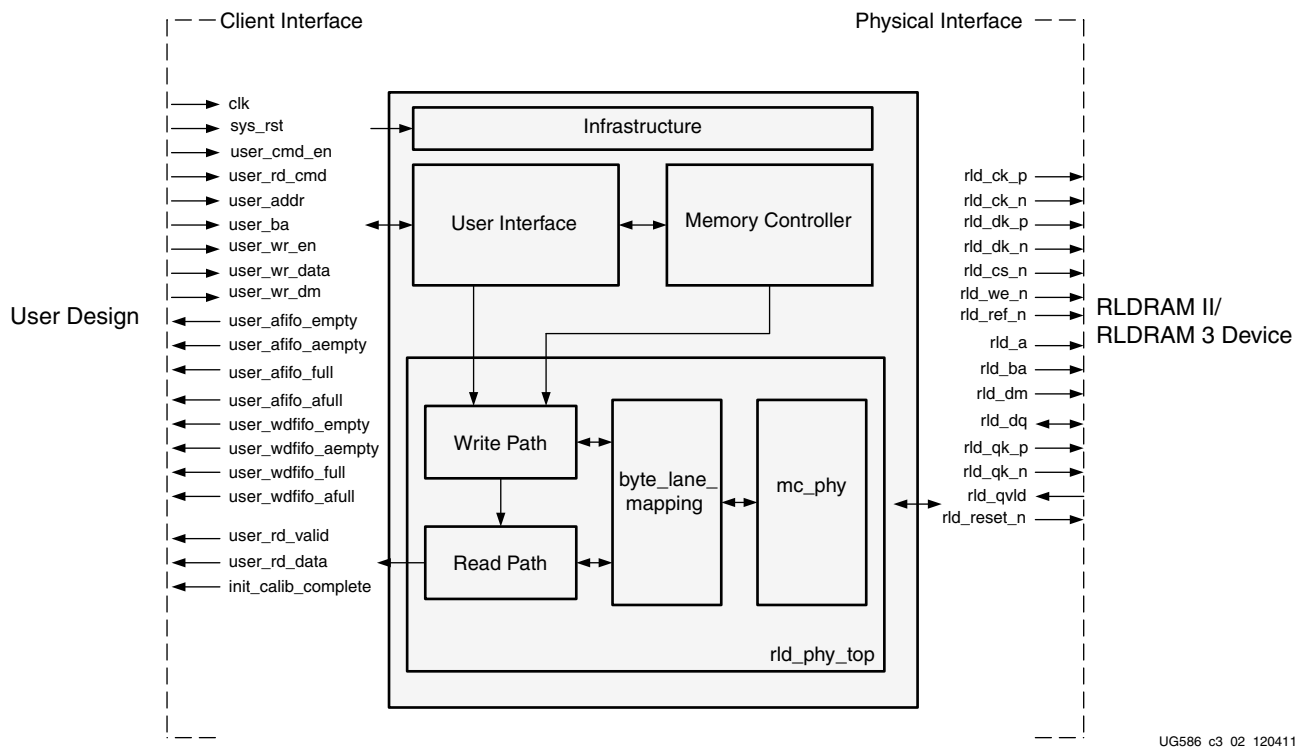


Figure 3-38: Components of the RLD RAM II/RLD RAM 3 Memory Interface Solution

The client interface (also known as the user interface) uses a simple protocol based entirely on SDR signals to make read and write requests. For more details describing this protocol, see the [Client Interface](#) section.

The Memory Controller takes commands from the user interface and adheres to the protocol requirements of the RLD RAM II/RLD RAM 3 device. For more information, see the [Memory Controller](#) section.

The physical interface generates the proper timing relationships and DDR signaling to communicate with the external memory device, while conforming to the RLD RAM II/RLD RAM 3 protocol and timing requirements. For more details, see the [Physical Interface](#) section.

Within the PHY, logic is broken up into read and write paths. The write path generates the RLDRAM II/RLDRAM 3 signaling for generating read and write requests. This includes clocking, control signals, address, data, and data mask signals. The read path is responsible for calibration and providing read responses back to you with a corresponding valid signal. For more details describing this process, see the [Calibration](#) section.

Client Interface

The client interface connects the 7 series FPGA user design to the RLDRAM II/RLDRAM 3 memory solutions core to simplify interactions between you and the external memory device.

Command Request Signals

The client interface provides a set of signals used to issue a read or write command to the memory device. These signals are summarized in [Table 3-9](#).

Table 3-9: Client Interface Request Signals

Signal	Direction	Description
user_cmd_en	Input	Command Enable. This signal issues a read or write request and indicates that the corresponding command signals are valid.
user_cmd[2 × CMD_PER_CLK – 1:0]	Input	<p>Command. This signal issues a read, write, or NOP request. When user_cmd_en is asserted:</p> <p>2'b00 = Write Command</p> <p>2'b01 = Read Command</p> <p>2'b10 = NOP</p> <p>2'b11 = NOP</p> <p>The NOP command is useful when more than one command per clock cycle must be provided to the Memory Controller yet not all command slots are required in a given clock cycle. The Memory Controller acts on the other commands provided and ignore the NOP command. NOP is not supported when CMD_PER_CLK == 1. CMD_PER_CLK is a top-level parameter used to determine how many memory commands are provided to the controller per FPGA logic clock cycle, it depends on nCK_PER_CLK and the burst length (see Figure 3-39)</p>
user_addr[CMD_PER_CLK × ADDR_WIDTH – 1:0]	Input	Command Address. This is the address to use for a command request. It is valid when user_cmd_en is asserted.
user_ba[CMD_PER_CLK × BANK_WIDTH – 1:0]	Input	Command Bank Address. This is the address to use for a write request. It is valid when user_cmd_en is asserted.

Table 3-9: Client Interface Request Signals (Cont'd)

Signal	Direction	Description
user_wr_en	Input	Write Data Enable. This signal issues the write data and data mask. It indicates that the corresponding user_wr_* signals are valid.
user_wr_data[2 × nCK_PER_CLK × DATA_WIDTH – 1:0]	Input	Write Data. This is the data to use for a write request and is composed of the rise and fall data concatenated together. It is valid when user_wr_en is asserted.
user_wr_dm[2 × nCK_PER_CLK × DM_WIDTH – 1:0]	Input	Write Data Mask. When active-High, the write data for a given selected device is masked and not written to the memory. It is valid when user_wr_en is asserted.
user_afifo_empty	Output	Address FIFO empty. If asserted, the command buffer is empty.
user_wdfifo_empty	Output	Write Data FIFO empty. If asserted, the write data buffer is empty.
user_afifo_full	Output	Address FIFO full. If asserted, the command buffer is full, and any writes to the FIFO are ignored until deasserted.
user_wdfifo_full	Output	Write Data FIFO full. If asserted, the write data buffer is full, and any writes to the FIFO are ignored until deasserted.
user_afifo_aempty	Output	Address FIFO almost empty. If asserted, the command buffer is almost empty.
user_afifo_afull	Output	Address FIFO almost full. If asserted, the command buffer is almost full.
user_wdfifo_aempty	Output	Write Data FIFO almost empty. If asserted, the write data buffer is almost empty.
user_wdfifo_afull	Output	Write Data FIFO almost full. If asserted, the Write Data buffer is almost full.
user_rd_valid[nCK_PER_CLK – 1:0]	Output	Read Valid. This signal indicates that data read back from memory is available on user_rd_data and should be sampled.
user_rd_data[2 × nCK_PER_CLK × DATA_WIDTH – 1:0]	Output	Read Data. This is the data read back from the read command.
init_calib_complete	Output	Calibration Done. This signal indicates back to the user design that read calibration is complete and requests can now take place.
mem_ck_lock_complete	Output	Memory CK Lock Done. The system should be kept in a quiet state until assertion of mem_ck_lock_complete to ensure minimal noise on the CK being driven to the memory.

Interfacing with the Core through the Client Interface

The width of certain client interface signals is dependent on the system clock frequency and the burst length. This allows the client to send multiple commands per FPGA logic clock cycle as might be required for certain configurations.

Figure 3-39 shows the `user_cmd` signal and how it is made up of multiple commands depending on the configuration.

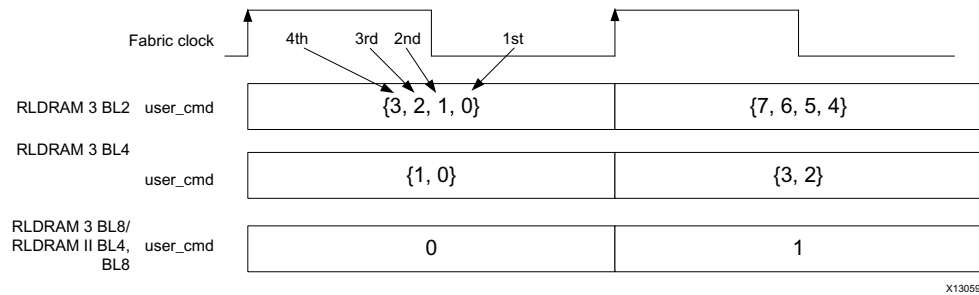


Figure 3-39: Multiple Commands for `user_cmd` Signal

As shown in Figure 3-39, four command slots are present in a single user interface clock cycle for BL2. Similarly, two command slots are present in a single user interface clock cycle for BL4. These command slots are serviced sequentially and the return data for read commands are presented at the user interface in the same sequence. Note that the read data might not be available in the same slot as that of its read command. The slot of a read data is determined by the timing requirements of the controller and its command slot. One such example is mentioned in the following BL2 design configuration.


Assume that the following set of commands is presented at the user interface for a given user interface cycle.

Table 3-10: Command Set in User Interface Cycle

Slots	Commands
0	RD0
1	NOP
2	RD1
3	NOP

It is not guaranteed that the read data appears in {DATA0, NOP, DATA1, NOP} order. It might also appear in {NOP, DATA0, NOP, DATA1} or {NOP, NOP, DATA0, DATA1} etc. orders. In any case, the sequence of the commands are maintained.

The client interface protocol is shown in Figure 3-40 for the RLD RAM II four-word burst architecture.

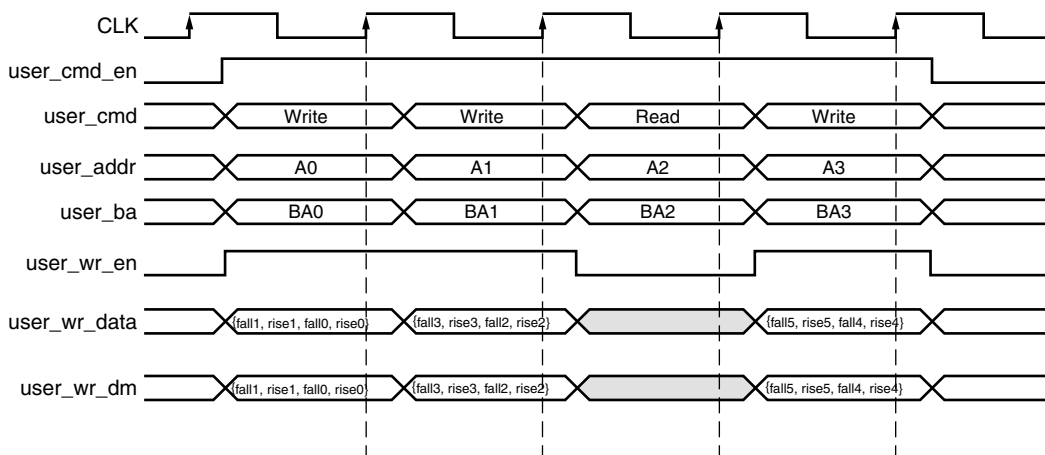

UG586_c3_45_042611

Figure 3-40: RLDRAM II Client Interface Protocol (Four-Word Burst Architecture)

The client interface protocol for the RLD RAM 3 four-word burst architecture is shown in Figure 3-41.

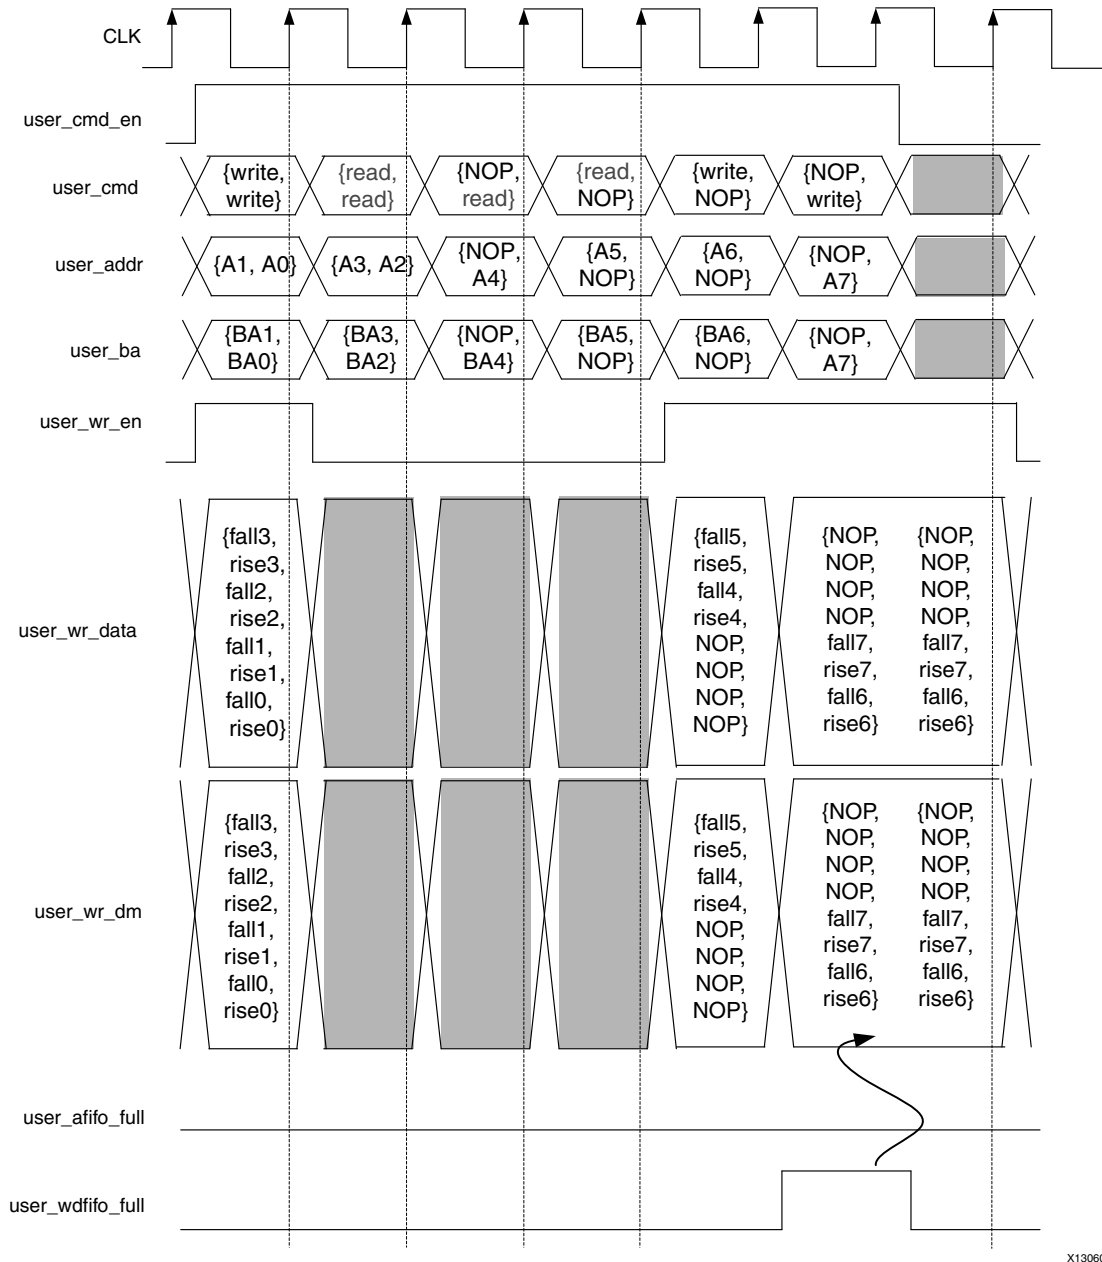


Figure 3-41: RLD RAM 3 Client Interface Protocol (Four-Word Burst Architecture)

Before any requests can be accepted, the `ui_clk_sync_rst` signal must be deasserted Low. After the `ui_clk_sync_rst` signal is deasserted, the user interface FIFOs can accept commands and data for storage. The `init_calib_complete` signal is asserted after the memory initialization procedure and PHY calibration are complete, and the core can begin to service client requests.

A command request is issued by asserting `user_cmd_en` as a single cycle pulse. At this time, the `user_cmd`, `user_addr`, and `user_ba` signals must be valid. To issue a read request, `user_cmd` is set to 2'b01, while for a write request, `user_cmd` is set to 2'b00. For a write request, the data is to be issued in the same cycle as the command by asserting the `user_wr_en` signal High and presenting valid data on `user_wr_data` and `user_wr_dm`.



IMPORTANT: Both write and read commands in the same `user_cmd` cycle is not allowed.

For RLD RAM II and eight-word burst architecture, an extra cycle of data is required for a given write command, as shown in Figure 3-42. Any gaps in the command flow required can be filled with read commands, if desired.


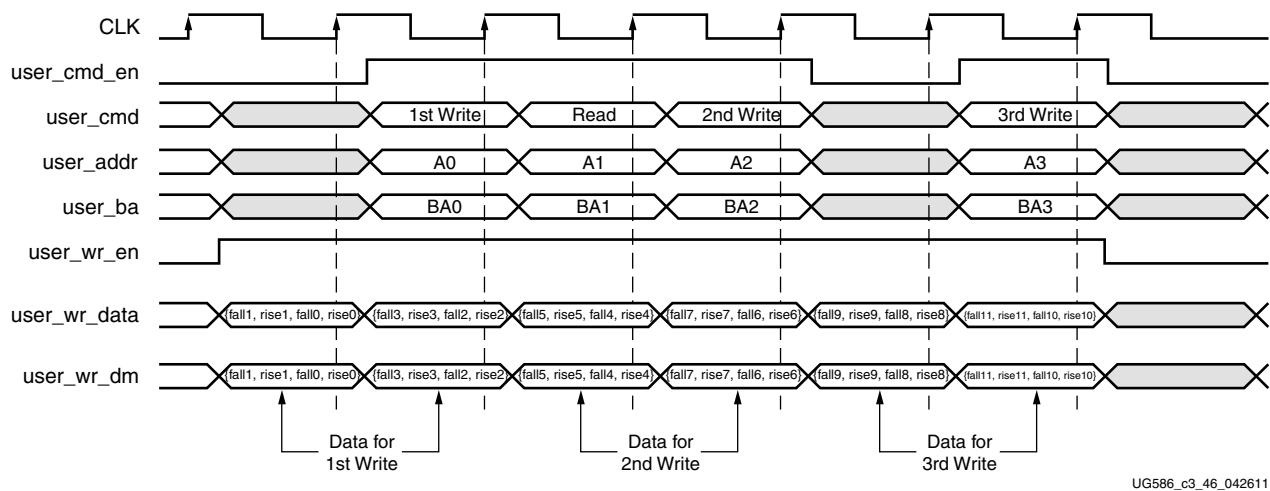


Figure 3-42: RLD RAM II Client Interface Protocol (Eight-Word Burst Architecture)

The client interface protocol for the RLD RAM 3 eight-word burst architecture is shown in Figure 3-43.

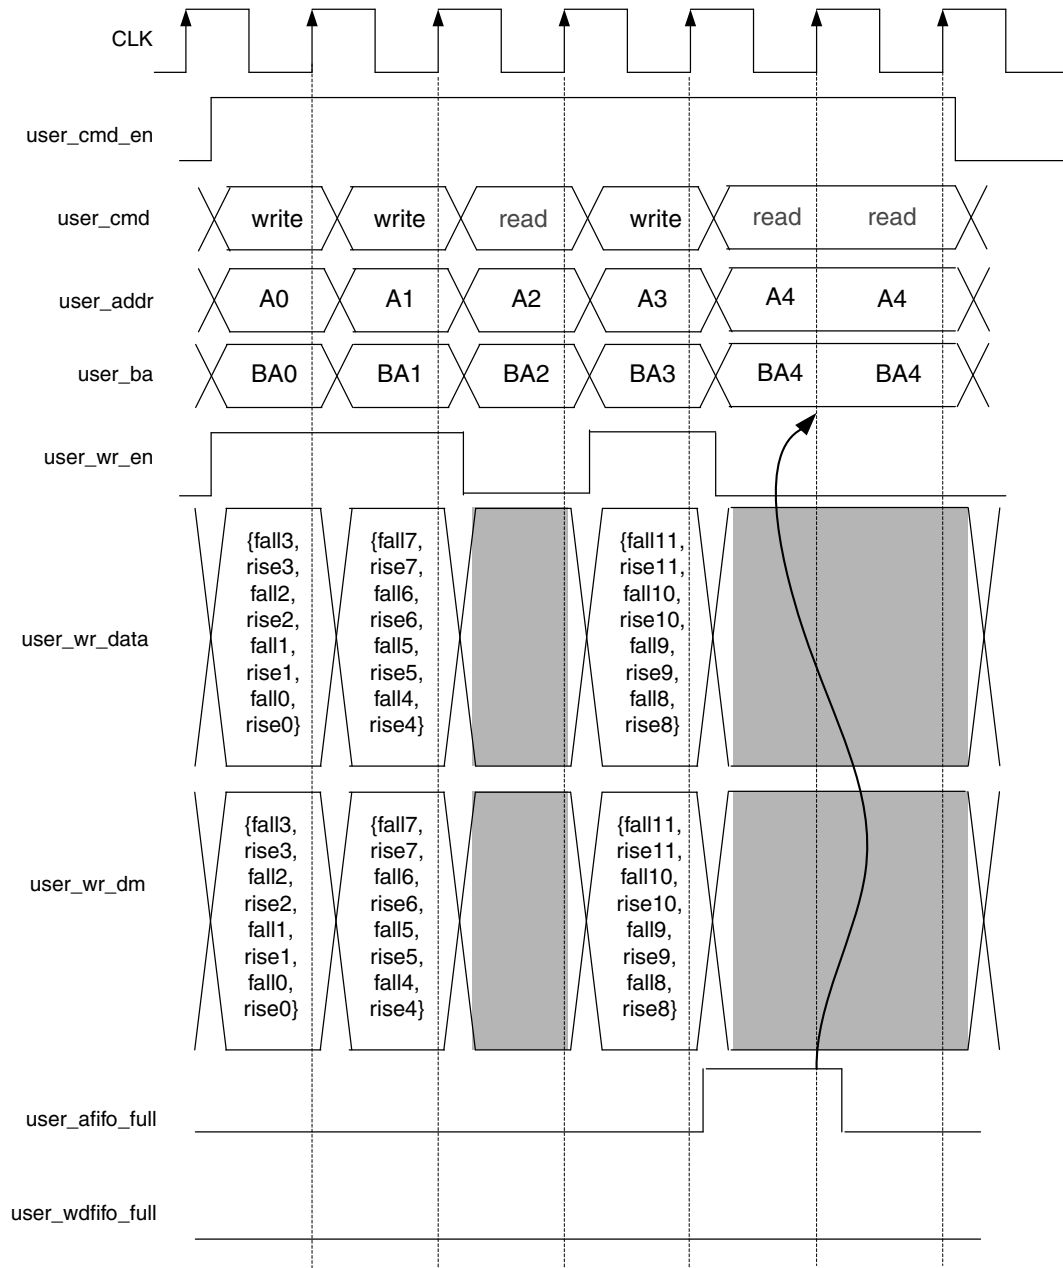


X13061

Figure 3-43: RLD RAM 3 Client Interface Protocol (Eight-Word Burst Architecture)

When a read command is issued some time later (based on the configuration and latency of the system), the `user_rd_valid[0]` signal is asserted, indicating that `user_rd_data` is now valid, while `user_rd_valid[1]` is asserted indicating that `user_rd_data` is valid, as shown in Figure 3-44. The read data should be sampled on the same cycle that `user_rd_valid[0]` and `user_rd_valid[1]` are asserted because the core does not buffer returning data. If desired, you can add this functionality.

The Memory Controller only puts commands on certain slots to the PHY such that the `user_rd_valid` signals are all asserted together and return the full width of data, but the extra `user_rd_valid` signals are provided in case of controller modifications.

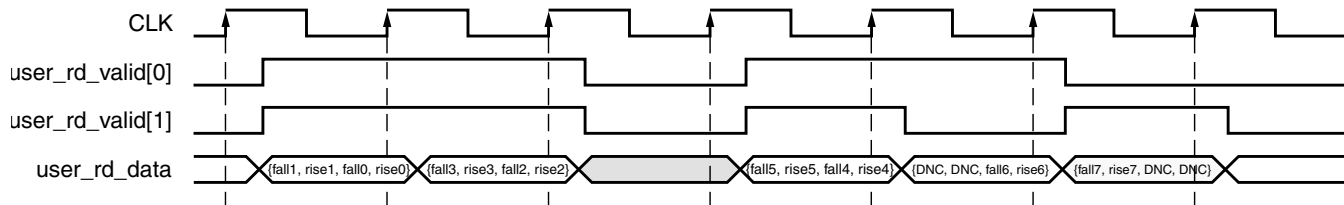

UG586_c3_47_042611

Figure 3-44: Client Interface Protocol Read Data

Clocking Architecture

The PHY design requires that an MMCM and a PLL module be used to generate various clocks. Both global and local clock networks are used to distribute the clock throughout the design.

The clock generation and distribution circuitry and networks drive blocks within the PHY that can be divided roughly into four separate general functions:

- Internal FPGA logic
- Write path (output) logic
- Read path (input) and delay logic
- IDELAY reference clock (200 MHz)

One MMCM and one PLL is required for the PHY. The MMCM and PLL generate the clocks for most of the internal logic, the input clocks to the phasers, and a synchronization pulse required to keep the PHASER blocks synchronized in a multi-I/O bank implementation.

The PHASER blocks require three clocks:

- **Memory Reference Clock** – The memory reference clock is required to be at the same frequency as that of the RLD RAM II/RLD RAM 3 memory interface clock.
- **Frequency Reference Clock** – The frequency reference clock must be equal to the memory clock frequency for frequencies ≥ 400 MHz and 2x the memory clock frequency for frequencies < 400 MHz such that it meets the reference range requirement of 400 MHz to 1,066 MHz.
- **Phase Reference Clock from the PLL** – The phase reference clock is used in the read banks, and is generated using the memory read clock (QK/QK#) routed internally and provided to the Phaser logic to assist with data capture.

Figure 3-45 shows the clocking architecture.

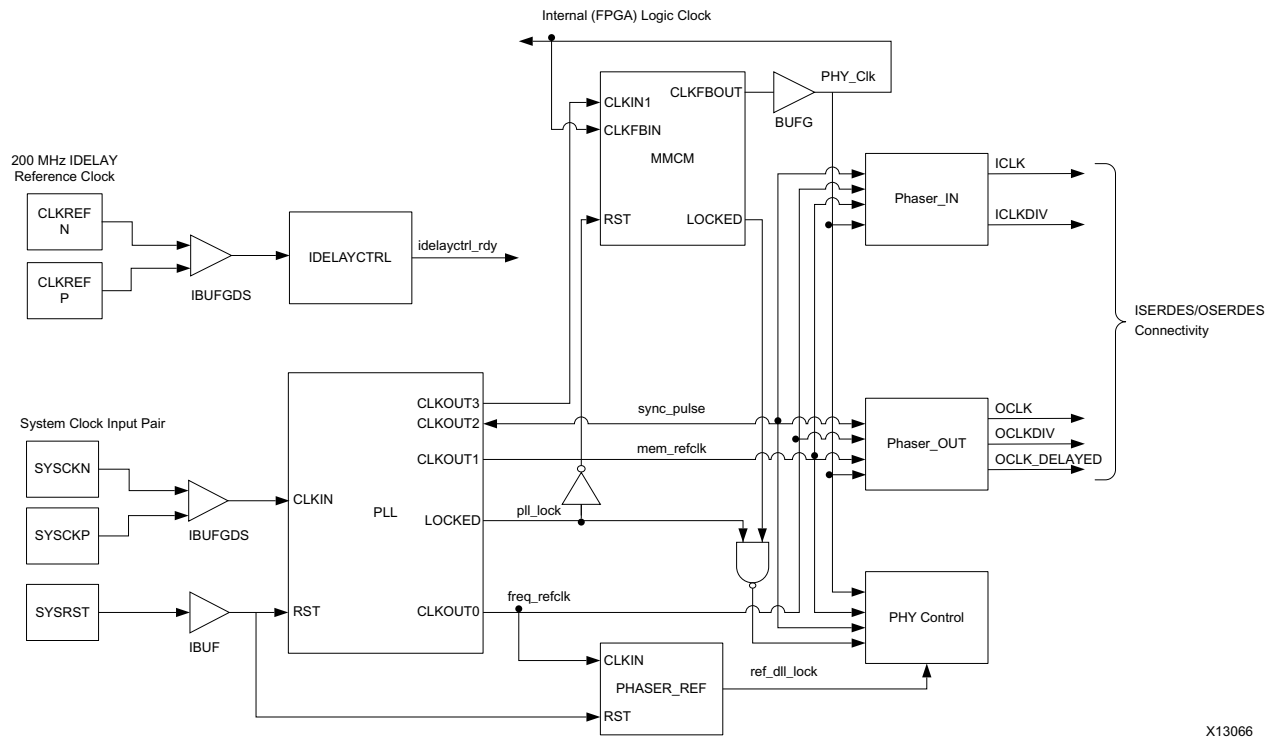


Figure 3-45: Clocking Architecture

The default setting for the PLL multiply (M) and divide (D) values is for the system clock input frequency to be equal to the memory clock frequency. This 1:1 ratio is not required. The PLL input divider (D) can be any value listed in the *7 Series FPGAs Clocking Resources User Guide* (UG472) [Ref 10] as long as the PLLE2 operating conditions are met and the other constraints listed here are observed.

The PLL multiply (M) value must be between 1 and 16 inclusive. The PLL VCO frequency range must be kept in the range specified in the silicon data sheet. The sync_pulse must be 1/16 of the mem_refclk frequency and must have a duty cycle of 1/16 or 6.25%. For information on physical placement of the PLL and the System Clock CCIO input, see [Design Guidelines, page 466](#).

The internal FPGA logic clock generated by the PLL is clocked by a global clocking resource at half the frequency of the RDRAM II memory frequency and a quarter of the frequency of the RLDRAM 3 memory frequency.

A 200 MHz IDELAY reference clock must be supplied to the IDELAYCTRL module. The IDELAYCTRL module continuously calibrates the IDELAY elements in the I/O region to account for varying environmental conditions. The IP core assumes an external clock signal is driving the IDELAYCTRL module. If a PLL clock drives the IDELAYCTRL input clock, the PLL lock signal needs to be incorporated in the `rst_tmp_idelay` signal inside the `IDELAY_CTRL` module. This ensures that the clock is stable before being used.

Table 3-11 lists the signals used in the infrastructure module that provides the necessary clocks and reset signals required in the design.

Table 3-11: Infrastructure Clocking and Reset Signals

Signal	Direction	Description
mmcm_clk	Input	System clock input
sys_rst	Input	Core reset from user application
iodelay_ctrl_rdy	Input	IDELAYCTRL lock status
clk	Output	Half frequency FPGA logic clock
mem_refclk	Output	PLL output clock at same frequency as the memory clock
freq_refclk	Output	PLL output clock to provide the FREQREFCLK input to the Phaser. The freq_refclk is generated such that its frequency is in the range of 400 MHz–1,066 MHz
sync_pulse	Output	PLL output generated at 1/16 of mem_Refclk and is a synchronization signal sent to the PHY hard blocks that are used in a multi-bank implementation
pll_locked	Output	Locked output from PLLE2_ADV
rstdiv0	Output	Reset output synchronized to internal FPGA logic half-frequency clock.
rst_phaser_ref	Output	Reset for the Phaser in the Physical Layer.

Physical Interface

The physical interface is the connection from the FPGA memory interface solution to an external RLD RAM II/RLD RAM 3 device. The I/O signals for this interface are defined in Table 3-12. These signals can be directly connected to the corresponding signals on the RLD RAM II/RLD RAM 3 device.

Table 3-12: Physical Interface Signals


Signal	Direction	Description
rld_ck_p	Output	System Clock CK. This is the address/command clock to the memory device.
rld_ck_n	Output	System Clock CK#. This is the inverted system clock to the memory device.
rld_dk_p	Output	Write Clock DK. This is the write clock to the memory device.
rld_dk_n	Output	Write Clock DK#. This is the inverted write clock to the memory device.
rld_a	Output	Address. This is the address supplied for memory operations.
rld_ba	Output	Bank Address. This is the bank address supplied for memory operations.
rld_cs_n	Output	Chip Select CS#. This is the active-Low chip select control signal for the memory.
rld_we_n	Output	Write Enable WE#. This is the active-Low write enable control signal for the memory.
rld_ref_n	Output	Refresh REF#. This is the active-Low refresh control signal for the memory.
rld_dm	Output	Data Mask DM. This is the active-High mask signal, driven by the FPGA to mask data that a user does not want written to the memory during a write command.

Table 3-12: Physical Interface Signals (Cont'd)

Signal	Direction	Description
rld_dq	Input/Output	Data DQ. This is a bidirectional data port, driven by the FPGA for writes and by the memory for reads.
rld_qk_p	Input	Read Clock QK. This is the read clock returned from the memory edge aligned with read data on rld_dq. This clock (in conjunction with QK#) is used by the PHY to sample the read data on rld_dq.
rld_qk_n	Input	Read Clock QK#. This is the inverted read clock returned from the memory. This clock (in conjunction with QK) is used by the PHY to sample the read data on rld_dq.
rld_reset_n	Output	RLDRAM 3 reset pin. This is the active-Low reset to the RLD RAM 3 device (not used for RLD RAM II).

Figure 3-46 shows the timing diagram for a typical RLD RAM II configuration 3, burst length of four with commands being sent to the PHY from a controller. After `cal_done` is asserted, the controller begins issuing commands. A single write command is issued by asserting the `cs0` and `we0` signals (with `ref0` being held Low) and ensuring that `addr0` and `ba0` are valid. Because this is a burst length of four configuration, the second command that must be issued is a No Operation (NOP), that is, all the control signals (`cs1`, `we1`, `ref1`) are held Low.

Two clock cycles later, the `wr_en0/1` signals are asserted, and the `wr_data0/1` and `wr_dm0/1` signals are valid for the given write command. In this same clock cycle, a single read command is issued by asserting `cs0` (with `we0` and `ref0` being held Low) and placing the associated addresses on `addr0` and `ba0`. Two refresh commands are issued by asserting `cs0/1`, `ref0/1`, and `ba0/1`. The refresh commands can be issued in the same clock cycle as long as the memory banking rules are met.

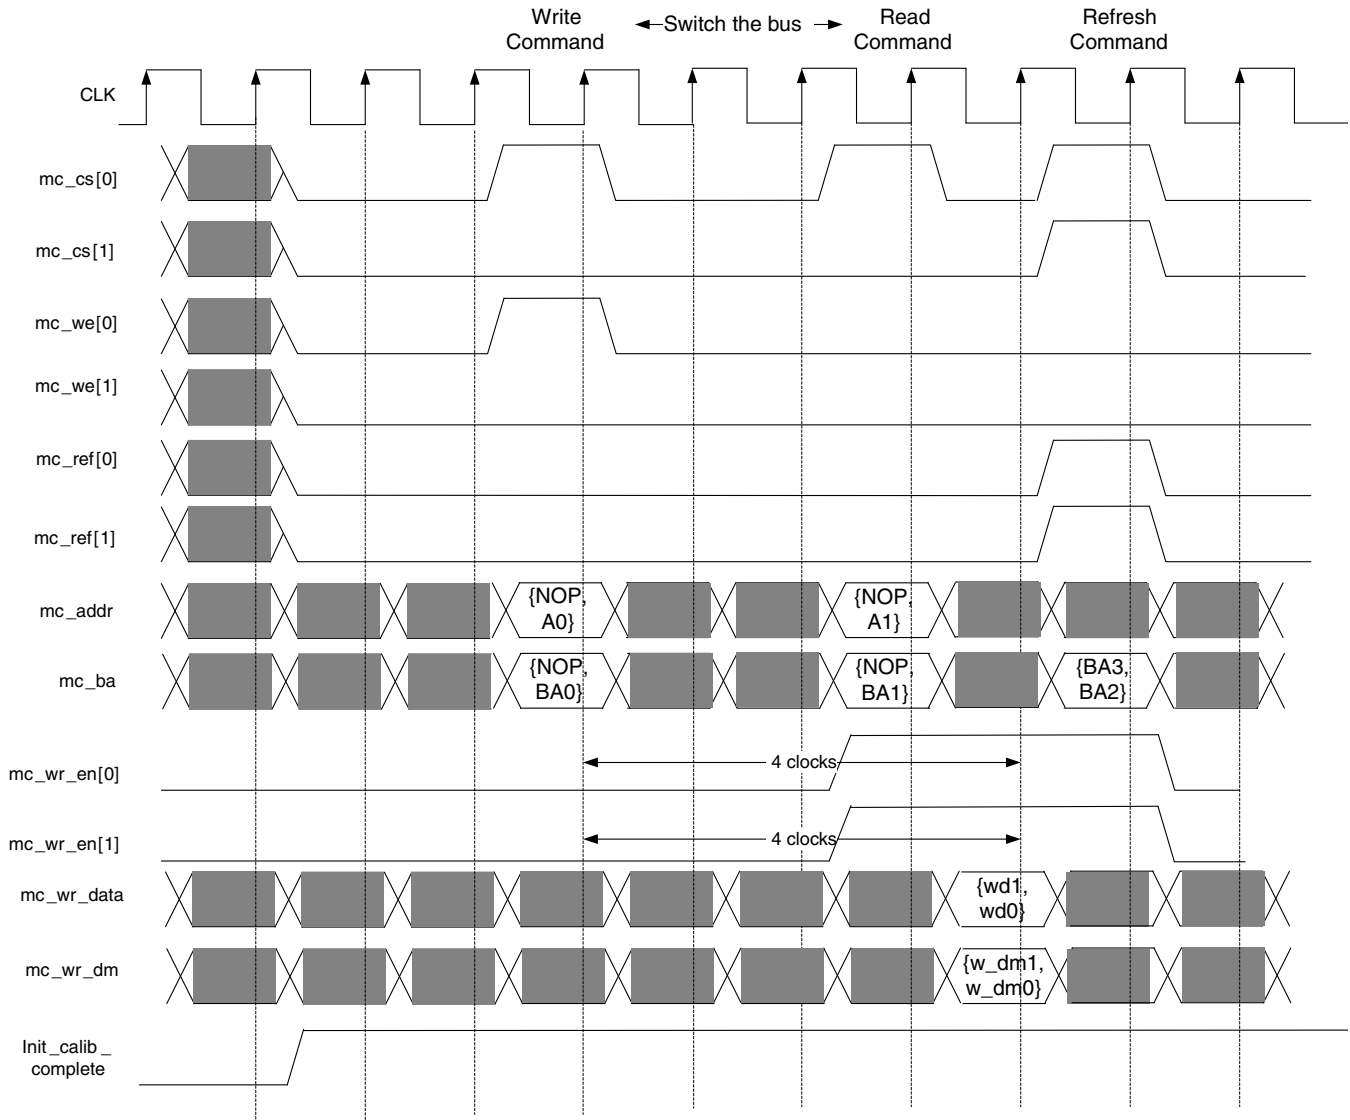

X13065

Figure 3-46: PHY-Only Interface for RLD RAM II Burst Length 4, Configuration 3, and Address Multiplexing OFF

The controller sends the `wr_en` signals and data at the necessary time based on the configuration setting. This time changes depending on the configuration. [Table 3-13](#) details when the `wr_en` signals should be asserted with the data valid for a given configuration. If address multiplexing is used, the PHY handles rearranging the address signals and outputting the address over two clock cycles rather than one.

Table 3-13: RLD RAM II Command to Write Enable Timing

Address Multiplexing	Configuration	Command to Write Enable (Clock Cycles)
ON	1	3
	2	4

Table 3-13: RLDRAM II Command to Write Enable Timing (Cont'd)

Address Multiplexing	Configuration	Command to Write Enable (Clock Cycles)
	3	5
OFF	1	2
	2	3
	3	4 ⁽¹⁾

Notes:

1. Shown in [Figure 3-44](#).

The `wr_en` signals are required to be asserted an extra clock cycle before the first `wr_en` signal is asserted, and held for an extra clock cycle after deassertion. This ensures that the shared bus has time to change from read to write and from write to read. The physical layer has a requirement of two clock cycles of no operation (NOP) when transitioning from a write to a read, and from a read to a write. This two clock cycle requirement depends on the PCB and might need to be increased for different board layouts.

Memory Controller

The Memory Controller enforces the RLDRAM II/RLDRAM 3 access requirements and interfaces with the PHY. The controller processes commands in order, so the rank of commands presented to the controller is the order in which they are presented to the memory device.

The Memory Controller first receives commands from the user interface and determines if the command can be processed immediately or needs to wait. When all requirements are met, the command is placed on the PHY interface. For a write command, the controller generates a signal for the user interface to provide the write data to the PHY. This signal is generated based on the memory configuration to ensure the proper command-to-data relationship. Auto-refresh commands are inserted into the command flow by the controller to meet the memory device refresh requirements.

For CIO devices, the data bus is shared for read and write data. Switching from read commands to write commands and vice versa introduces gaps in the command stream due to switching the bus. For better throughput, changes in the command bus should be minimized when possible.

Figure 3-47 shows the state machine logic for the controller.

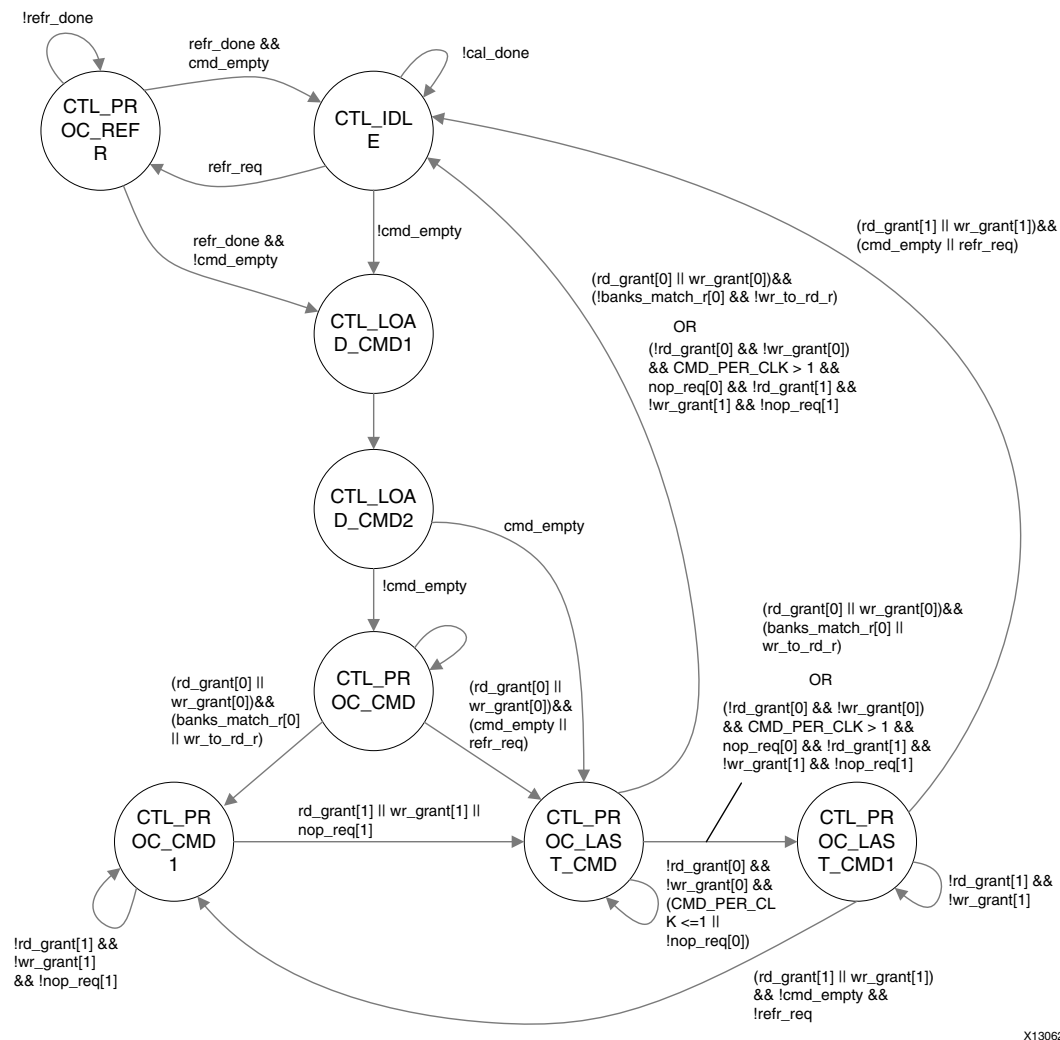


Figure 3-47: Controller State Machine Logic (CMD_PER_CLK == 1 or 2)

PHY Architecture


The PHY consists of dedicated blocks and soft calibration logic. The dedicated blocks are structured adjacent to one another with back-to-back interconnects to minimize the clock and datapath routing necessary to build high-performance physical layers.

Some of the dedicated blocks that are used in the RLDRAM II/RLDRAM 3 PHY and their features are described as follows:

- I/Os available within each FPGA bank are grouped into four byte groups, where each byte group consists of up to 12 I/Os.

- PHASER_IN/PHASER_OUT blocks are available in each byte group and are multi-stage programmable delay line loops that can provide precision phase adjustment of the clocks. Dedicated clock structures within an I/O bank, referred to as byte group clocks, generated by the PHASERs help minimize the number of loads driven by the byte group clock drivers.
- OUT_FIFO and IN_FIFO are shallow eight or four-deep FIFOs available in each byte group and serve to transfer data from the FPGA logic domain to the I/O clock domain. OUT_FIFOs are used to store output data and address/controls that need to be sent to the memory while IN_FIFOs are used to store captured read data before transfer to the FPGA logic.

The [Pinout Requirements, page 467](#) explains the rules that need to be followed when placing the memory interface signals inside the byte groups.

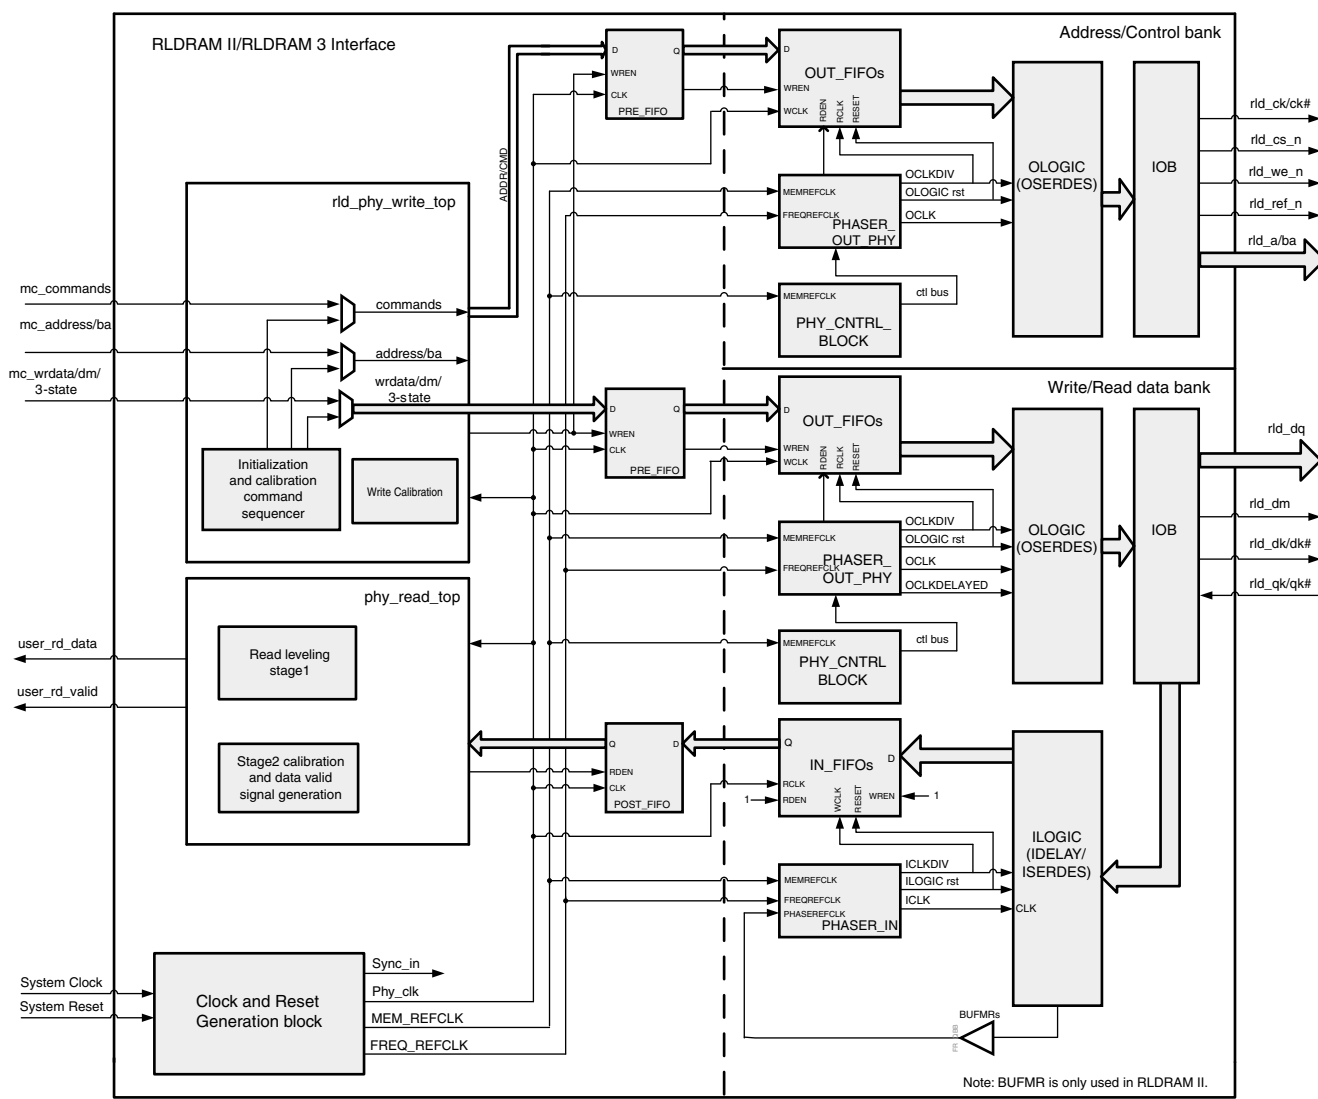

UG586_c3_04_051811

Figure 3-48: High-Level PHY Block Diagram of the RLD RAM II/RLD RAM 3 Interface Solution

Note: The overall read latency of the MIG 7 series RLD RAM II/RLD RAM 3 core is dependent on how the Memory Controller is configured, but most critically on the target traffic/access pattern and the number of commands already in the pipeline before the read command is issued. Read latency is measured from the point where the read command is accepted by the user or native interface. Simulation should be run to analyze read latency.

Write Path

The write path to the RLDRAM II/RLDRAM 3 includes the address, data, and control signals necessary to execute any memory operation. The control strobes `rld_cs_n`, `rld_we_n`, `rld_ref_n`, and `rld_reset_n` (RLDRAM 3 only), including addresses `rld_a` and `rld_ba` to the memory all use SDR formatting. The write data values `rld_dq` and `rld_dm` also use DDR formatting to achieve the required two/four/eight-word burst within the given clock periods.

Output Architecture

The output path of the RLDRAM II/RLDRAM 3 interface solution uses OUT_FIFOs, PHASER_OUT_PHY, PHY_CNTRL, and OSERDES primitives available in 7 series FPGAs. These blocks are used for clocking all outputs of the PHY to the memory device.

The PHASER_OUT_PHY block provides the clocks required to clock out the outputs to the memory. It provides synchronized clocks for each byte group, to the OUT_FIFOs and to the OSERDES/ODDR. PHASER_OUT_PHY generates the byte clock (OCLK), the divided byte clock (OCLKDIV), and a delayed byte clock (OCLK_DELAYED) for its associated byte group. The byte clock (OCLK) is the same frequency as the memory interface clock and the divided byte clock (OCLKDIV) is half the frequency of the memory interface clock. The byte clock (OCLK) is used to clock the Write data (DQ), Data Mask (DM), Address, controls, and system clock (CK/CK#) signals to the memory from the OSERDES/ODDR. The PHASER_OUT_PHY output, OCLK_DELAYED, is an adjustable phase-shifted output with respect to the byte clock (OCLK) and is used to generate the write clock (DK/DK#) to the memory.

Figure 3-49 shows the alignment of the various clocks and how they are used to generate the necessary signal alignment.

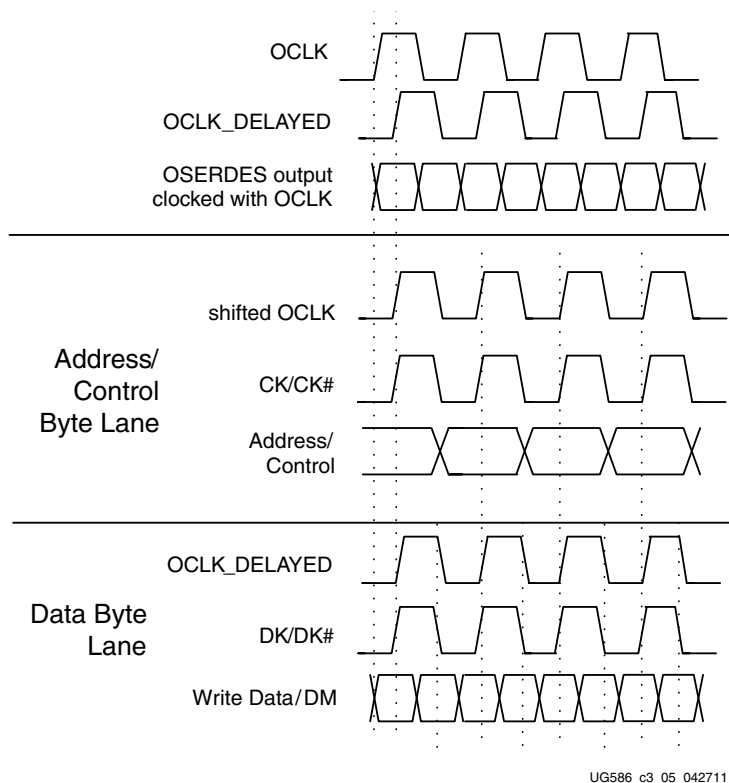


Figure 3-49: Write Path Output Alignment

OCLK_DELAYED generates a center-aligned clock for DDR write data but it does not produce an ideal alignment for SDR address/control signals. For this reason, OCLK is used to generate CK/CK#, and depending on if calibration must be done on the write datapath either the address/control byte lanes are shifted or data byte lanes are shifted, to properly align the memory clock CK and the write clock DK. For certain frequencies a one-time calibration is performed for OCLK_DELAYED to ensure reliable write operations. For details, see the [Calibration](#) section.

The OUT_FIFO serves as a temporary buffer to convert the write data from the FPGA logic domain to the PHASER clock domain, which clocks out the output data from the I/O logic. The OUT_FIFO runs in asynchronous mode, with the read and write clocks running at the same frequency yet an undetermined phase. A shallow, synchronous PRE_FIFO drives the OUT_FIFO with continuous data from the FPGA logic in an event of a flag assertion from the OUT_FIFO, which might potentially stall the flow of data through the OUT_FIFO. The clocks required for operating the OUT_FIFOs and OSERDES are provided by PHASER_OUT_PHY.

The clocking details of the write paths using PHASER_OUT_PHY are shown in [Figure 3-50](#). The PHY Control block is used to ensure proper start-up of all PHASER_OUT_PHY blocks used in the interface as well as to control the 3-state timing for RLD RAM 3 operation.

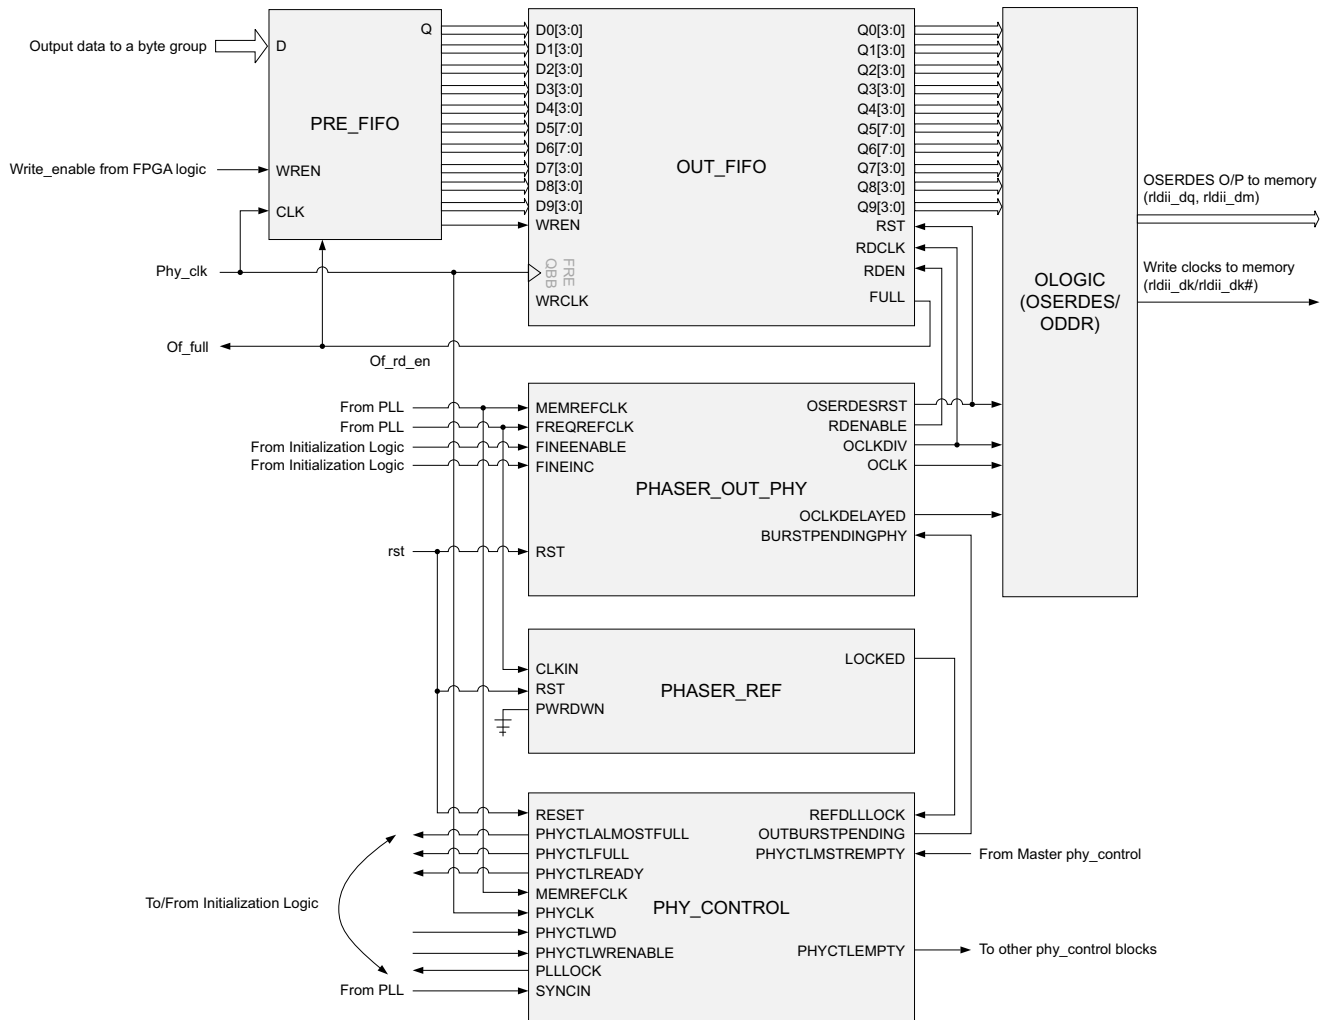


Figure 3-50: Write Path Block Diagram of the RLD RAM II Interface Solution

The OSERDES blocks available in every I/O simplifies generation of the proper clock, address, data, and control signaling for communication with the memory device. The flow through the OSERDES uses two different input clocks to achieve the required functionality. Data input ports D1/D2 or D3/D4 are clocked in using the clock provided on the CLKDIV input port, and then passed through a parallel-to-serial conversion block. The OSERDES is used to clock all outputs from the PHY to the memory device. Upon exiting the OSERDES, all output signals must be presented center-aligned with respect to the generated clocks (CK/CK# for address/control signals, DK/DK# for data and data mask). For this reason, the PHASER_OUT_PHY block is also used in conjunction with the OSERDES to achieve center alignment.

Read Path

The read path includes data capture using the memory-provided read clocks and also ensures that the read clock is centered within the data window for good margin during data capture. Before any read can take place, calibration must occur. Calibration is the main function of the read path and needs to be performed before the user interface can start transactions to the memory.

Data Capture

[Figure 3-51](#) shows a high-level block diagram of the path the read clock and the read data captures from entering the FPGA until it is given to you. The read clock bypasses the ILOGIC and is routed through PHASERS within each byte group. For RLDRAM II, the multiregion BUFMR is used to get the read capture clock to the necessary PHASERS used in read data capture. The BUFMR output can drive the PHASEREFCLK inputs of the PHASERS in the immediate bank and also the PHASERS available in the bank above and below the current bank. The BUFMR is needed for RLDRAM II because there can potentially be a single capture clock for two bytes of data, and only the BUFMR can allocate the clock to the multiple PHASERS as required.

Because RLDRAM 3 includes a capture clock per byte of data, the multiregion BUFMR is not required. The PHASER generated byte group clocks (ICLK and ICLKDIV) are then used to capture the read data (DQ) available within the byte group using the ISERDES block. The calibration logic makes use of the fine delay increments available through the PHASER to ensure the byte group clock, ICLK, is centered inside the read data window, ensuring maximum data capture margin.

IN_FIFOs available in each byte group (shown in [Figure 3-51](#)) receive 4-bit data from each DQ bit captured in the ISERDES in a given byte group and write them into the storage array. The half-frequency PHASER_IN generated byte group clock, ICLKDIV, that captures the data in the ISERDES is also used to write the captured read data to the IN_FIFO. The write enables to the IN_FIFO are always asserted to enable input data to be continuously written.

For RLDRAM 3, the IN_FIFO also transfers the data from the ICLKDIV domain (which runs at half the memory clock frequency) to the FPGA logic clock domain (which runs at a quarter the memory clock frequency). A shallow, synchronous post_fifo is used at the receiving side of the IN_FIFO to enable captured data to be read out continuously from the FPGA logic, in an event of a flag assertion in the IN_FIFO which might potentially stall the flow of data from the IN_FIFO. Calibration also ensures that the read data is aligned to the rising edge of the FPGA logic half-frequency clock and that read data from all the byte groups have the same delay. More details about the actual calibration and alignment logic is explained in the [Calibration](#) section.

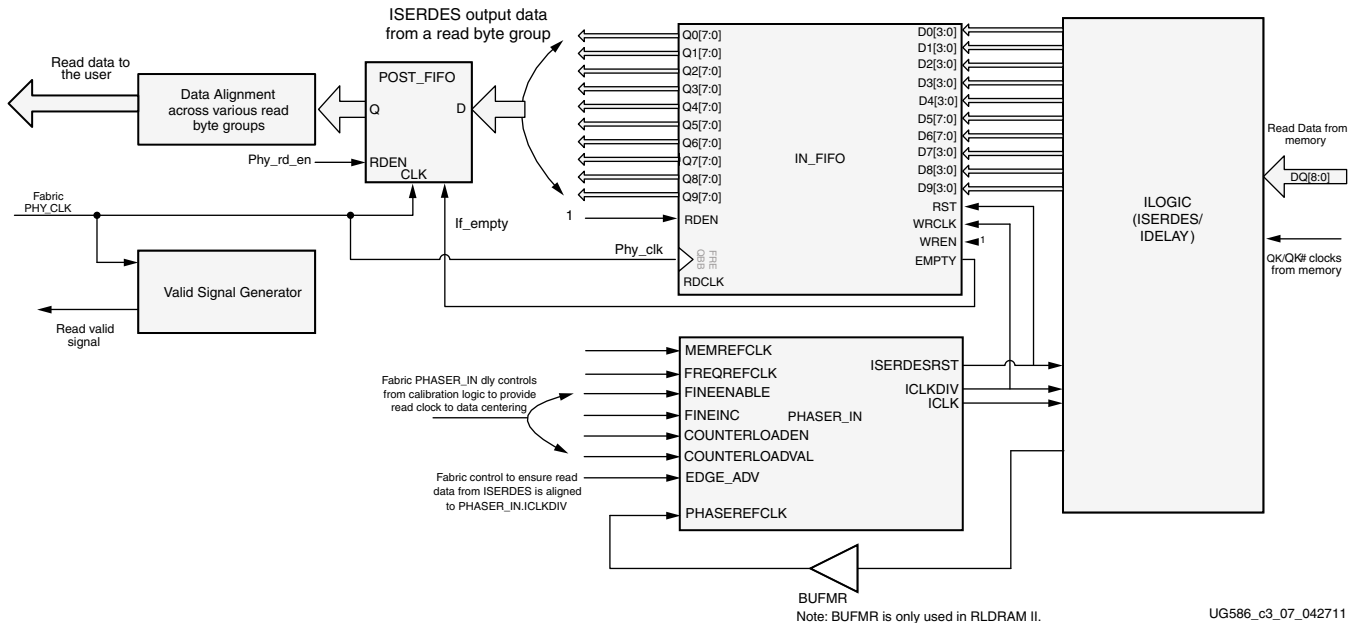


Figure 3-51: Read Path Block Diagram of the RLDRAM II/RLDRAM 3 Interface Solution

Calibration

The calibration logic includes providing the required amount of delay on the read clock and read data to align the clock in the center of the data valid window. The centering of the clock is done using PHASERS, which provide very fine resolution delay taps on the clock. Each PHASER_IN fine delay tap increments the clock by 1/64th of the reference clock period with a maximum of 64 taps possible.

For designs running at or above 400 MHz, the calibration logic also performs a one-time write calibration to ensure the write clock is center aligned properly with the write data. Calibration begins after memory initialization. Prior to this point, all read path logic is held in reset.

The calibration procedure is different depending on memory type. While similar, RLDRAM II and RLDRAM 3 require different FPGA pin rules that must be accounted for in the calibration algorithm (see Pin Rules in [Verify Pin Changes and Update Design](#), page 415). RLDRAM 3 also runs at higher frequencies which requires using a quarter rate FPGA logic clock versus the half-rate FPGA logic clock used for RLDRAM II.

Figure 3-52 shows the calibration simulation flow for the RLDRAM II and RLDRAM 3. In simulation some of the steps are skipped to speed up the time required before processing user commands.

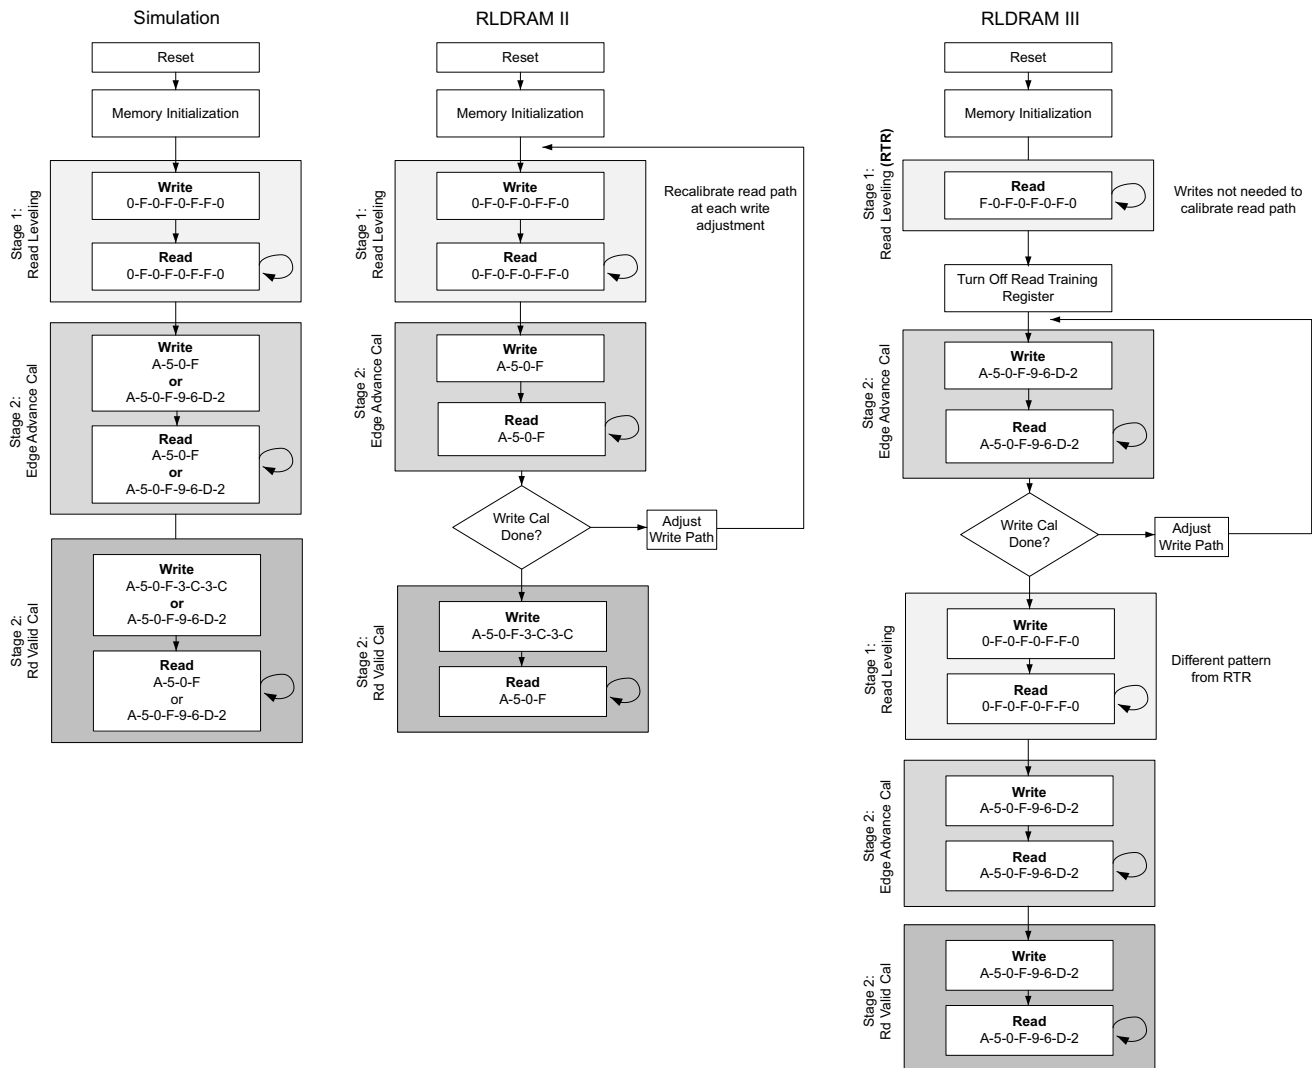


Figure 3-52: Calibration Flow Diagram

Calibration of Read Clock and Data

PHASER_IN clocks all ISERDES used to capture read data (DQ) associated with the corresponding byte group. ICLKDIV is also the write clock for the read data IN_FIFOs. One PHASER_IN block is associated with a group of 12 I/Os. Each I/O bank in the FPGA has four PHASER_IN blocks, and hence four read data bytes can be placed in a bank.

Implementation Details

This stage of read leveling is performed one byte at a time, where the read clock is center-aligned to the corresponding read data in that byte group. At the start of this stage, a single write command is issued to address location 0 in each bank of the memory device (eight banks for RLD RAM II and 16 for RLD RAM 3). All banks are used to ensure no matter which burst length is selected, the read commands can be issued to ensure read data is returned back-to-back without any gaps in the data stream.

If performing write calibration for RLDRAM 3, you can calibrate reads first by using the Read-Training Register (RTR) of the DRAM. This provides a clock-like pattern from the DRAM that does not require writing in a pattern first. All other times a pattern of "0F0F_0FF0" is used to calibrate read clock and data capture.

If performing write calibration for RLDRAM II, this stage of calibration is continually restarted based on the requirements on the write calibration algorithm.

The calibration logic reads data out of the IN_FIFO and records it for comparison. The calibration logic checks for the sequence of the data pattern read, to determine the alignment of the clock with respect to the data. No assumption is made about the initial relationship between the capture clock and the data window at tap 0 of the fine delay line. The algorithm tries to align the clock to the left edge of the data window, by delaying the read data through the IDELAY element.

Next, the clock is delayed using the PHASER taps and centered within the corresponding data window. The PHASER_TAP resolution is based on the $FREQ_REF_CLK$ period, and the per-tap resolution is equal to $(FREQ_REFCLK_PERIOD/2)/64$ ps. For memory interface frequencies ≥ 400 MHz, using the maximum of 64 PHASER taps can provide a delay of one data period or one-half the clock period. This enables the calibration logic to accurately center the clock within the data window. [Figure 3-53](#) shows this example.

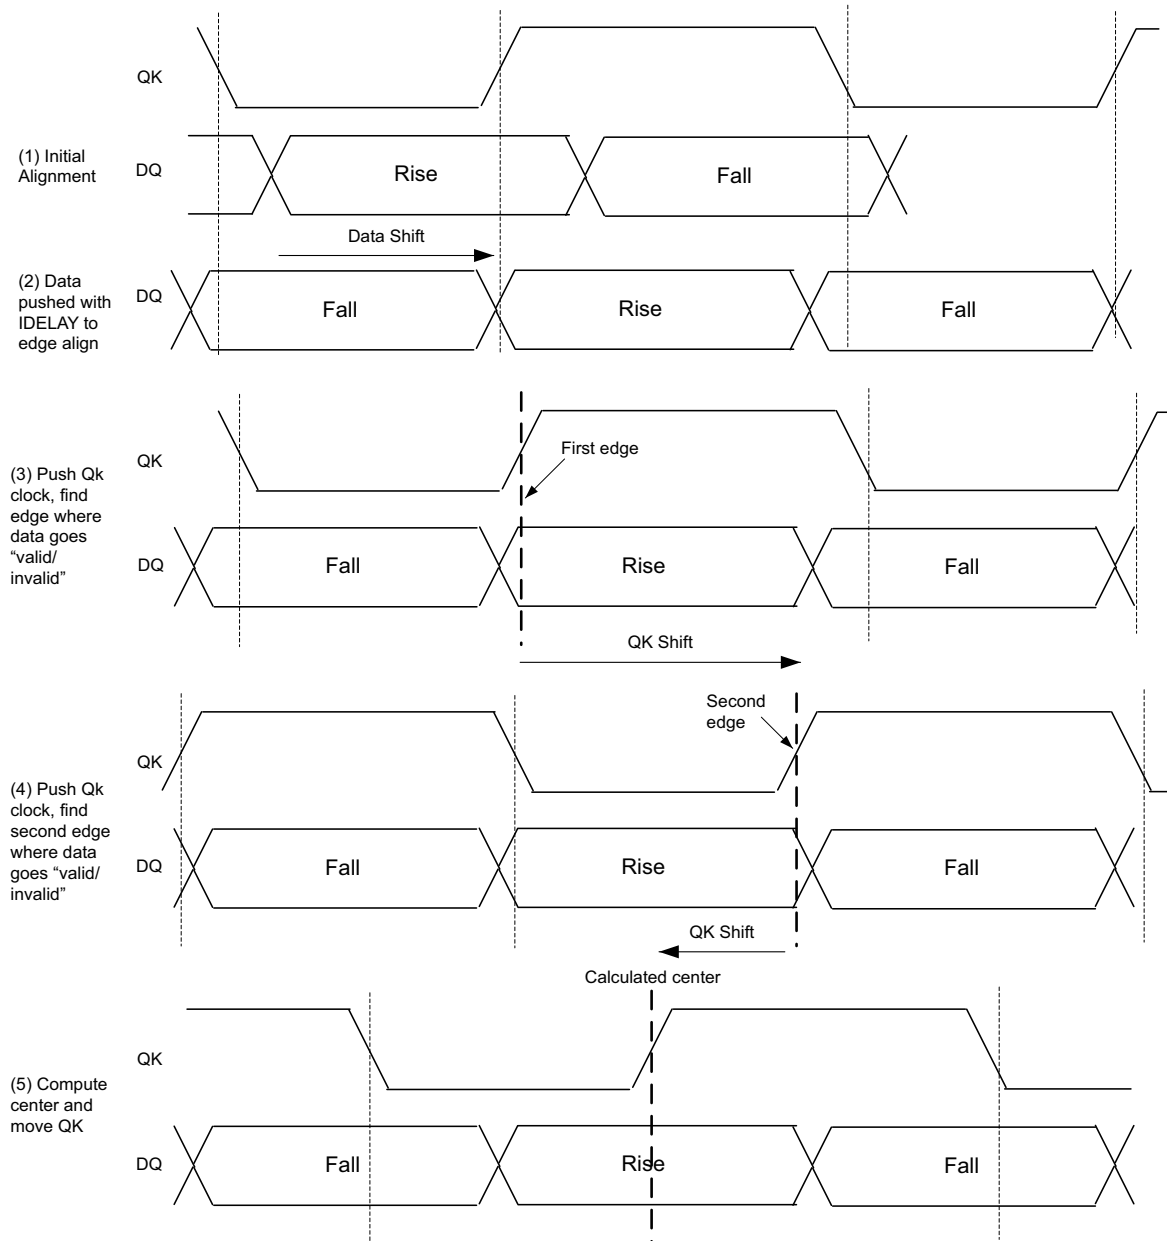


Figure 3-53: Read Level Stage 1

For frequencies < 400 MHz, because `FREQ_REF_CLK` has twice the frequency of `MEM_REF_CLK`, the maximum delay that can be derived from the PHASER is 1/2 the data period or 1/4 the clock period. Hence for frequencies < 400 MHz, just using the PHASER delay taps might not be sufficient to accurately center the clock in the data window. For these frequency ranges, a combination of both data delay using IDELAY taps and PHASER taps is used. The calibration logic determines the best possible delays, based on the initial clock-data alignment. The algorithm first delays the read capture clock using the PHASER_IN fine delay line until a data window edge is detected.

The next step is to increment the fine phase shift delay line of the PHASER_IN block one tap at a time until a data mismatch is detected. The data read out of IN_FIFO after the required settling time is then compared with the recorded data at the previous tap value. This is repeated until a data mismatch is found, indicating detection of a valid data window edge.

Complex pattern read calibration stage is added as the last stage of calibration to improve margin.

Data Alignment and Valid Generation

This phase of calibration:

- Ensures read data from all the read byte groups is aligned to the rising edge of the ISERDES CLKDIV capture clock
- Matches the latency for each memory when wider memories are derived from small memories.
- Sends the determined latency to the read valid generation logic.

After read data capture clock centering is achieved, the calibration logic writes out a known data pattern to the memory device and issues continuous reads back from the memory. This is done to determine whether the read data comes back aligned to the positive edge or negative edge of the ICLKDIV output of the PHASER_IN. This stage of read calibration acts as feedback to the write calibration state machine (if enabled) to determine the results of a write for a given byte lane.

For RLD RAM II, captured data from a byte group that is aligned to the negative edge is made to align to the positive edge using the EDGE_ADV input to the PHASER_IN, which shifts the ICLKDIV output by one fast clock cycle.

For RLD RAM 3, because the FPGA logic is running at a quarter the rate of the memory clock frequency, the data is bitshifted in the FPGA logic by a memory clock cycle each time the pulse is issued to ensure proper alignment of all captured data in the expected order.

The next stage is to generate the valid signal associated with the data on the client interface. During this stage of calibration, a burst of data equal to a single FPGA logic clock cycle pattern is written to memory and read back. This phase allows the read logic to count how many cycles elapse before the expected data returns. The basic flow through this phase is:

1. Count cycles until the read data arrives for each memory device.
2. Determine what value to use as the fixed latency. This value can either be your set indicated value from the PHY_LATENCY parameter or the maximum latency across all memory devices.
3. Calibrate the generation of the read valid signal. Using the value determined in [step 2](#), delay the read valid signal to align with the read data for you.
4. Assert `init_calib_complete`.

Write Calibration

When write calibration is enabled, the results of read calibration data alignment are used to determine if a given setting is valid for correct write operation. RLDRAM 3 contains an MRS read training register that can be used for reading out a set pattern from the memory without having to write a pattern to the memory first. After memory initialization, the read capture is first calibrated using this set pattern before moving on to calibrate the writes.

Because RLDRAM II lacks this read training register, the reads and writes cannot be independently verified. At each step of write calibration, the alignment of the read clock with DQ is performed to ensure the correct capture of data. If the data alignment portion of read calibration is performed for a given byte lane and the expected result is not found, the write is assumed to have caused the failure. For RLDRAM II, at each step of write calibration, the read calibration and associated logic are reset and restarted.

See [Figure 3-52, page 448](#) for write calibration flow.

PHASER_OUT provides all of the clocking resources for the output path and is adjusted on a byte lane basis by the calibration algorithm. Each byte lane is independently checked against the write clock being sent to the DRAM to ensure proper write timing. Depending on the pinout, either OCLK_DELAYED is used to adjust the DK clock in relation to the data DQ, or OCLK for a given byte lane is adjusted in relation to the DK clock in another byte lane. Due to the length of time required to independently calibrate each byte lane, write calibration is usually skipped for simulation.

The steps taken for write calibration is dependent on the pinout. [Figure 3-54](#) shows the RLDRAM II pinout block diagram with two data byte lanes and the overview for the steps taken for write calibration.

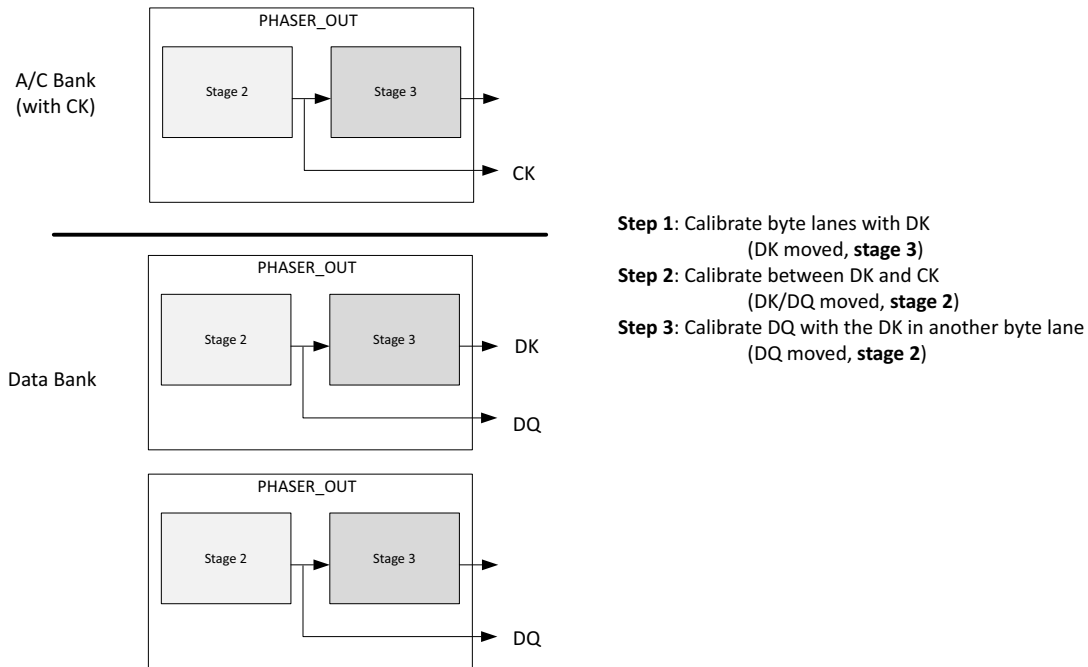


Figure 3-54: RLDRAM II Write Calibration

The first stage of RLDRAM II write calibration is to calibrate DK clock with respect to DQ in the same byte lane. The write clock DK is adjusted in relation to the DQ to find the data valid window and center in that window as shown in [Figure 3-55](#).

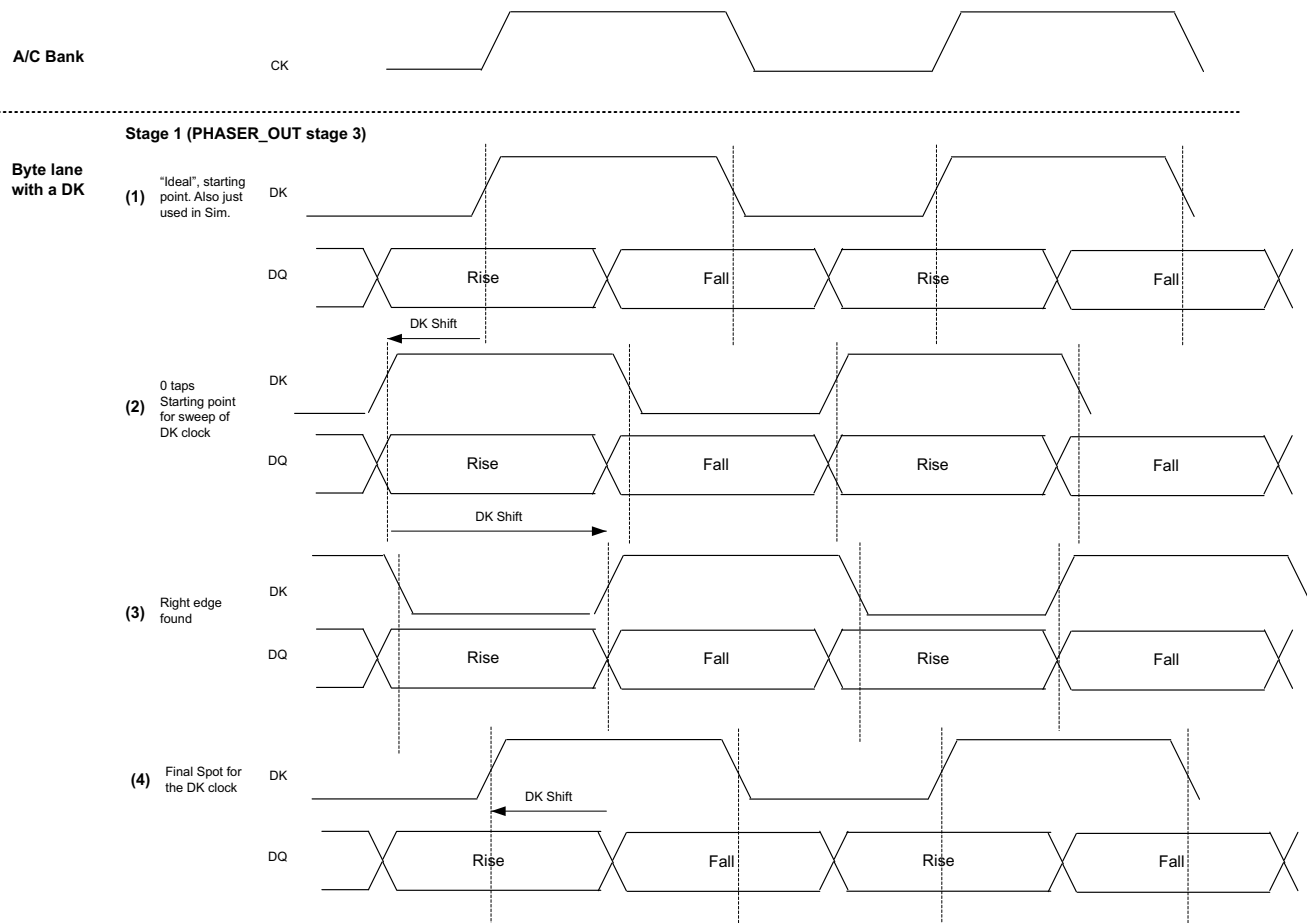


Figure 3-55: RLDRAM II Write Calibration (Stage 1, DK-to-DQ)

Figure 3-56 shows the second stage of RLDRAM II write calibration for in which the entire byte lane is shifted in relation to the CK to sweep and find where the write data transfer breaks for the DK-to-CK alignment.

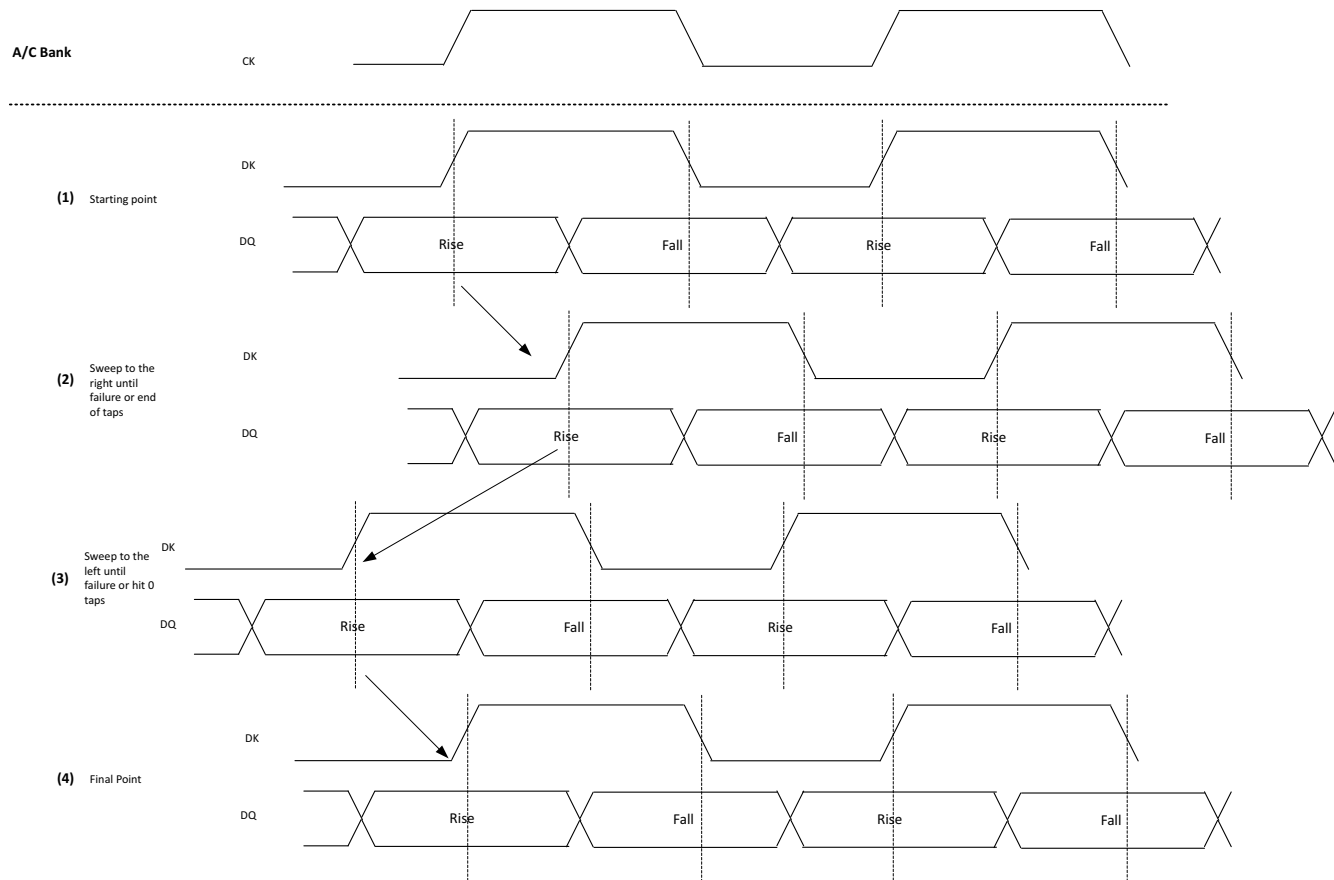


Figure 3-56: RLDRAM II Write Calibration (Stage 2, DK-to-CK)

Figure 3-57 shows the last step of RLDRAM II write calibration, where the byte lanes that do not share a DK clock as part of their PHASER_OUT output, are calibrated with respect to the DK clock in another byte lane.


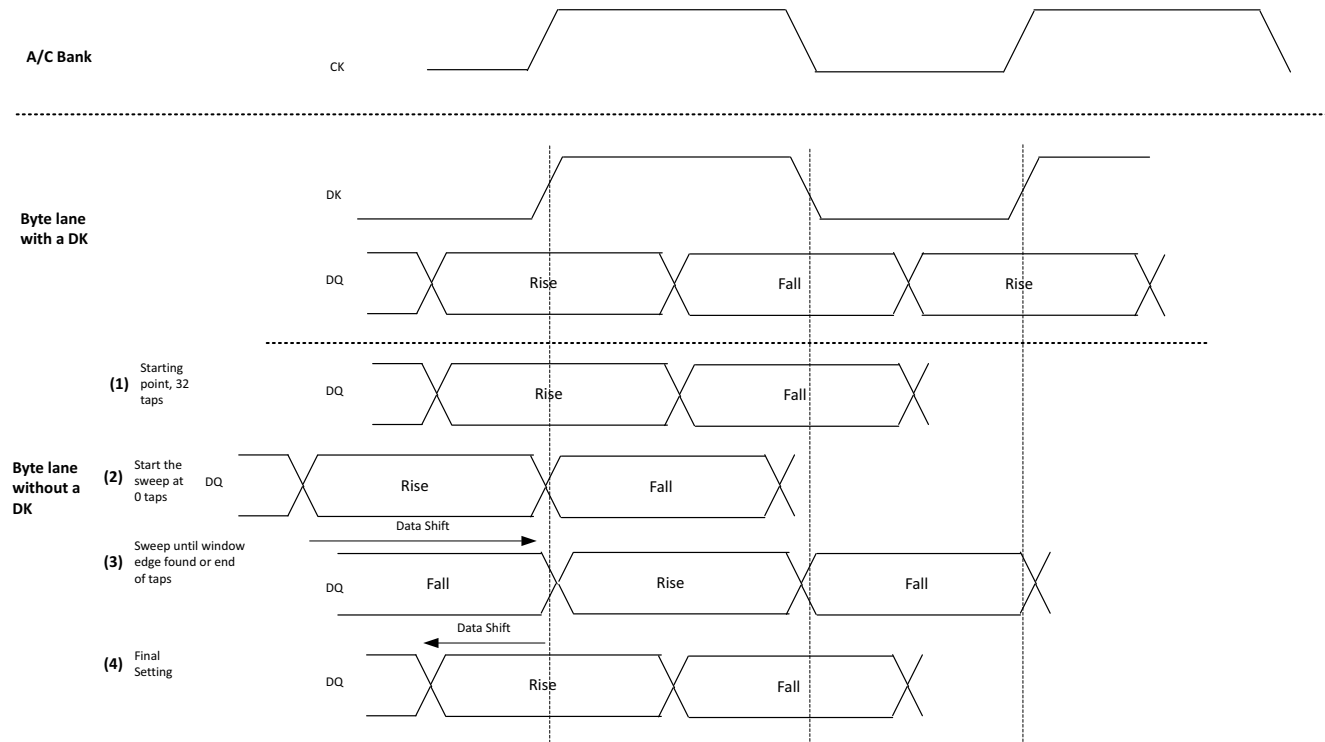


Figure 3-57: RLD RAM II Write Calibration (Stage 3, DK-to-DQ2)

Figure 3-58 shows the RLD RAM 3 pinout with two data byte lanes and the overview for the steps taken for write calibration.

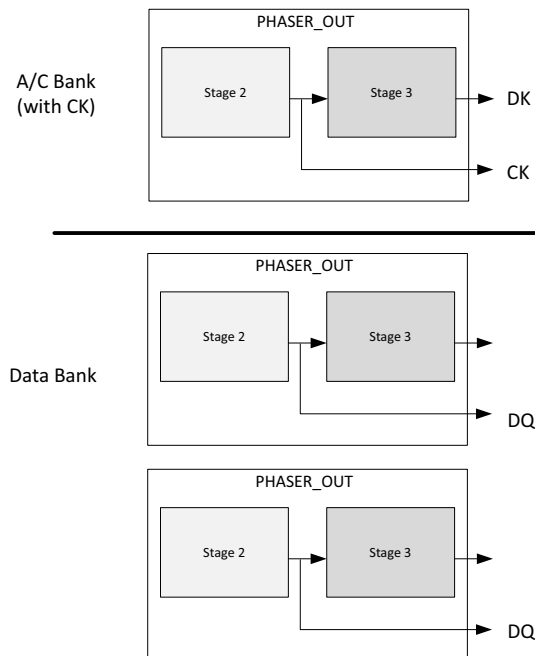

Step 1: Calibrate DQ with the DK in another byte lane (DQ moved, stage 2)

Figure 3-58: RLD RAM 3 Write Calibration

Figure 3-59 shows the steps taken for a byte lane for RLDRAM 3. The data is adjusted with respect to the DK clock coming from another bank. This is the same as RLDRAM 3 stage 3, just the first two stages of calibration are skipped for RLDRAM 3.

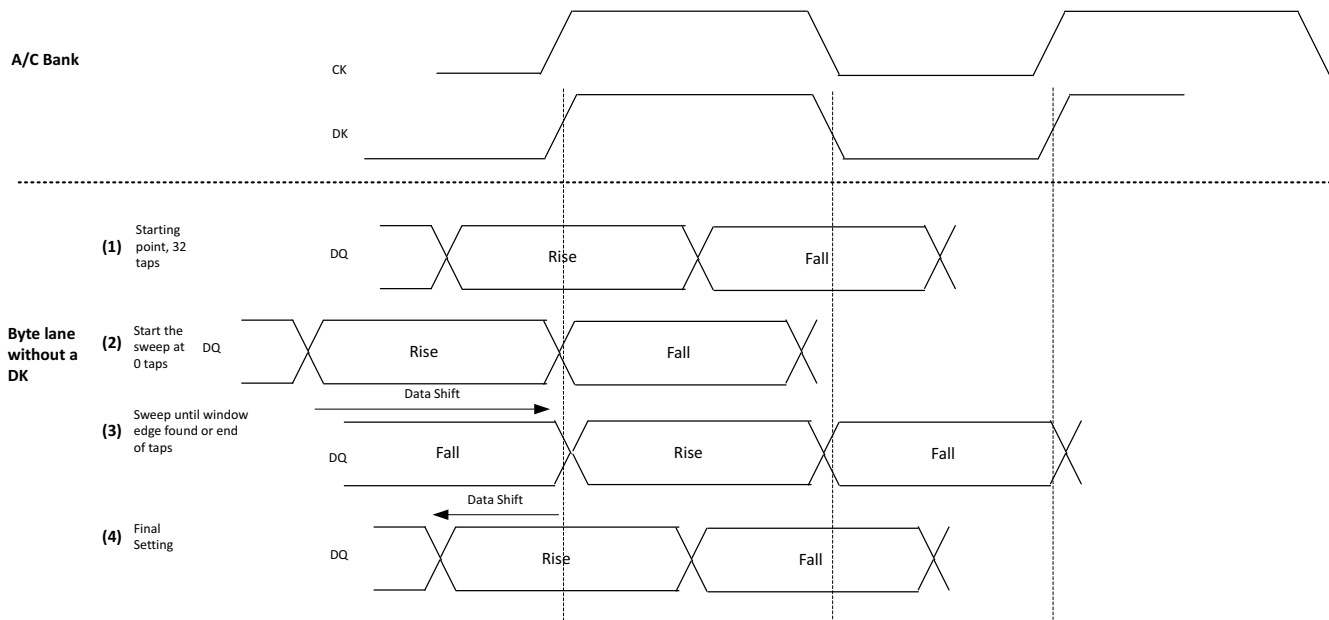


Figure 3-59: RLDRAM 3 Write Calibration (Stage 3, DK-to-DQ2)

When write calibration completes, the read calibration is restarted one last time to run with the proper write settings and allowed to complete through read valid generation.

The simulation waveforms for write calibration of a 36-bit RLDRAM II design is shown in Figure 3-60. The state machine steps through the calibration one byte at a time, selecting the PHASERs for a given byte lane, making adjustments, and recording the results to optimize the write timing. Adjustments are only made within the limits of the PHASER_OUT fine tap delay. To debug any problems, it is important to check the margin found during both read and write calibration, and to check the cmd-to-data write latency seen by the DRAM matches what is programmed in the MRS register. For more details, see [Debugging RLDRAM II and RLDRAM 3 Designs](#), page 481.

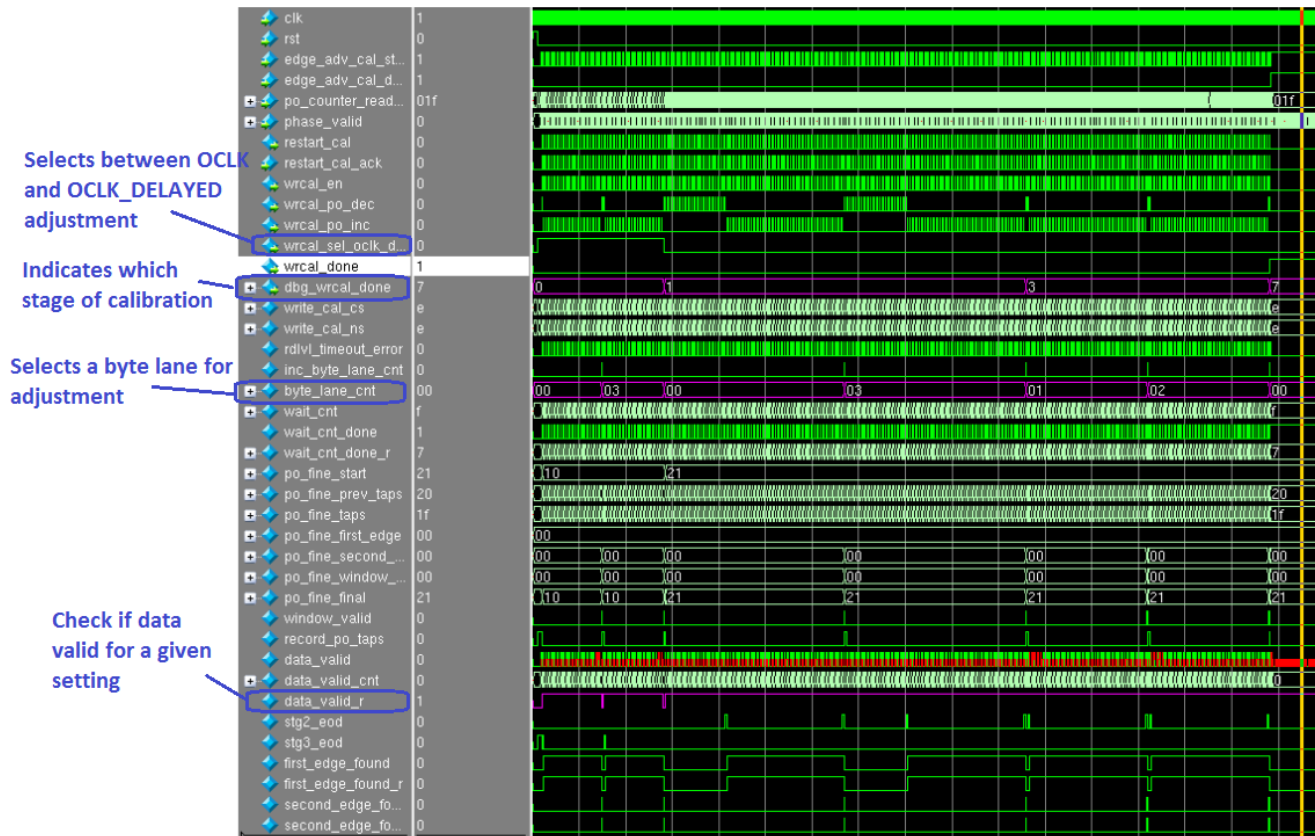


Figure 3-60: RLDRAM II Write Calibration Waveforms

Customizing the Core

The RLDRAM II/RLDRAM 3 memory interface solution is customizable to support several configurations. The specific configuration is defined by Verilog parameters in the top-level of the core. As per the OOC flow, none of the parameter values are passed down to the user design RTL file from the example design top RTL file. So, any design related parameter change is not reflected in the user design logic. The MIG tool should be used to regenerate a design when parameters need to be changed. The parameters are summarized in Table 3-14.

Table 3-14: RLDRAM II Memory Interface Solution Configurable Parameters

Parameter	Description	Options
CLK_PERIOD	Memory clock period (ps).	–
ADDR_WIDTH	Memory address bus width.	18–22
RLD_ADDR_WIDTH	Physical Memory address bus width when using Address Multiplexing mode.	11, 18–22
BANK_WIDTH	Memory bank address bus width.	RLDRAM II: 3 RLDRAM 3: 4

Table 3-14: RLD RAM II Memory Interface Solution Configurable Parameters (Cont'd)

Parameter	Description	Options
DATA_WIDTH	Memory data bus width and can be set through the MIG tool. A maximum DATA_WIDTH of 72 is supported.	–
QK_WIDTH	Memory read clock bus width.	RLDRAM II: 2 per x18/x36 device RLDRAM 3: DATA_WIDTH/9
DK_WIDTH	Memory write clock bus width.	RLDRAM II: 2 per x36 device, 1 per x18 device RLDRAM 3: 2 per device
BURST_LEN	Memory data burst length.	RLDRAM II: 4, 8 RLDRAM 3: 2, 4, 8
DM_PORT	This parameter enables and disables the generation of the data mask ports.	ON, OFF
NUM_DEVICES	Number of memory devices used.	1–4
MRS_CONFIG	This parameter sets the configuration setting in the RLD RAM II/RLDRAM 3 memory register.	RLDRAM II: 1, 2, 3 RLDRAM 3: 3, 4, 5, 6, 7, 8, 9, 10, 11
MRS_ADDR_MUX	This parameter sets the address multiplexing setting in the RLD RAM II/RLDRAM 3 memory register.	ON, OFF
MRS_DLL_RESET	This parameter sets the DLL setting in the RLD RAM II/RLDRAM 3 memory register.	DLL_ON
MRS_IMP_MATCH	This parameter sets the impedance setting in the memory register.	INTERNAL, EXTERNAL
MRS_ODT	This parameter sets the ODT setting in the memory register.	ON, OFF
MRS_RD_LATENCY	This parameter sets the Read latency and write latency setting in the RLD RAM 3 memory register, and is dependent on memory device and frequency of operation.	8–16
MRS_RTT_WR	This parameter sets the output drive impedance setting in the MRS register for RLD RAM 3.	40, 60, 120
MRS_RTT_RD	This parameter sets the ODT setting in the MRS register for RLD RAM 3. If ODT is not used this parameter becomes a "Do not care."	40, 60
MEM_TRC	This parameter sets the RLD RAM 3 TRC setting, and is dependent on the memory device and read latency selected.	4–11
MEM_TYPE	This parameter specifies the memory type.	RLD2_CIO, RLD3
IODELAY_GRP ⁽¹⁾	This is a unique name for the IODELAY_CTRL provided when multiple IP cores are used in the design.	–
REFCLK_FREQ	Reference clock frequency for IDELAYCTRLs. This parameter should not be changed.	200.0

Table 3-14: RLD RAM II Memory Interface Solution Configurable Parameters (Cont'd)

Parameter	Description	Options
BUFMR_DELAY	Simulation-only parameter used to model buffer delays (RLD RAM II only).	–
RST_ACT_LOW	Active-Low or active-High reset. This is set to 1 when System Reset Polarity option is selected as active-Low and set to 0 when the option is selected as active-High.	0, 1
IBUF_LPWR_MODE	Enables or disables low power mode for the input buffers.	ON, OFF
IODELAY_HP_MODE	Enables or disables high-performance mode within the IODELAY primitive. When set to OFF, IODELAY operates in low power mode at the expense of performance.	ON, OFF
SYSCLK_TYPE	This parameter indicates whether the system uses single-ended system clocks, differential system clocks, or is driven from an internal clock (No Buffer). Based on the selected CLK_TYPE, the clocks must be placed on the correct input ports. For differential clocks, sys_clk_p/sys_clk_n must be used. For single-ended clocks, sys_clk_i must be used. For the No Buffer option, sys_clk_i, which appears in the port list, needs to be driven from an internal clock.	DIFFERENTIAL, SINGLE_ENDED, NO_BUFFER
REFCLK_TYPE	This parameter indicates whether the system uses single-ended reference clocks, differential reference clocks, is driven from an internal clock (No Buffer), or can connect to the system clock input only (Use System Clock). Based on the selected CLK_TYPE, the clocks must be placed on the correct input ports. For differential clocks, clk_ref_p/clk_ref_n must be used. For single-ended clocks, clk_ref_i must be used. For the No Buffer option, clk_ref_i, which appears in the port list, needs to be driven from an internal clock. For the Use System Clock option, clk_ref_i is connected to the system clock in the user design top module.	DIFFERENTIAL, SINGLE_ENDED, NO_BUFFER, USE_SYSTEM_CLOCK
CLKIN_PERIOD	Input clock period.	–
CLKFBOUT_MULT	PLL voltage-controlled oscillator (VCO) multiplier. This value is set by the MIG tool based on the frequency of operation.	–
CLKOUT0_DIVIDE, CLKOUT1_DIVIDE, CLKOUT2_DIVIDE, CLKOUT3_DIVIDE	VCO output divisor for PLL outputs. This value is set by the MIG tool based on the frequency of operation.	–
CLKOUT0_PHASE	Phase of PLL output CLKOUT0. This value is set by the MIG based on the banks selected for memory interface pins and the frequency of operation.	–
DIVCLK_DIVIDE	PLL VCO divisor. This value is set by the MIG tool based on the frequency of operation.	–

Table 3-14: RLDRAM II Memory Interface Solution Configurable Parameters (Cont'd)

Parameter	Description	Options
SIM_BYPASS_INIT_CAL	This simulation-only parameter is used to speed up simulations, by skipping the initialization wait time and speeding up calibration. SKIP_AND_WRCAL and FAST_AND_WRCAL are options to SKIP or perform FAST read calibration, but to simulate write calibration.	FAST, NONE, SKIP_AND_WRCAL, FAST_AND_WRCAL
SIMULATION	Set to "TRUE" for simulation; set to "FALSE" for implementation.	"TRUE," "FALSE"
DEBUG_PORT	Turning on the debug port allows for use with the VIO of the Vivado logic analyzer feature. This allows you to change the tap settings within the PHY based on those selected through the VIO. This parameter is always set to OFF in the sim_tb_top module of the sim folder, because debug mode is not required for functional simulation.	ON, OFF
N_DATA_LANES	Calculated number of data byte lanes, used to set up signal widths for using the debug port. This parameter should not be changed.	DATA_WIDTH/9
DIFF_TERM_SYSCLK	Differential Termination for System clock input pins	"TRUE," "FALSE"
DIFF_TERM_REFCLK	Differential Termination for IDELAY reference clock input pins	"TRUE," "FALSE"
nCK_PER_CLK	Number of memory clocks per FPGA logic clocks. This parameter should not be changed.	RLDRAM II: 2 RLDRAM 3: 4
TCQ	Register delay for simulation.	100

Notes:

1. This parameter is prefixed with the module name entered in MIG during design generation. If the design is generated with the module name as mig_7series_0, then IODELAY_GRP parameter name is mig_7series_0_IODELAY_MIG.

Table 3-15 contains parameters set up by the MIG tool based on the pinout selected. When making pinout changes, Xilinx recommends rerunning the MIG tool so the parameters are set up properly; otherwise see [Pinout Requirements, page 467](#). Mistakes to the pinout parameters can result in non-functional simulation, an unroutable design, and/or trouble meeting timing. These parameters are used to set up the PHY and route all the necessary signals to and from it. The parameters are calculated based on Data and Address/Control byte groups selected. These parameters do not consider the System Signals selection (that is, system clock, reference clock, and status signals).

Table 3-15: RLD RAM II Memory Interface Solution Pinout Parameters

Parameter	Description	Example
MASTER_PHY_CTL	0, 1, 2. This parameter varies based on the pinout and should not be changed manually in generated design.	The bank where the master PHY_CONTROL resides (usually corresponds to MMCM/PLL bank location).
BYTE_LANES_B0, BYTE_LANES_B1, BYTE_LANES_B2	Three fields, one per possible I/O bank. Defines the byte lanes being used in a given I/O bank. A 1 in a bit position indicates a byte lane is used, and a 0 indicates unused. This parameter varies based on the pinout and should not be changed manually in generated design.	Ordering of bits from MSB to LSB is T0, T1, T2, and T3 byte groups. 4'b1101 = Three byte lanes in use for a given bank, with one not in use.
DATA_CTL_B0, DATA_CTL_B1, DATA_CTL_B2	Three fields, one per possible I/O bank. Defines the byte lanes for a given I/O bank. A 1 in a bit position indicates a byte lane is used for data, and a 0 indicates it is used for address/control. This parameter varies based on the pinout and should not be changed manually in generated design.	4'b1100 = Two data byte lanes, and, if used with a BYTE_LANES_B0 parameter as in the example shown above, one address/control.
CPT_CLK_SEL_B0, CPT_CLK_SEL_B1, CPT_CLK_SEL_B2	<p>RLDRAM II Only. Three fields, one per possible I/O bank. Defines which read capture clocks are used for each byte lane in given bank. MRCC read capture clocks are placed in byte lanes 1 and/or 2, where parameter is defined for each data byte lane to indicate which read clock to use for the capture clock. 8 bits per byte lane, defined such that:</p> <ul style="list-style-type: none"> [3:0] – 1, 2 to indicate which of two capture clock sources [7:4] – 0 (bank below), 1 (current bank), 2 (bank above) to indicate in which bank the clock is placed. <p>This parameter varies based on the pinout and should not be changed manually in generated design.</p>	<p>32'h12_12_11_11 = Four data byte lanes, all using the clocks in the same bank.</p> <p>32'h21_22_11_11 = Four data byte lanes, two lanes using the capture clock from the bank above (16'h21_22), two using the capture clock from the current bank (16'h11_11).</p>

Table 3-15: RLD RAM II Memory Interface Solution Pinout Parameters (Cont'd)

Parameter	Description	Example
PHY_0_BITLANES, PHY_1_BITLANES, PHY_2_BITLANES	<p>Three fields, one per possible I/O bank. 12-bit parameter per byte lane used to determine which I/O locations are used to generate the necessary PHY structures. This parameter is provided per bank. Except for the CK_P/CK_N, DK_P/DK_N, QK_P/QK_N, and all Data and Address/Control pins are considered for this parameter generation.</p> <p>This parameter varies based on the pinout and should not be changed manually in generated design.</p>	<p>This parameter is denoted for all byte groups of a selected bank. All 12 bits are denoted for a byte lane and are ordered from MSB:LSB as BA98_7654_3210. For example, this parameter is 48'hFFE_FFF_000_DF6 for one bank.</p> <p>12'hBFC (12'b1011_1111_1100) = bit lanes 0, 1, and 10 are not used, all others are used.</p>
CK_MAP	<p>Bank and byte lane position information for the chip select. 12-bit parameter provided per pin.</p> <ul style="list-style-type: none"> [3:0] – Bit position within a byte lane. Values of [0, 1, 2, . . . , A, B] are supported. [7:4] – Byte lane position within a bank. Values of 0, 1, 2, or 3 are supported. [11:8] – Bank position. Values of 0, 1, or 2 are supported <p>This parameter varies based on the pinout and should not be changed manually in generated design.</p>	<p>Upper-most Data or Address/Control byte group selected bank is referred to as Bank 0 in parameters notation. Numbering of banks is 0, 1, and 2 from top to bottom.</p> <p>Byte groups T0, T1, T2, and T3 are numbered in parameters as 3, 2, 1, and 0 respectively.</p> <p>Bottom-most pin in a byte group is referred to as "0" in MAP parameters. Numbering is counted from 0 to 9 from the bottom-most pin to the top pin within a byte group by excluding DQS I/Os. DQS_N and DQS_P pins of byte group are numbered as A and B, respectively.</p> <p>144'h000_000_000_000_000_000_000_000_00_0_235_11B = This parameter is denoted for clock width of 12 with 12 bits for each pin. In this case, the clock width is 2 bits. Ordering of parameters is from MSB to LSB (that is, CK[0] corresponds to the 12 LSBs of the parameter).</p> <p>12'h11B = CK[0] placed in bank 1, byte lane 1, at location A.</p> <p>12'h235 = CK[1] select placed in bank 2, byte lane 3, at location 5.</p> <p>Only the CK_P location is denoted, with the CK_N located on the corresponding N-side location of an I/O pin pair.</p>

Table 3-15: RLD RAM II Memory Interface Solution Pinout Parameters (Cont'd)

Parameter	Description	Example
DK_MAP	<p>Bank and byte lane position information for the DK/DK#. 8-bit parameter provided per pair of signals.</p> <ul style="list-style-type: none"> [3:0] – Byte lane position within a bank. Values of 0, 1, 2, or 3 are supported. [7:4] – Bank position. Values of 0, 1, or 2 are supported <p>This parameter varies based on the pinout and should not be changed manually in generated design.</p>	<p>Upper-most Data or Address/Control byte group selected bank is referred to as Bank 0 in parameters notation. Numbering of banks is 0, 1, and 2 from top to bottom.</p> <p>Byte groups T0, T1, T2, and T3 are numbered in parameters as 3, 2, 1, and 0, respectively.</p> <p>96'h00_00_00_00_00_00_00_00_10_13 = This parameter is denoted for 12 clock pairs with 8 bits for each clock pin. In this case, two clock pairs are used. Ordering of parameters is from MSB to LSB (that is, DK[0]/ DK#[0] corresponds to the 8 LSBs of the parameter).</p> <p>8'h13 = DK/DK# placed in bank 1, byte lane 3.</p> <p>8'h20 = DK/DK# placed in bank 2, byte lane 0.</p>
QK_MAP	<p>Bank and byte lane position information for the QK/QK#. 8-bit parameter provided per pair of signals.</p> <ul style="list-style-type: none"> [3:0] – Byte lane position within a bank. Values of 0, 1, 2, or 3 are supported. [7:4] – Bank position. Values of 0, 1, or 2 are supported <p>This parameter varies based on the pinout and should not be changed manually in generated design.</p>	<p>See the DK_MAP example for parameter values notation.</p> <p>8'h11 = QK/QK# placed in bank 1, byte lane 1.</p> <p>8'h22 = QK/QK# placed in bank 2, byte lane 2.</p>
CS_MAP	<p>Bank and byte lane position information for the chip select. 12-bit parameter provided per pin.</p> <ul style="list-style-type: none"> [3:0] – Bit position within a byte lane. Values of [0, 1, 2, . . . , A, B] are supported. [7:4] – Byte lane position within a bank. Values of 0, 1, 2, or 3 are supported. [11:8] – Bank position. Values of 0, 1, or 2 are supported <p>This parameter varies based on the pinout and should not be changed manually in generated design.</p>	<p>See the CK_MAP example.</p>
WE_MAP	<p>Bank and byte lane position information for the write enable. See CS_MAP description. This parameter varies based on the pinout and should not be changed manually in generated design.</p>	<p>See the CK_MAP example.</p>

Table 3-15: RLD RAM II Memory Interface Solution Pinout Parameters (Cont'd)

Parameter	Description	Example
REF_MAP	Bank and byte lane position information for the refresh signal. See CS_MAP description. This parameter varies based on the pinout and should not be changed manually in generated design.	See the CK_MAP example.
ADDR_MAP	Bank and byte lane position information for the address. See CS_MAP description. This parameter varies based on the pinout and should not be changed manually in generated design.	See the CK_MAP example.
BANK_MAP	Bank and byte lane position information for the bank address. See CS_MAP description. This parameter varies based on the pinout and should not be changed manually in generated design.	See the CK_MAP example.
DQTS_MAP	Bank and byte lane position information for the 3-state control. See CS_MAP description. This parameter varies based on the pinout and should not be changed manually in generated design.	See the CK_MAP example.
DM_MAP	Bank and byte lane position information for the data mask. See CS_MAP description. This parameter varies based on the pinout and should not be changed manually in generated design.	See the CK_MAP example.
DATA0_MAP, DATA1_MAP, DATA2_MAP, DATA3_MAP, DATA4_MAP, DATA5_MAP, DATA6_MAP, DATA7_MAP	Bank and byte lane position information for the data bus. See CS_MAP description. This parameter varies based on the pinout and should not be changed manually in generated design.	See the CK_MAP example.

Design Guidelines

Design Rules

Memory types, memory parts, and data widths are restricted based on the selected FPGA, FPGA speed grade, and the design frequency. The final frequency ranges are subject to characterization results.

For general PCB routing guidelines, see [Appendix A, General Memory Routing Guidelines](#).

Bank Sharing Among Controllers

No unused part of a bank used in a memory interface is permitted to be shared with another memory interface. The dedicated logic that controls all the FIFOs and phasers in a bank is designed to only operate with a single memory interface and cannot be shared with other memory interfaces. With the exception of the shared address and control in the dual controller supported in MIG.

Trace Length Requirements

The trace lengths described here are for high-speed operation and can be relaxed depending on the application target bandwidth requirements. The package delay should be included when determining the effective trace length. Note that different parts in the same package have different internal package skew values. De-rate the minimum period appropriately in the **MIG Controller Options** page when different parts in the same package are used.

One method for determining the delay is to use the L and C values for each pin from the IBIS models. The delay value is determined as the square root of $(L \times C)$.

Another method is to generate the package lengths using Vivado Design Suite. The following commands generate a `csv` file that contains the package delay values for every pin of the device under consideration.

```
link_design -part <part_number>
write_csv <file_name>
```

For example, to obtain the package delay information for the 7 series FPGA XC7K160T-FF676, this command should be issued:

```
link_design -part xc7k160tffg676
write_csv flight_time
```

This generates a file named `flight_time.csv` in the current directory with package trace delay information for each pin. While applying specific trace-matching guidelines for the RLD RAM II/RLD RAM 3 interface, this additional package delay term should be considered for the overall electrical propagation delay. Different die in the same package might have different delays for the same package pin. If this is expected, the values should be averaged appropriately. This decreases the maximum possible performance for the target device.

These rules indicate the maximum electrical delays between RLD RAM II/RLD RAM 3 signals:

- RLD RAM II
 - For x36 data width, the maximum skew between DQ[17:0] and DK/DK#[0] should be ± 15 ps.
 - For x36 data width, the maximum skew between DQ[35:18] and DM and DK/DK#[1] should be ± 15 ps.
 - For x18 data width, the maximum skew between any DQ/DM and DK/DK# should be ± 15 ps.
- RLD RAM 3
 - The maximum skew between DQ[8:0] and DQ[26:18] and DM[0] to DK/DK#[0] should be ± 15 ps.
 - The maximum skew between DQ[17:9] and DQ[35:27] and DM[1] to DK/DK#[1] should be ± 15 ps.
- The maximum skew between any DQ and its associated QK/QK# should be:
 - RLD RAM II: ± 15 ps
 - RLD RAM 3: ± 10 ps
- The maximum skew between any address and control signals and the corresponding CK/CK# should be ± 50 ps.
- The maximum skew between any DK/DK# and CK/CK# should be ± 25 ps.

Pinout Requirements

Xilinx 7 series FPGAs are designed for very high-performance memory interfaces, and certain rules must be followed to use the RLD RAM II/RLD RAM 3 physical layer. Xilinx 7 series FPGAs have dedicated logic for each byte group. Four byte groups are available in each 50-pin bank. Each 50-pin bank consists of two pairs of multiregion clock capable I/O (MRCC) pins and four byte groups that contain 1 DQS clock-capable I/O pair and 10 associated I/Os.

RLDRAM II

In a typical RLDRAM II data bank configuration, 9 of these 10 I/Os are used for the data (DQ) and one can be used for the data mask (DM). DM must be placed in the same byte lane as the corresponding data; if two bytes share the same DM then it should be placed with one of those bytes. The write clocks (DK/DK#) use one of the DQS pairs inside the data bank. QK/QK# clocks must be placed on MRCC pins in a given data bank or in the bank above or below the data. Xilinx 7 series FPGAs have dedicated clock routing for high-speed synchronization that is routed vertically within the I/O banks. Thus, RLDRAM II interfaces must be arranged in the banks vertically and not horizontally. In addition, the maximum height is three banks.

After a core is generated through the MIG tool, the most optimal pinout has been selected for the design. Manual changes through the XDC are not recommended. However, if the XDC needs to be altered, these rules must be taken into consideration:

- The CK/CK# clocks must be placed in an address/control byte lane. The CK/CK# clocks also need to be placed on a DQS pin pair. CK must be placed on the P location, and CK# must be placed on the N location.
- The DK/DK# clocks must be placed in a data byte lane. The DK/DK# clocks also need to be placed on a DQS pin pair. DK must be placed on the P location, and DK# must be placed on the N location.
- Data (DQ) is placed such that all signals corresponding to 1-byte (nine bits) are placed inside a byte group. DQ must not be placed on the DQS N location in a byte lane, because this location is used for the 3-state control.
- Data Mask (DM) must be placed with one of the corresponding data byte lanes it is associated with.

Note: If DM pins are not used, they should be tied to ground. For more information, consult the memory vendor data sheet.

- Xilinx recommends keeping all of the data generated from a single memory component within a bank.
- Read clocks (QK and QK#) need to be placed on the MRCC pins that are available in each bank, respectively. Data must be in the same bank as the associated QK/QK#, or in the bank above or below.
- Address/control signals can be placed in byte groups that are not used for data and all should be placed in the same bank. The address/control must be in the middle I/O bank of the interfaces that span three I/O banks. Also, all address/control signals must be in the same I/O bank. Address/control cannot be split between banks.
- For a given byte lane, the DQS_N location is used to generate the 3-state control signal. The 3-state can share the location with DK# or DM only data.

- The system clock input must be in the same column as the memory interface. The system clock input is strongly recommended to be in the address/control bank. If this is not possible, the system clock input must be in the bank above or below the address/control bank.



RECOMMENDED: *Although the MIG allows system clock selection to be in different super logic regions (SLRs), it is not recommended due to the additional clock jitter in this topology.*

- Devices implemented with SSI technology have SLRs. Memory interfaces cannot span across SLRs. Ensure that this rule is followed for the part chosen and for any other pin-compatible parts that can also be used.

RLDRAM 3

In a typical RLDRAM 3 data bank configuration, 9 of these 10 I/Os are used for the data (DQ) and one can be used for the data mask (DM). The write clocks (DK/DK#) use one of the DQS pairs inside the Address/Control bank, or the DQS pairs in a free byte lane in a data bank. QK/QK# clocks must be placed on DQS pins in a given data bank lane associated with this same clock. Xilinx 7 series FPGAs have dedicated clock routing for high-speed synchronization that is routed vertically within the I/O banks. Thus, RLDRAM 3 interfaces must be arranged in the banks vertically and not horizontally. In addition, the maximum height is three banks.

After a core is generated through the MIG tool, the most optimal pinout has been selected for the design. Manual changes through the XDC are not recommended. However, if the XDC needs to be altered, these rules must be taken into consideration:

- The CK/CK# clocks must be placed in an address/control byte lane. CK must be placed on the P location, and CK# must be placed on the N location, of an I/O pin pair in that byte lane.
- The DK/DK# clocks must be placed on a DQS pin pair. DK must be placed on the P location, and DK# must be placed on the N location.
- Data (DQ) is placed such that all signals corresponding to 1-byte (nine bits) are placed inside a byte group. DQ must not be placed on the DQS N location in a byte lane, because this location is used for the 3-state control.
- Data Mask (DM) must be placed with one of the corresponding data byte lanes it is associated with. For the x18 device DM[0] corresponds to DQ[8:0] and DM[1] to DQ[17:9], while for the x36 device DM[0] corresponds to DQ[8:0]/DQ[26:18] and DM[1] to DQ[17:9]/DQ[35:27].



RECOMMENDED: *If DM pins are not used, they should be tied to ground. For more information, see the memory vendor data sheet.*

- Xilinx recommends keeping all of the data generated from a single memory component within a bank.

- Read clocks (QK and QK#) need to be placed on the DQS pins that are available in a data byte lane, respectively. Data must be in the same byte lane as the associated QK/QK#.
- Address/control signals can be placed in byte groups that are not used for data and all should be placed in the same bank. The address/control must be in the middle I/O bank of the interfaces that span three I/O banks. Also, all address/control signals must be in the same I/O bank. Address/control cannot be split between banks.
- For a given byte lane, the DQS_N location is used to generate the 3-state control signal. The 3-state can share the location with DK# only
- The system clock input must be in the same column as the memory interface. The system clock input is strongly recommended to be in the address/control bank. If this is not possible, the system clock input must be in the bank above or below the address/control bank.



RECOMMENDED: *Although the MIG allows system clock selection to be in different super logic regions (SLRs), it is not recommended due to the additional clock jitter in this topology.*

- Devices implemented with SSI technology have SLRs. Memory interfaces cannot span across SLRs. Ensure that this rule is followed for the part chosen and for any other pin-compatible parts that can also be used.

System Clock, PLL Location, and Constraints

The PLL is required to be in the bank that supplies the clock to the memory to meet the specified interface performance. The system clock input is also strongly recommended to be in this bank. The MIG tool follows these two rules whenever possible. However, exceptions are possible where pins might not be available for the clock input in the bank as that of the PLL. In this case, the clock input needs to come from an adjacent bank through the frequency backbone to the PLL. The system clock input to the PLL must come from clock-capable I/Os.

The system clock input can only be used for an interface in the same column. The system clock input cannot be driven from another column. The additional PLL or MMCM and clock routing required for this induces too much additional jitter.

Unused outputs from the PLL can be used as clock outputs. Only the settings for these outputs can be changed. Settings related to the overall PLL behavior and the used outputs must not be disturbed. A PLL cannot be shared among interfaces.

See [Clocking Architecture, page 434](#) for information on allowed PLL parameters.

Configuration

The XDC contains timing, pin, and I/O standard information. The `sys_clk` constraint sets the operating frequency of the interface. It is set through the MIG GUI. This must be rerun if this constraint needs to be altered, because other internal parameters are affected. For example:

```
create_clock -period 1.875 [get_ports sys_clk_p]
```

The `clk_ref` constraint sets the frequency for the IDELAY reference clock, which is typically 200 MHz. For example:

```
create_clock -period 5 [get_ports clk_ref_p]
```

The I/O standards are set appropriately for the RLDRAM II interface with LVCMOS15, HSTL15_I, HSTL15_I_DCI, DIFF_HSTL15_I, or DIFF_HSTL15_I_DCI, as appropriate. LVDS_25 is used for the system clock (`sys_clk`) and I/O delay reference clock (`clk_ref`). These standards can be changed, as required, for the system configuration. These signals are brought out to the top-level for system connection:

- **sys_rst** – This signal is the main system reset (asynchronous).
- **init_calib_complete** – This signal indicates when the internal calibration is done and that the interface is ready for use.
- **tg_compare_error** – This signal is generated by the example design traffic generator if read data does not match the write data.

These signals are all set to LVCMOS25 and can be altered as needed for the system design. They can be generated and used internally instead of being brought out to pins.

Some interfaces might need to have the system clock in a bank above or below the bank with the address/control and data. In this case, the MIG tool puts an additional constraint in the XDC. For example:

```
set_property CLOCK_DEDICATED_ROUTE BACKBONE [get_nets sys_clk_p]
set_property CLOCK_DEDICATED_ROUTE BACKBONE [get_pins -hierarchical *pll*CLKIN1]
```

It results in the following warning during PAR. This warning can be ignored.

```
WARNING:Place:1402 - A clock IOB / PLL clock component pair have been found that are
not placed at an optimal clock IOB / PLL site pair. The clock IOB component
<sys_clk_p> is placed at site <IOB_X1Y76>. The corresponding PLL component
<u_backbl6/u_infrastructure/plle2_i> is placed at site <PLLE2_ADV_X1Y2>. The clock
I/O can use the fast path between the IOB and the PLL if the IOB is placed on a Clock
Capable IOB site that has dedicated fast path to PLL sites within the same clock
region. You may want to analyze why this problem exists and correct it. This is
normally an ERROR but the CLOCK_DEDICATED_ROUTE constraint was applied on COMP.PIN
<sys_clk_p.PAD> allowing your design to continue. This constraint disables all clock
placer rules related to the specified COMP.PIN. The use of this override is highly
discouraged as it may lead to very poor timing results. It is recommended that this
error condition be corrected in the design.
```

Do not drive user clocks through the I/O clocking backbone from the region(s) containing the MIG generated memory interface to CMT blocks in adjacent regions due to resource limitations. For more information, see the *7 Series FPGAs Clocking Resources User Guide* (UG472) [Ref 10].

The MIG tool sets the VCCAUX_IO constraint based on the data rate and voltage input selected. The generated XDC has additional constraints as needed. For example:

```
# PadFunction: IO_L13P_T2_MRCC_37
set_property VCCAUX_IO DONTCARE [get_ports {sys_clk_p}]
set_property IOSTANDARD DIFF_HSTL_I [get_ports {sys_clk_p}]
set_property PACKAGE_PIN K22 [get_ports {sys_clk_p}]

# PadFunction: IO_L13N_T2_MRCC_37
set_property VCCAUX_IO DONTCARE [get_ports {sys_clk_n}]
set_property IOSTANDARD DIFF_HSTL_I [get_ports {sys_clk_n}]
set_property PACKAGE_PIN J22 [get_ports {sys_clk_n}]
```

For more information, see the *Xilinx Timing Constraints Guide* (UG612) [Ref 15].

For RLDRAM II interfaces that have the memory system input clock (sys_clk_p/sys_clk_n) placed on CCIO pins within one of the memory banks, MIG assigns the DIFF_HSTL_I I/O standard (VCCO = 1.5V) to the CCIO pins. Because the same differential input receiver is used for both DIFF_HSTL_I and LVDS inputs, an LVDS clock source can be connected directly to the DIFF_HSTL_I CCIO pins. For more details on usage and required circuitry for LVDS and LVDS_25 I/O Standards, see the *7 Series FPGAs SelectIO™ Resources User Guide* (UG471) [Ref 2].

Termination

These recommendations apply to termination for RLDRAM II and RLDRAM 3 memory interface solution:

- Simulation (using IBIS or other) is highly recommended. The loading of command and address signals depends on various factors, such as speed requirements and termination topology. Loading can be a limiting factor in reaching a performance target.
- Command and Address signals should be terminated to V_{TT} through a 40Ω resistor if operating at and above 1,333 Mb/s, or 50Ω if operating below 1,333 Mb/s.
- Data signals (DQ) do not require an external termination, and should use DCI. Set DCI termination to 40Ω for operation at and above 1,333 Mb/s, or 50Ω if operating below 1,333 Mb/s.
- Data Mask (DM) does not require an external termination, as On-Die Termination (ODT) is sufficient.
- QVLD (RLDRAM 3 only) does not require an external termination and should use DCI. Set DCI termination to 40Ω for operation at and above 1,333 Mb/s, or 50Ω if operating below 1,333 Mb/s.

- Write Data clock (DK_P/N) does not require an external termination, as On-Die Termination is sufficient.
- Input Clock (CK_P/N) should be differentially terminated with an 80Ω resistor.
- Read Data clock (QK_P/N) does not require an external termination and should use DCI. Set DCI termination to 40Ω for operation at and above 1,333 Mb/s, or 50Ω if operating below 1,333 Mb/s.

Manual Pinout Changes

For manually manipulating the parameters described in Table 3-15, the following examples show how to allocate parameters for a given byte lane. Table 3-16 shows a typical RLD RAM II data byte lane, indicating the bank, byte lane, and bit position for each signal.

Table 3-16: Example RLD RAM II Byte Lane #1

Bank	Byte Lane	Bit	DDR	Byte Group	I/O Type	I/O Number	Special Designation	BITLANES		
0	0	9	VREF	A_11	P	12	VREF	1	0	0001
		8	DQ8	A_10	N	11			1	
		7	DQ7	A_09	P	10				
		6	DQ6	A_08	N	9				
		B	DK0_P	A_07	P	8	DQS-P		0	
		A	DK0_N	A_06	N	7	DQS-N		0	
		5	DQ5	A_05	P	6			111	
		4	DQ4	A_04	N	5			1	
		3	DQ3	A_03	P	4		1		1FF
		2	DQ2	A_02	N	3		1		
		1	DQ1	A_01	P	2		1	111	
		0	DQ0	A_00	N	1		1	1	
			VRN	N/A	SE	0			F	

The byte lane parameters for Table 3-16 are shown in Table 3-17.

Table 3-17: Parameters for Example RLD RAM II Data Byte Lane #1

Parameter	Value
DK_MAP	8'h00
DQTS_MAP	12'h00A
PHY_0_BITLANES	12'h1FF
DATA0_MAP	108'h008_007_006_005_004_003_002_001_000

Table 3-18 shows the byte lane with the Data Mask (DM) placed on the 3-state location. While the DM can share the OSERDES location with the 3-state control, they cannot share the same location in the OUT_FIFO in the PHY. Thus some signals from the OUT_FIFO have to shift as shown in Table 3-18. In this case, the direction of the shift is determined on the byte lane location, with byte lanes 0, 1 shifted up, and 2, 3 shifted down. In this case, the PHY merges the 3-state control with the DM to share the same OSERDES location.

Table 3-18: Example RLD RAM II Byte Lane #3, Shared 3-State with DM in Byte Lane #1

Bank	Byte Lane	Bit	MAP	DDR	Byte Group	I/O Type	I/O Number	Special Designation	BITLANES				
XDC									1	0 1	0101 5		
0	1	9		QK0_P	B_11	P	24	CCIO-P				1	
		8	DQ17	QK0_N	B_10	N	23	CCIO-N					1
		7	DQ16	DQ17	B_09	P	22	CCIO-P					
		6	DQ15	DQ16	B_08	N	21	CCIO-N					
		B	3-state	DQ15	B_07	P	20	DQS-P					
		A	DM	DM	B_06	N	19	DQS-N					
		5	DQ14	DQ14	B_05	P	18			1		111 1	
		4	DQ13	DQ13	B_04	N	17			1		F	
		3	DQ12	DQ12	B_03	P	16			1		111 1	
		2	DQ11	DQ11	B_02	N	15			1			
		1	DQ10	DQ10	B_01	P	14			1			
		0	DQ9	DQ9	B_00	N	13		1	F			
									5FF				

The byte lane parameters for Table 3-18 are shown in Table 3-19.

Table 3-19: Parameters for Example RLD RAM II Data Byte Lane #3

Parameter	Value
DM_MAP	12'h01A
DQTS_MAP	12'h01B
PHY_0_BITLANES	12'h5FF
DATA1_MAP	108'h018_017_016_015_014_013_012_011_010
QK_MAP	8'h01

Table 3-20 shows another RLDRAM II byte lane with the 3-state control location unused.

Table 3-20: Example RLDRAM II Byte Lane #4, 3-State with Control Location Unused

Bank	Byte Lane	Bit	MAP	DDR	Byte Group	I/O Type	I/O Number	Special Designation	BITLANES		
XDC											
0	2	9	DQ26	DQ26	C_11	P	12		1 1 1 1 1 1 1 1 1 1 0 0	1 1 1 1 1 1 1 1 1 1 0 0	1011 B
		8	DQ25	DQ25	C_10	N	11				
		7	DQ24	DQ24	C_09	P	10				
		6	DQ23	DQ23	C_08	N	9				
		B	DQ22	DQ22	C_07	P	8	DQS-P			
		A			C_06	N	7	DQS-N			
		5	DQ21	DQ21	C_05	P	6				
		4	DQ20	DQ20	C_04	N	5				
		3	DQ19	DQ19	C_03	P	4	CCIO-P			
		2	DQ18	DQ18	C_02	N	3	CCIO-N			
		1		QK1_P	C_01	P	2	CCIO-P			
		0		QK1_N	C_00	N	1	CCIO-N			
									1	110 0 C	BFC
									1		
									0		
									0		

The byte lane parameters for Table 3-20 are shown in Table 3-21.

Table 3-21: Parameters for Example RLDRAM II Data Byte Lane #4

Parameter	Value
DQTS_MAP	12'h02A
PHY_0_BITLANES	12'hBFC
DATA1_MAP	108'h029_028_027_026_02B_025_024_023_022
QK_MAP	8'h02

Table 3-22 shows the RLDRAM II byte lane with the 3-state pin location used for DM. In this situation the signals are shifted down in the OUT_FIFO.

Table 3-22: Example RLDRAM II Byte Lane #5, Shared 3-State with DM in Byte Lane #2

Bank	Byte Lane	Bit	MAP	DDR	Byte Group	I/O Type	I/O Number	Special Designation	BITLANES	
XDC										
0	2	9	DQ26	DQ26	C_11	P	12		1	1
		8	DQ25	DQ25	C_10	N	11			1
		7	DQ24	DQ24	C_09	P	10			
		6	DQ23	DQ23	C_08	N	9			
		B	DQ22	DQ22	C_07	P	8	DQS-P	0	1
		A	DM	DM	C_06	N	7	DQS-N		1
		5	3-state	DQ21	C_05	P	6		1	110
		4	DQ21	DQ20	C_04	N	5			1
		3	DQ20	DQ19	C_03	P	4	CCIO-P	1	111
		2	DQ19	DQ18	C_02	N	3	CCIO-N	1	
		1	DQ18	QK1_P	C_01	P	2	CCIO-P	1	
		0		QK1_N	C_00	N	1	CCIO-N	0	

The byte lane parameters for Table 3-22 are shown in Table 3-23.

Table 3-23: Parameters for Example RLDRAM II Data Byte Lane #5

Parameter	Value
DM_MAP	12'h02A
DQTS_MAP	12'h025
PHY_0_BITLANES	12'hFDE
DATA1_MAP	108'h029_028_027_026_02B_024_023_022_021
QK_MAP	8'h02

I/O Standards

The MIG tool generates the appropriate XDC for the core with SelectIO™ standards based on the type of input or output to the 7 series FPGAs. These standards should not be changed. Table 3-24 and Table 3-25 contain a list of the ports with the I/O standard used.

Table 3-24: RLD RAM II I/O Standards

Signal	Direction	I/O Standard
rld_ck_p, rld_ck_n	Output	DIFF_HSTL_I
rld_dk_p, rld_dk_n	Output	DIFF_HSTL_I
rld_cs_n	Output	HSTL_I
rld_we_n	Output	HSTL_I
rld_ref_n	Output	HSTL_I
rld_a	Output	HSTL_I
rld_ba	Output	HSTL_I
rld_dm	Output	HSTL_I
rld_dq	Input/Output	HSTL_II_T_DCI, HSTL_II
rld_qk_p, rld_qk_n	Input	DIFF_HSTL_II_DCI, DIFF_HSTL_II

Table 3-25: RLD RAM 3 I/O Standards

Signal	Direction	I/O Standard
rld_ck_p, rld_ck_n	Output	DIFF_SSTL12
rld_dk_p, rld_dk_n	Output	DIFF_SSTL12
rld_cs_n	Output	SSTL12
rld_we_n	Output	SSTL12
rld_ref_n	Output	SSTL12
rld_a	Output	SSTL12
rld_ba	Output	SSTL12
rld_dm	Output	SSTL12
rld_dq	Input/Output	SSTL12_T_DCI, SSTL12
rld_qk_p, rld_qk_n	Input	DIFF_SSTL12_DCI, DIFF_SSTL12

DCI (HP banks) or IN_TERM (HR banks) is required at the FPGA to meet the specified performance. Designs generated by the MIG tool use the DCI standards for Data (DQ) and Read Clock (QK_P and QK_N) in the High-Performance banks. In the High-Range banks for RLD RAM II, the MIG tool uses the HSTL_II and DIFF_HSTL_II standards with the internal termination (IN_TERM) attribute chosen in the GUI.

Clocking

The 7 series FPGA MIG RLD RAM II/RLD RAM 3 design has two clock inputs, the reference clock and the system clock. The reference clock drives the IODELAYCTRL components in the design, while the system clock input is used to create all MIG design clocks that are used to clock the internal logic, the frequency reference clocks to the phasers, and a synchronization pulse required for keeping PHY control blocks synchronized in multi-I/O bank implementations. For more information on clocking architecture, see [Clocking Architecture, page 434](#).

The MIG tool allows you to input the Memory Clock Period and then lists available Input Clock Periods that follow the supported clocking guidelines. Based on these two clock periods selections, the generated MIG core appropriately sets the PLL parameters. The MIG tool enables automatic generation of all supported clocking structures. For information on how to use the MIG tool to set up the desired clocking structure including input clock placement, input clock frequency, and IDELAYCTRL `ref_clk` generation, see [Creating the 7 Series FPGAs RLD RAM II/RLD RAM 3 Memory Design, page 390](#).

Input Clock Guidelines



IMPORTANT: *The input system clock cannot be generated internally.*

- PLL Guidelines
 - CLKFBOUT_MULT_F (M) must be between 1 and 16 inclusive.
 - DIVCLK_DIVIDE (D, Input Divider) can be any value supported by the PLLE2 parameter.
 - CLKOUT_DIVIDE (O, Output Divider) must be 2 for 400 MHz and up operation and 4 for below 400 MHz operation.
 - The above settings must ensure the minimum PLL VCO frequency (FVCOMIN) is met. For specifications, see the appropriate DC and Switching Characteristics Data Sheet. The *7 Series FPGAs Clocking Resources User Guide* (UG472) [\[Ref 10\]](#) includes the equation for calculating FVCO.
 - The relationship between the input period and the memory period is $\text{InputPeriod} = (\text{MemoryPeriod} \times M) / (D \times D1)$.
- The clock input (`sys_clk`) can be input on any CCIO in the column where the memory interface is located; this includes CCIO in banks that do not contain the memory interface, but must be in the same column as the memory interface. The PLL must be located in the bank containing the clock sent to the memory. To route the input clock to the memory interface PLL, the CMT backbone must be used. With the MIG implementation, one spare interconnect on the backbone is available that can be used for this purpose.

- MIG versions 1.4 and later allow this input clocking setup and properly drive the CMT backbone.
- `CLOCK_DEDICATED_ROUTE = BACKBONE` constraint is used to implement CMT backbone, following warning message is expected. It can be ignored safely.

WARNING: [Place 30-172] Sub-optimal placement for a clock-capable IO pin and PLL pair. The flow will continue as the `CLOCK_DEDICATED_ROUTE` constraint is set to `BACKBONE`.

```
u_mig_7series_0/c0_u_clk_ibuf/diff_input_clk.u_ibufg_sys_clk (IBUFDS.0) is locked
to IOB_X0Y176
u_mig_7series_0/c0_u_infrastructure/plle2_i (PLLE2_ADV.CLKIN1) is locked to
PLLE2_ADV_X0Y1
u_mig_7series_0/c1_u_infrastructure/plle2_i (PLLE2_ADV.CLKIN1) is locked to
PLLE2_ADV_X0Y5
.....
```

- For RLD RAM II interfaces that have the memory system input clock (`sys_clk`) placed on CCIO pins within one of the memory banks, MIG assigns the `DIFF_HSTL_I` I/O standard ($V_{CCO} = 1.5V$) to the CCIO pins. Because the same differential input receiver is used for both `DIFF_HSTL_I` and LVDS inputs, an LVDS clock source can be connected directly to the `DIFF_HSTL_I` CCIO pins.
- For RLD RAM 3 interfaces that have the memory system input clock (`sys_clk`) placed on CCIO pins within one of the memory banks, MIG assigns the `DIFF_SSTL12` I/O standard ($V_{CCO} = 1.2V$) to the CCIO pins. Because the same differential input receiver is used for both `DIFF_SSTL12` and LVDS inputs, an LVDS clock source can be connected directly to the `DIFF_SSTL12` CCIO pins.
- It is acceptable to have differential inputs such as LVDS and LVDS_25 in I/O banks that are powered at voltage levels other than the nominal voltages required for the outputs of those standards (1.8V for LVDS outputs, and 2.5V for LVDS_25 outputs). However, these criteria must be met:
 - a. The optional internal differential termination is not used (`DIFF_TERM = FALSE`, which is the default value).

Note: This might require manually changing `DIFF_TERM` parameter located in the top-level module or setting this in the UCF or XDC.
 - b. The differential signals at the input pins meet the V_{IN} requirements in the Recommended Operating Conditions table of the specific device family data sheet.
 - c. The differential signals at the input pins meet the V_{IDIFF} (min) requirements in the corresponding LVDS or LVDS_25 DC specifications tables of the specific device family data sheet.

One way to accomplish the above criteria is to use an external circuit that both AC-couples and DC-biases the input signals. The figure shows an example circuit for providing an AC-coupled and DC-biased circuit for a differential clock input. RDIFF provides the 100Ω differential receiver termination because the internal DIFF_TERM is set to FALSE. To maximize the input noise margin, all RBIAS resistors should be the same value, essentially creating a VICM level of VCCO/2. Resistors in the 10k to 100 kΩ range are recommended. The typical values for the AC coupling capacitors CAC are in the range of 100 nF. All components should be placed physically close to the FPGA inputs.

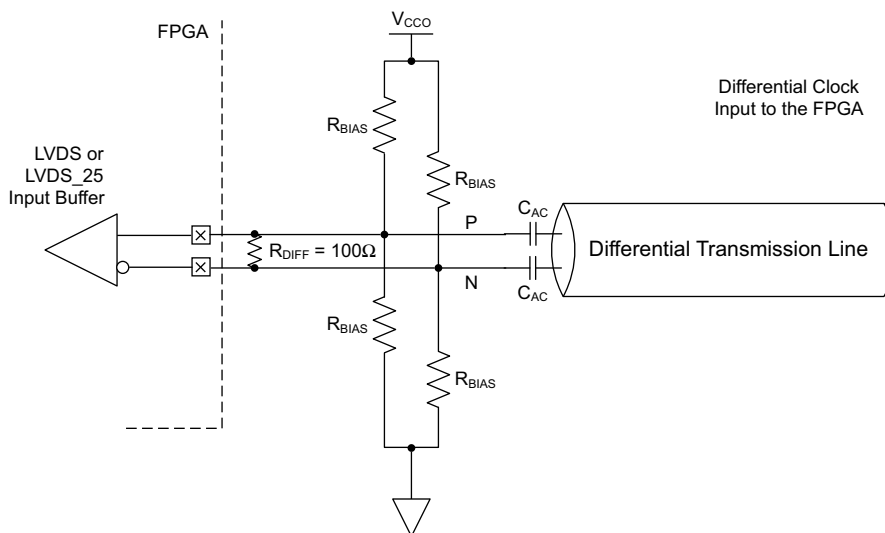


Figure 3-61: Example Circuit for AC-Coupled and DC-Biased Differential Clock Input

Note: The last set of guidelines on differential LVDS inputs are added within the LVDS and LVDS_25 (Low Voltage Differential Signaling) section of the *7 Series SelectIO Resources User Guide* (UG471) [Ref 2] in the next release of the document. These guidelines are irrespective of Package, Column (HR/HP), or I/O Voltage.

Sharing sys_clk between Controllers

MIG 7 series FPGA designs require `sys_clk` to be in the same I/O bank column as the memory interface to minimize jitter.

- **Interfaces Spanning I/O Columns** – A single `sys_clk` input cannot drive memory interfaces spanning multiple I/O columns. The input clock input must be in the same column as the memory interface to drive the PLL using the CMT Backbone, which minimizes jitter.
- **Interfaces in Single I/O Column** – If the memory interfaces are entirely contained within the same I/O column, a common `sys_clk` can be shared among the interfaces. The `sys_clk` can be input on any CCIO in the column where the memory interfaces are located. This includes CCIO in banks that do not contain the memory interfaces, but must be in the same column as the memory interfaces.

Information on Sharing BUFG Clock (phy_clk)

The MIG 7 series RLD RAM II/RLD RAM 3 design includes an MMCM which outputs the `phy_clk` on a BUFG route. It is not possible to share this clock amongst multiple controllers to synchronize the user interfaces. This is not allowed because the timing from the FPGA logic to the PHY Control block must be controlled. This is not possible when the clock is shared amongst multiple controllers. The only option for synchronizing user interfaces amongst multiple controllers is to create an asynchronous FIFO for clock domain transfer.

Information on Sync_Pulse

The MIG 7 series RLD RAM II/RLD RAM 3 design includes one PLL that generates the necessary design clocks. One of these outputs is the `sync_pulse`. The sync pulse clock is 1/16 of the `mem_refclk` frequency and must have a duty cycle distortion of 1/16 or 6.25%. This clock is distributed across the low skew clock backbone and keeps all PHASER_IN/_OUT and PHY_Control blocks in sync with each other. The signal is sampled by the `mem_refclk` in both the PHASER_INs/_OUTs and PHY_Control blocks. The phase, frequency, and duty cycle of the `sync_pulse` is chosen to provide the greatest setup and hold margin across PVT.

Debugging RLD RAM II and RLD RAM 3 Designs

This section defines a step-by-step debugging procedure to assist in the identification and resolution of any issues that might arise during each phase of the memory interface design process.

Introduction

The RLD RAM II and RLD RAM 3 memory interfaces simplify the challenges associated with memory interface design. However, every application environment is unique and proper due diligence is required to ensure a robust design. Careful attention must be given to functional testing through simulation, proper synthesis and implementation, adherence to PCB layout guidelines, and board verification through IBIS simulation and signal integrity analysis.

This section defines a step-by-step debugging procedure to assist in the identification and resolution of any issues that might arise during each phase of the design process. Details are provided on:

- Functional verification using the UNISIM simulation models
- Design implementation verification
- Board layout verification

- Using the RLDRAM II/RLDRAM 3 physical layer to debug board-level issues
- General board-level debug techniques

The two primary issues encountered during verification of a memory interface are:

- Calibration not completing properly
- Data corruption during normal operation

Problems might be seen in simulation, hardware, or both due to various root causes.

Figure 3-62 shows the overall flow for debugging problems associated with these two general types of issues.

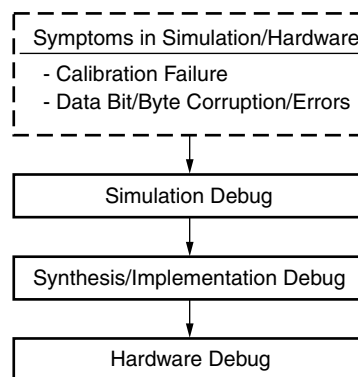


Figure 3-62: **RLDRAM II/RLDRAM 3 MIG Tool Debug Flowchart**

Debug Tools

Many tools are available to debug memory interface design issues. This section indicates which resources are useful for debugging a given situation.

Example Design

RLDRAM II/RLDRAM 3 design generation using the MIG tool produces an example design and a user design. The example design includes a synthesizable test bench that has been fully verified in simulation and hardware. This design can be used to observe the behavior of the MIG tool design and can also aid in identifying board-related problems.

Debug Signals

The MIG tool includes a Debug Signals Control option on the FPGA Options screen. Enabling this feature allows calibration, tap delay, and read data signals to be monitored using the Vivado logic analyzer feature. Selecting this option port maps the debug signals to VIO modules of the Vivado logic analyzer feature in the design top module.

Vivado Design Suite Debug Feature

The Vivado Design Suite debug feature inserts logic analyzer, bus analyzer, and VIO software cores directly into the design. Supported versions of ILA and VIO are 3.0. The debug feature also allows you to set trigger conditions to capture application and MIG debug signals in hardware. Captured signals can be analyzed through the Vivado logic analyzer feature. For more information about the Vivado logic analyzer, software is available in the *Vivado Design Suite User Guide: Programming and Debugging* (UG908) [Ref 16].



IMPORTANT: *The Integrated Logic Analyzer (ILA) operates on a synchronous clock and cannot be triggered during reset. Instead, set the trigger on an ILA signal to look for a rising edge ("R") or falling edge ("F") with the radix value of the signal set to "Binary." With this trigger setting, the trigger can be armed. When the reset is applied and released, the trigger captures the desired ILA results.*

Simulation Debug

Figure 3-63 shows the debug flow for simulation.

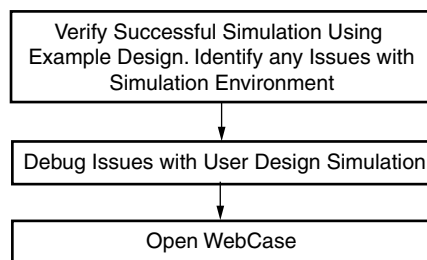


Figure 3-63: Simulation Debug Flowchart

Verifying the Simulation Using the Example Design

The example design generated by the MIG tool includes a simulation test bench and parameter file based on memory selection in the MIG tool. Successful completion of this example design simulation verifies a proper simulation environment.

The QuestaSim, Vivado Simulator, IES, and VCS simulation tools are used for verification of MIG IP core at each software release. Script files to run simulations with IES and VCS simulators are generated in MIG generated output. Simulations using QuestaSim and Vivado simulators can be done through Vivado Tcl Console commands or in Vivado IDE.



IMPORTANT: *Other simulation tools can be used for MIG IP core simulation but are not specifically verified by Xilinx.*

Simulation Flow Using IES and VCS Script Files

To run the simulation, go to this directory:

```
<project_dir>/<Component_Name>_example/<component  
name>_example.srcs/sim_1/imports/sim
```

For a project created with the name set as `project_1` and the Component Name entered in Vivado IDE as `mig_7series_0`, go to the directory as follows:

```
project_1/mig_7series_0_example/mig_7series_0_example.srcs/sim_1/im  
ports/sim
```

IES and VCS simulation scripts are meant to be executed only in Linux operating systems.

The `ies_run.sh` and `vcs_run.sh` files are the executable files for running simulations using IES and VCS simulators respectively. Library files should be added to the `ies_run.sh` and `vcs_run.sh` files respectively. See the `readme.txt` file for details regarding simulations using IES and VCS.

Simulation Flow Using Vivado Simulator

1. In the **Open IP Example Design** Vivado project, under **Flow Navigator**, select **Simulation Settings** ([Figure 3-64](#)).

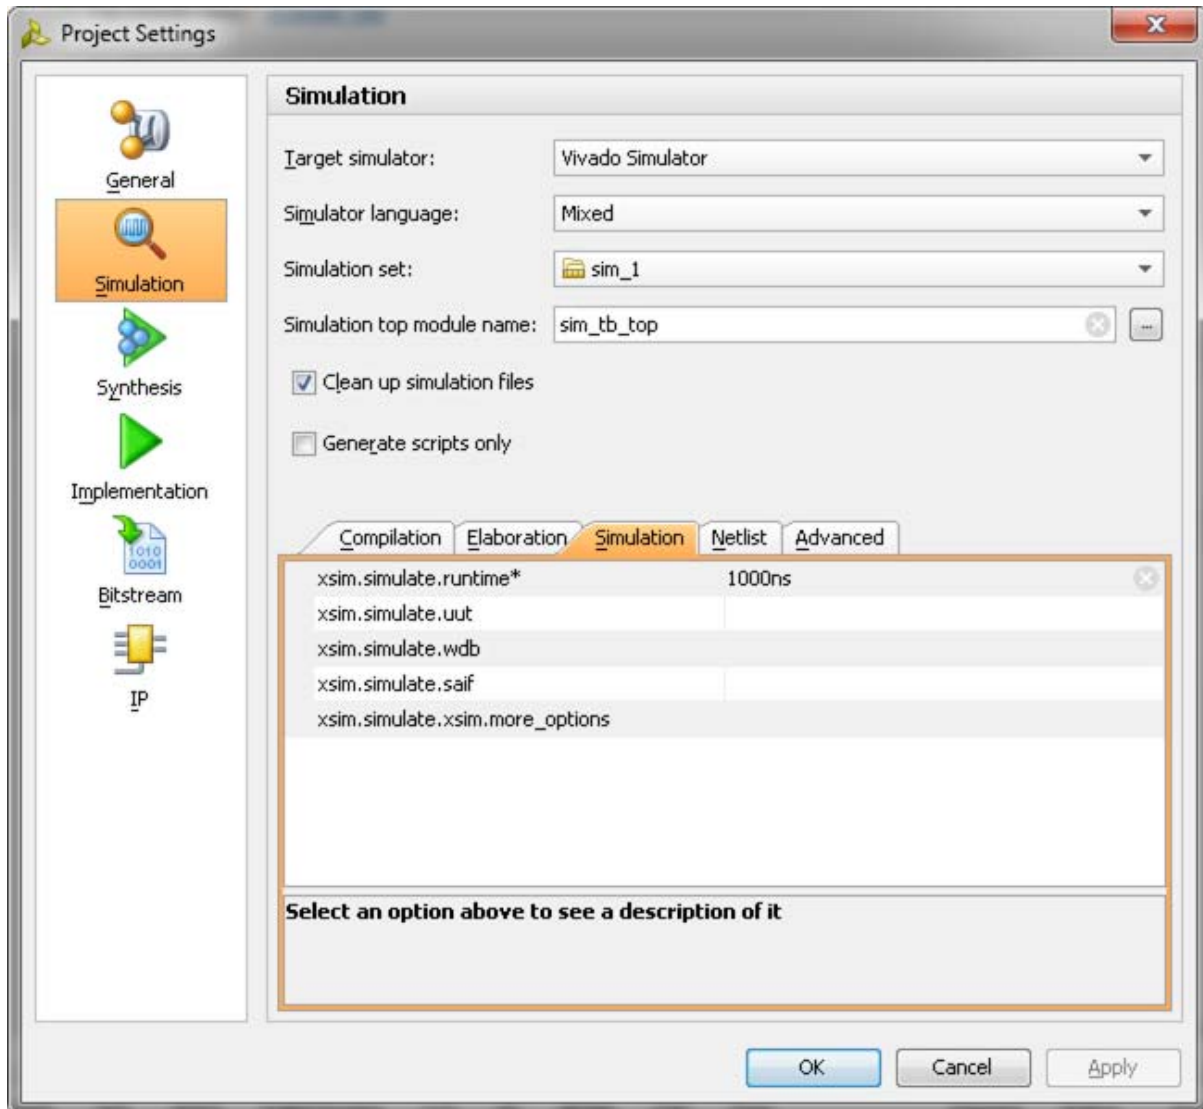


Figure 3-64: Simulation with Vivado Simulator

2. Under the **Simulation** tab as shown in Figure 3-64, set the `xsim.simulate.runtime` as 1 ms (there are simulation RTL directives which stop the simulation after certain period of time, which is less than 1 ms). Apply the settings and select **OK**.

3. In the **Flow Navigator** window, select **Run Simulation** and select **Run Behavioral Simulation** as shown in Figure 3-65.

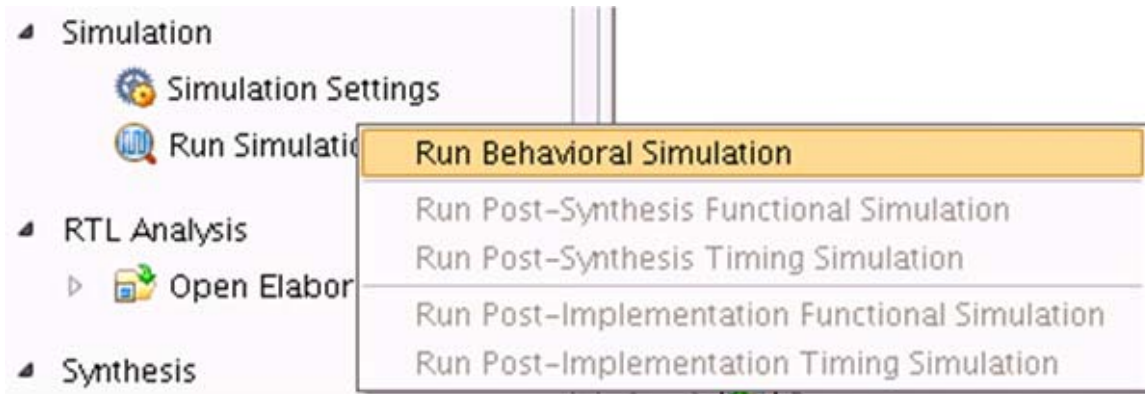


Figure 3-65: Run Behavioral Simulation

Note: RLDRAM 3 memory model has System Verilog constructs, which are not supported by Vivado Simulator.

Simulation Flow Using QuestaSim

1. In the **Open IP Example Design** Vivado project, under **Flow Navigator** select **Simulation Settings**.
2. Select **Target simulator** as QuestaSim/ModelSim.
 - a. Browse to the **Compiled libraries location** and set the path on **Compiled libraries location** option.
 - b. Under the **Simulation** tab, set the `modelsim.simulate.runtime` to 1 ms (there are simulation RTL directives which stop the simulation after certain period of time, which is less than 1 ms), set `modelsim.simulate.vsim.more_options` to `-novopt` as shown in Figure 3-64.
 - c. Under **Compilation** tab, set `modelsim.compile.vlog.more_options` to `-sv` (only for RLDRAM 3 designs).
3. Apply the settings and select **OK**.

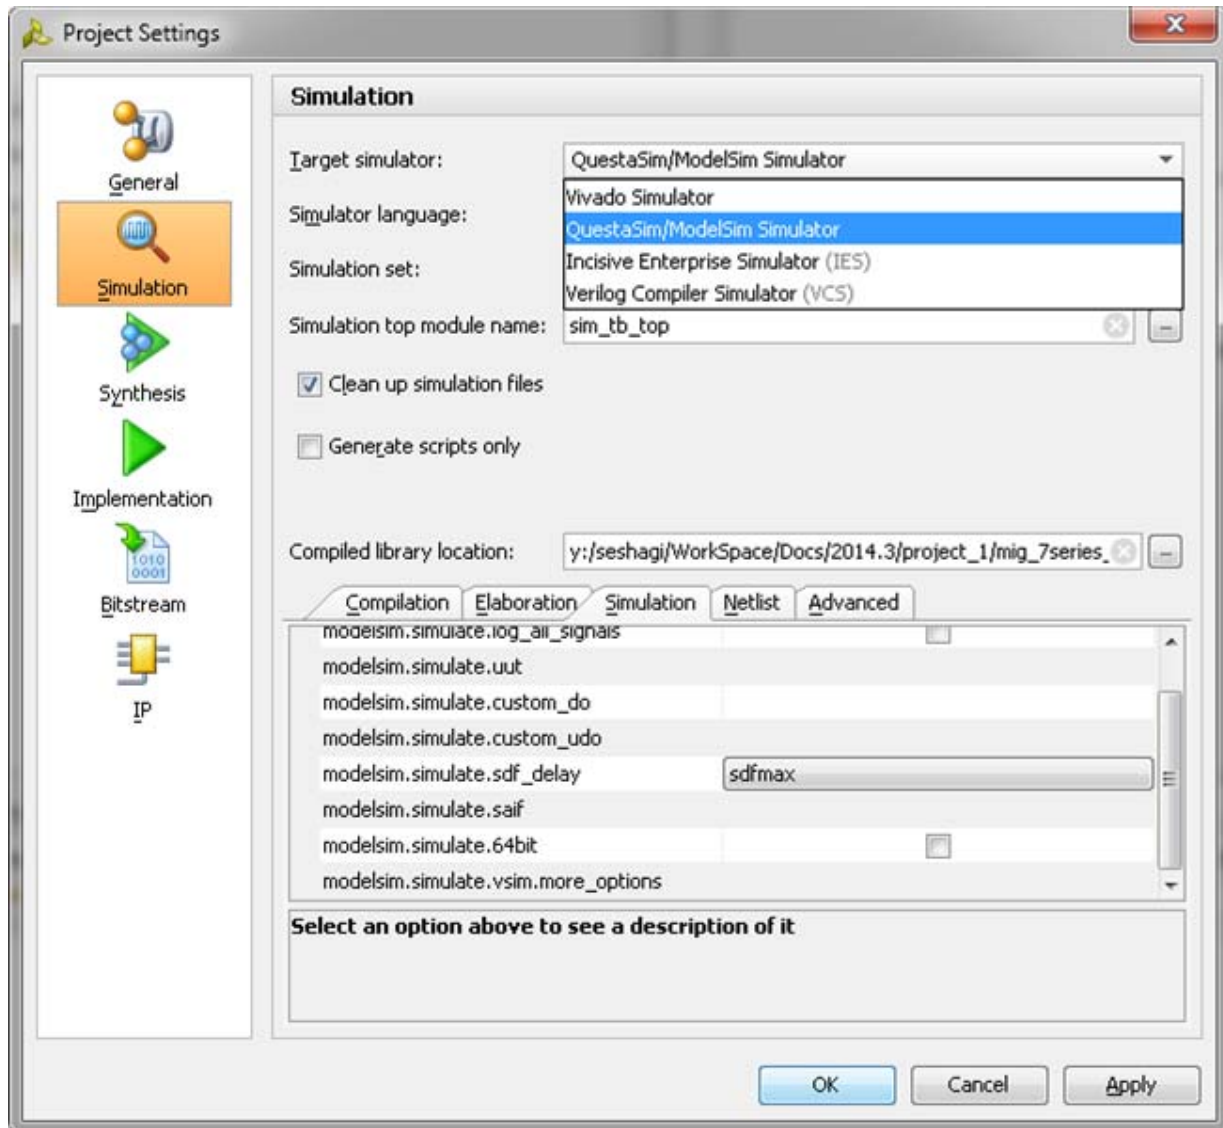


Figure 3-66: Simulation with QuestaSim

4. In the **Flow Navigator** window, select **Run Simulation** and select **Run Behavioral Simulation** as shown in Figure 3-65.
5. Vivado invokes QuestaSim and simulations are run in the QuestaSim tool. For more information, see the *Vivado Design Suite User Guide: Logic Simulation* (UG900) [Ref 8].

Simulation Flow Using VCS

1. In the **Open IP Example Design Vivado** project, under **Flow Navigator** select **Simulation Settings**.
2. Select **Target simulator** as Verilog Compiler Simulator (VCS).
 - a. Browse to the **Compiled libraries location** and set the path on **Compiles libraries location** option.

- b. Under the **Compilation** tab, set the `vcs.compile.vlogan.more_options` to `-sverilog`.
 - c. Under the **Simulation** tab, set the `vcs.simulate.runtime` to 1 ms (there are simulation RTL directives which stop the simulation after a certain period of time which is less than 1 ms) as shown in Figure 3-67.
3. Apply the settings and select **OK**.

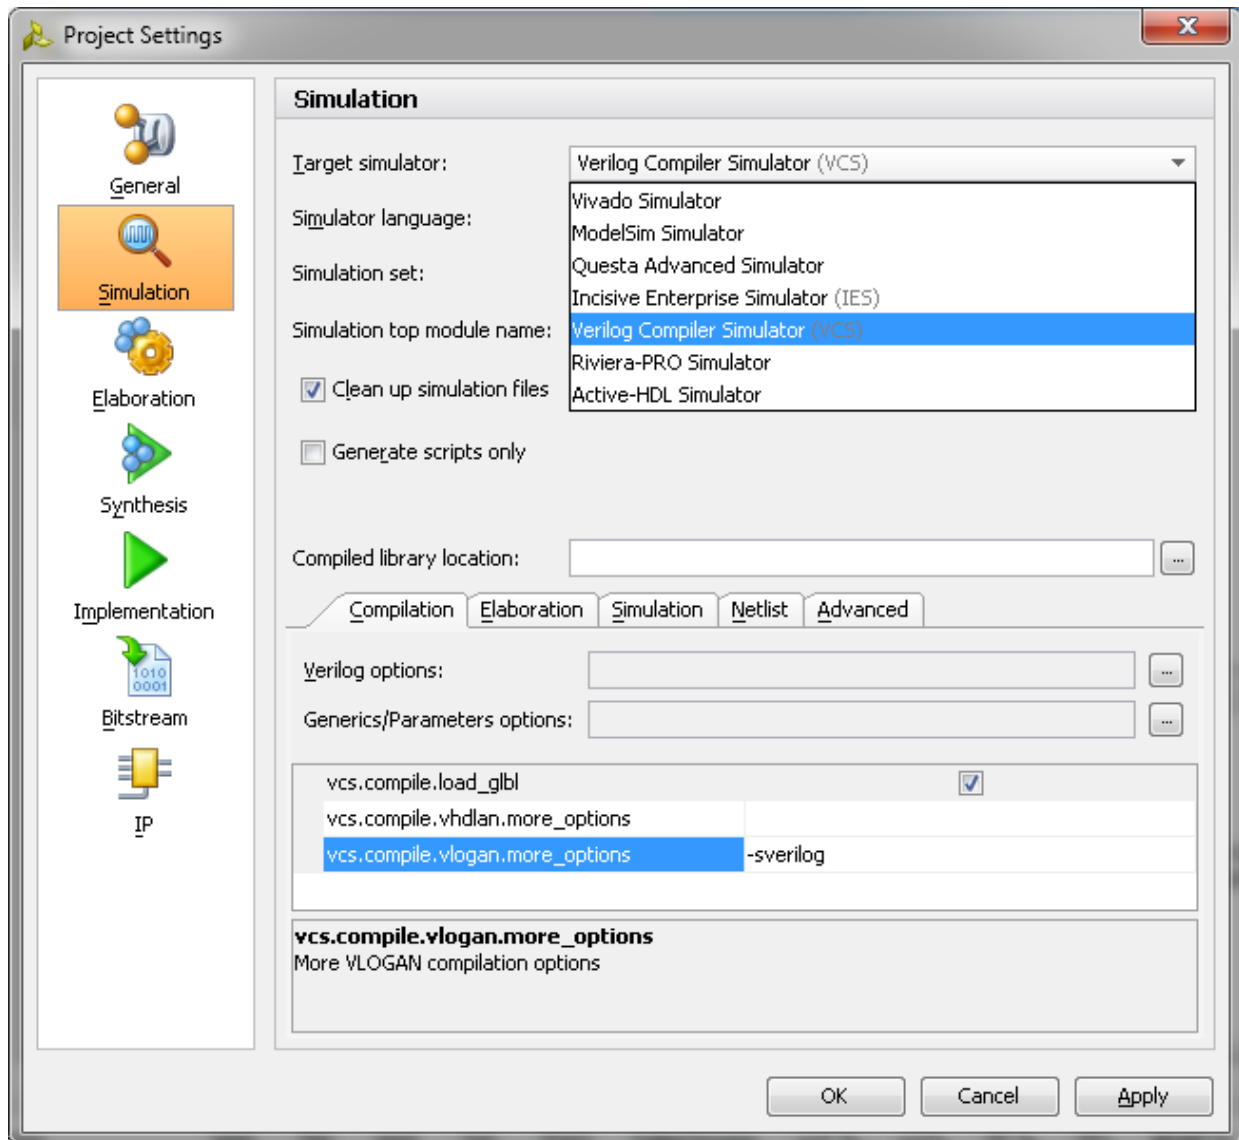


Figure 3-67: Simulation with VCS

4. In the **Flow Navigator** window, select **Run Simulation** and select **Run Behavioral Simulation** as shown in Figure 3-65.
5. Vivado invokes VCS and simulations are run in the VCS tool. For more information, see the *Vivado Design Suite User Guide: Logic Simulation* (UG900) [Ref 8].

Simulation Flow Using IES

1. In the **Open IP Example Design Vivado** project, under **Flow Navigator** select **Simulation Settings**.
2. Select **Target simulator** as Incisive Enterprise Simulator (IES).
 - a. Browse to the **Compiled libraries location** and set the path on **Compiles libraries location** option.
 - b. Under the **Compilation** tab, set the `ies.compile.ncvlog.more_options` to `-sv`.
 - c. Under the **Elaboration** tab, set the `ies.elaborate.ncelab.more_options` to `-namemap_mixgen`.
 - d. Under the **Simulation** tab, set the `ies.simulate.runtime` to 1 ms (there are simulation RTL directives which stop the simulation after certain period of time which is less than 1 ms) as shown in [Figure 3-68](#).

3. Apply the settings and select **OK**.

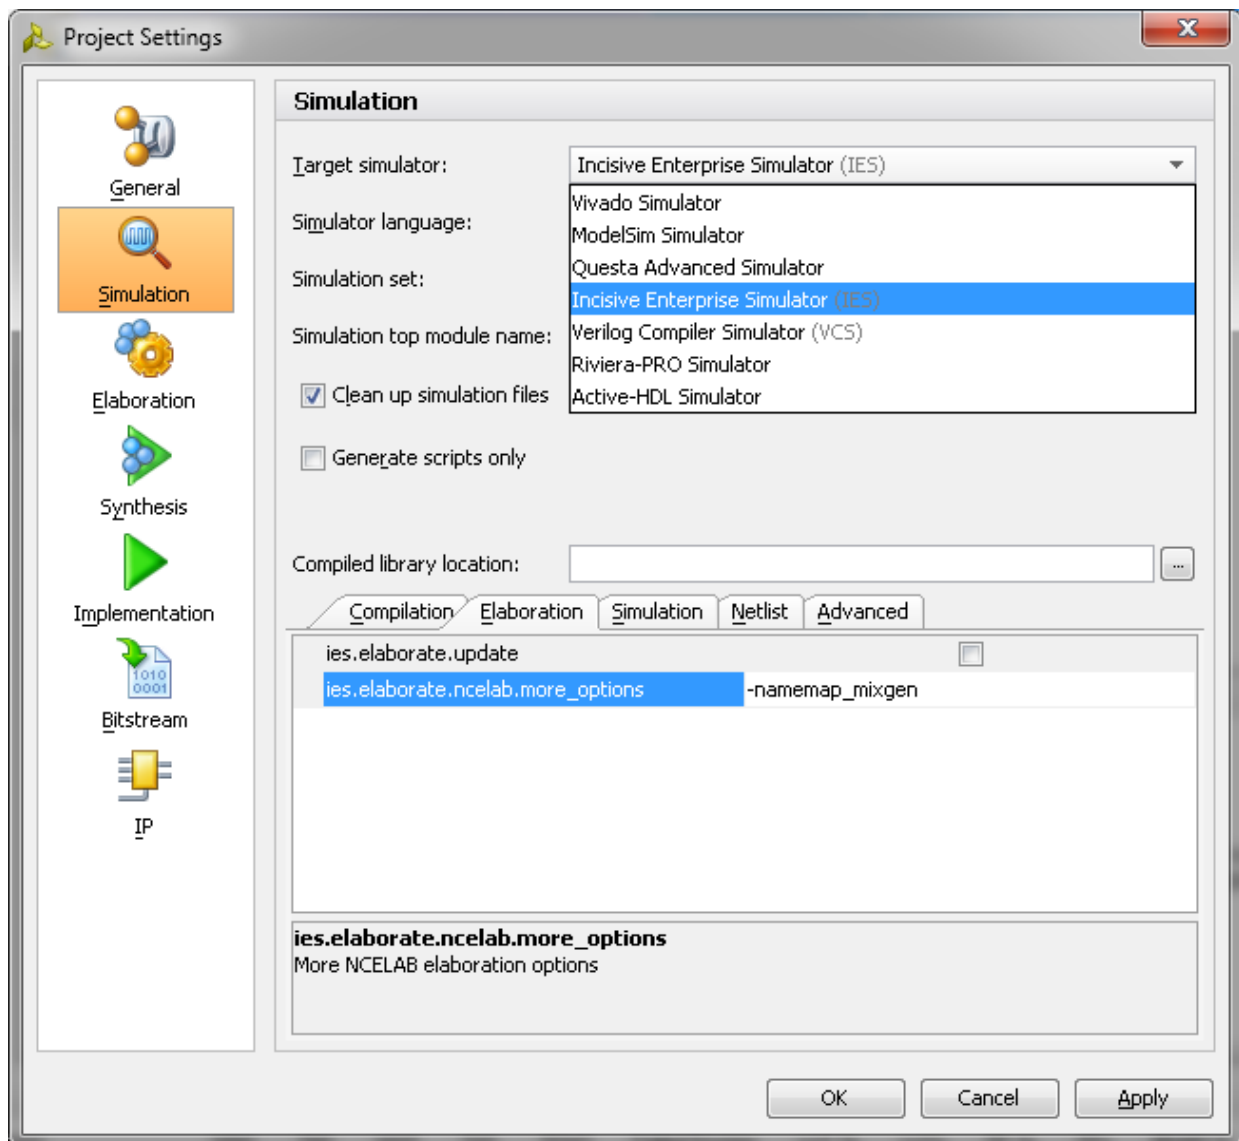


Figure 3-68: Simulation with IES

4. In the **Flow Navigator** window, select **Run Simulation** and select **Run Behavioral Simulation** as shown in Figure 3-65.
5. Vivado invokes IES and simulations are run in the IES tool. For more information, see the *Vivado Design Suite User Guide: Logic Simulation* (UG900) [Ref 8].

For detailed information on setting up Xilinx libraries, see COMPXLIB in the *Command Line Tools User Guide* (UG628) [Ref 17] and the *Synthesis and Simulation Design Guide* (UG626) [Ref 18]. For simulator tool support, see the *Zynq-7000 AP SoC and 7 Series Devices Memory Interface Solutions Data Sheet* (DS176) [Ref 1].

A working example design simulation completes memory initialization and runs traffic in response to the test bench stimulus. Successful completion of memory initialization and calibration results in the assertion of the `init_calib_complete` signal. When this signal is asserted, the Traffic Generator takes control and begins executing writes and reads according to its parameterization.

Table 3-26 shows the signals and parameters of interest, respectively, during simulation.

Table 3-26: Signals of Interest During Simulation

Signal Name Usage	Signal Name Usage
tg_compare_error	This signal indicates a mismatch between the data written from the UI and data received during a read on the UI. This signal is a part of the example design. A single error asserts this signal; it is held until the design is reset.
dbg_cmp_err	This signal indicates a mismatch between the data written from the UI and the data received during a read on the UI. This signal is part of the example design. This signal is asserted each time a data mismatch occurs.
user_cmd_en	This signal indicates if a command is valid.
user_cmd	This signal indicates if you requests a write or a read command. 2'b00 = Write Command 2'b01 = Read Command 2'b10 = NOP 2'b11 = NOP
user_addr	This is the address location for the current command.
user_ba	This is the bank address location for the current command.
user_wr_en	This signal is asserted when the user_wr_data is valid. This signal is necessary for write commands.
user_wr_data	This signal is the write data provided for write commands.
user_wr_dm	This signal is the data mask for masking off and not writing all of the data in a given write transaction.
user_afifo_empty	This signal indicates that the command and address FIFO is empty.
user_afifo_full	This signal indicates that the command and address FIFO is full. When this signal is asserted additional commands and data is not accepted.
user_wdfifo_empty	This signal indicates that the write data FIFO is empty.
user_wdfifo_full	This signal indicates that the write data FIFO is full. When this signal is asserted, additional Write data is not accepted.
user_rd_valid	Asserted when user_rd_data is valid.
user_rd_data	Read data returned from the memory as a result of a read command.

Memory Initialization

For simulation, the MIG tool sets up the design parameters such that long wait times usually required for memory initialization are skipped. These parameters can result in memory model warnings. For the design to properly initialize and calibrate the full memory array in hardware, the top-level MIG tool design file (`example_top.v`) cannot use any abbreviated value for these parameters. The MIG tool output properly sets the abbreviated values in the test bench and the full range values in the top-level design module.

Calibration

Calibration completes read leveling and read enable calibration. This is completed over three stages. This sequence successfully completes when the `init_calib_complete` signal is asserted. For more details, see [Physical Interface](#), page 436.

The first stage performs per-bit read leveling calibration. The data pattern used during this stage is `0_F_0_F_0_F_F_0`. The data pattern is first written to the memory, as shown in [Figure 3-69](#).

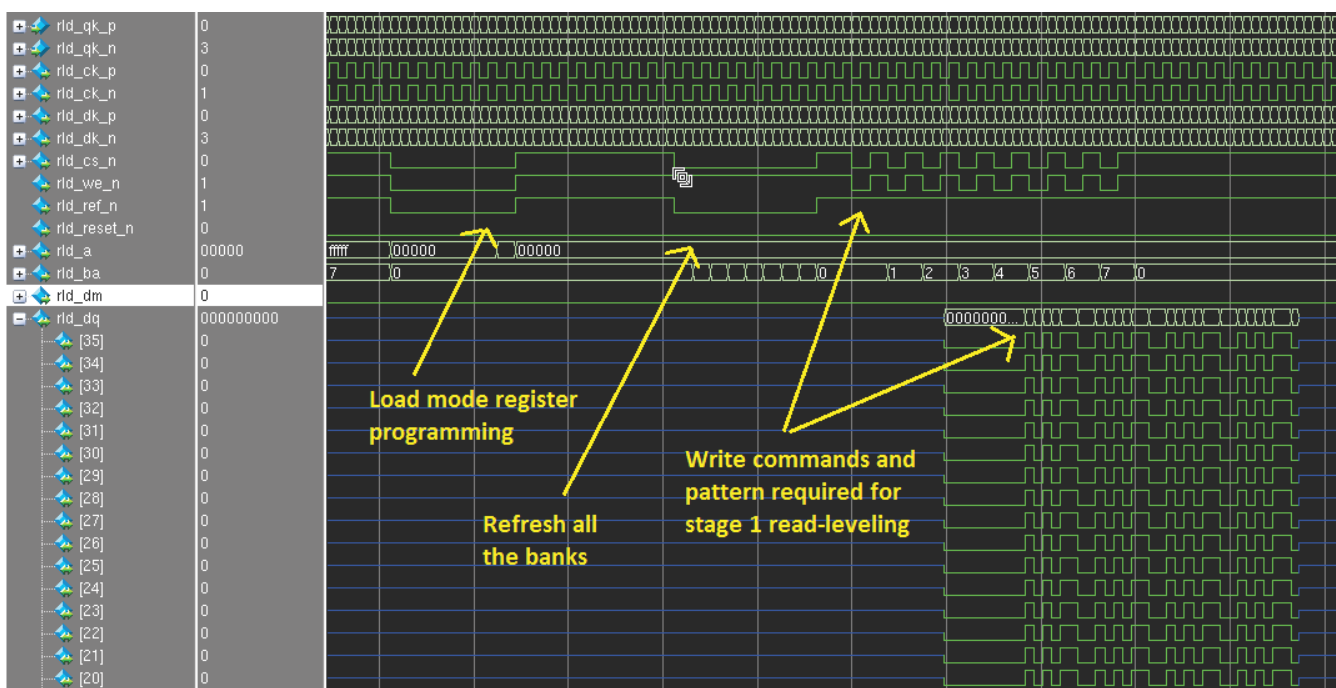


Figure 3-69: Writes for First Stage Read Calibration

This pattern is then continuously read back while the calibration is completed, as shown in Figure 3-70.

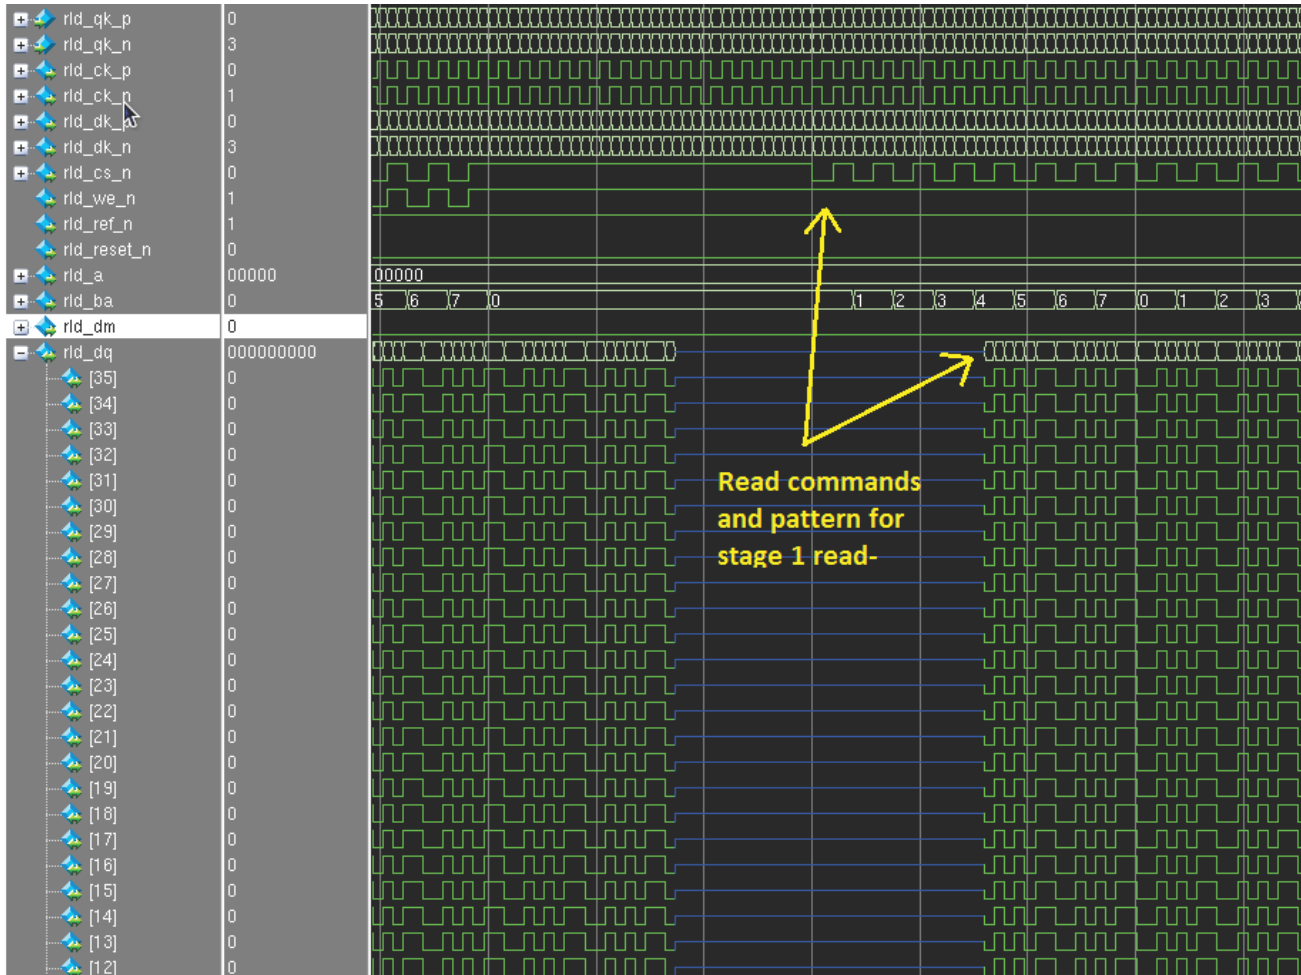


Figure 3-70: Reads for First Stage Read Calibration

The second stage performs an alignment to ensure data is returned in the correct order. The length of the data pattern depends on the ratio of the memory clock to the FPGA logic clock. For RLDRAM II, the data pattern of A_5_0_F is first written to the memory and continuously read back and adjusted internally if required.

For RLDRAM 3, the data pattern of A_5_0_F_9_6_D_2 is first written to the memory and continuously read back and adjusted internally if required.

The third stage performs a read enable calibration. The data pattern used during this stage is the same pattern used during the second stage of calibration. The data pattern is first written to the memory, and then read back for the read enable calibration, as shown in Figure 3-71.

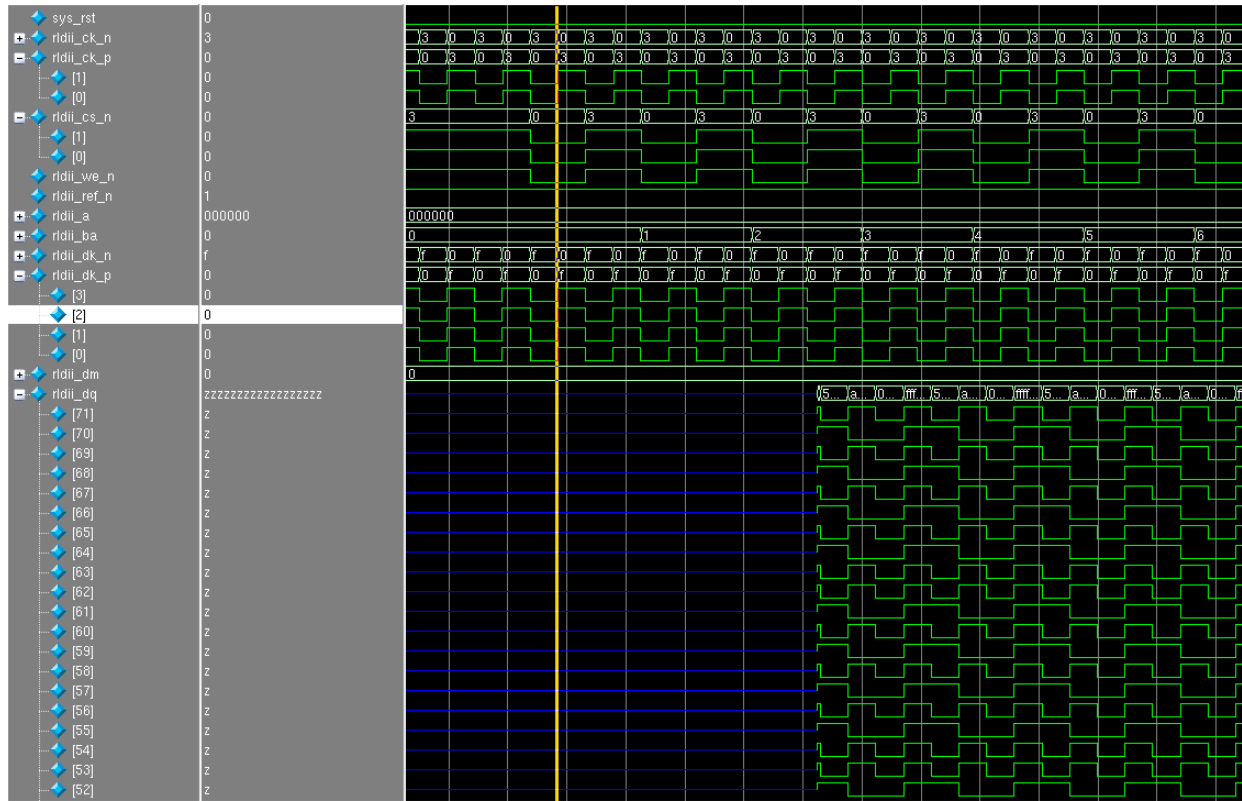


Figure 3-71: Write and Read for Second Stage Read Calibration (Pattern Shown for RLDRAM II)



Figure 3-72: Write and Read for Third Stage Read Calibration (Pattern Shown for RLDRAM II)

An additional write/read is performed so the read bus is driven to a different value. This is mostly required in hardware to make sure that the read calibration can distinguish the correct data pattern.

After the third stage calibration completes, `init_calib_complete` is asserted, signifying successful completion of the calibration process.

Test Bench

After `init_calib_complete` is asserted, the test bench takes control, writing to and reading from the memory. The data written is compared to the data read back. Any mismatches trigger an assertion of the error signal. [Figure 3-73](#) shows a successful implementation of the test bench with no assertions on error.

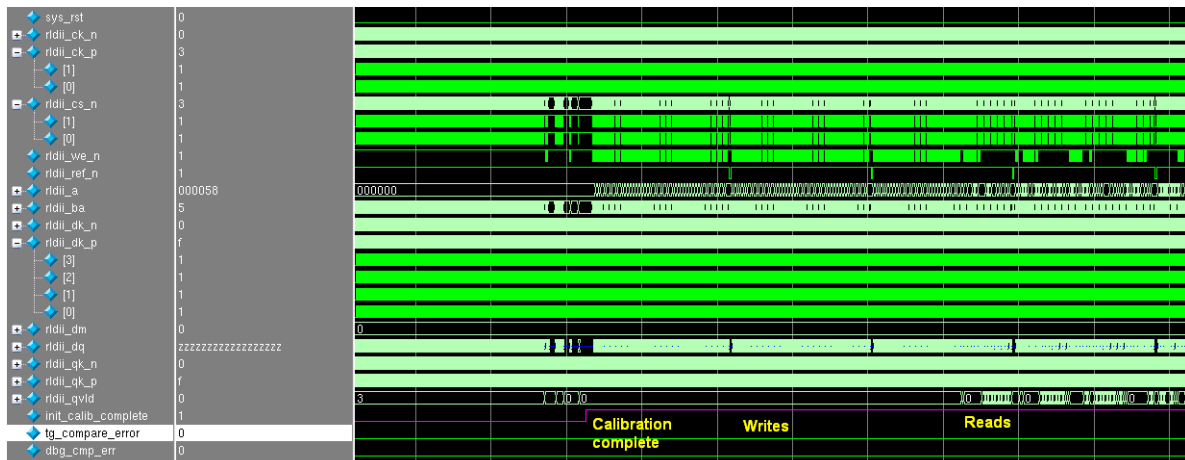


Figure 3-73: Test Bench Operation After Completion of Calibration

Proper Write and Read Commands

When sending write and read commands, you must properly assert and deassert the corresponding UI inputs. See [Client Interface, page 427](#) and [Interfacing with the Core through the Client Interface, page 429](#) for full details. The test bench design provided within the example design can be used as a further source of proper behavior on the UI.

To debug data errors on the RLDRAM II/RLDRAM 3 interface, it is necessary to pull the UI signals into the simulation waveform.

In the QuestaSim Instance window, highlight **u_ip_top** to display the necessary UI signals in the Objects window, as shown in [Figure 3-74](#). Highlight the user interface signals noted in [Table 3-26, page 491](#), right-click, and select **Add > To Wave > Selected Signals**.

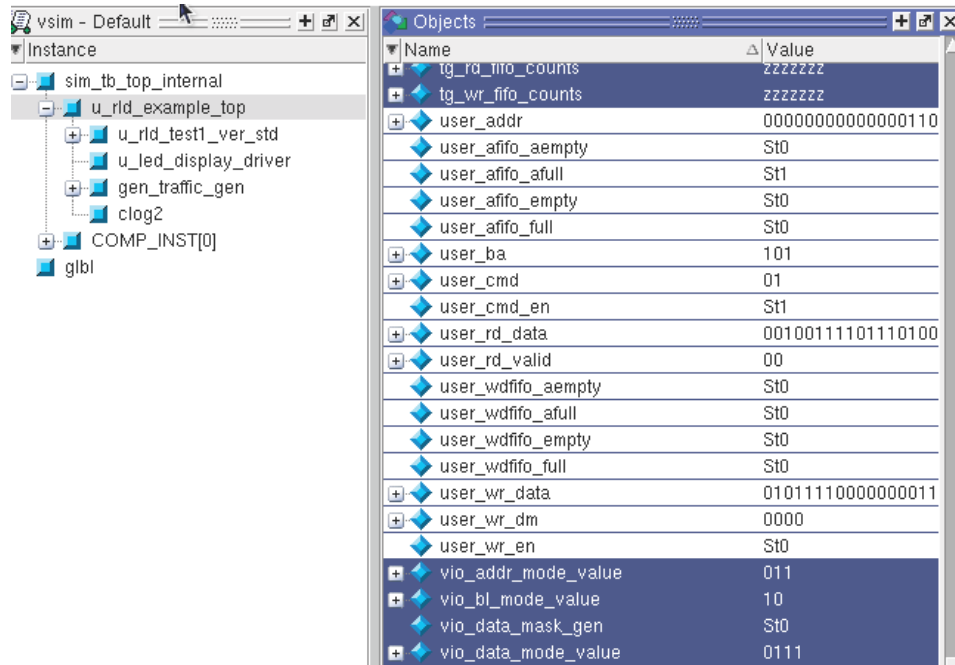


Figure 3-74: QuestaSim Instance Window

Figure 3-75 and Figure 3-76 show example waveforms of a write and read on both the user interface.

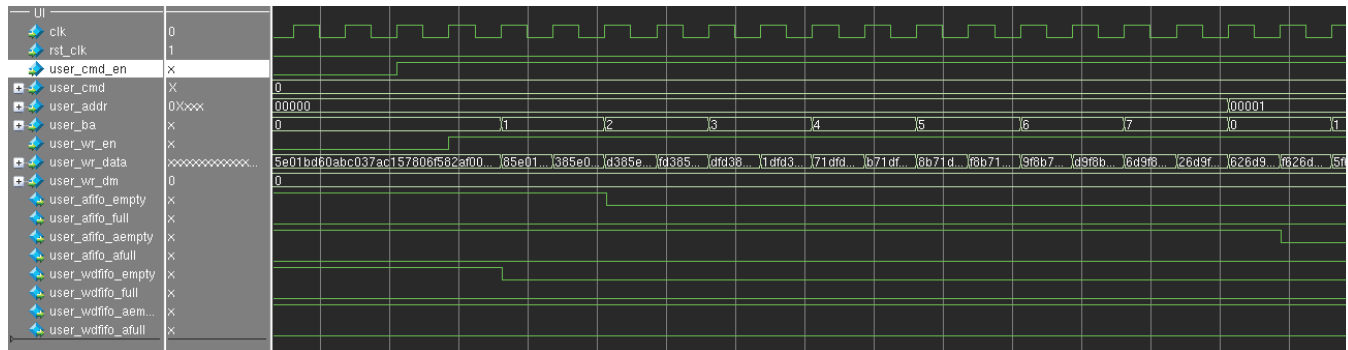


Figure 3-75: User Interface Write

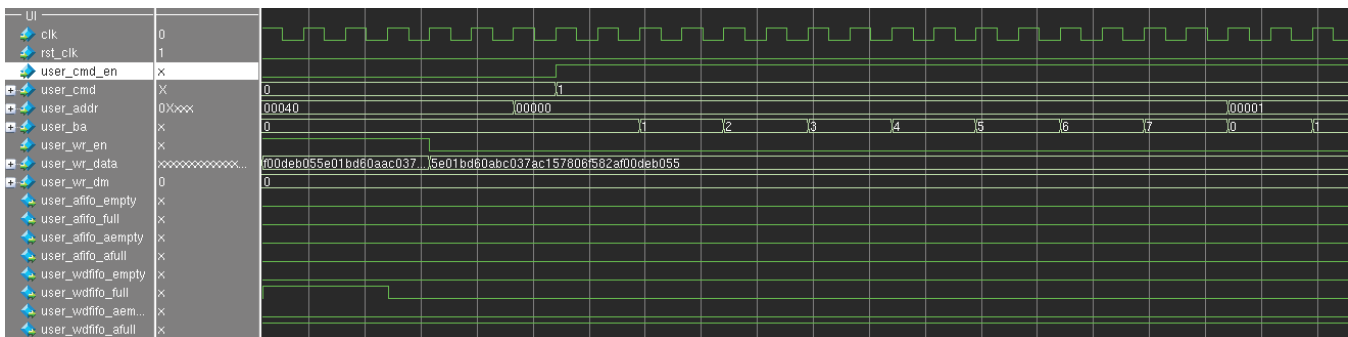


Figure 3-76: User Interface Read

Synthesis and Implementation Debug

Figure 3-77 shows the debug flow for synthesis and implementation.

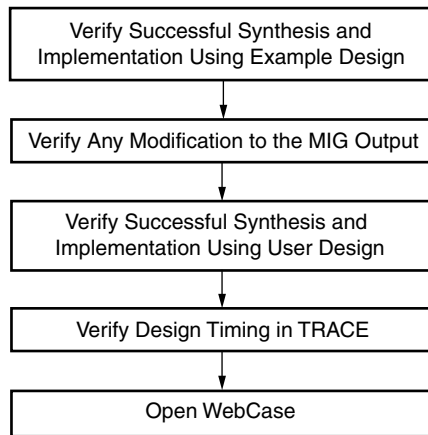


Figure 3-77: Synthesis and Implementation Debug Flowchart



IMPORTANT: The standard synthesis flow for Synplify is not supported for the core.

Verify Successful Synthesis and Implementation

The example design and user design generated by the MIG tool include synthesis/implementation script files and .xdc files. These files should be used to properly synthesize and implement the targeted design and generate a working bitstream.

Verify Modifications to the MIG Tool Output

The MIG tool allows you to select the FPGA banks for the memory interface signals. Based on the banks selected, the MIG tool outputs a XDC with all required location constraints. This file is located in both the `example_design/par` and `user_design/par` directories and should not be modified.

The MIG tool outputs open source RTL code parameterized by top-level HDL parameters. These parameters are set by the MIG tool and should not be modified manually. If changes are required, such as decreasing or increasing the frequency, the MIG tool should be rerun to create an updated design. Manual modifications are not supported and should be verified independently in behavioral simulation, synthesis, and implementation.

Identifying and Analyzing Timing Failures

The MIG tool RLDRAM II/RLDRAM 3 designs have been verified to meet timing using the example design across a wide range of configurations. However, timing violations might occur, such as when integrating the MIG tool design with your specific application logic.

Any timing violations that are encountered must be isolated. The timing report output by TRACE (.twx/.twr) should be analyzed to determine if the failing paths exist in the MIG tool RLD RAM II design or the UI (backend application) to the MIG tool design. If failures are encountered, you must ensure the build options (that is, XST, MAP, PAR) specified in the file are used.

If failures still exist, Xilinx has many resources available to aid in closing timing. The PlanAhead™ tool [Ref 19] improves performance and quality of the entire design. The *Xilinx Timing Constraints User Guide* (UG612) [Ref 15] provides valuable information on all available Xilinx constraints.

Hardware Debug

Figure 3-78 shows the debug flow for hardware.

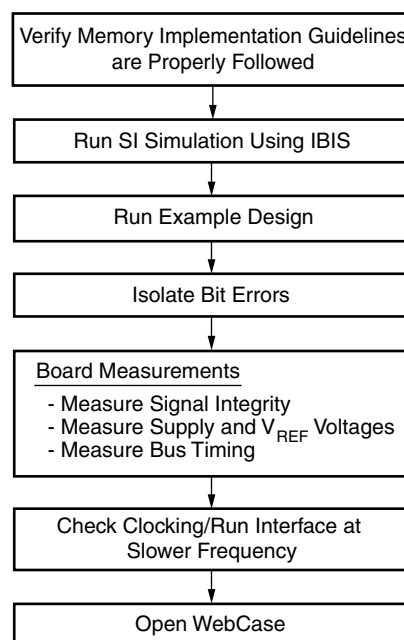


Figure 3-78: Hardware Debug Flowchart

Clocking

The external clock source should be measured to ensure frequency, stability (jitter), and usage of the expected FPGA pin. You must ensure that the design follows all clocking guidelines. If clocking guidelines have been followed, the interface should be run at a slower speed. Not all designs or boards can accommodate slower speeds. Lowering the frequency increases the marginal setup or hold time, or both, due to PCB trace mismatch, poor signal integrity, or excessive loading. When lowering the frequency, the MIG tool should be rerun to regenerate the design with the lower clock frequency. Portions of the calibration logic are sensitive to the CLK_PERIOD parameter; thus, manual modification of the parameter is discouraged.

Verify Board Pinout

You should ensure that the pinout provided by the MIG tool is used without modification. Then, the board schematic should be compared to the `<design_name>.pad` report generated by PAR. This step ensures that the board pinout matches the pins assigned in the implemented design.

Run Signal Integrity Simulation with IBIS Models

To verify that board layout guidelines have been followed, signal integrity simulations must be run using the I/O buffer information specification (IBIS). These simulations should always be run for both pre-board and post-board layouts. The purpose of running these simulations is to confirm the signal integrity on the board.

The ML561 Hardware-Simulation Correlation chapter of the *Virtex-5 FPGA ML561 Memory Interfaces Development Board User Guide* (UG199) [Ref 20] can be used as a guideline. This chapter provides a detailed look at signal integrity correlation results for the ML561 board. It can be used as an example for signal integrity analysis. It also provides steps to create a design-specific IBIS model to aid in setting up the simulations. While this guide is specific to Virtex-5 devices and the ML561 development board, the principles therein can be applied to MIG designs with 7 series FPGAs.

Run the Example Design

The example design provided with the MIG tool is a fully verified design that can be used to test the memory interface on the board. It rules out any issues with the backend logic interfacing with the MIG tool core. In addition, the test bench provided by the MIG tool can be modified to send out different data patterns that test different board-level concerns.

Debugging Common Hardware Issues

When calibration failures and data errors are encountered in hardware, the Vivado logic analyzer feature should be used to analyze the behavior of MIG tool core signals. For more information about the Vivado logic analyzer, software is available in the *Vivado Design Suite User Guide: Programming and Debugging* (UG908) [Ref 16].

A good starting point in hardware debug is to load the provided `example_design` onto the board in question. This is a known working solution with a test bench design that checks for data errors. This design should complete successfully with the assertion of `init_calib_complete` and no assertions of `tg_compare_error`. Assertion of `init_calib_complete` signifies successful completion of calibration while no assertion of `tg_compare_error` signifies that the data is written to and read from the memory compare with no data errors.

The `dbg_cmp_err` signal can be used to indicate if a single error was encountered or if multiple errors are encountered. With each error encountered, `dbg_cmp_err` is asserted so that the data can be manually inspected to help track down any issues.

Isolating Bit Errors

An important hardware debug step is to try to isolate when and where the bit errors occur. Looking at the bit errors, these should be identified:

- Are errors seen on data bits belonging to certain QK clock groups?
- Are errors seen on accesses to certain addresses of memory?
- Do the errors only occur for certain data patterns or sequences?

This can indicate a shorted or open connection on the PCB. This can also indicate an SSO or crosstalk issue. It might be necessary to isolate whether the data corruption is due to writes or reads. This case can be difficult to determine because if writes are the cause, read back of the data is bad as well. In addition, issues with control or address timing affect both writes and reads.

Some experiments that can be tried to isolate the issue are:

- If the errors are intermittent, have the design issue a small initial number of writes, followed by continuous reads from those locations. If the reads intermittently yield bad data, there is a potential read issue.
- Check/vary only write timing:
 - Check that the external termination resistors are populated on the PCB.
 - Use ODELAY, if available, to vary the phase of DQ relative to the DK clocks. Another option is to adjust the PHASER_OUT timing using the fine_adjust feature of the PHASER to adjust output timing.
 - Verify the timing relationship between CK and DK clocks.
- Vary only read timing:
 - Check the IDELAY/PHASER_IN values after calibration. Look for variations between IDELAY/PHASER_IN values. IDELAY values should be very similar for DQs in the same byte group.
 - Vary the IDELAY/PHASER_IN taps after calibration for the bits that are returning bad data.

This affects only the read capture timing.

Debugging the Core

The Debug port is a set of input and output signals that either provide status (outputs) or allow you to make adjustments as the design is operating (inputs). When generating the RLD RAM II/RLD RAM 3 design through the MIG tool, an option is provided to turn the Debug Port ON or OFF. When the Debug port is turned OFF, the outputs of the debug port are still generated but the inputs are ignored. When the Debug port is turned ON, the inputs are valid and must be driven to a logical value. Driving the signals incorrectly on the debug port might cause the design to fail or have less read data capture margin.

When running the core in hardware, a few key signals should be inspected to determine the status of the design. The `dbg_phy_status` bus described in [Table 3-27](#) consists of status bits for various stages of calibration. Checking the `dbg_phy_status` bus gives initial information that can aid in debugging an issue that might arise, determining which portion of the design to look at, or looking for some common issues.

Table 3-27: Physical Layer Simple Status Bus Description Defined in the `rld_phy_top` Module

Debug Port Signal	Name	Description	If Problems Arise
<code>dbg_phy_status[0]</code>	<code>~rst_wr_clk</code>	FPGA logic reset based on PLL lock and system input reset	If this signal is deasserted, check your clock source and system reset input
<code>dbg_phy_status[1]</code>	<code>po_delay_done</code>	I/O FIFO initialization to ensure the I/O FIFOs are in an almost full condition and the phaser out delay to provide the 90° phase shift to address/control signals are done	Check if the PHY control ready signal is asserted
<code>dbg_phy_status[2]</code>	<code>init_done</code>	RLD RAM II/RLD RAM 3 initialization sequence is complete	N/A ⁽¹⁾
<code>dbg_phy_status[3]</code>	<code>rtr_cal_start</code>	(RLD RAM 3 only) Read training register stage 1 read calibration start signal	N/A
<code>dbg_phy_status[4]</code>	<code>rtr_cal_done</code>	(RLD RAM 3 only) Read training register stage 1 read calibration is complete	N/A
<code>dbg_phy_status[5]</code>	<code>wrcal_start</code>	Write Calibration start signal	N/A
<code>dbg_phy_status[8:6]</code>	<code>dbg_wrcal_done</code>	Write Calibration stage complete	Check the results of the read training register stage 1 calibration. See Write Calibration , page 452.
<code>dbg_phy_status[9]</code>	<code>rdlvt_stg1_start</code>	Stage 1 read calibration start signal	Check results of write calibration
<code>dbg_phy_status[10]</code>	<code>rdlvt_cal_done</code>	Stage 1 read calibration is complete	N/A

Table 3-27: Physical Layer Simple Status Bus Description Defined in the rld_phy_top Module (Cont'd)

Debug Port Signal	Name	Description	If Problems Arise
dbg_phy_status[11]	edge_adv_cal_start	Edge Advance calibration start signal	N/A
dbg_phy_status[12]	edge_adv_cal_done	Edge Advance calibration is complete	Make sure the expected data is being returned from the memory. Check results of stage 1 read calibration. Check the results of write calibration (if enabled).
dbg_phy_status[13]	init_cal_done	Latency calibration completed	Check which byte lane failed and check the margin found during read training stage 1 and write calibration for the byte lane that fails.
dbg_phy_status[14]	init_calib_complete	Calibration complete	N/A

Notes:

1. N/A indicates that as long as previous stages have completed, this stage is also completed.

The read calibration results are provided as part of the Debug port as various output signals. These signals can be used to capture and evaluate the read calibration results.

Read calibration uses the IODELAY to align the capture clock in the data valid window for captured data. The algorithm shifts the IDELAY/PHASER_IN values and looks for edges of the data valid window on a per-byte basis as part of the calibration procedure.

DEBUG_PORT Signals

The top-level wrapper, `user_top`, provides several output signals that can be used to debug the core if the debug option is checked when generating the design through the MIG tool. Each debug signal output begins with `dbg_`. The `DEBUG_PORT` parameter is always set to OFF in the `sim_tb_top` module of the `sim` folder, which disables the debug option for functional simulations. These signals and their associated data are described in Table 3-28.

Table 3-28: DEBUG_PORT Signal Descriptions

Signal	Direction	Description
dbg_phy_cmd_n[nCK_PER_CLK × 3 – 1:0]	Output	This active-Low signal is the internal command that is sent to the memory used for debug with the Vivado logic analyzer feature.
dbg_phy_addr[nCK_PER_CLK × RLD_ADDR_WIDTH × 2 – 1:0]	Output	Address being accessed for the commands given with <code>dbg_phy_cmd_n</code> .
dbg_phy_ba[nCK_PER_CLK × BANK_WIDTH × 2 – 1:0]	Output	Control bank address bus used for debug with the Vivado logic analyzer feature.

Table 3-28: **DEBUG_PORT** Signal Descriptions (Cont'd)

Signal	Direction	Description
dbg_phy_wr_data[nCK_PER_CLK × 2 × DATA_WIDTH – 1:0]	Output	Data being written that is used for debug with the Vivado logic analyzer feature.
dbg_phy_init_wr_only	Input	When this input is High, the state machine in the rld_phy_write_init_sm module keeps issuing write commands for Stage 1 data to the RLD RAM II. This can be used to verify write timing, for measuring the DK to DQ timing relationship at the memory using an oscilloscope. This signal must be Low for normal operation.
dbg_phy_init_rd_only	Input	When this input is High, the state machine in the rld_phy_write_init_sm module keeps issuing read commands for Stage 1 read calibration. This is useful to probe the signals on the PCB and look for any SI issues or verify the previous write command occurred properly. This signal must be Low for normal operation.
dbg_byte_sel[CQ_BITS – 1:0]	Input	This input selects the corresponding byte lane and you set the phaser/IDELAY tap controls.
dbg_bit_sel[Q_BITS – 1:0]	Input	This input selects the corresponding bit lane and you set the IDELAY tap controls. It also controls which read data signals are presented to you for debug (dbg_rd_data_rd and dbg_rd_data_fd).
dbg_idel_up_all	Input	This input increments all IDELAY tap values for the entire bus.
dbg_idel_down_all	Input	This input decrements all IDELAY tap values for the entire bus.
dbg_idel_up	Input	This input increments all IDELAY tap values for a single bit, selected by dbg_bit_sel.
dbg_idel_down	Input	This input decrements all IDELAY tap values for a single bit, selected by dbg_bit_sel.
dbg_pi_f_inc	Input	This signal increments the PHASER_IN generated ISERDES clk that is used to capture rising data.
dbg_pi_f_dec	Input	This signal decrements the PHASER_IN generated ISERDES clk that is used to capture rising data.
dbg_po_f_inc	Input	This signal increments the PHASER_OUT generated OSERDES clk that is used to capture falling data.

Table 3-28: **DEBUG_PORT** Signal Descriptions (*Cont'd*)

Signal	Direction	Description
dbg_po_f_dec	Input	This signal increments the PHASER_OUT generated OSERDES clk that is used to capture falling data.
dbg_pi_tap_cnt[5:0]	Output	This output indicates the current PHASER_IN tap count position.
dbg_po_tap_cnt[5:0]	Output	This output indicates the current PHASER_OUT tap count position.
dbg_rd_stage1_rtr_error[N_DATA_LANES – 1:0]	Output	(RLDRAM 3 only) Per byte lane error signal indicating valid window not found during read training register stage 1 read calibration.
dbg_rd_stage1_error[N_DATA_LANES – 1:0]	Output	Per byte lane error signal indicating valid window not found during stage 1 read calibration.
dbg_cq_num[CQ_BITS – 1:0]	Output	This signal indicates the current byte lane selected (either during calibration or through the debug port).
dbg_valid_lat[4:0]	Output	Latency in cycles of the delayed read command.
dbg_idel_tap_cnt_sel[TAP_BITS – 1:0]	Output	Current IDELAY tap setting for bits selected using dbg_bit_sel.
dbg_inc_latency	Output	This output indicates that the latency of the corresponding byte lane was increased to ensure proper alignment of the read data to the user interface.
dbg_error_max_latency	Output	This signal indicates that the latency could not be measured before the counter overflowed. Each device has one error bit.
dbg_error_adj_latency	Output	This signal indicates that the target PHY_LATENCY could not be achieved.
dbg_rd_data_rd[nCK_PER_CLK × 9 – 1:0]	Output	This bus shows the captured output of the rising data for a single byte lane, selected using dbg_byte_sel.
dbg_rd_data_fd[nCK_PER_CLK × 9 – 1:0]	Output	This bus shows the captured output of the falling data for a single byte lane, selected using dbg_byte_sel.
dbg_rd_valid	Output	Read data valid signal that aligns with the dbg_rd_data_rd and dbg_rd_data_fd.
dbg_wrcal_sel_stg[1:0]	Input	Selects which stage of write calibration to output: dbg_wrcal_po_first_edge, dbg_wrcal_po_second_edge, or dbg_wrcal_po_final.
dbg_wrcal[63:0]	Output	General Debug port for write calibration

Table 3-28: **DEBUG_PORT** Signal Descriptions (Cont'd)

Signal	Direction	Description
dbg_wrcal_done[2:0]	Output	Indicates stage of write calibration completed.
dbg_wrcal_po_first_edge[5:0]	Output	First edge of write calibration window found for the selected byte lane (using dbg_byte_sel). To select a given stage of calibration, use dbg_wrcal_sel_stg, 2'b01 is for byte lanes with a DK clock, and 2'b10 is for byte lanes without a DK clock.
dbg_wrcal_po_second_edge[5:0]	Output	Second edge of write calibration window found for the selected byte lane (using dbg_byte_sel). To select a given stage of calibration, use dbg_wrcal_sel_stg, 2'b01 is for byte lanes with a DK clock, and 2'b10 is for byte lanes without a DK clock.
dbg_wrcal_po_final[5:0]	Output	Final tap setting for write calibration for the selected byte lane (using dbg_byte_sel). To select a given stage of calibration, use dbg_wrcal_sel_stg, 2'b01 is for byte lanes with a DK clock, and 2'b10 is for byte lanes without a DK clock.

Write Init Debug Signals

Table 3-29 indicates the mapping between the write init debug signals on the dbg_wr_init bus and debug signals in the PHY. All signals are found within the rld_phy_write_init_sm module and are all valid in the clk domain.

Table 3-29: **Write Init Debug Signal Map**

Bits	PHY Signal Name	Description
dbg_phy_init_sm[3:0]	phy_init_cs	Current state of the initialization state machine
dbg_phy_init_sm[6:4]	start_cal	Flags to determine stages of calibration
dbg_phy_init_sm[7]	init_complete	Memory initialization is complete
dbg_phy_init_sm[8]	refr_req	Refresh request
dbg_phy_init_sm[9]	refr_done	Refresh complete
dbg_phy_init_sm[10]	stage2_done	Stage 2 calibration is complete
dbg_phy_init_sm[22:11]	refr_cnt	Refresh counter
dbg_phy_init_sm[26:23]	phy_init_ps	Previous state of the initialization state machine
dbg_phy_init_sm[31:27]	Reserved	Reserved

Read Stage 1 Calibration Debug Signals

Table 3-30 indicates the mapping between bits within the `dbg_rd_stage1_cal` bus and debug signals in the PHY. All signals are found within the `qdr_rld_phy_rdlvl` module and are all valid in the `clk` domain.

Table 3-30: Read Stage 1 Debug Signal Map

Bits	PHY Signal Name	Description
<code>dbg_rd_stage1_cal[2:0]</code>	<code>sm_r</code>	Read level main state machine.
<code>dbg_rd_stage1_cal[7:6]</code>	<code>seq_sm_r</code>	Read level sequence state bits.
<code>dbg_rd_stage1_cal[14:12]</code>	<code>rdlvl_work_lane_r</code>	Lane currently undergoing read level calibration.
<code>dbg_rd_stage1_cal[15]</code>	<code>rdlvl_stg1_start</code>	Write side signal causing read level block to start.
<code>dbg_rd_stage1_cal[16]</code>	<code>rdlvl_stg1_done</code>	Read level block signals completion.
<code>dbg_rd_stage1_cal[17]</code>	<code>rdlvl_stg1_start</code>	Write side signal causing read level to copy first lane result across all lanes.
<code>dbg_rd_stage1_cal[25:18]</code>	<code>rdlvl_stg1_cal_bytes_r</code>	Lanes for which write side is requesting calibration.
<code>dbg_rd_stage1_cal[31]</code>	<code>cmplx_rdc_start</code>	Write side signal causing read level to do complex cal.
<code>dbg_rd_stage1_cal[32]</code>	<code>cmplx_rd_data_valid</code>	Write side signal informing read level that complex read data is valid.
<code>dbg_rd_stage1_cal[48:41]</code>	<code>rd_data_comp_r</code>	Per byte comparison results for complex calibration.
<code>dbg_rd_stage1_cal[56:49]</code>	<code>iserdes_comp_r</code>	Per byte comparison results for simple calibration.
<code>dbg_rd_stage1_cal[57]</code>	<code>rdlvl_lane_match</code>	Overall comparison result for both simple and complex.
<code>dbg_rd_stage1_cal[66:61]</code>	<code>largest_left_edge</code>	Phaser in taps when the right most left edge was found.
<code>dbg_rd_stage1_cal[72:67]</code>	<code>smallest_right_edge</code>	Phaser in taps when the left most right edge was found.
<code>dbg_rd_stage1_cal[78:73]</code>	<code>mem_out_dec</code>	Output of static compensation ROM.
<code>dbg_rd_stage1_cal[81]</code>	<code>rdlvl_pi_stg2_f_incdec</code>	Controls directing of phaser in stepping.
<code>dbg_rd_stage1_cal[82]</code>	<code>rdlvl_pi_en_stg2_f</code>	Phaser in step command.
<code>dbg_rd_stage1_cal[85:83]</code>	<code>pi_lane_r</code>	Lane to which phaser in commands apply.
<code>dbg_rd_stage1_cal[91]</code>	<code>prev_match_r</code>	Previous sample matched.
<code>dbg_rd_stage1_cal[96:92]</code>	<code>match_out_r</code>	Delay of last detected invalid to valid match transition.
<code>dbg_rd_stage1_cal[102:97]</code>	<code>samp_cnt_r</code>	Sample counter.
<code>dbg_rd_stage1_cal[108:103]</code>	<code>samps_match_r</code>	Cumulative sample match count.
<code>dbg_rd_stage1_cal[109]</code>	<code>samp_result_held_r</code>	Result from previous sample cycle.
<code>dbg_rd_stage1_cal[154+:40]</code>	<code>simp_dlyval_r</code>	Five bits per lane dlyval results for simple pattern.
<code>dbg_rd_stage1_cal[194+:48]</code>	<code>simp_left_r</code>	Six bits per lane left results for simple pattern.
<code>dbg_rd_stage1_cal[194+:48]</code>	<code>simp_right_r</code>	Six bits per lane right results for simple pattern.
<code>dbg_rd_stage1_cal[194+:48]</code>	<code>simp_center_r</code>	Six bits per lane center results for simple pattern.
<code>dbg_rd_stage1_cal[378+:48]</code>	<code>cmplx_left_r</code>	Six bits per lane left results for complex pattern.
<code>dbg_rd_stage1_cal[426+:48]</code>	<code>cmplx_right_r</code>	Six bits per lane right results for complex pattern.

Table 3-30: Read Stage 1 Debug Signal Map (Cont'd)

Bits	PHY Signal Name	Description
dbg_rd_stage1_cal[474+:48]	cmplx_center_r	Six bits per lane center results for complex pattern.
dbg_rd_stage1_cal[682+:48]	simp_left_63	Left edge result is 63 for simple pattern, one bit per lane.
dbg_rd_stage1_cal[690+:48]	cmplx_left_63	Left edge result is 63 for complex pattern, one bit per lane.
dbg_rd_stage1_cal[698+:48]	simp_right_63	Right edge result is 63 for simple pattern, one bit per lane.
dbg_rd_stage1_cal[706+:48]	cmplx_right_63	Right edge result is 63 for complex pattern, one bit per lane.
dbg_rd_stage1_cal[522+:72]	rd_data_lane_r	Aligned PHY data for lane currently undergoing calibration.
dbg_rd_stage1_cal[594+:72]	iserdes_lane_r	Raw PHY data for lane currently undergoing calibration.
dbg_rd_stage1_cal[714+:72]	cmplx_rd_burst_bytes	Complex data to compare against memory read data.
dbg_rd_stage1_cal[786+:9]	bit_comp	Cumulative compare per bit.
dbg_rd_stage1_cal[795+:8]	simp_min_eye_r	Minimum eye detected per lane simple pattern.
dbg_rd_stage1_cal[803+:8]	cmplx_min_eye_r	Minimum eye detected per lane complex pattern.

Read Stage 2 Calibration Debug

Table 3-31 indicates the mapping between bits within the dbg_rd_stage2_cal bus and debug signals in the PHY. All signals are found within the qdr_rld_phy_read_stage2_cal module and are all valid in the clk domain.

Table 3-31: Read Stage 2 Debug Signal Map

Bits	PHY Signal Name	Description
dbg_stage2_cal[0]	en_mem_latency	Signal to enable latency measurement
dbg_stage2_cal[5:1]	latency_cntr[0]	Indicates the latency for the first byte lane in the interface
dbg_stage2_cal[6]	rd_cmd	Internal rd_cmd for latency calibration
dbg_stage2_cal[7]	latency_measured[0]	Indicates latency has been measured for byte lane 0
dbg_stage2_cal[8]	bl4_rd_cmd_int	Indicates calibrating for burst length of 4 data words
dbg_stage2_cal[9]	bl4_rd_cmd_int_r	Internal register stage for burst 4 read command
dbg_stage2_cal[10]	edge_adv_cal_start	Indicates start of edge_adv calibration, to see if the pi_edge_adv signal needs to be asserted
dbg_stage2_cal[11]	rd0_vld	Indicates valid ISERDES read data for the byte being calibrated (indicated by byte_cnt)
dbg_stage2_cal[12]	fd0_vld	Indicates valid ISERDES read data for the byte being calibrated (indicated by byte_cnt)
dbg_stage2_cal[13]	rd1_vld	Indicates valid ISERDES read data for the byte being calibrated (indicated by byte_cnt)

Table 3-31: Read Stage 2 Debug Signal Map (Cont'd)

Bits	PHY Signal Name	Description
dbg_stage2_cal[14]	fd1_vld	Indicates valid ISERDES read data for the byte being calibrated (indicated by byte_cnt)
dbg_stage2_cal[15]	phase_vld	Valid data is seen for the particular byte for the byte being calibrated (indicated by byte_cnt)
dbg_stage2_cal[16]	rd0_bslip_vld	Indicates valid ISERDES read data requiring bitslip for the byte being calibrated (indicated by byte_cnt)
dbg_stage2_cal[17]	fd0_bslip_vld	Indicates valid ISERDES read data requiring bitslip for the byte being calibrated (indicated by byte_cnt)
dbg_stage2_cal[18]	rd1_bslip_vld	Indicates valid ISERDES read data requiring bitslip for the byte being calibrated (indicated by byte_cnt)
dbg_stage2_cal[19]	fd1_bslip_vld	Indicates valid ISERDES read data requiring bitslip for the byte being calibrated (indicated by byte_cnt)
dbg_stage2_cal[20]	phase_bslip_vld	Valid data is seen when bitslip applied to read data for the byte being calibrated (indicated by byte_cnt)
dbg_stage2_cal[21]	clkdiv_phase_cal_done_4r	Indicates data validity complete, proceed to assert the pi_edge_adv signal if needed
dbg_stage2_cal[22]	pi_edge_adv	Phaser control signal to advance the Phaser clock, ICLKDIV by one fast clk cycle. Only used for nCK_PER_CLK == 2.
dbg_stage2_cal[25:23]	byte_cnt[2:0]	Indicates the byte that is being checked for data validity
dbg_stage2_cal[26]	inc_byte_cnt	Internal signal to increment to the next byte
dbg_stage2_cal[29:27]	pi_edge_adv_wait_cnt	Counter to wait between asserting the phaser control signal, pi_edge_adv signal in the various byte lanes.
dbg_stage2_cal[30]	bitslip	FPGA logic bitslip control signal, indicates when the logic shifts the data alignment. Only used for nCK_PER_CLK == 4.
dbg_stage2_cal[31]	rd2_vld	Indicates valid ISERDES read data for the byte being calibrated (indicated by byte_cnt). Only valid for nCK_PER_CLK == 4.
dbg_stage2_cal[32]	fd2_vld	Indicates valid ISERDES read data for the byte being calibrated (indicated by byte_cnt). Only valid for nCK_PER_CLK == 4.
dbg_stage2_cal[33]	rd3_vld	Indicates valid ISERDES read data for the byte being calibrated (indicated by byte_cnt). Only valid for nCK_PER_CLK == 4.
dbg_stage2_cal[34]	fd3_vld	Indicates valid ISERDES read data for the byte being calibrated (indicated by byte_cnt). Only valid for nCK_PER_CLK == 4.
dbg_stage2_cal[35]	latency_measured[1]	Indicates latency has been measured for byte lane 1
dbg_stage2_cal[36]	latency_measured[2]	Indicates latency has been measured for byte lane 2
dbg_stage2_cal[37]	latency_measured[3]	Indicates latency has been measured for byte lane 3

Table 3-31: Read Stage 2 Debug Signal Map (Cont'd)

Bits	PHY Signal Name	Description
dbg_stage2_cal[38]	error_adj_latency	Indicates error when target PHY_LATENCY cannot be achieved
dbg_stage2_cal[127:39]	Reserved	Reserved

Write Calibration Debug Map

Table 3-32 indicates the mapping between bits within the dbg_wr_cal bus and debug signals in the PHY.

Table 3-32: Write Debug Signal Map

Bits	PHY Signal Name	Description
dbg_wrcal[3:0]	write_cal_cs	State machine current state register
dbg_wrcal[4]	data_valid_r	Data is valid across data_valid_cnt FPGA logic clock cycles
dbg_wrcal[5]	first_edge_found	Flag to indicate first edge is found
dbg_wrcal[6]	second_edge_found	Flag to indicate second edge is found
dbg_wrcal[7]	rdlvl_timeout_error	Flag to indicate timeout error to ensure enough time given to stage 2 edge advanced calibration so you can sample the results of a given byte lane.
dbg_wrcal[8]	inc_byte_lane_cnt	Flag to increment byte lane counter
dbg_wrcal[14:9]	po_fine_taps	PHASER_OUT current tap setting
dbg_wrcal[20:15]	po_fine_first_edge	PHASER_OUT first edge tap
dbg_wrcal[26:21]	po_fine_second_edge	PHASER_OUT second edge tap
dbg_wrcal[27]	stg2_eod	PHASER_OUT stage 2 end of delay
dbg_wrcal[28]	stg3_eod	PHASER_OUT stage 3 end of delay
dbg_wrcal[37:29]	po_counter_read_val	PHASER_OUT counter value from the PHY
dbg_wrcal[40:38]	wrcal_stg	Flag to indicate which stage of write calibration is currently running
dbg_wrcal[41]	record_po_taps	Flag to record a given PHASER_OUT value
dbg_wrcal[42]	data_valid	Instantaneous data valid check for a given byte lane
dbg_wrcal[48:43]	wrcal_byte_sel	Byte lane counter
dbg_wrcal[49]	window_valid	When first edge and second edge are found, a check is done to ensure the window is larger than a set size. If too small and first/second edges cleared, this bit keeps going.
dbg_wrcal[54:50]	data_valid_cnt	Counter used to check multiple read samples to ensure data is valid
dbg_wrcal[60:55]	po_fine_prev_taps	"Previous" counter to record direction so you know which direction to move to when an edge found.
dbg_wrcal[61]	first_edge_eod	First edge not a true edge, hit the limit of the PHASER_OUT taps

Table 3-32: Write Debug Signal Map (Cont'd)

Bits	PHY Signal Name	Description
dbg_wrcal[62]	second_edge_eod	Second edge not a true edge, hit the limit of the PHASER_OUT taps
dbg_wrcal[63]	po_fine_underflow_check, po_fine_overflow_check	Check for underflow or overflow on the internal PHASER_OUT tap counter.

Margin Check

Debug signals are provided to move either clocks or data to verify functionality and to confirm sufficient margin is available for reliable operation. These signals can also be used to check for signal integrity issues affecting a subset of signals or to deal with trace length mismatches on the board. To verify read window margin, enable the debug port when generating a design in the MIG tool and use the provided example design. The steps to follow are:

1. Open the Vivado hardware session and program the FPGA under test with generated BIT and LTX files.
2. Verify that calibration completes (`init_calib_complete` should be asserted) and no errors currently exist in the example design (both `tg_compare_error` and `dbg_cmp_err` should be Low).
3. To measure margin with PRBS8 pattern, set VIO signals with the listed values in the `traffic_gen_top` instance in `example_top`:

```
vio_modify_enable = 'd1
vio_data_mode_value = 'd7
vio_addr_mode_value = 'd3
vio_instr_mode_value = 'd4
vio_bl_mode_value = 'd2
vio_fixed_bl_value = 'd128
vio_fixed_instr_value = 'd1
vio_data_mask_gen = 'd0
```

4. Assert `vio_dbg_clear_error` or system reset.
5. Select a given byte lane using `dbg_byte_sel`.
6. Observe the tap values on PHASER_IN for the selected byte lane using `dbg_pi_counter_read_val`.

7. Increment the tap values on PHASER_IN until an error occurs (`tg_compare_error` should be asserted) using `dbg_pi_f_inc`. Record how many phaser taps it took to get an error from the starting location. This value is the tap count to reach one side of the window for the entire byte lane.
8. Decrease the tap values on PHASER_IN using `dbg_pi_f_dec` back to the starting value.
9. Clear the error recorded previously by asserting `vio_dbg_clear_error`.
10. Decrement the PHASER_IN taps using `dbg_pi_f_dec` to find the other edge of the window until another error occurs (`tg_compare_error` should be asserted).
11. Record those results, return the PHASER_IN taps to the starting location and clear the error again (`vio_dbg_clear_error`).

This simple technique uses the error signal that is common for the entire interface, so any marginality in another bit or byte not being tested might affect the results. For better results, a per-bit error signal should be used. PHASER_IN taps need to be converted into a common unit of time to properly analyze the results.

Automated Margin Check

Manually moving taps to verify functionality is useful to check issue bits or bytes, but it can be difficult to step through an entire interface looking for issues. For this reason, the RLDRAM II/RLDRAM 3 Memory Interface Debug port contains automated window checking that can be used to step through the entire interface. A simple state machine is used to take control of the debug port signals and report results of the margin found per-bit. Currently, the automated window check only uses PHASER_IN to check window sizes, so depending on the tap values after calibration, the left edge of the read data window might not be found properly.

To measure margin with PRBS8 traffic pattern, set the VIO signals with the listed values in the `traffic_gen_top` instance in `example_top`:

```

vio_modify_enable = 'd1
vio_data_mode_value = 'd7
vio_addr_mode_value = 'd3
vio_instr_mode_value = 'd4
vio_bl_mode_value = 'd2
vio_fixed_bl_value = 'd128
vio_fixed_instr_value = 'd1
vio_data_mask_gen = 'd0

```

Next, assert `vio_dbg_clear_error` or assert system reset before proceeding with automated margin check. The steps to follow for automated margin check include:

1. Start automated window check by issuing a single pulse on the VIO signal, `dbg_win_start`.
2. The VIO signal, `dbg_win_active` indicates that the automated window check is in progress. The signals `dbg_pi_f_inc` and `dbg_pi_f_dec` must not be used when `dbg_win_active` is asserted.
3. The current bit and byte being measured are indicated by the VIO signals, `dbg_win_current_bit` and `dbg_win_current_byte`, respectively.
4. To obtain the left and right tap counts for a completed bit, select the desired bit using VIO signal, `dbg_win_bit_select` and observe the results on `dbg_win_left_ram_out` and `dbg_win_right_ram_out`, respectively.

Table 3-33 lists the signals associated with this automated window checking functionality.

Table 3-33: Debug Port Signals

Signal	Description
<code>dbg_win_start</code>	Single pulse that starts the <code>chk_win</code> state machine. Use the Vivado logic debug VIO to control this.
<code>dbg_win_bit_select[6:0]</code>	Manual bit selection for reporting of results. The results are provided on <code>dbg_win_left_ram_out</code> and <code>dbg_win_right_ram_out</code> for the bit indicated.
<code>dbg_win_active</code>	Flag to indicate <code>chk_win</code> is active and measuring read window margins. While active, the state machine has control over the debug port signals.
<code>vio_dbg_clear_error</code>	Clear error control signal controlled by <code>chk_win</code> .

Table 3-33: Debug Port Signals (Cont'd)

Signal	Description
dbg_win_current_bit[6:0]	Feedback to indicate which bit is currently being monitored during automatic window checking.
dbg_win_current_byte[3:0]	Feedback to indicate which byte is currently being monitored (and used to select the byte lane controls with dbg_byte_sel).
dbg_win_left_ram_out [WIN_SIZE – 1:0]	PHASER_IN tap count to reach the left edge of the read window for a given bit.
dbg_win_right_ram_out [WIN_SIZE – 1:0]	PHASER_IN tap count to reach the right edge of the read window for a given bit.
dbg_pi_f_inc	chk_win control signal to increment PHASER_IN. This signal should be used only when dbg_win_active is deasserted.
dbg_pi_f_dec	chk_win control signal to decrease PHASER_IN. This signal should be used only when dbg_win_active is deasserted.

Debugging Write Calibration

Due to the length of time required for completing write calibration for RLDRAM II/RLDRAM 3, it is useful to use the N-sample feature of the Vivado logic analyzer feature to selectively trigger and display a small window after a given trigger point. This allows you to capture signals across a larger period of time than would be allowed if you just captured a single window when the trigger condition first occurs. A good trigger condition is the `wrcal_byte_sel` signal as well as the state machine indicator, `write_cal_cs` (see [Table 3-32](#)).

This allows you to focus in on a given byte lane and capture each time an adjustment is made to the PHASER_OUT. An example of what to look for is shown in [Figure 3-79](#).



Figure 3-79: Vivado Logic Analyzer Feature Capture of Write Calibration

When looking for issues, check to see if the read data being returned for a given byte lane is correct, as indicated by the `data_valid_r` signal. This signal checks the data across multiple clock cycles to ensure all data written during the burst is properly received. If you see gaps in this signal, this might indicate most of the data was written properly but not all of it was correct. Check to make sure the latency between the command and the data at the DRAM is correct for the given settings selected.

Next, check where the algorithm finds the edges of the window and compare with the data being received. If the data being received is always wrong, this can indicate an issue with the read leveling performed in an earlier step of calibration or indicate an issue on the PCB that requires additional debug.

CLOCK_DEDICATED_ROUTE Constraints

System Clock

If the SRCC/MRCC I/O pin and PLL are not allocated in the same bank, the `CLOCK_DEDICATED_ROUTE` constraint must be set to `BACKBONE`. RLDRAM II/RLDRAM 3 manages these constraints for designs generated with the **System Clock** option selected as **Differential/Single-Ended** (at **FPGA Options > System Clock**).

If the design is generated with the **System Clock** option selected as **No Buffer** (at **FPGA Options > System Clock**), the CLOCK_DEDICATED_ROUTE constraints based on the SRCC/MRCC I/O and PLL allocation needs to be handled manually for the IP flow. RLDRAM II/RLDRAM 3 does not generate clock constraints in the XDC file for the **No Buffer** configurations. You must take care of the clock constraints for the **No Buffer** configurations in the IP flow.

Reference Clock

If the SRCC/MRCC I/O pin and MMCM are not allocated in the same bank, the CLOCK_DEDICATED_ROUTE constraint is set to FALSE. Reference clock is a 200 MHz clock source used to drive IODELAY CTRL logic (through an additional MMCM). This clock is not utilized, CLOCK_DEDICATE_ROUTE (as they are limited in number), hence the FALSE value is set. RLDRAM II/RLDRAM 3 manages these constraints for designs generated with the **System Clock** option selected as **Differential/Single-Ended** (at **FPGA Options > System Clock**).

If the design is generated with the **System Clock** option selected as **No Buffer** (at **FPGA Options > System Clock**), the CLOCK_DEDICATED_ROUTE constraints based on SRCC/MRCC I/O and MMCM allocation needs to be handled manually for the IP flow. RLDRAM II/RLDRAM 3 does not generate clock constraints in the XDC file for the **No Buffer** configurations. You must take care of the clock constraints for the **No Buffer** configurations in the IP flow.

LPDDR2 SDRAM Memory Interface Solution

Introduction

The Xilinx® 7 series FPGAs Memory Interface Solutions (MIS) core is a combined pre-engineered controller and physical layer (PHY) for interfacing 7 series FPGA user designs to LPDDR2 SDRAM devices. This user guide provides information about using, customizing, and simulating a LPDDR2 SDRAM interface core for 7 series FPGAs.

Features

Enhancements to the Xilinx 7 series FPGA memory interface solutions from the earlier memory interface solution device families include:

- Higher performance.
- New hardware blocks used in the physical layer: PHASER_IN and PHASER_OUT, PHY control block, and I/O FIFOs (see [Core Architecture, page 575](#)).
- Pinout rules changed due to the hardware blocks (see [Design Guidelines, page 631](#)).
- Controller and user interface operate at 1/2 of the memory clock frequency.

Using MIG in the Vivado Design Suite

This section provides the steps to generate the Memory Interface Generator (MIG) IP core using the Vivado® Design Suite and run implementation.

1. Start the Vivado Design Suite (see [Figure 4-1](#)).

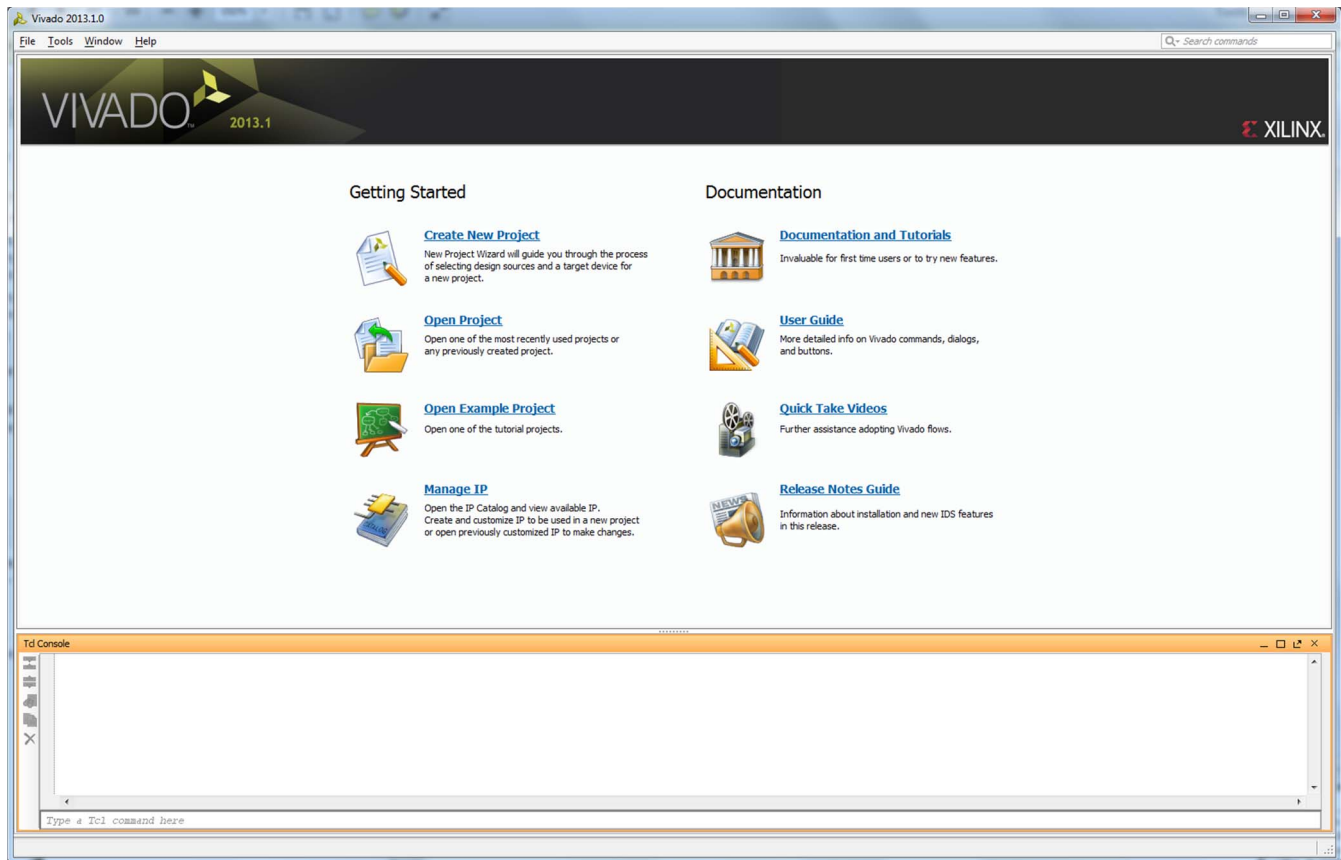


Figure 4-1: Vivado Design Suite

2. To create a new project, click the **Create New Project** option shown in [Figure 4-1](#) to open the page as shown in [Figure 4-2](#).

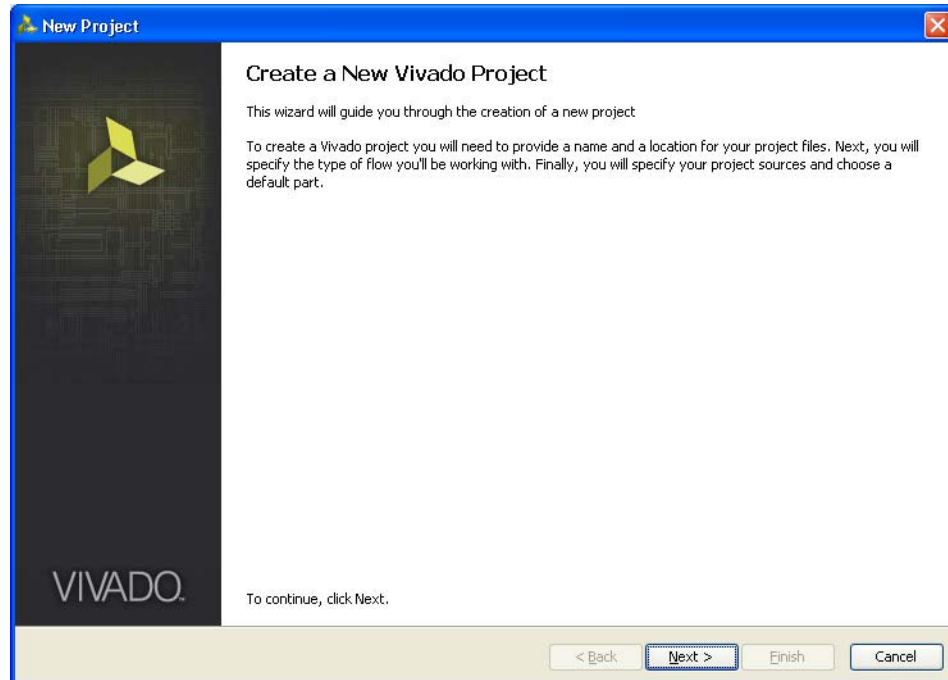


Figure 4-2: Create a New Vivado Tool Project

3. Click **Next** to proceed to the **Project Name** page (Figure 4-3). Enter the **Project Name** and **Project Location**. Based on the details provided, the project is saved in the directory.

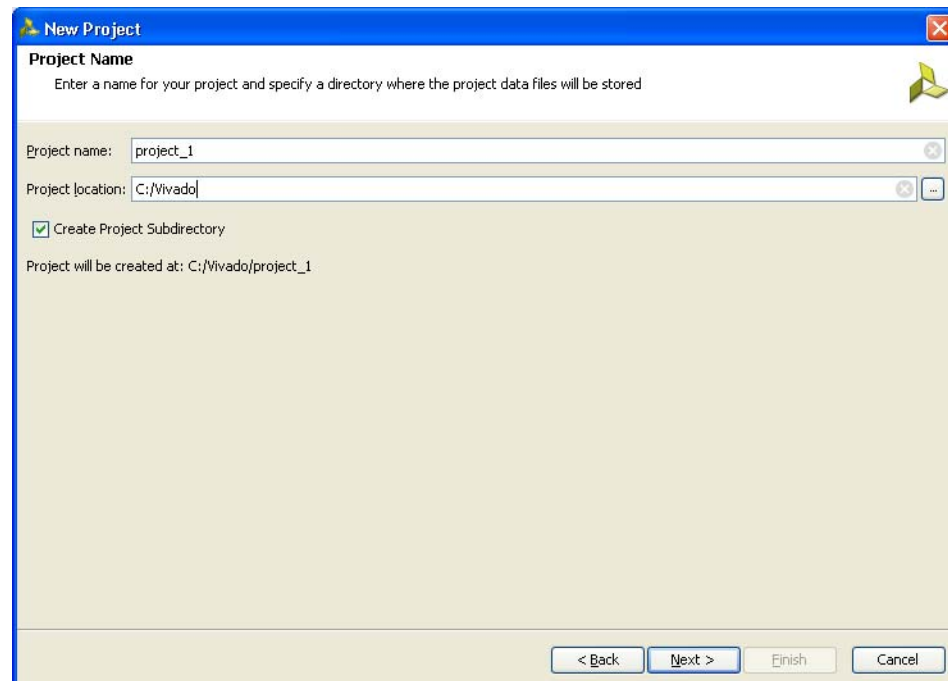


Figure 4-3: Project Name

- Click **Next** to proceed to the **Project Type** page (Figure 4-4). Select the **Project Type** as **RTL Project** because MIG deliverables are RTL files.

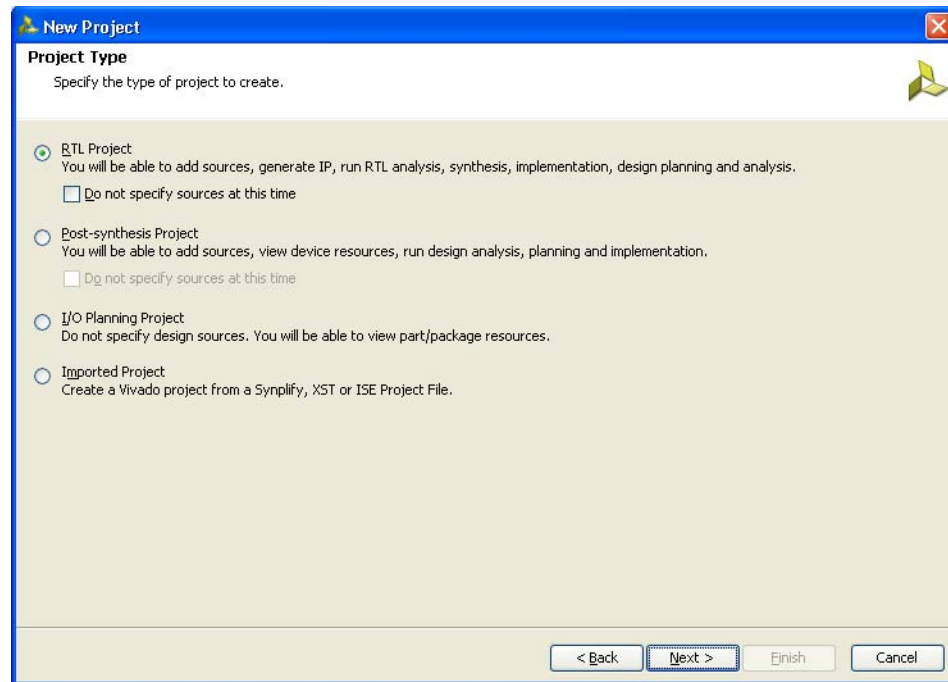


Figure 4-4: Project Type

- Click **Next** to proceed to the **Add Sources** page (Figure 4-5). RTL files can be added to the project in this page. If the project was not created earlier, proceed to the next page.

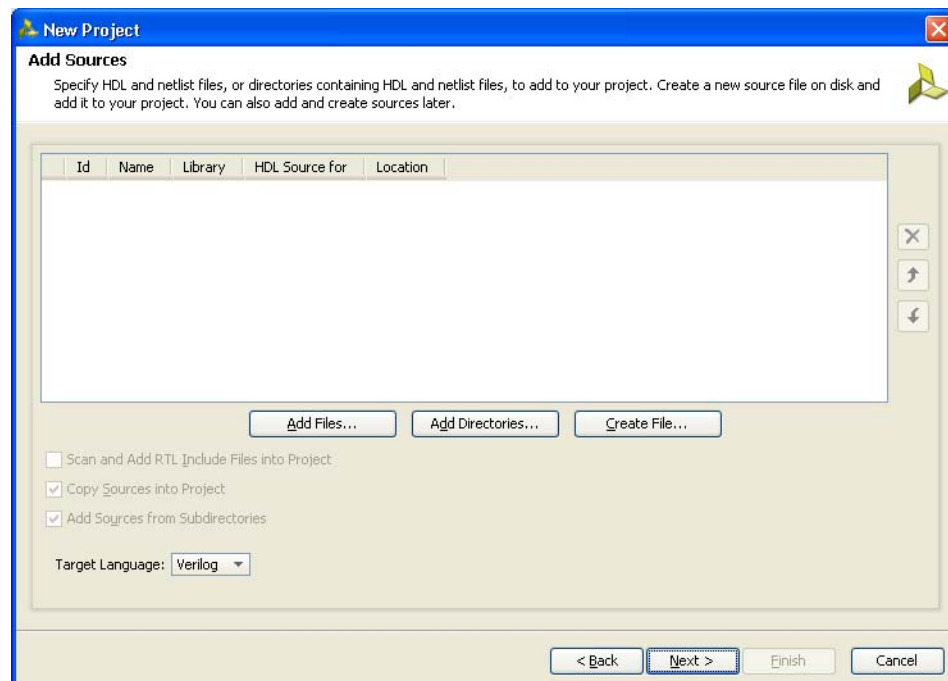


Figure 4-5: Add Sources

6. Click **Next** to open the **Add Existing IP (Optional)** page (Figure 4-6). If the IP is already created, the XCI file generated by the IP can be added to the project and the previous created IP files are automatically added to the project. If the IP was not created earlier, proceed to the next page.

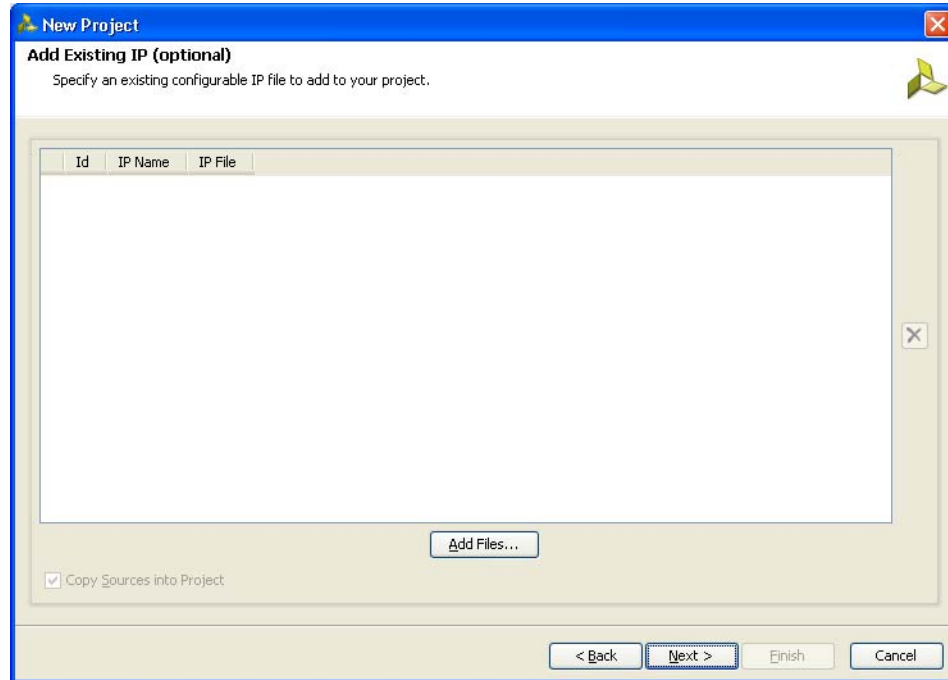


Figure 4-6: Add Existing IP (Optional)

7. Click **Next** to open the **Add Constraints (Optional)** page (Figure 4-7). If the constraints file exists in the repository, it can be added to the project. Proceed to the next page if the constraints file does not exist.

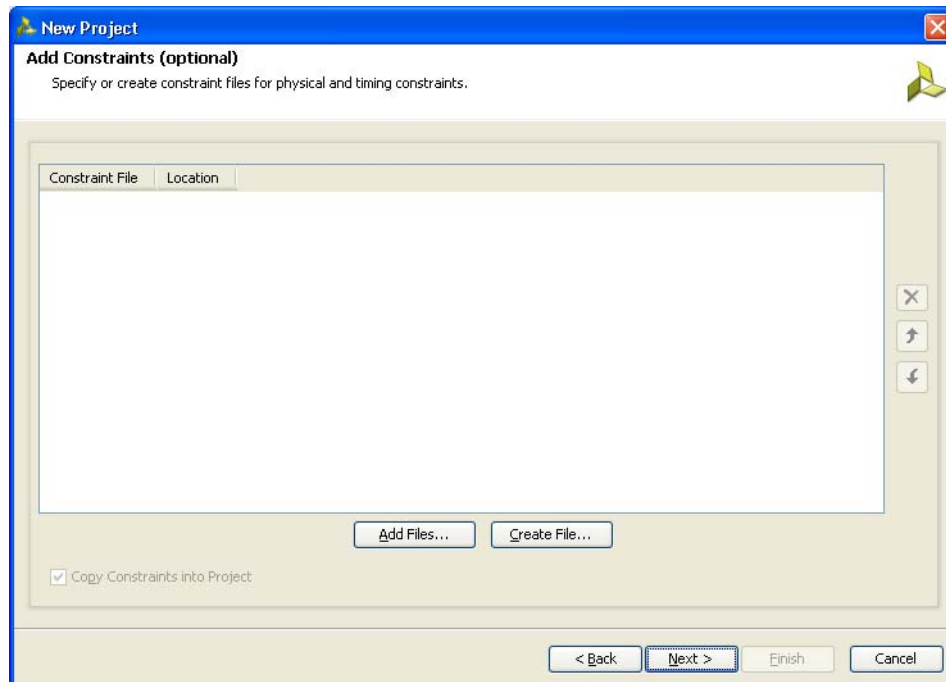


Figure 4-7: Add Constraints (Optional)

- Click **Next** to proceed to the **Default Part** page (Figure 4-8) where the device that needs to be targeted can be selected. The **Default Part** page appears as shown in Figure 4-8.

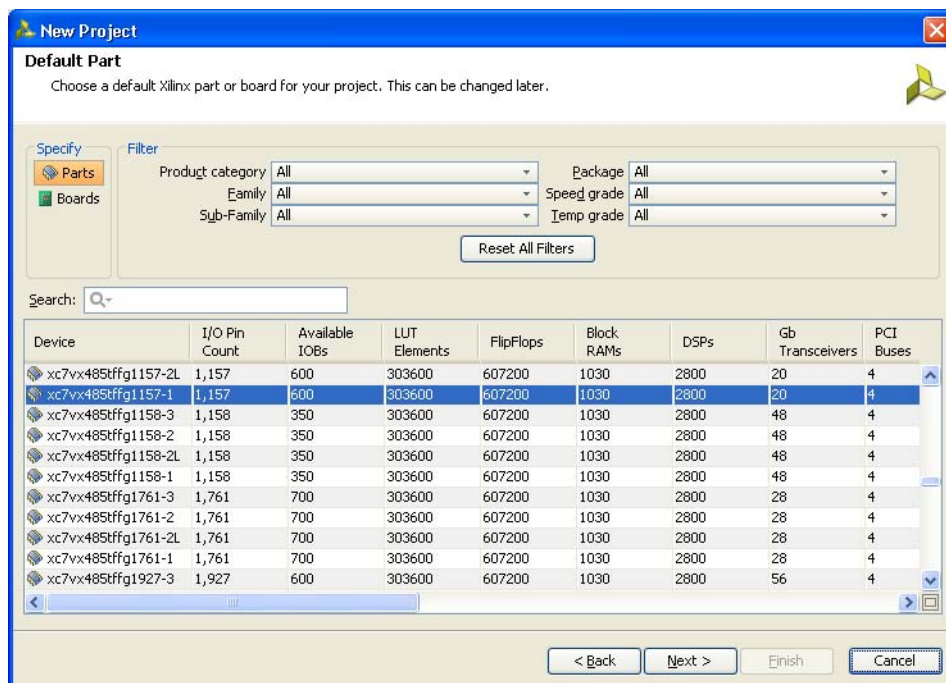


Figure 4-8: Default Part (Default Window)

Select the target **Family**, **Package**, and **Speed Grade**. The valid devices are displayed in the same page, and the device can be selected based on the targeted device (Figure 4-9).

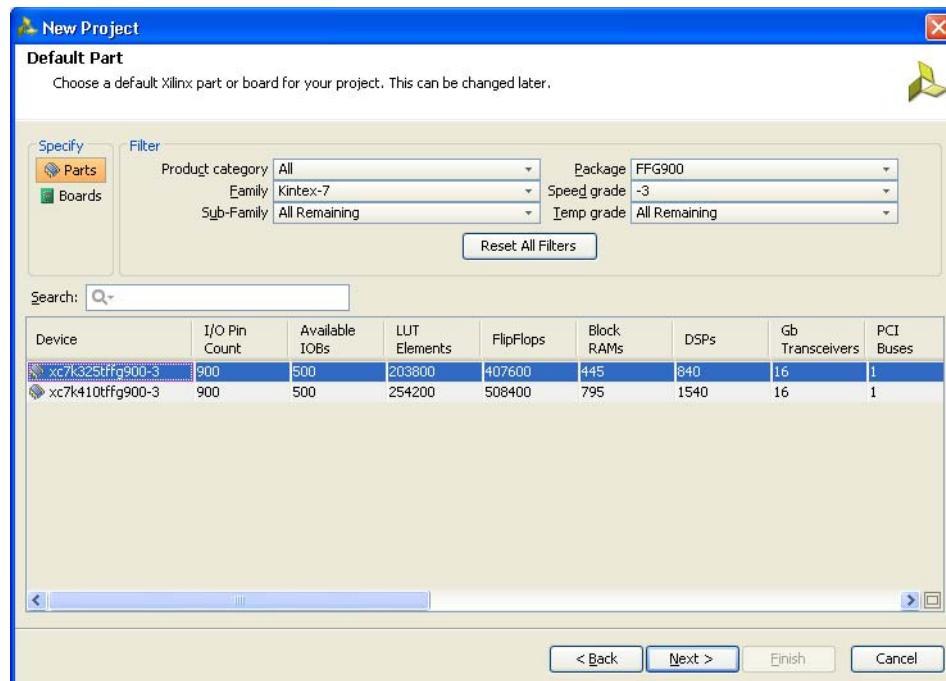


Figure 4-9: Default Part (Customized Window)

Apart from selecting the parts by using **Parts** option, parts can be selected by choosing the **Boards** option, which brings up the evaluation boards supported by Xilinx (Figure 4-10). With this option, design can be targeted for the various evaluation boards. If the XCI file of an existing IP was selected in an earlier step, the same part should be selected here.

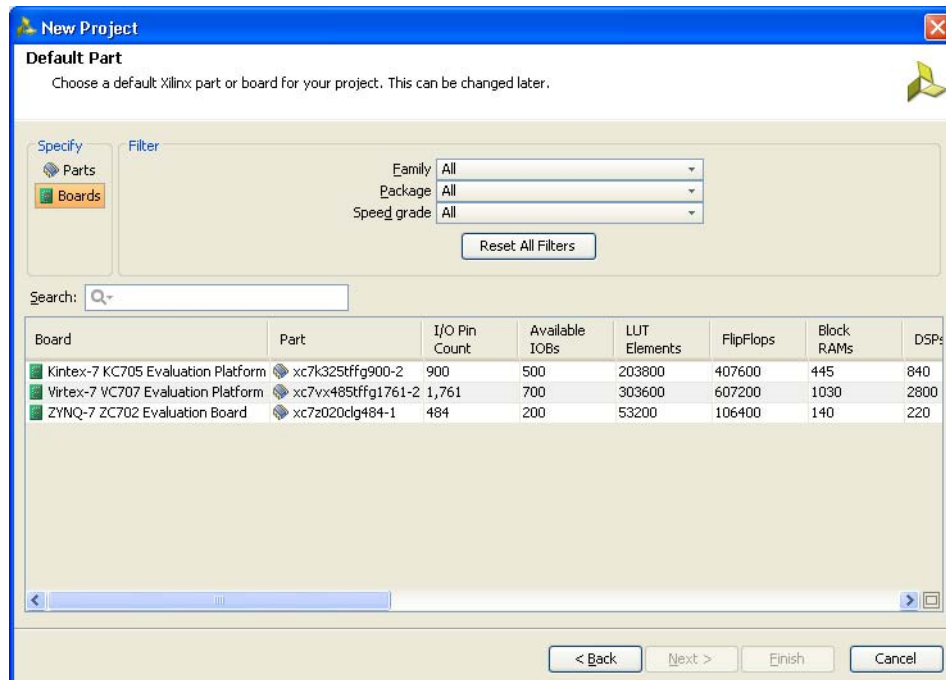


Figure 4-10: Default Part Boards Option

- Click **Next** to open the **New Project Summary** page (Figure 4-11). This includes the summary of selected project details.

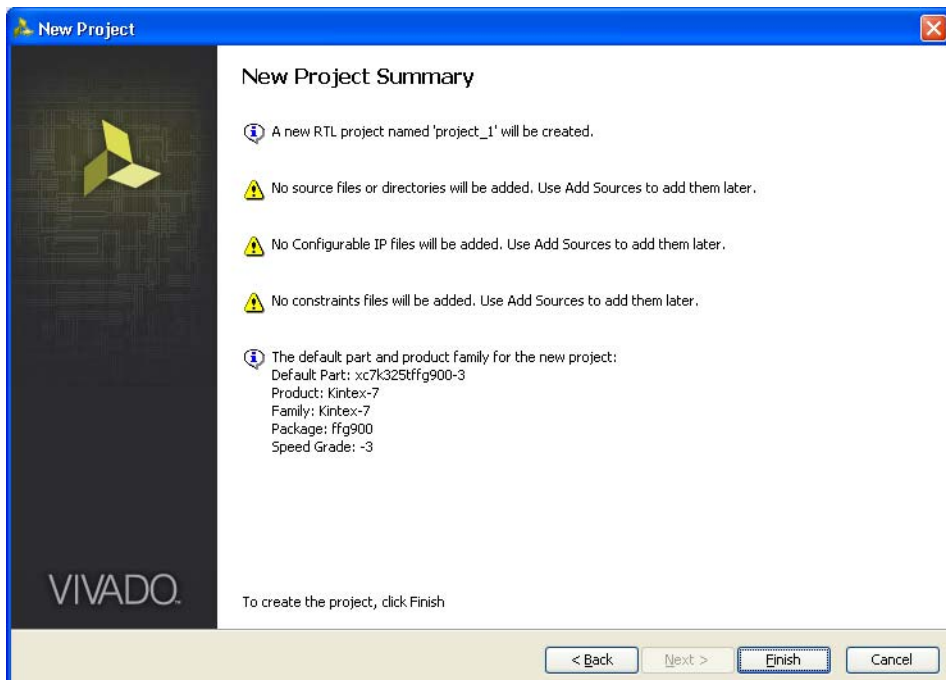


Figure 4-11: New Project Summary

- Click **Finish** to complete the project creation.

11. Click **IP Catalog** on the **Project Manager** window to open the IP catalog window. The IP catalog window appears on the right side panel (see [Figure 4-12](#), highlighted in a red circle).
12. The MIG tool exists in the **Memories & Storage Elements > Memory Interface Generators** section of the IP catalog window ([Figure 4-12](#)) or you can search from the Search tool bar for the string "MIG."

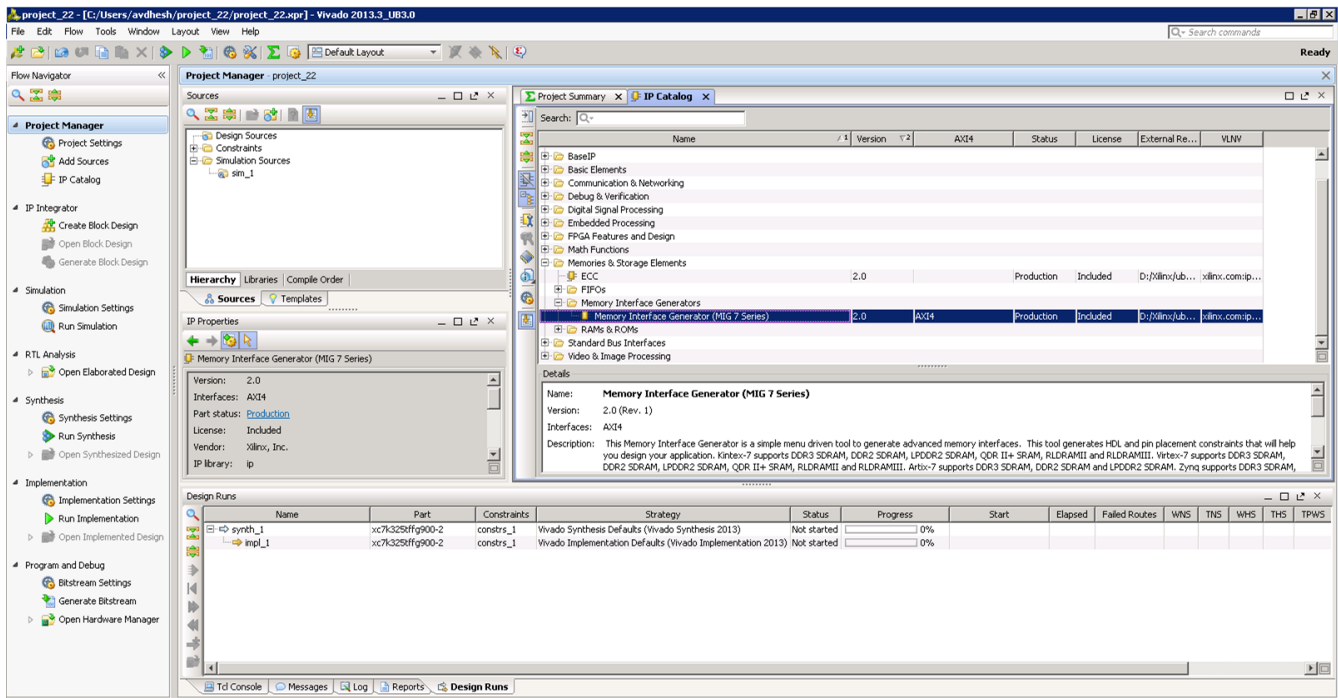


Figure 4-12: IP Catalog Window – Memory Interface Generator

13. Select **MIG 7 Series** to open the MIG tool (Figure 4-13).

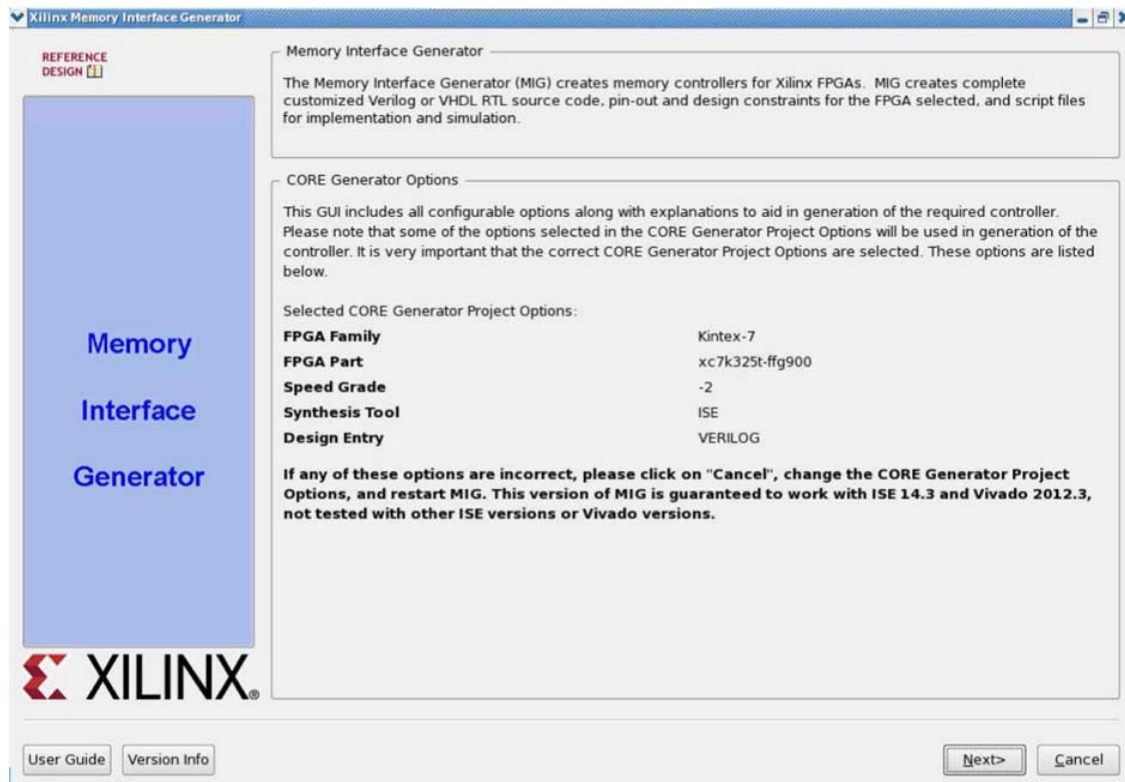


Figure 4-13: 7 Series FPGAs Memory Interface Generator FPGA Front Page

14. Click **Next** to display the **Output Options** page.

Customizing and Generating the Core



CAUTION! The Windows operating system has a 260-character limit for path lengths, which can affect the Vivado tools. To avoid this issue, use the shortest possible names and directory locations when creating projects, defining IP or managed IP projects, and creating block designs.

MIG Output Options

1. Select **Create Design** to create a new Memory Controller design. Enter a component name in the Component Name field (Figure 4-14).
2. Number of controllers supported for LPDDR2 SDRAM is 1.

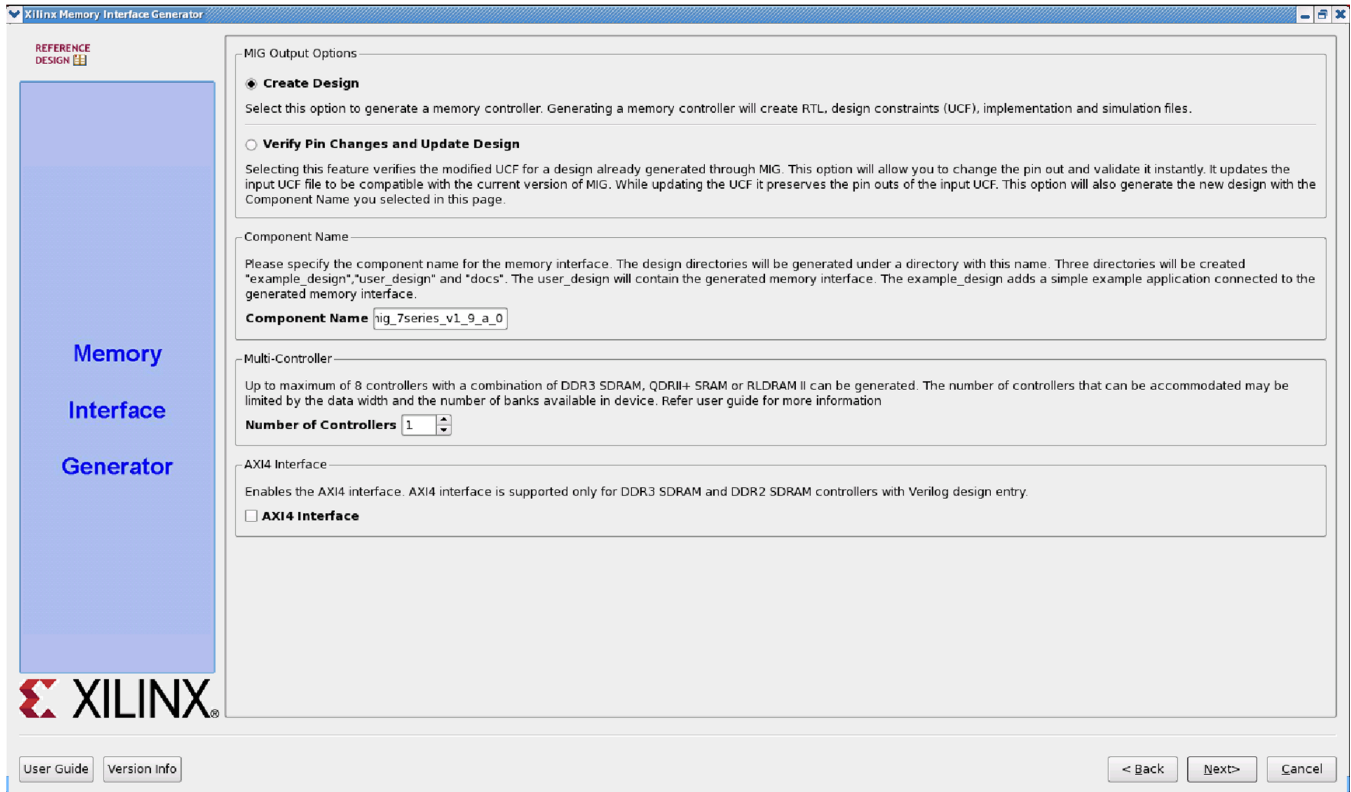


Figure 4-14: MIG Output Options

MIG outputs are generated with the folder name `<component name>`.



IMPORTANT: Only alphanumeric characters can be used for `<component name>`. Special characters cannot be used. This name should always start with an alphabetical character and can end with an alphanumeric character.

- Click **Next** to display the **Pin Compatible FPGAs** page.

Pin Compatible FPGAs

The **Pin Compatible FPGAs** page lists FPGAs in the selected family having the same package. If the generated pinout from the MIG tool needs to be compatible with any of these other FPGAs, this option should be used to select the FPGAs with which the pinout has to be compatible (Figure 4-15).

Xilinx 7 series devices using stacked silicon interconnect (SSI) technology have Super Logic Regions (SLRs). Memory interfaces cannot span across SLRs. If the device selected or a compatible device that is selected has SLRs, the MIG tool ensures that the interface does not cross SLR boundaries.

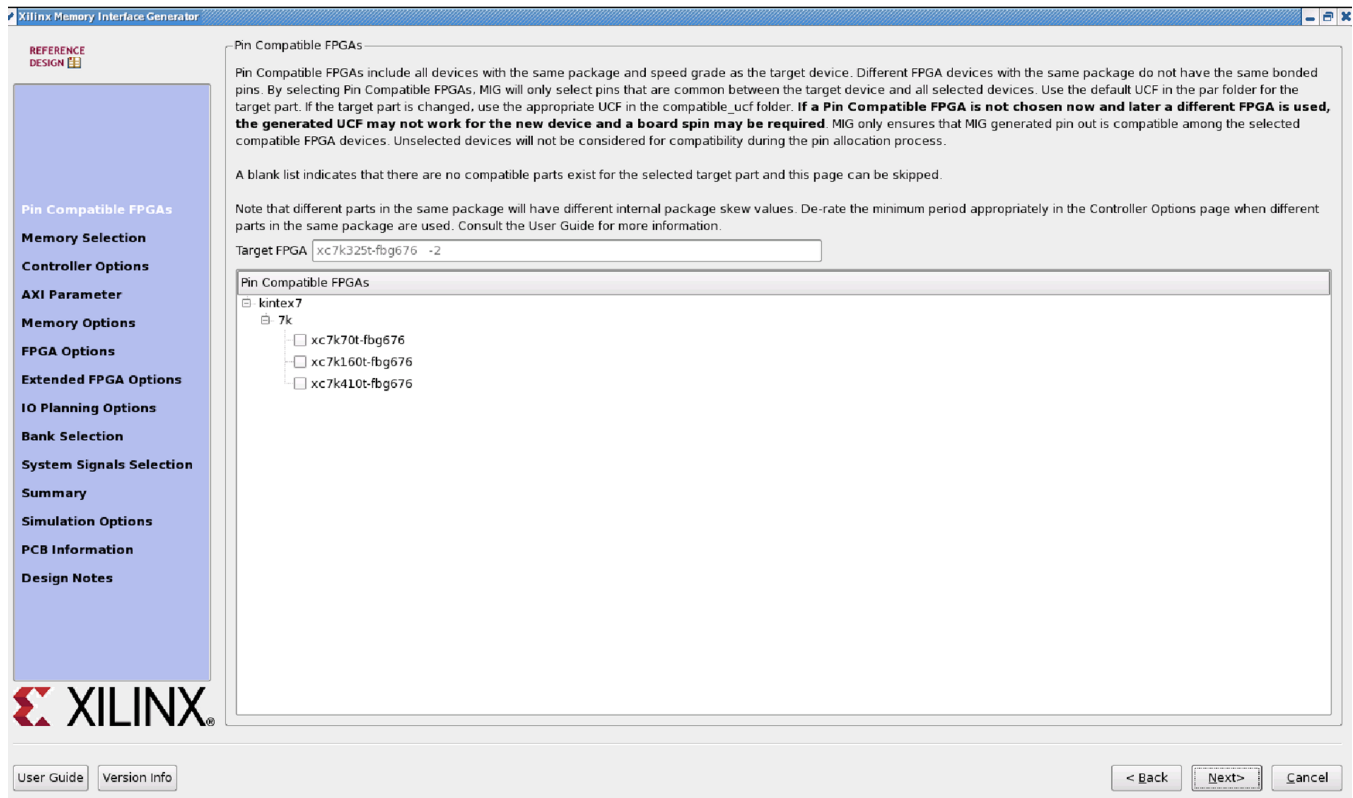


Figure 4-15: Pin-Compatible 7 Series FPGAs

1. Select any of the compatible FPGAs in the list. Only the common pins between the target and selected FPGAs are used by the MIG tool. The name in the text box signifies the target FPGA selected.
2. Click **Next** to display the **Memory Selection** page.

Creating 7 Series FPGA LPDDR2 SDRAM Memory Controller Block Design

Memory Selection

This page displays all memory types that are supported by the selected FPGA family.

1. Select the **LPDDR2 SDRAM** controller type.
2. Click **Next** to display the **Controller Options** page (Figure 4-16).




Figure 4-16: Memory Type and Controller Selection

Controller Options

This page shows the various controller options that can be selected (Figure 4-17).



TIP: The use of the Memory Controller is optional. The Physical Layer, or PHY, can be used without the Memory Controller. The Memory Controller RTL is always generated by the MIG tool, but this output need not be used. Controller only settings such as ORDERING are not needed in this case, and the defaults can be used. Settings pertaining to the PHY, such as the Clock Period, are used to set the PHY parameters appropriately.

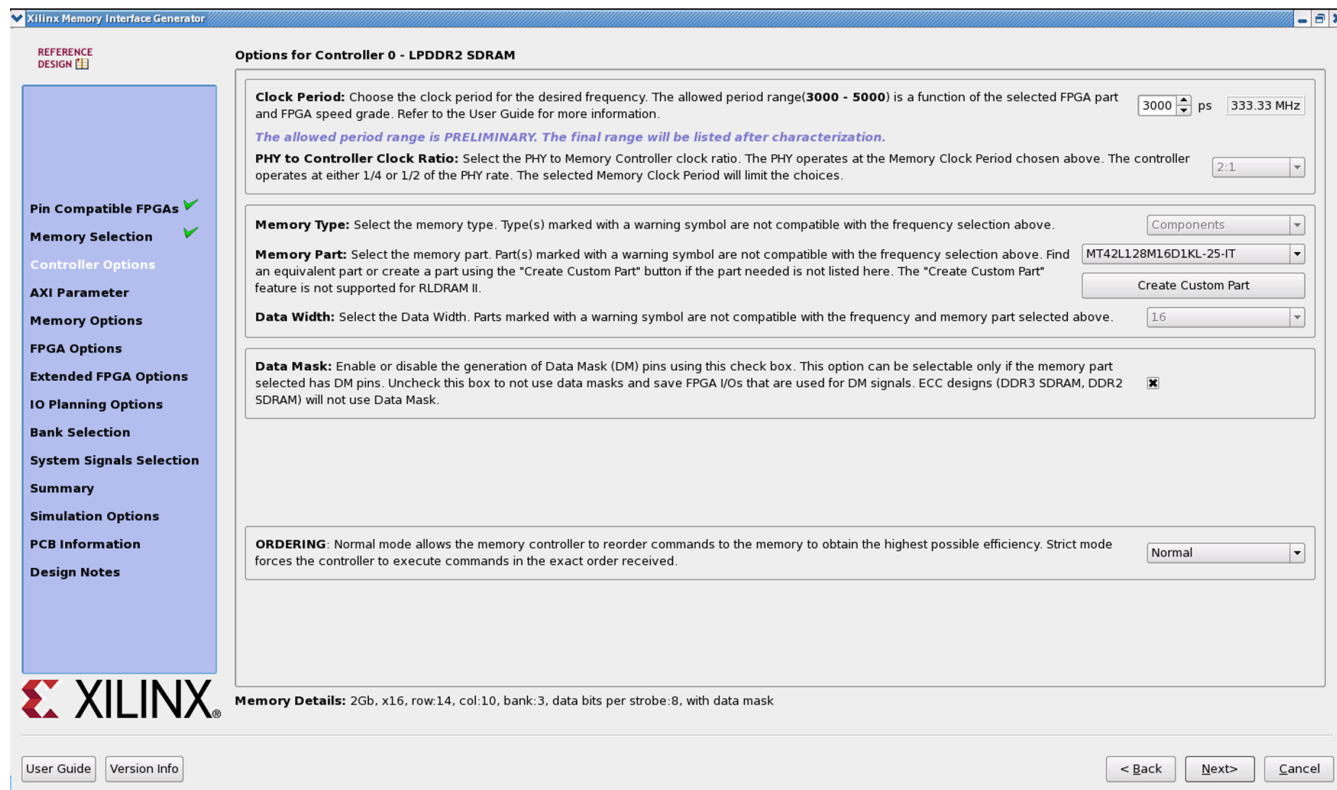

Options for Controller 0 - LPDDR2 SDRAM

Clock Period: Choose the clock period for the desired frequency. The allowed period range(3000 - 5000) is a function of the selected FPGA part and FPGA speed grade. Refer to the User Guide for more information. 3000 ps 333.33 MHz
The allowed period range is PRELIMINARY. The final range will be listed after characterization.

PHY to Controller Clock Ratio: Select the PHY to Memory Controller clock ratio. The PHY operates at the Memory Clock Period chosen above. The controller operates at either 1/4 or 1/2 of the PHY rate. The selected Memory Clock Period will limit the choices. 2:1

Memory Type: Select the memory type. Type(s) marked with a warning symbol are not compatible with the frequency selection above. Components

Memory Part: Select the memory part. Part(s) marked with a warning symbol are not compatible with the frequency selection above. Find an equivalent part or create a part using the "Create Custom Part" button if the part needed is not listed here. The "Create Custom Part" feature is not supported for RDRAM II. MT42L128M16D1KL-25-IT Create Custom Part

Data Width: Select the Data Width. Parts marked with a warning symbol are not compatible with the frequency and memory part selected above. 16

Data Mask: Enable or disable the generation of Data Mask (DM) pins using this check box. This option can be selectable only if the memory part selected has DM pins. Uncheck this box to not use data masks and save FPGA I/Os that are used for DM signals. ECC designs (DDR3 SDRAM, DDR2 SDRAM) will not use Data Mask. ☒

ORDERING: Normal mode allows the memory controller to reorder commands to the memory to obtain the highest possible efficiency. Strict mode forces the controller to execute commands in the exact order received. Normal

Memory Details: 2Gb, x16, row:14, col:10, bank:3, data bits per strobe:8, with data mask

User Guide Version Info < Back Next> Cancel

Figure 4-17: Controller Options Page

If the design has multiple controllers, the controller options page is repeated for each of the controllers. This page is partitioned into a maximum of nine sections. The number of partitions depends on the type of memory selected. The controller options page also contains these pull-down menus to modify different features of the design:

- **Frequency** – This feature indicates the operating frequency for all the controllers. The frequency block is limited by factors such as the selected FPGA and device speed grade.
- **PHY to Controller Clock Ratio** – This feature determines the ratio of the physical layer (memory) clock frequency to the controller and user interface clock frequency. The user interface data bus width of the 2:1 ratio is four times the width of the physical memory interface width.
- **Memory Type** – This feature selects the type of memory parts used in the design.
- **Memory Part** – This option selects a memory part for the design. Selections can be made from the list or a new part can be created.
- **Data Width** – The data width value can be selected here based on the memory type selected earlier. The list shows all supported data widths for the selected part. One of the data widths can be selected.
- **Data Mask** – This option allocates data mask pins when selected. This option should be deselected to deallocate data mask pins and increase pin efficiency. This option is disabled for memory parts that do not support data mask.


- **Ordering** – This feature allows the Memory Controller to reorder commands to improve the memory bus efficiency.
- **Memory Details** – The bottom of the **Controller Options** page (Figure 4-17, page 529) displays the details for the selected memory configuration (Figure 4-18).

Memory Details: 2Gb, x16, row:14, col:10, bank:3, data bits per strobe:8, with data mask

Figure 4-18: Memory Details

Create Custom Part

1. On the **Controller Options** page select the appropriate frequency. Either use the spin box or enter a valid value using the keyboard. Values entered are restricted based on the minimum and maximum frequencies supported.
2. Select the appropriate memory part from the list. If the required part or its equivalent is unavailable, a new memory part can be created. To create a custom part, click **Create Custom Part** below the **Memory Part** pull-down menu. A new page appears, as shown in Figure 4-19.

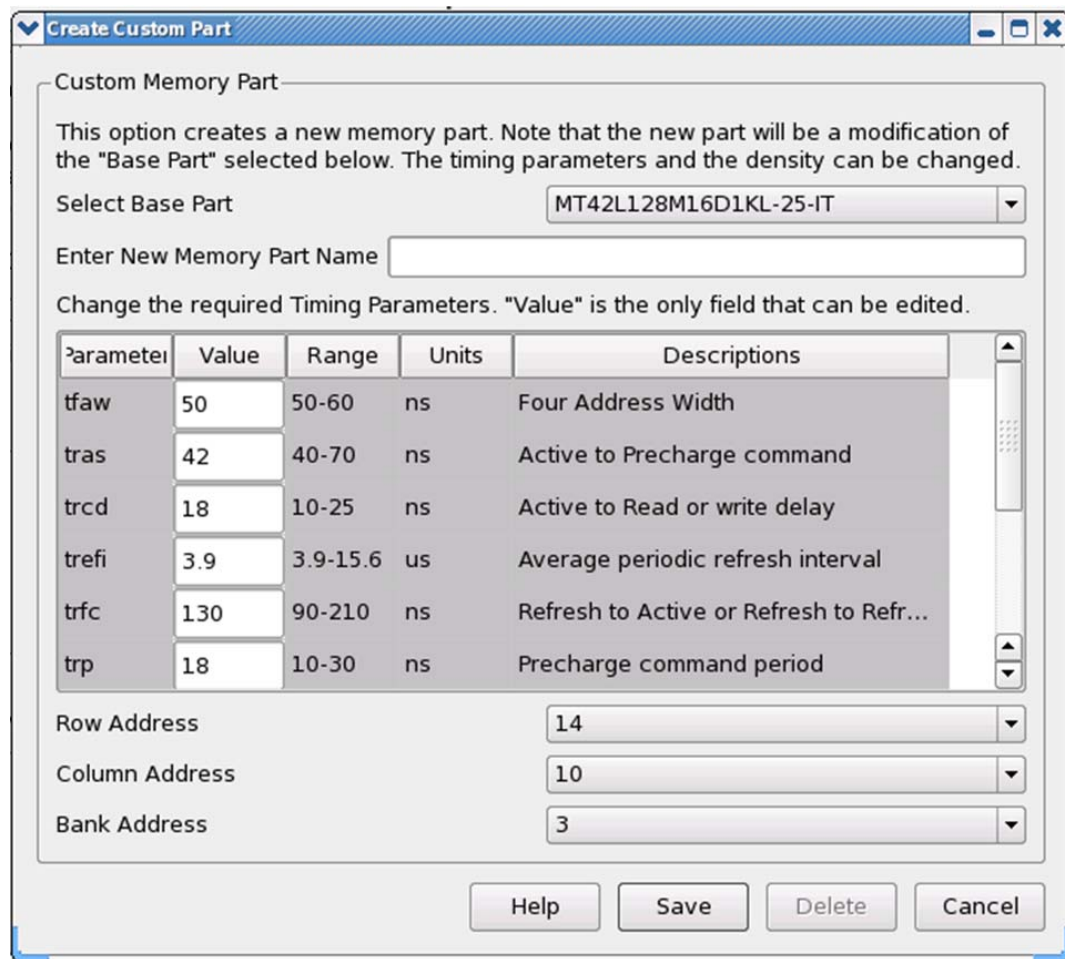

Create Custom Part

Custom Memory Part

This option creates a new memory part. Note that the new part will be a modification of the "Base Part" selected below. The timing parameters and the density can be changed.

Select Base Part: MT42L128M16D1KL-25-IT

Enter New Memory Part Name:

Change the required Timing Parameters. "Value" is the only field that can be edited.

Parameter	Value	Range	Units	Descriptions
tfaw	50	50-60	ns	Four Address Width
tras	42	40-70	ns	Active to Precharge command
trcd	18	10-25	ns	Active to Read or write delay
trefi	3.9	3.9-15.6	us	Average periodic refresh interval
trfc	130	90-210	ns	Refresh to Active or Refresh to Refr...
trp	18	10-30	ns	Precharge command period

Row Address: 14

Column Address: 10

Bank Address: 3

Buttons: Help, Save, Delete, Cancel

Figure 4-19: Create Custom Part

The **Create Custom Part** page includes all the specifications of the memory component selected in the Select Base Part pull-down menu.

3. Enter the appropriate memory part name in the text box.
4. Select the suitable base part from the **Select Base Part** list.
5. Edit the value column as needed.
6. Select the suitable values from the **Row**, **Column**, and **Bank** options as per the requirements.
7. After editing the required fields, click **Save**. The new part is saved with the selected name. This new part is added in the **Memory Parts** list on the **Controller Options** page. It is also saved into the database for reuse and to produce the design.
8. Click **Next** to display the **Memory Options** page.

Setting LPDDR2 SDRAM Memory Parameter Option

This feature allows the selection of various memory mode register values, as supported by the controller specification (Figure 4-20).

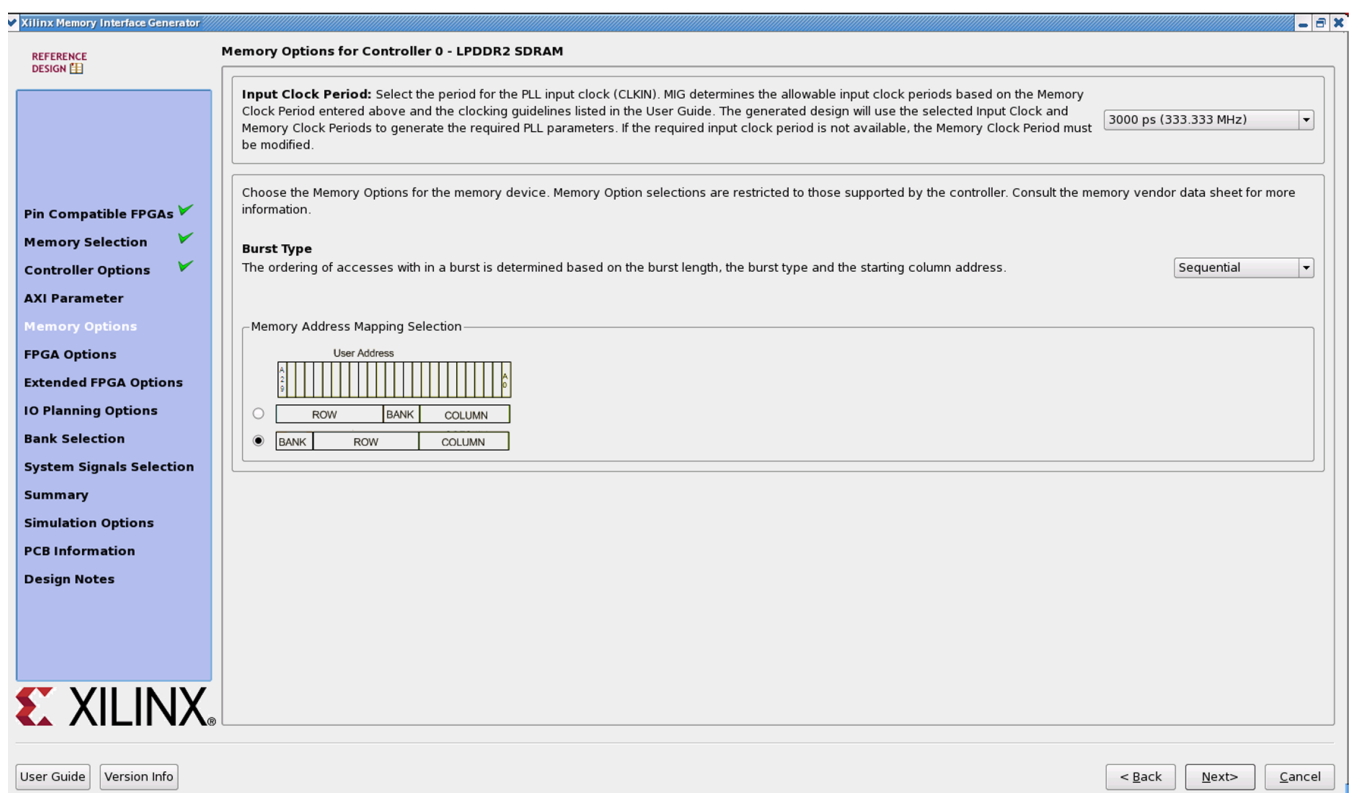


Figure 4-20: Setting Memory Mode Options

The mode register value is loaded into the load mode register during initialization.

The desired input clock period is selected from the list. These values are determined by the memory clock period chosen and the allowable limits of the parameters. For more information on the MMCM parameter limits, see [Design Guidelines, page 631](#).

Click **Next** to display the **FPGA Options** page.

FPGA Options

Figure 4-21 shows the **FPGA Options** page.

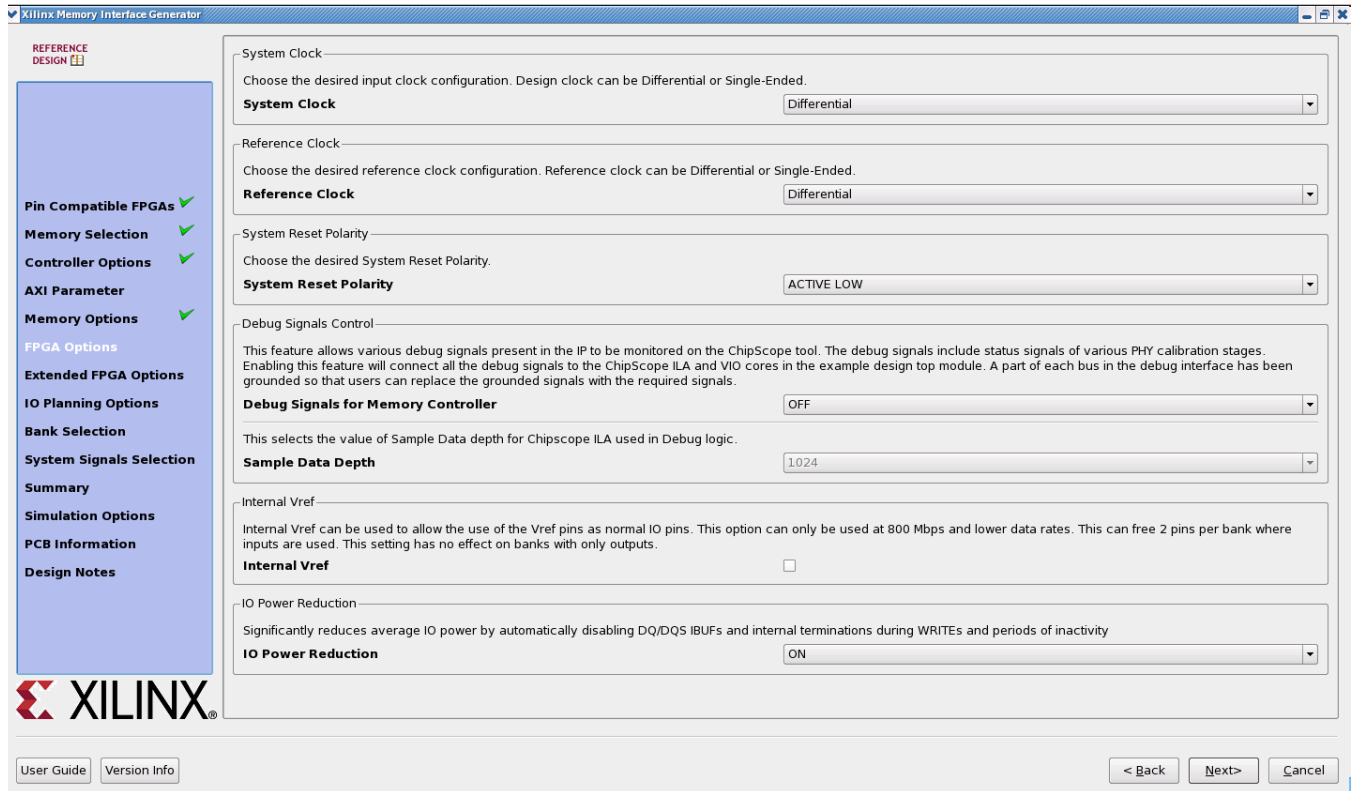


Figure 4-21: **FPGA Options**

- **System Clock** – This option selects the clock type (Single-Ended, Differential, or No Buffer) for the `sys_clk` signal pair. When the **No Buffer** option is selected, IBUF primitives are not instantiated in RTL code and pins are not allocated for the system clock.

If the designs generated from MIG for the **No Buffer** option are implemented without performing changes, designs can fail in implementation due to IBUFs not instantiated for the `sys_clk_i` signal. So for No Buffer scenarios, `sys_clk_i` signal needs to be connected to an internal clock.

- **Reference Clock** – This option selects the clock type (Single-Ended, Differential, No Buffer, or Use System Clock) for the `clk_ref` signal pair. The **Use System Clock** option appears when the input frequency is between 199 and 201 MHz (that is, the Input Clock Period is between 5,025 ps (199 MHz) and 4,975 ps (201 MHz). When the **No Buffer** option is selected, IBUF primitives are not instantiated in RTL code and pins are not allocated for the reference clock.

If the designs generated from MIG for the **No Buffer** option are implemented without performing changes, designs can fail in implementation due to IBUFs not instantiated for the `ref_clk_i` signal. So for **No Buffer** scenarios, `ref_clk_i` signal needs to be connected to an internal clock.

- **System Reset Polarity** – The polarity for system reset (`sys_rst`) can be selected. If the option is selected as active-Low, the parameter `RST_ACT_LOW` is set to 1 and if set to active-High the parameter `RST_ACT_LOW` is set to 0.
- **Debug Signals Control** – Selecting this option enables calibration status and user port signals to be port mapped to the ILA and VIO in the `example_top` module. This helps in monitoring traffic on the user interface port with the Vivado Design Suite debug feature. Deselecting the **Debug Signals Control** option leaves the debug signals unconnected in the `example_top` module and no ILA/VIO modules are generated by the IP catalog. Additionally, the debug port is always disabled for functional simulations.
- **Sample Data Depth** – This option selects the Sample Data depth for the ILA module used in the Vivado debug logic. This option can be selected when the **Debug Signals for Memory Controller** option is ON.
- **Internal V_{REF} Selection** – Internal V_{REF} can be used for data group bytes to allow the use of the V_{REF} pins for normal I/O usage. Internal V_{REF} should only be used for data rates of 800 Mb/s or below.

Click **Next** to display the **Pin/Bank Selection Mode** page.

- **Pin/Bank Selection Mode** – This allows you to specify an existing pinout and generate the RTL for this pinout, or pick banks for a new design. Figure 4-22 shows the options for using an existing pinout. You must assign the appropriate pins for each signal. A choice of each bank is available to narrow down the list of pins. It is not mandatory to select the banks prior to selection of the pins. Click **Validate** to check against the MIG pinout rules. You cannot proceed until the MIG DRC has been validated by clicking **Validate**.

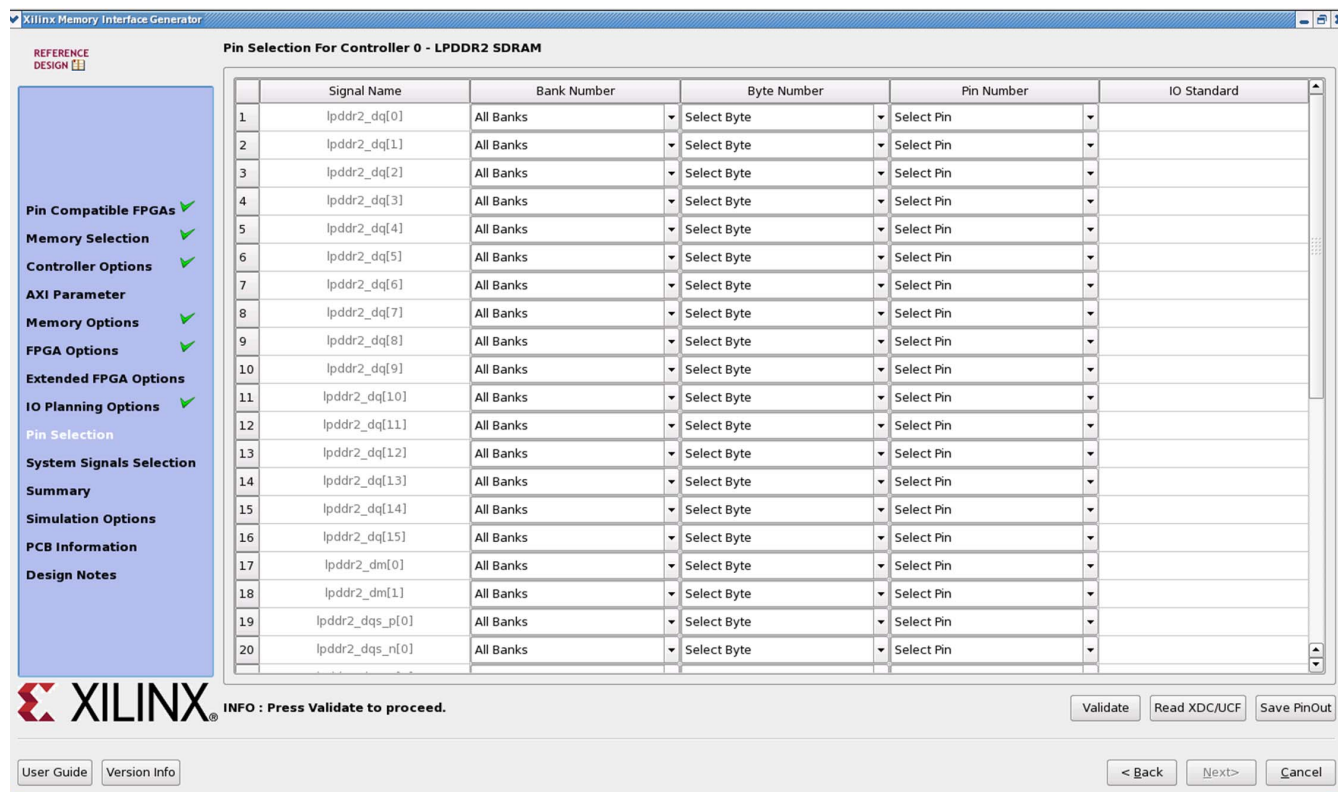


Figure 4-22: Pin/Bank Selection Mode

Bank Selection

This feature allows the selection of bytes for the memory interface. Bytes can be selected for different classes of memory signals, such as:

- Address and control signals
- Data signals

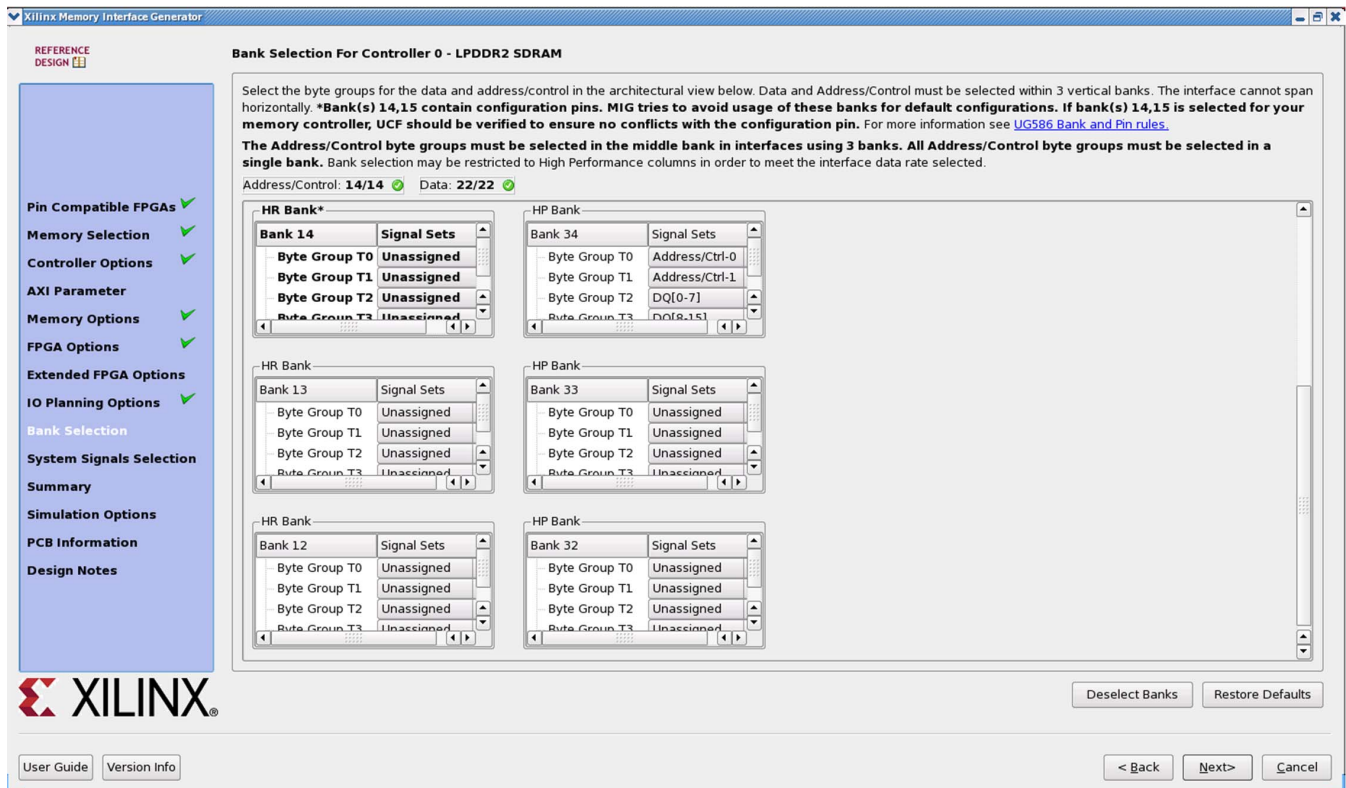


Figure 4-23: Bank Selection


For customized settings, click **Deselect Banks** and select the appropriate bank and memory signals. Click **Next** to move to the next page if the default setting is used.

To unselect the banks that are selected, click **Deselect Banks**. To restore the defaults, click **Restore Defaults**.

VCCAUX_IO groups are shown for HP banks in devices with these groups using dashed lines. VCCAUX_IO is common to all banks in these groups. The memory interface must have the same VCCAUX_IO for all banks used in the interface. MIG automatically sets the VCCAUX_IO constraint appropriately for the data rate requested.

For devices implemented with SSI technology, the SLRs are indicated by a number in the header in each bank, for example, SLR 1. Interfaces cannot span across Super Logic Regions.

Select the pins for the system signals on this page (Figure 4-24). The MIG tool allows the selection of either external pins or internal connections, as desired.

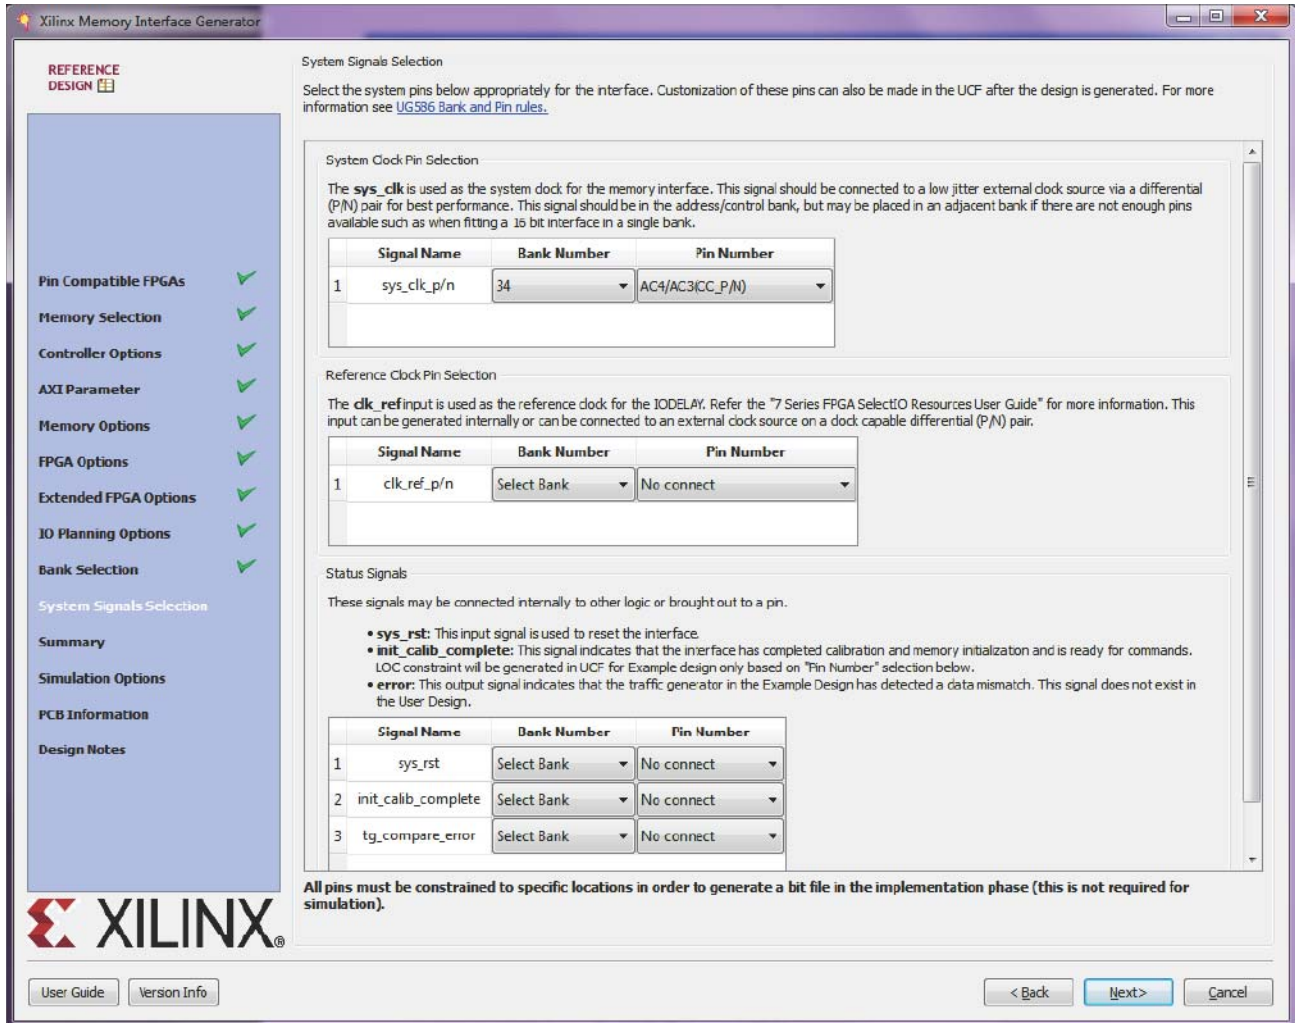

REFERENCE DESIGN

- Pin Compatible FPGAs ✓
- Memory Selection ✓
- Controller Options ✓
- AXI Parameter ✓
- Memory Options ✓
- FPGA Options ✓
- Extended FPGA Options ✓
- IO Planning Options ✓
- Bank Selection ✓
- System Signals Selection**
- Summary
- Simulation Options
- PCB Information
- Design Notes

System Signals Selection

Select the system pins below appropriately for the interface. Customization of these pins can also be made in the UCF after the design is generated. For more information see [UG586 Bank and Pin rules](#).

System Clock Pin Selection

The **sys_clk** is used as the system clock for the memory interface. This signal should be connected to a low jitter external clock source via a differential (P/N) pair for best performance. This signal should be in the address/control bank, but may be placed in an adjacent bank if there are not enough pins available such as when fitting a 16 bit interface in a single bank.

Signal Name	Bank Number	Pin Number
1 sys_clk_p/n	34	AC4/AC3(CC_P/N)

Reference Clock Pin Selection

The **clk_refinput** is used as the reference clock for the IODELAY. Refer the "7 Series FPGA SelectIO Resources User Guide" for more information. This input can be generated internally or can be connected to an external clock source on a clock capable differential (P/N) pair.

Signal Name	Bank Number	Pin Number
1 clk_ref_p/n	Select Bank	No connect

Status Signals

These signals may be connected internally to other logic or brought out to a pin.

- **sys_rst**: This input signal is used to reset the interface.
- **init_calib_complete**: This signal indicates that the interface has completed calibration and memory initialization and is ready for commands. LOC constraint will be generated in UCF for Example design only based on "Pin Number" selection below.
- **error**: This output signal indicates that the traffic generator in the Example Design has detected a data mismatch. This signal does not exist in the User Design.

Signal Name	Bank Number	Pin Number
1 sys_rst	Select Bank	No connect
2 init_calib_complete	Select Bank	No connect
3 tg_compare_error	Select Bank	No connect

All pins must be constrained to specific locations in order to generate a bit file in the implementation phase (this is not required for simulation).

User Guide Version Info < Back Next> Cancel

Figure 4-24: System Pins

- **sys_clk** – This is the system clock input for the memory interface and is typically connected to a low-jitter external clock source. Either a single input or a differential pair can be selected based on the **System Clock** selection in the **FPGA Options** page (Figure 4-21). The `sys_clk` input must be in the same column as the memory interface. If this pin is connected in the same banks as the memory interface, the MIG tool selects an I/O standard compatible with the interface, such as DIFF_SSTL12 or SSTL12. If `sys_clk` is not connected in a memory interface bank, the MIG tool selects an appropriate standard such as LVCMOS18 or LVDS. The XDC can be modified as desired after generation.
- **clk_ref** – This is the reference frequency input for the IDELAY control. This is a 200 MHz input. The `clk_ref` input can be generated internally or connected to an external source. A single input or a differential pair can be selected based on the **System Clock** selection in the **FPGA Options** page (Figure 4-21). The I/O standard is selected in a similar way as `sys_clk`.
- **sys_rst** – This is the asynchronous system reset input that can be generated internally or driven from a pin. The MIG tool selects an appropriate I/O standard for the input such as LVCMOS18 and LVCMOS25 for HP and HR banks, respectively. The default polarity of `sys_rst` pin is active-Low. The polarity of `sys_rst` pin varies based on the **System Reset Polarity** option chosen in **FPGA Options** page (Figure 4-21).
- **init_calib_complete** – This output indicates that the memory initialization and calibration is complete and that the interface is ready to use. The `init_calib_complete` signal is normally only used internally, but can be brought out to a pin if desired.
- **tg_compare_error** – This output indicates that the traffic generator in the example design has detected a data compare error. This signal is only generated in the example design and is not part of the user design. This signal is not typically brought out to a pin but can be, if desired.

Click **Next** to display the **Summary** page.

Summary

This page provides the complete details about the 7 series FPGA memory core selection, interface parameters, Vivado tool options, and FPGA options of the active project (Figure 4-25).

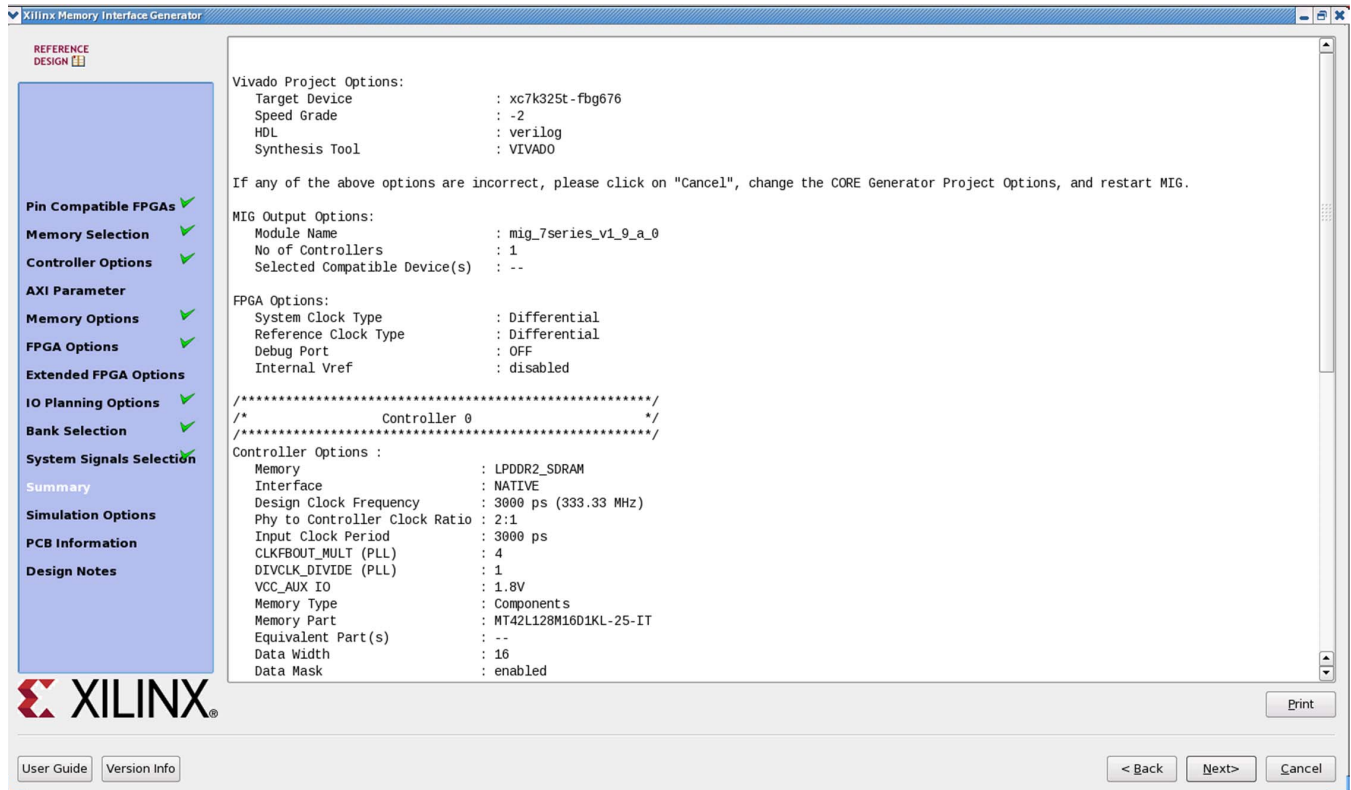


Figure 4-25: Summary

Memory Model License

The MIG tool can output a chosen vendor's memory model for simulation purposes for memories such as LPDDR2 SDRAMs. To access the models in the output `sim` folder, click the license agreement (Figure 4-26). Read the license agreement and check the **Accept License Agreement** box to accept it. If the license agreement is not agreed to, the memory model is not made available. A memory model is necessary to simulate the design.



UG586_c1_39_110610

Figure 4-26: License Agreement

Click **Next** to move to PCB Information page.

PCB Information

This page displays the PCB-related information to be considered while designing the board that uses the MIG tool generated designs. Click **Next** to move to the **Design Notes** page.

Design Notes

Click **Generate** to generate the design files. The MIG tool generates two output directories: `example_design` and `user_design`. After generating the design, the MIG GUI closes.

Vivado Integrated Design Flow for MIG

1. After clicking **Generate**, the **Generate Output Products** window appears. This window has the **Out-of-Context Settings** as shown in [Figure 4-27](#).

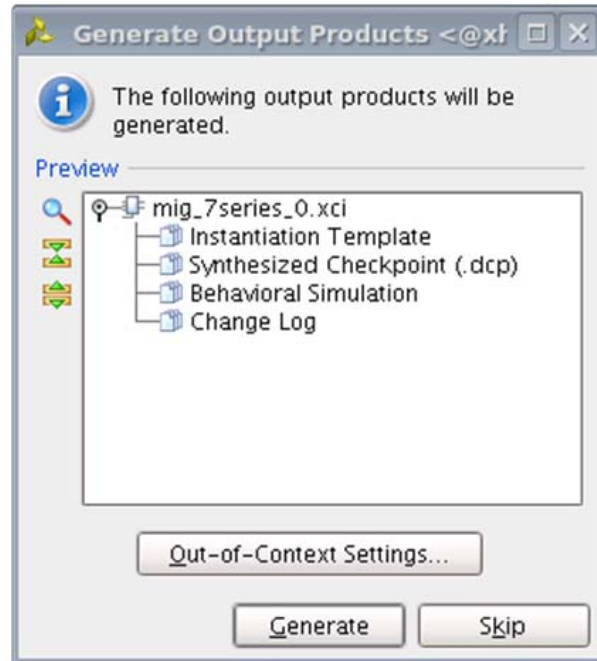


Figure 4-27: **Generate Output Products Window**

2. Click **Out-of-Context Settings** to configure generation of synthesized checkpoints. To enable the **Out-of-Context** flow, enable the check box. To disable the **Out-of-Context** flow, disable the check box. The default option is "enable" as shown in [Figure 4-28](#).

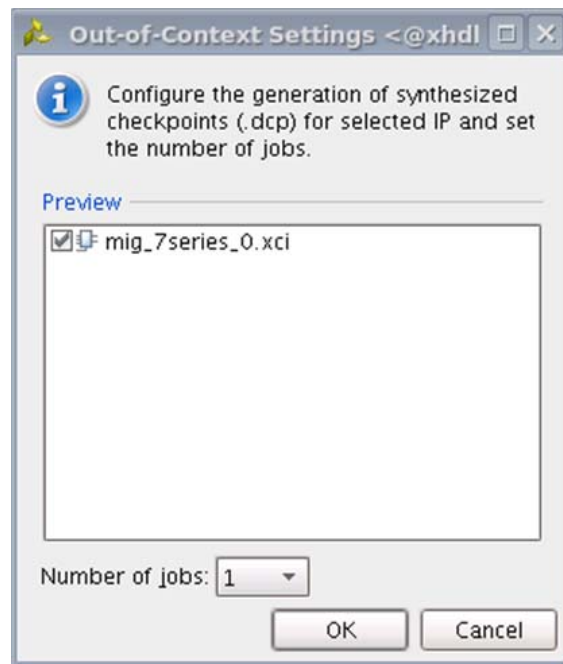


Figure 4-28: **Out-of-Context Settings Window**

3. MIG designs comply with "Hierarchical Design" flow in Vivado. For more information, see the *Vivado Design Suite User Guide: Hierarchical Design* (UG905) [\[Ref 5\]](#) and the *Vivado Design Suite Tutorial: Hierarchical Design* (UG946) [\[Ref 6\]](#).
4. After generating the MIG design, the project window appears as shown in [Figure 4-29](#).

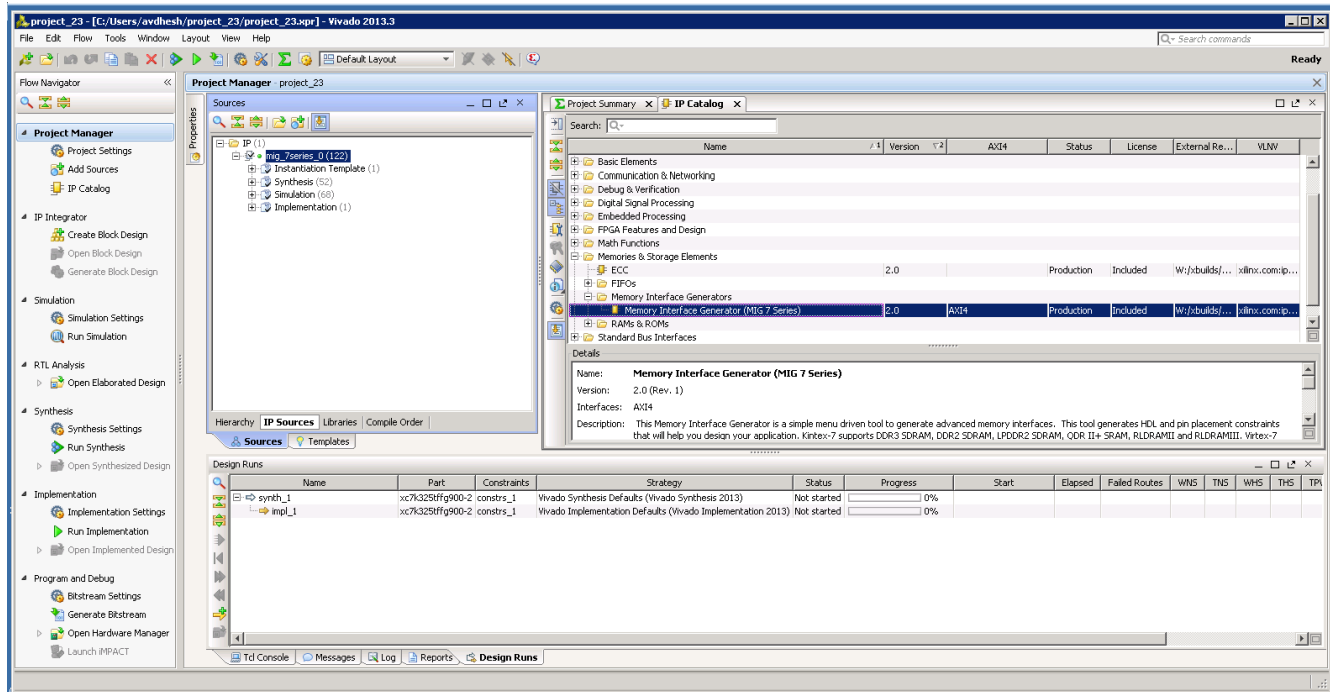


Figure 4-29: Vivado Tool Project Window (After IP Generation)

5. After project creation, the XCI file is added to the Project Hierarchy. The same view also displays the module hierarchies of the user design. The list of HDL and XDC files is available in the **IP Sources** view in the **Sources** window. Double-clicking on any module or file opens the file in the Vivado Editor. These files are read only.

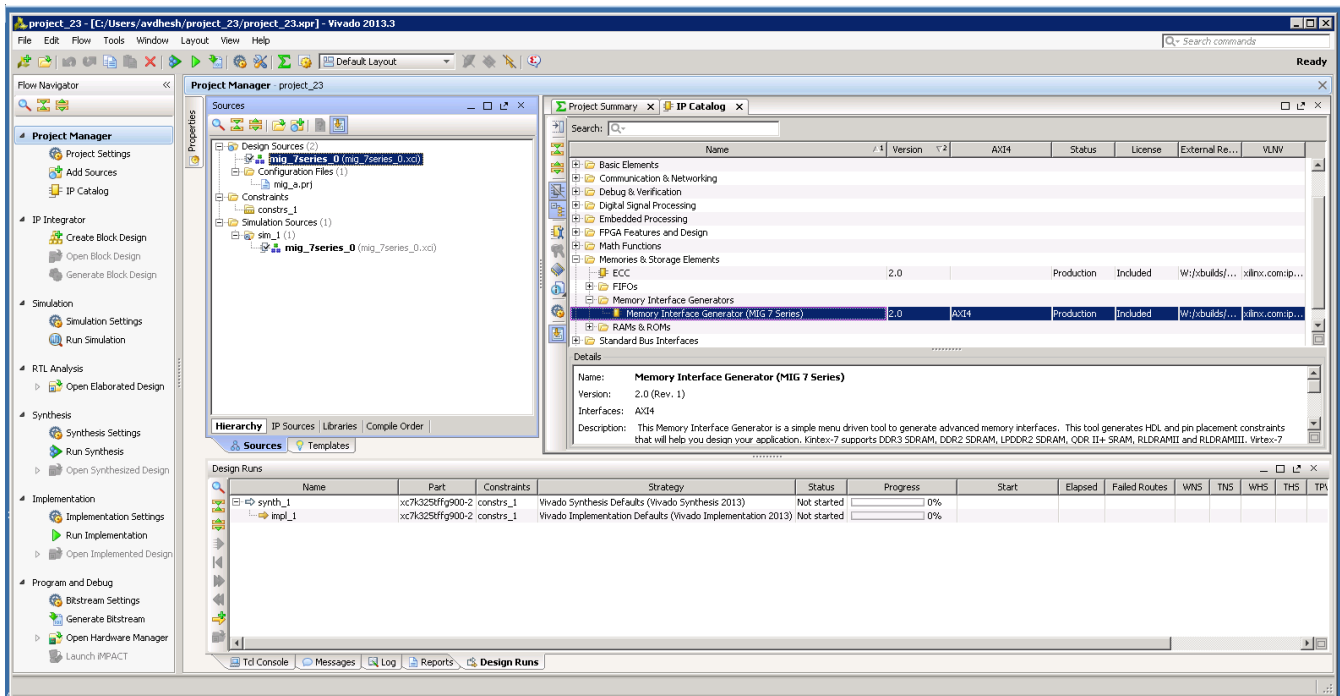


Figure 4-30: Vivado Tool Project Sources Window

Design generation from MIG can be generated using the **Create Design** flow or the **Verify Pin Changes** and **Update Design** flows. There is no difference between the flow when generating the design from the MIG tool. Irrespective of the flow by which designs are generated from the MIG tool, the XCI file is added to the Vivado tool project. The implementation flow is the same for all scenarios because the flow depends on the XCI file added to the project.

6. All MIG generated user design RTL and XDC files are automatically added to the project. If files are modified and you wish to regenerate them, right-click the XCI file and select **Generate Output Products** (Figure 4-31).

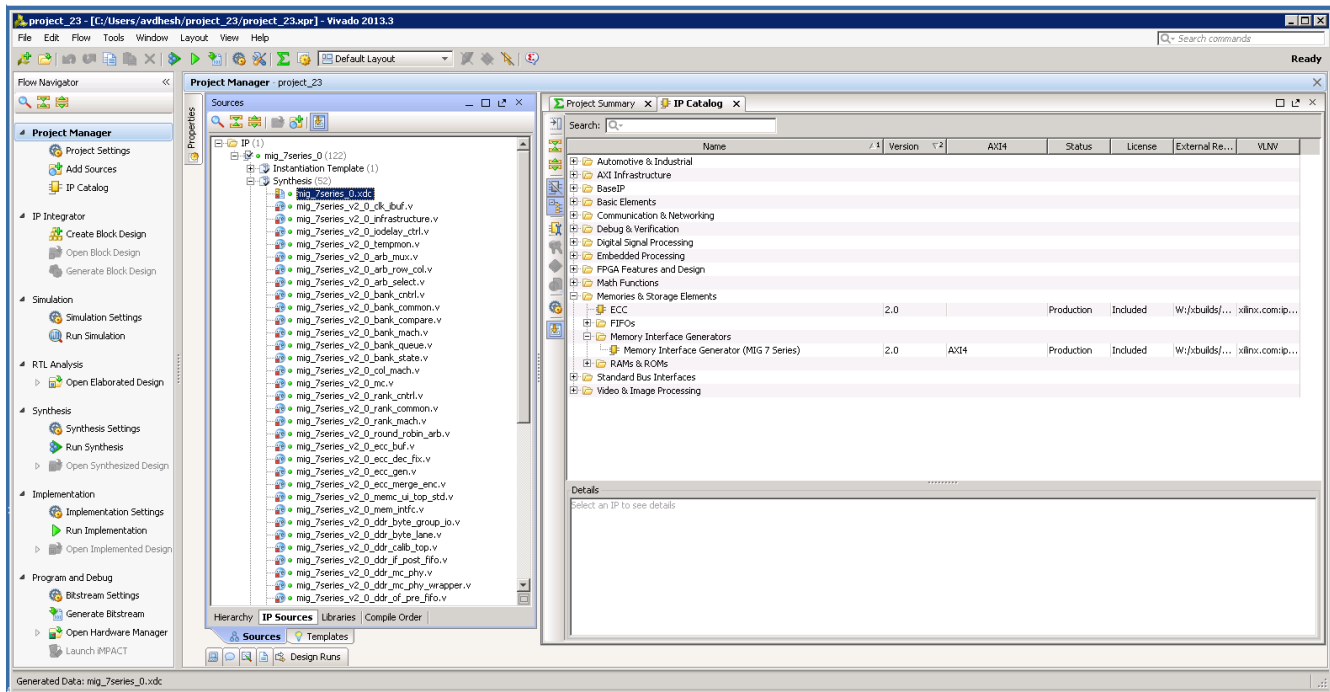


Figure 4-31: Generate RTL and Constraints

7. Clicking **Generate Output Products** option brings up the **Manage Outputs** window (Figure 4-32).

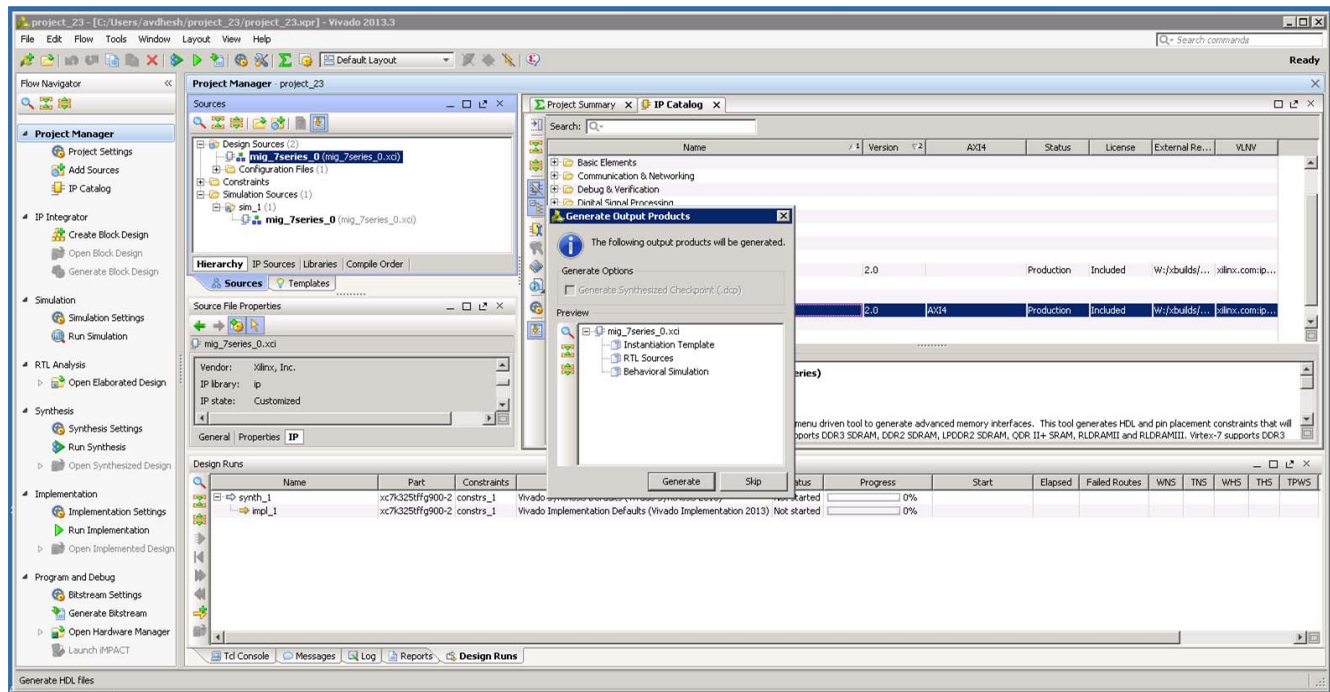


Figure 4-32: Generate Window

8. All user-design RTL files and constraints files (XDC files) can be viewed in the **Sources > Libraries** tab (Figure 4-33).

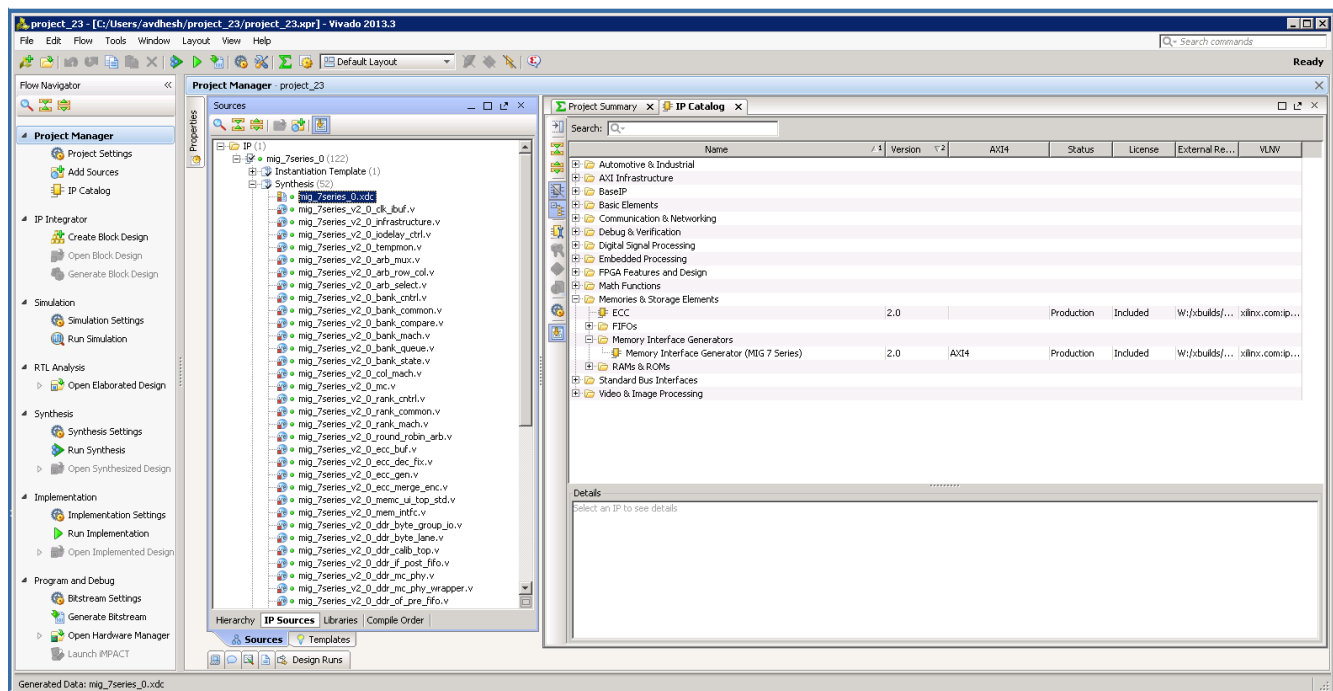


Figure 4-33: Vivado Project – RTL and Constraints Files

9. The Vivado Design Suite supports **Open IP Example Design** flow. To create the example design using this flow right-click the IP in the **Source Window**, as shown in Figure 4-34 and select.

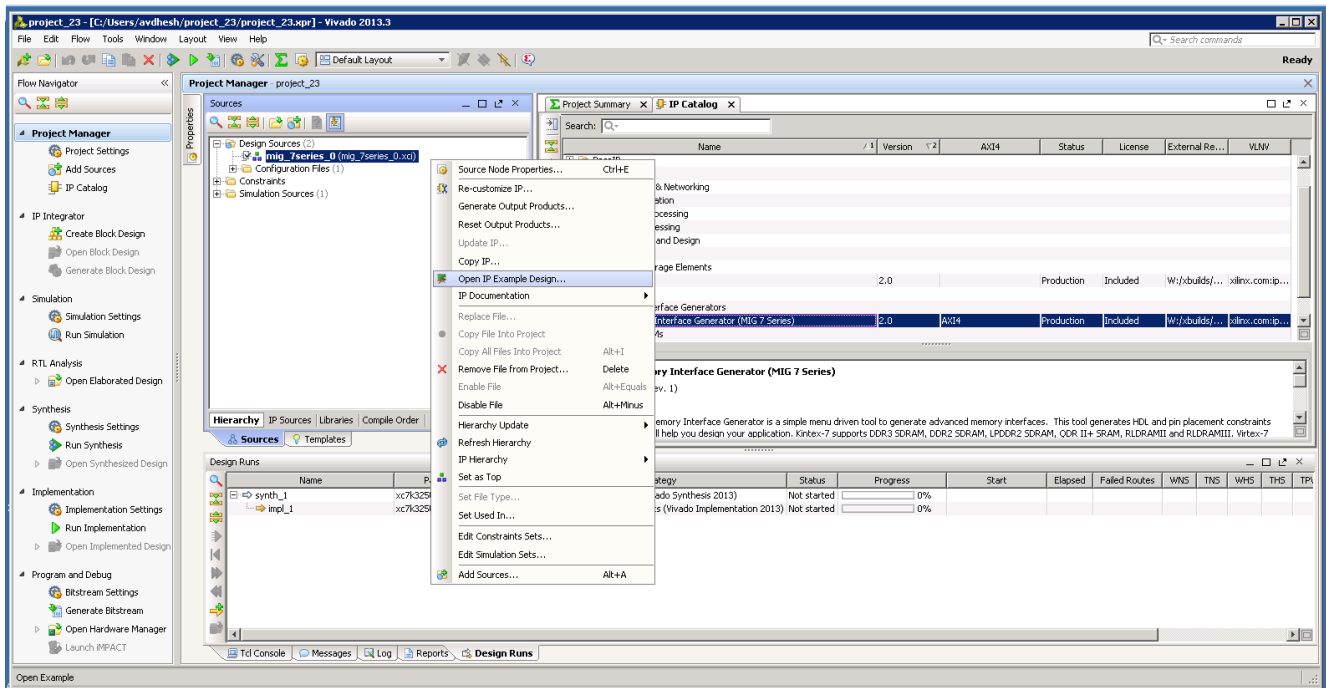


Figure 4-34: Open IP Example Design

10. This option creates a new Vivado project. Selecting the menu brings up a dialog box, which guides you to the directory for a new design project. Select a directory (or use the defaults) and click **OK**.

This launches a new Vivado project with all example design files and a copy of the IP. This project has `example_top` as the Implementation top directory, and `sim_tb_top` as the Simulation top directory, as shown in Figure 4-35.

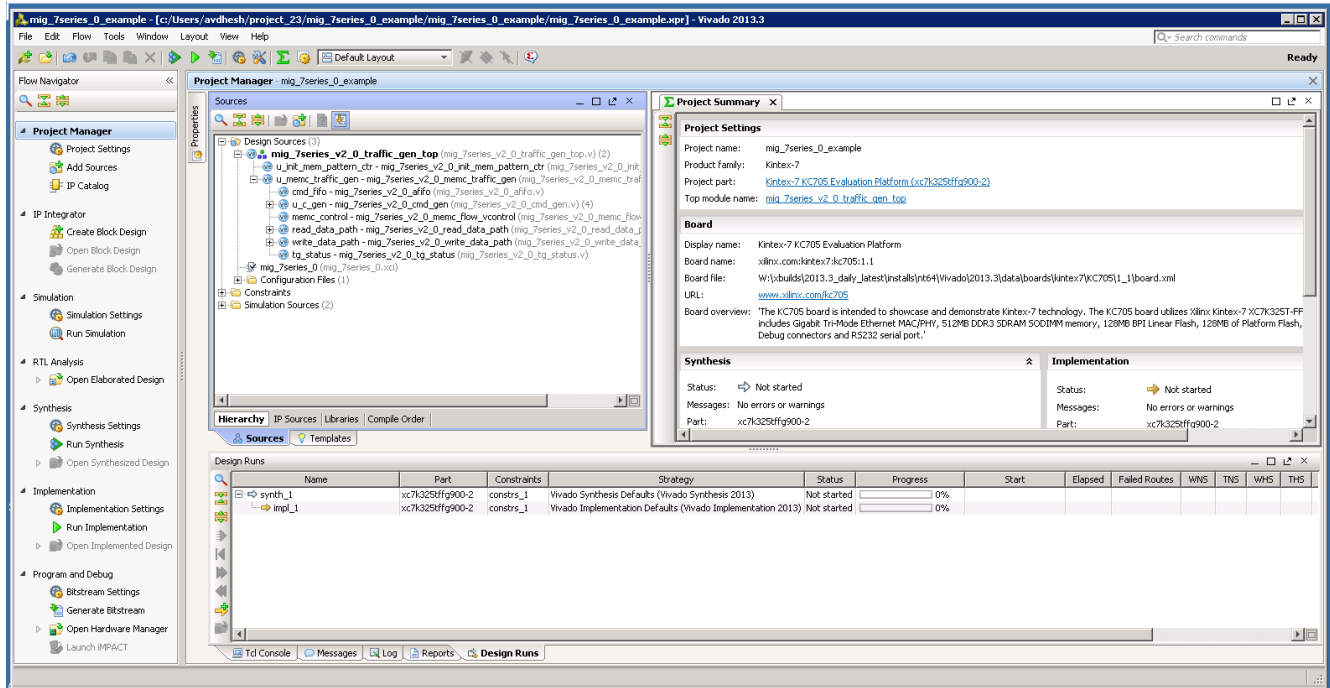


Figure 4-35: Example Design Project

- Click **Generate Bitstream** under **Project Manager > Program and Debug** to generate the BIT file for the generated design.

The <project directory>/<project directory>.runs/ impl_1 directory includes all report files generated for the project after running the implementation. It is also possible to run the simulation in this project.

- Recustomization of the MIG IP core can be done by using the **Recustomize IP** option. It is not recommended to recustomize the IP in the example_design project. The correct solution is to close the example_design project, go back to original project and customize there. Right-click the XCI file and click **Recustomize IP** (Figure 4-36) to open the MIG GUI and regenerate the design with the preferred options.

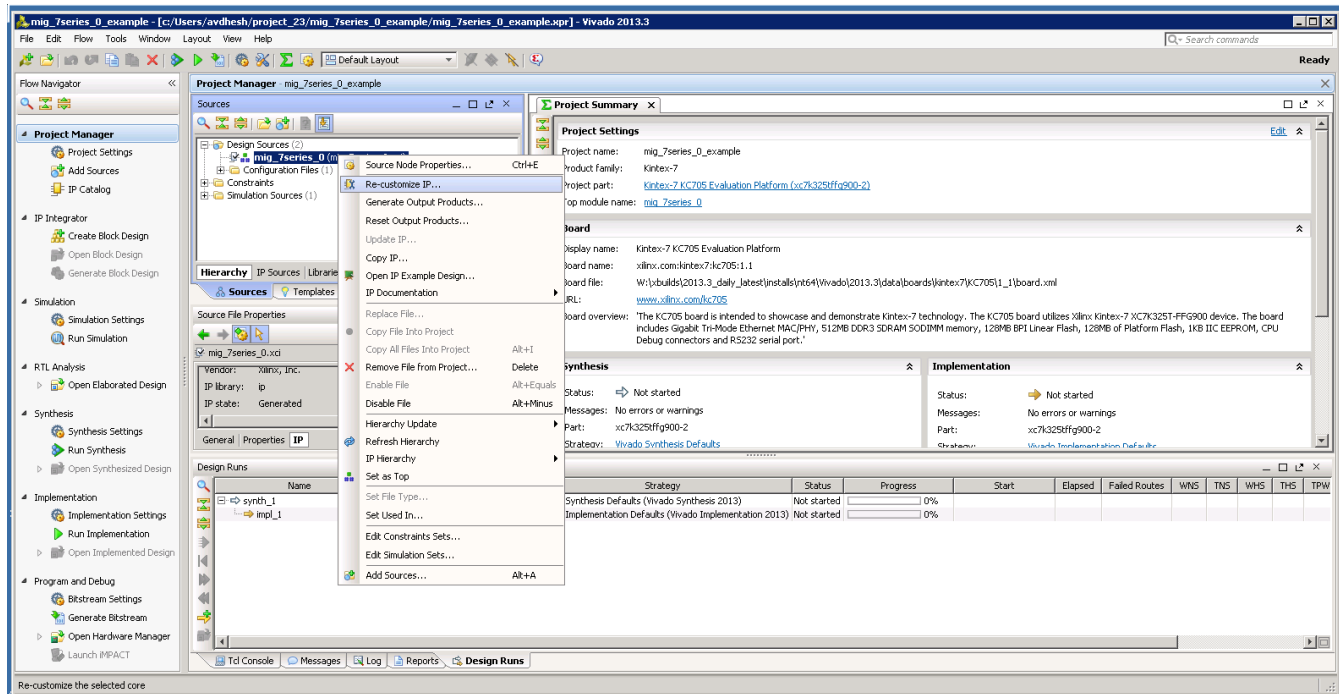


Figure 4-36: Recustomize IP


Directory Structure and File Descriptions

Output Directory Structure

The MIG tool outputs are generated with folder name `<component name>`.

The output directory structure of the selected Memory Controller (MC) design from the MIG tool is shown here. In the `<component name>` directory, three folders are created:

- docs
- example_design
- user_design

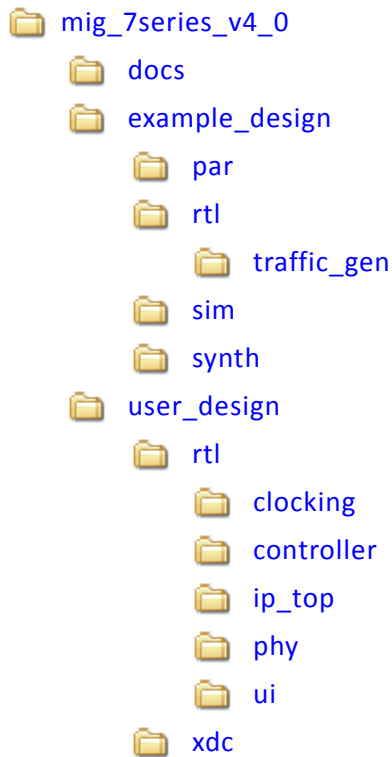

Directory and File Contents

The 7 series FPGAs core directories and their associated files are listed in this section for Vivado implementations.

<component name>/example_design/

The example_design folder contains four folders, namely, par, rtl, sim, and synth.

example_design/rtl

This directory contains the example design (Table 4-1).

Table 4-1: Files in example_design/rtl Directory

Name	Description
example_top.v	This top-level module serves as an example for connecting the user design to the 7 series FPGAs memory interface core.

example_design/rtl/traffic_gen

This directory contains the traffic generator that provides the stimulus to the 7 series FPGAs Memory Controller (Table 4-2).

Table 4-2: Files in example_design/rtl/traffic_gen Directory

Name ⁽¹⁾	Description
memc_traffic_gen.v	This is the top-level of the traffic generator.
cmd_gen.v	This is the command generator. This module provides independent control of generating the types of commands, addresses, and burst lengths.
cmd_prbs_gen.v	This is a pseudo-random binary sequence (PRBS) generator for generating PRBS commands, addresses, and burst lengths.
memc_flow_vcontrol.v	This module generates flow control logic between the Memory Controller core and the cmd_gen, read_data_path, and write_data_path modules.
read_data_path.v	This is the top-level for the read datapath.
read_posted_fifo.v	This module stores the read command that is sent to the Memory Controller, and its FIFO output is used to generate expect data for read data comparisons.
rd_data_gen.v	This module generates timing control for reads and ready signals to memc_flow_vcontrol.v.
write_data_path.v	This is the top-level for the write datapath.
wr_data_g.v	This module generates timing control for writes and ready signals to memc_flow_vcontrol.v.
s7ven_data_gen.v	This module generates different data patterns.
a_fifo.v	This is a synchronous FIFO using LUT RAMs.
data_prbs_gen.v	This is a 32-bit linear feedback shift register (LFSR) for generating PRBS data patterns.
init_mem_pattern_ctr.v	This module generates flow control logic for the traffic generator.
traffic_gen_top.v	This module is the top-level of the traffic generator and comprises the memc_traffic_gen and init_mem_pattern_ctr modules.

Notes:

1. All file names are prefixed with the MIG version number. For example, the MIG 4.0 release module name of cmd_gen in generated output is now mig_7series_v4_0_cmd_gen.

<component name>/example_design/par

Table 4-3 lists the modules in the example_design/par directory.

Table 4-3: Files in example_design/par Directory

Name	Description
example_top.xdc	This is the XDC for the core and the example design.

<component name>/example_design/sim

Table 4-4 lists the modules in the example_design/sim directory.

Table 4-4: Files in example_design/sim Directory

Name	Description
mobile_ddr2_model.v	These are the LPDDR2 SDRAM models.
mobile_ddr2_model_parameters.vh	These files contain the LPDDR2 SDRAM model parameter setting.
ies_run.sh ⁽¹⁾	Linux Executable file for simulating the design using IES simulator.
vcs_run.sh ⁽¹⁾	Linux Executable file for simulating the design using VCS simulator.
readme.txt ⁽¹⁾	Contains the details and prerequisites for simulating the designs using QuestaSim, IES, and VCS simulators.
sim_tb_top.v	This is the simulation top file.

Notes:

1. The ies_run.sh and vcs_run.sh files are generated in the folder mig_7series_0_example/mig_7series_0_example.srscs/sim_1/imports/sim when the example design is created using **Open IP Example Design** for the design generated with **Component Name** entered in Vivado IDE as mig_7series_0.

<component name>/user_design

The user_design folder contains the following:

- rtl and xdc folders
- Top-level wrapper module <component_name>.v/vhd
- Top-level modules <component_name>_mig.v/vhd and <component_name>_mig_sim.v/vhd

The top-level wrapper file <component_name>.v/vhd has an instantiation of top-level file <component_name>_mig.v/vhd. Top-level wrapper file has no parameter declarations and all the port declarations are of fixed width.

Top-level files <component_name>_mig.v/vhd and <component_name>_mig_sim.v/vhd have the same module name as <component_name>_mig. These two files are same in all respects except that the file <component_name>_mig_sim.v/vhd has parameter values set for simulation where calibration is in fast mode viz., SIM_BYPASS_INIT_CAL = "FAST" etc.



IMPORTANT: The top-level file <component_name>_mig.v/vhd is used for design synthesis and implementation, whereas the top-level file <component_name>_mig_sim.v/vhd is used in simulations.

The top-level wrapper file serves as an example for connecting the `user_design` to the 7 series FPGA memory interface core.

user_design/rtl/clocking

This directory contains the user design (Table 4-5).

Table 4-5: Modules in user_design/rtl/clocking Directory

Name ⁽¹⁾	Description
clk_ibuf.v	This module instantiates the input clock buffer.
iodelay_ctrl.v	This module instantiates IDELAYCNTRL primitives needed for IDELAY use.
infrastructure.v	This module helps in clock generation and distribution, and reset synchronization.

Notes:

1. All file names are prefixed with the MIG version number. For example, for the MIG 4.0 release module name of `clk_ibuf` in generated output is now `mig_7series_v4_0_clk_ibuf`.

user_design/rtl/controller

This directory contains the Memory Controller that is instantiated in the example design (Table 4-6).

Table 4-6: Modules in user_design/rtl/controller Directory

Name ⁽¹⁾	Description
arb_mux.v	This is the top-level module of arbitration logic.
arb_row_col.v	This block receives requests to send row and column commands from the bank machines and selects one request, if any, for each state.
arb_select.v	This module selects a row and column command from the request information provided by the bank machines.
bank_cntrl.v	This structural block instantiates the three subblocks that comprise the bank machine.
bank_common.v	This module computes various items that cross all of the bank machines.
bank_compare.v	This module stores the request for a bank machine.
bank_mach.v	This is the top-level bank machine block.
bank_queue.v	This is the bank machine queue controller.
bank_state.v	This is the primary bank state machine.
col_mach.v	This module manages the DQ bus.
mc.v	This is the top-level module of the Memory Controller.
mem_intf.v	This top-level memory interface block instantiates the controller and the PHY.
rank_cntrl.v	This module manages various rank-level timing parameters.

Table 4-6: Modules in user_design/rtl/controller Directory (Cont'd)

Name ⁽¹⁾	Description
rank_common.v	This module contains logic common to all rank machines. It contains a clock prescaler and arbiters for refresh and periodic read.
rank_mach.v	This is the top-level rank machine structural block.
round_robin_arb.v	This is a simple round-robin arbiter.

Notes:

1. All file names are prefixed with the MIG version number. For example, for the MIG 4.0 release module name of arb_mux in generated output is now mig_7series_v4_0_arb_mux.

user_design/rtl/ip_top

This directory contains the user design (Table 4-7).

Table 4-7: Modules in user_design/rtl/ip_top Directory

Name ⁽¹⁾	Description
mem_intf.v	This is the top-level memory interface block that instantiates the controller and the PHY.
memc_ui_top.v	This is the top-level Memory Controller module.

Notes:

1. All file names are prefixed with the MIG version number. For example, for the MIG 4.0 release module name of mem_intf in generated output is now mig_7series_v4_0_mem_intf.

user_design/rtl/phy

This directory contains the 7 series FPGA memory interface PHY implementation (Table 4-8).

Table 4-8: Modules in user_design/rtl/phy Directory

Name ⁽¹⁾	Description
ddr_byte_group_io	This module contains the parameterizable I/O logic instantiations and the I/O terminations for a single byte lane.
ddr_byte_lane	This module contains the primitive instantiations required within an output or input byte lane.
ddr_calib_top	This is the top-level module for the memory physical layer interface.
ddr_mc_phy	This module is a parameterizable wrapper instantiating up to three I/O banks, each with 4-lane PHY primitives.
ddr_mc_phy_wrapper	This wrapper file encompasses the MC_PHY module instantiation and handles the vector remapping between the MC_PHY ports and your LPDDR2 ports.
ddr_of_pre_fifo	This module extends the depth of a PHASER OUT_FIFO up to four entries.
ddr_phy_4lanes	This module is the parameterizable 4-lane PHY in an I/O bank.
ddr_phy_init_lpddr2	This module contains the memory initialization and overall master state control during initialization and calibration.

Table 4-8: Modules in user_design/rtl/phy Directory (Cont'd)

Name ⁽¹⁾	Description
ddr_phy_rdlvl	This module contains the Read leveling Stage1 calibration logic.
ddr_phy_top	This is the top-level module for the physical layer.
ddr_phy_wrlvl_off_delay.v	This module sets up the command and write datapath delays.
ddr_bitslip.v	This module contains the shift registers and MUXes to compensate the bitslip and align the read data.
ddr_phy_pd.v	This module contains the Phase detector logic to compensate any drift over the voltage and temperature variations.
ddr_phy_pd_top.v	This module is the top instance of phy_pd. This is used to instantiate Phase detector based on different calibration mode of parallel or sequential detection.
ddr_phy_prbs_rdlvl.v	This module contains calibration logic to perform data valid window detection and capture clock alignment using PRBS data pattern.

Notes:

1. All file names are prefixed with the MIG version number. For example, for the MIG 4.0 release module name of ddr_byte_group_io in generated output is now mig_7series_v4_0_ddr_byte_group_io.

user_design/rtl/ui

This directory contains the user interface code that mediates between the native interface of the Memory Controller and user applications (Table 4-9).

Table 4-9: Modules In user_design/rtl/ui Directory

Name ⁽¹⁾	Description
ui_cmd.v	This is the user interface command port.
ui_rd_data.v	This is the user interface read buffer. It reorders read data returned from the Memory Controller back to the request order.
ui_wr_data.v	This is the user interface write buffer.
ui_top.v	This is the top-level of the Memory Controller user interface.

Notes:

1. All file names are prefixed with the MIG version number. For example, for the MIG 4.0 release module name of ui_cmd in generated output is now mig_7series_v4_0_ui_cmd.

<component name>/user_design/xdc

Table 4-10 lists the modules in the user_design/xdc directory.

Table 4-10: Modules in user_design/xdc Directory

Name	Description
<component_name>.xdc	This is the XDC for the core and the user design.

Verify Pin Changes and Update Design

This feature verifies the input XDC for bank selections, byte selections, and pin allocation. It also generates errors and warnings in a separate dialog box when you click **Validate** on the page. This feature is useful to verify the XDC for any pinout changes made after the design is generated from the MIG tool. You must load the MIG generated .prj file, the original .prj file without any modifications, and the XDC that needs to be verified. In the Vivado tool, the Re-customize IP option should be selected to reload the project. The design is allowed to generate only when the MIG DRC is met. Ignore warnings about validating the pinout, which is the intent. Just validating the XDC is not sufficient; it is mandatory to proceed with design generation to get the XDC with updated clock and phaser related constraints and RTL top-level module for various updated Map parameters.

The Update Design feature is required in the following scenarios:

- A pinout is generated using an older version of MIG and the design is to be revised to the current version of MIG. In MIG the pinout allocation algorithms have been changed for certain MIG designs.
- A pinout is generated independent of MIG or is modified after the design is generated. When a design is generated from MIG, the XDC and HDL code are generated with the correct constraints.

Here are the rules verified from the input XDC:

- If a pin is allocated to more than one signal, the tool reports an error. Further verification is not done if the XDC does not adhere to the uniqueness property.
- Verified common rules:
 - The interface can span across a maximum of three consecutive banks.
 - Interface banks should reside in the same column of the FPGA.
 - Interface banks should be either High Performance (HP) or High Range (HR). HP banks are used for the high frequencies.
 - The chosen interface banks should have the same SLR region if the chosen device is of stacked silicon interconnect technology.
 - V_{REF} I/Os should be used as GPIOs when an internal V_{REF} is used or if there are no inout and input ports in a bank.
 - The I/O standard of each signal is verified as per the configuration chosen.
 - The VCCAUX I/O of each signal is verified and provides a warning message if the provided VCCAUX I/O is not valid.
- Verified data pin rules:
 - Pins related to one strobe set should reside in the same byte group.
 - The strobe pair (DQS) should be allocated to the DQS I/O pair.

- An FPGA byte lane should not contain pins related to two different strobe sets.
- V_{REF} I/O can be used only when the internal V_{REF} is chosen.
- Verified address pin rules:
 - Address signals cannot mix with data bytes.
 - It can use any number of isolated byte lanes.
 - Memory clock pins should be allocated to DQS I/O only.
 - Except memory clock pins, any other Address/Control pin should not be allocated to DQS.
- Verified system pin rules:
 - System clock:
 - These pins should be allocated to either SR/MR CC I/O pair.
 - These pins must be allocated in the Memory banks column.
 - If the selected system clock type is single-ended, you need to check whether the reference voltage pins are unallocated in the bank or the internal V_{REF} is used.
 - Reference clock:
 - These pins should be allocated to either SR/MR CC I/O pair.
 - If the selected system clock type is single-ended, you need to check whether the reference voltage pins are unallocated in the bank or the internal V_{REF} is used.
 - Status signals:
 - The `sys_rst` signal should be allocated in the bank where the V_{REF} I/O is unallocated or the internal V_{REF} is used.
 - These signals should be allocated in the non-memory banks because the I/O standard is not compatible. The I/O standard type should be LVCMOS with at least 1.8V.
 - These signals can be allocated in any of the columns (there is no hard requirement because these signals should reside in a memory column); however, it is better to allocate closer to the chosen memory banks.

Quick Start Example Design

Overview

After the core is successfully generated, the example design HDL can be processed through the Xilinx implementation toolset.

Simulating the Example Design (for Designs with the Standard User Interface)

The MIG tool provides a synthesizable test bench to generate various traffic data patterns to the Memory Controller (MC). This test bench consists of a `memc_ui_top` wrapper, a `traffic_generator` that generates traffic patterns through the user interface to a `ui_top` core, and an infrastructure core that provides clock resources to the `memc_ui_top` core. A block diagram of the example design test bench is shown in Figure 4-37.

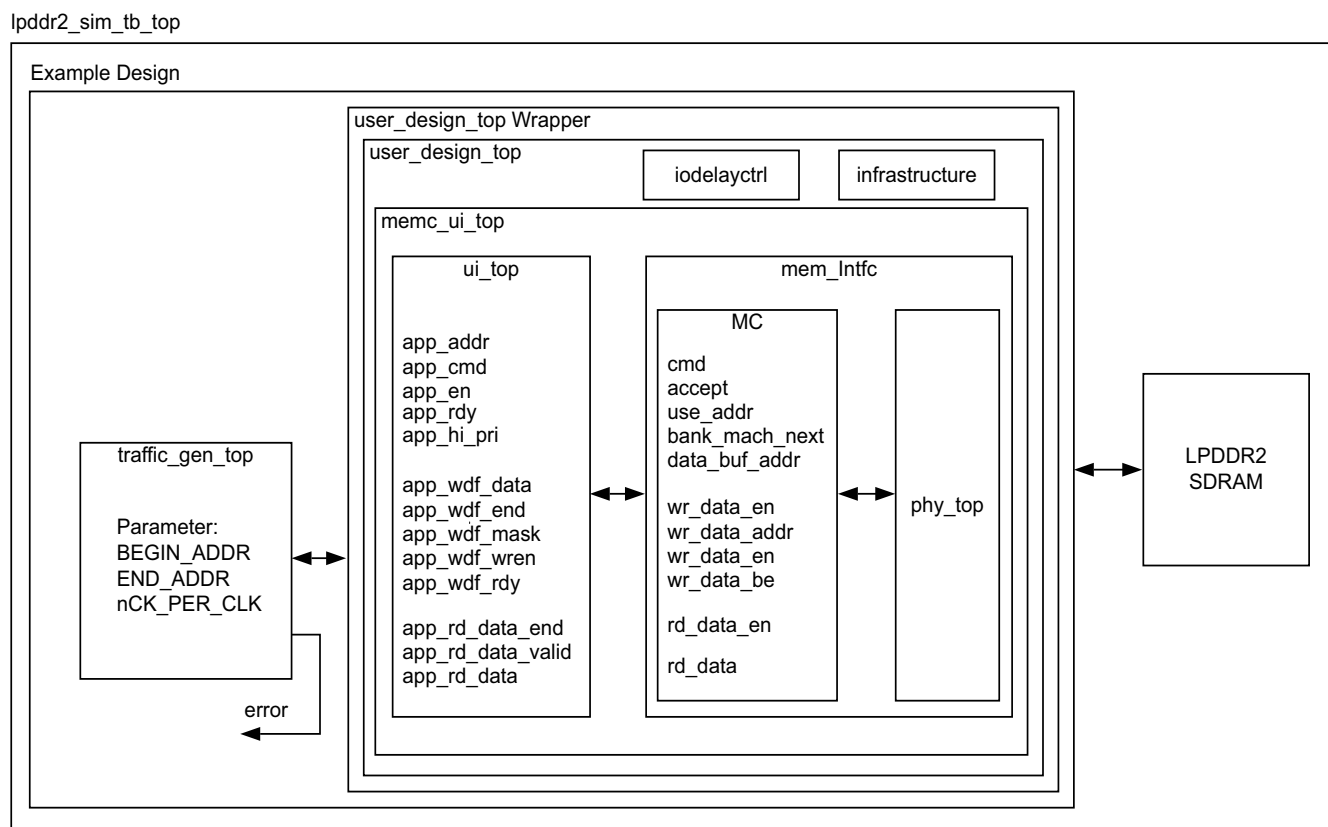


Figure 4-37: Synthesizable Example Design Block Diagram

Figure 4-38 shows the simulation result of a simple read and write transaction between the `tb_top` and `memc_intf` modules.

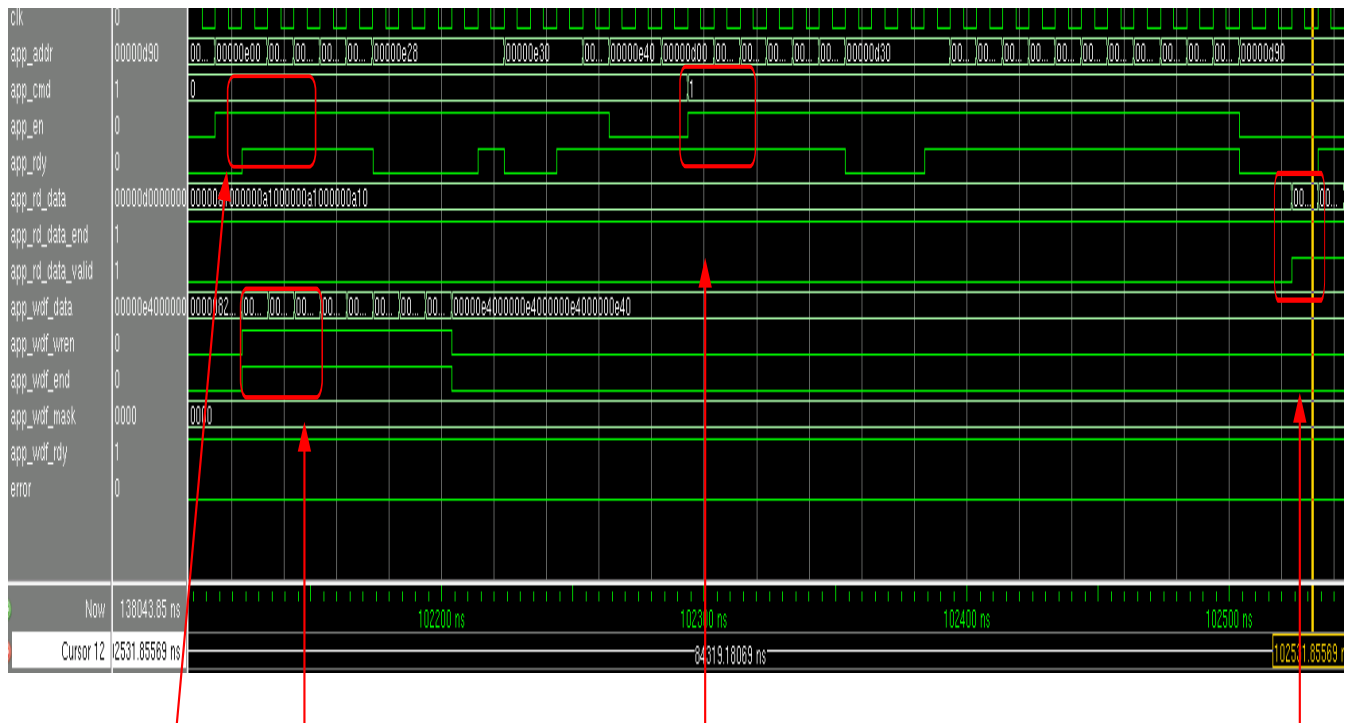


Figure 4-38: User Interface Read and Write Cycle

Traffic Generator Operation

The traffic generator module contained within the synthesizable test bench can be parameterized to create various stimulus patterns for the memory design. It can produce repetitive test patterns for verifying design integrity as well as pseudo-random data streams that model real-world traffic.

You can define the address range through the `BEGIN_ADDRESS` and `END_ADDRESS` parameters. The Init Memory Pattern Control block directs the traffic generator to step sequentially through all the addresses in the address space, writing the appropriate data value to each location in the memory device as determined by the selected data pattern. By default, the test bench uses the address as the data pattern, but the data pattern in this example design can be modified using `vio_data_mode` signals that can be modified within the Vivado logic analyzer feature.

When the memory has been initialized, the traffic generator begins stimulating the user interface port to create traffic to and from the memory device. By default, the traffic generator sends pseudo-random commands to the port, meaning that the instruction sequences (R/W, R, W) and addresses are determined by PRBS generator logic in the traffic generator module.

The read data returning from the memory device is accessed by the traffic generator through the user interface read data port and compared against internally generated “expect” data. If an error is detected (that is, there is a mismatch between the read data and expected data), an error signal is asserted and the readback address, readback data, and expect data are latched into the error_status outputs.

Modifying the Example Design

The provided example_top design comprises traffic generator modules and can be modified to tailor different command and data patterns. A few high-level parameters can be modified in the example_top.v/vhd module. Table 4-11 describes these parameters.

Table 4-11: Traffic Generator Parameters Set in the example_top Module

Parameter	Description	Value
FAMILY	Indicates the family type.	“VIRTEX7”
MEMORY_TYPE	Indicate the Memory Controller type.	“LPDDR2”
nCK_PER_CLK	This is the Memory Controller clock to DRAM clock ratio. This parameter should not be changed.	2
NUM_DQ_PINS	The is the total memory DQ bus width.	This parameter supports DQ widths from 8 to a maximum of 72 in increments of 8. The available maximum DQ width is frequency dependent on the selected memory device.
MEM_BURST_LEN	This is the memory data burst length.	This must be set to 8.
MEM_COL_WIDTH	This is the number of memory column address bits.	This option is based on the selected memory device.
DATA_WIDTH	This is the user interface data bus width.	For nCK_PER_CLK = 4, DATA_WIDTH = NUM_DQ_PINS × 8.
ADDR_WIDTH	This is the memory address bus width. It is equal to RANK_WIDTH + BANK_WIDTH + ROW_WIDTH + COL_WIDTH.	
MASK_SIZE	This parameter specifies the mask width in the user interface data bus.	
PORT_MODE	Sets the port mode.	BI_MODE: Generate a WRITE data pattern and monitor the READ data for comparison.
BEGIN_ADDRESS	Sets the memory start address boundary.	This parameter defines the start boundary for the port address space. The least-significant Bits[3:0] of this value are ignored.

Table 4-11: Traffic Generator Parameters Set in the example_top Module (Cont'd)

Parameter	Description	Value
END_ADDRESS	Sets the memory end address boundary.	This parameter defines the end boundary for the port address space. The least-significant Bits[3:0] of this value are ignored.
PRBS_EADDR_MASK_POS	Sets the 32-bit AND MASK position.	This parameter is used with the PRBS address generator to shift random addresses down into the port address space. The END_ADDRESS value is ANDed with the PRBS address for bit positions that have a 1 in this mask.
PRBS_SADDR_MASK_POS	Sets the 32-bit OR MASK position.	This parameter is used with the PRBS address generator to shift random addresses up into the port address space. The START_ADDRESS value is ORed with the PRBS address for bit positions that have a 1 in this mask
CMD_PATTERN	This parameter sets the command pattern circuits to be generated. For a larger device, the CMD_PATTERN can be set to "CGEN_ALL." This parameter enables all supported command pattern circuits to be generated. However, it is sometimes necessary to limit a specific command pattern because of limited resources in a smaller device.	Valid settings for this signal are: <ul style="list-style-type: none"> CGEN_FIXED: The address, burst length, and instruction are taken directly from the fixed_addr_i, fixed_bl_i, and fixed_instr_i inputs. CGEN_SEQUENTIAL: The address is increased sequentially, and the increment is determined by the data port size. CGEN_PRBS: A 32-stage Linear Feedback Shift register (LFSR) generates pseudo-random addresses, burst lengths, and instruction sequences. The seed can be set from the 32-bit cmd_seed input. CGEN_ALL (default): This option powers on all of the options above and allows addr_mode_i, instr_mode_i, and bl_mode_i to select the type of generation during run time.

Table 4-11: Traffic Generator Parameters Set in the example_top Module (Cont'd)

Parameter	Description	Value
DATA_PATTERN	This parameter sets the data pattern circuits to be generated through RTL logic. For larger devices, the DATA_PATTERN can be set to "DGEN_ALL," enabling all supported data pattern circuits to be generated. In hardware, the data pattern is selected and/or changed using vio_data_value_mode. The pattern can only be changed when DATA_PATTERN is set to DGEN_ALL.	<p>Valid settings for this parameter are:</p> <ul style="list-style-type: none"> • ADDR (default): The address is used as a data pattern. • HAMMER: All 1s are on the DQ pins during the rising edge of DQS, and all 0s are on the DQ pins during the falling edge of DQS. • WALKING1: Walking 1s are on the DQ pins and the starting position of 1 depends on the address value. • WALKING0: Walking 0s are on the DQ pins and the starting position of 0 depends on the address value. • NEIGHBOR: The Hammer pattern is on all DQ pins except one. The address determines the exception pin location. • PRBS: A 32-stage LFSR generates random data and is seeded by the starting address. • DGEN_ALL: This option turns on all available options: <ul style="list-style-type: none"> 0x1: FIXED – 32 bits of fixed_data. 0x2: ADDRESS – 32 bits address as data. 0x3: HAMMER 0x4: SIMPLE8 – Simple 8 data pattern that repeats every 8 words. 0x5: WALKING1s – Walking 1s are on the DQ pins. 0x6: WALKING0s – Walking 0s are on the DQ pins. 0x7: PRBS – A 32-stage LFSR generates random data. 0x9: SLOW HAMMER – This is the slow MHz hammer data pattern. 0xA: PHY_CALIB pattern – 0xFF, 00, AA, 55, 55, AA, 99, 66. This mode only generates READ commands at address zero.
CMDS_GAP_DELAY	This parameter allows pause delay between each user burst command.	Valid values: 0 to 32.
SEL_VICTIM_LINE	Select a victim DQ line whose state is always at logic High.	<p>This parameter only applies to the Hammer pattern. Valid settings for this parameter are 0 to NUM_DQ_PINS.</p> <p>When value = NUM_DQ_PINS, all DQ pins have the same Hammer pattern.</p>

Table 4-11: Traffic Generator Parameters Set in the example_top Module (Cont'd)

Parameter	Description	Value
EYE_TEST	Force the traffic generator to only generate writes to a single location, and no read transactions are generated.	Valid settings for this parameter are "TRUE" and "FALSE." When set to "TRUE," any settings in vio_instr_mode_value are overridden.

Notes:

1. The traffic generator might support more options than are available in the 7 series Memory Controller. The settings must match supported values in the Memory Controller.

The command patterns `instr_mode_i`, `addr_mode_i`, `bl_mode_i`, and `data_mode_i` of the `traffic_gen` module can each be set independently. The provided `init_mem_pattern_ctr` module has interface signals that allow you to modify the command pattern in real-time using the Vivado logic analyzer feature virtual I/O (VIO).

This is the varying command pattern:

1. Set `vio_modify_enable` to 1.
2. Set `vio_addr_mode_value` to:
 - 1: Fixed_address.
 - 2: PRBS address.
 - 3: Sequential address.
3. Set `vio_bl_mode_value` to:
 - 1: Fixed bl.
 - 2: PRBS bl. If `bl_mode` value is set to 2, the `addr_mode` value is forced to 2 to generate the PRBS address.
4. Set `vio_data_mode_value` to:
 - 0: Reserved.
 - 1: FIXED data mode. Data comes from the `fixed_data_i` input bus.
 - 2: DGEN_ADDR (default). The address is used as the data pattern.
 - 3: DGEN_HAMMER. All 1s are on the DQ pins during the rising edge of DQS, and all 0s are on the DQ pins during the falling edge of DQS.
 - 4: DGEN_NEIGHBOR. All 1s are on the DQ pins during the rising edge of DQS except one pin. The address determines the exception pin location.

5: DGEN_WALKING1. Walking 1s are on the DQ pins. The starting position of 1 depends on the address value.

6: DGEN_WALKING0. Walking 0s are on the DQ pins. The starting position of 0 depends on the address value.

7: DGEN_PRBS. A 32-stage LFSR generates random data and is seeded by the starting address. This data mode only works with PRBS address mode or Sequential address mode.

Modifying Port Address Space

The address space for a port can be modified by changing the BEGIN_ADDRESS and END_ADDRESS parameters found in the top-level test bench file. These two values must be set to align to the port data width. The two additional parameters, PRBS_SADDR_MASK_POS and PRBS_EADDR_MASK_POS, are used in the default PRBS address mode to ensure that out-of-range addresses are not sent to the port. PRBS_SADDR_MASK_POS creates an OR mask that shifts PRBS-generated addresses with values below BEGIN_ADDRESS up into the valid address space of the port.

PRBS_SADDR_MASK_POS should be set to a 32-bit value equal to the BEGIN_ADDRESS parameter. PRBS_EADDR_MASK_POS creates an AND mask that shifts PRBS-generated addresses with values above END_ADDRESS down into the valid address space of the port. PRBS_EADDR_MASK_POS should be set to a 32-bit value, where all bits above the most-significant address bit of END_ADDRESS are set to 1 and all remaining bits are set to 0. Table 4-12 shows some examples of setting the two mask parameters.

Table 4-12: Example Settings for Address Space and PRBS Masks

SADDR	EADDR	PRBS_SADDR_MASK_POS	PRBS_EADDR_MASK_POS
0x1000	0xFFFF	0x00001000	0xFFFF0000
0x2000	0xFFFF	0x00002000	0xFFFF0000
0x3000	0xFFFF	0x00003000	0xFFFF0000
0x4000	0xFFFF	0x00004000	0xFFFF0000
0x5000	0xFFFF	0x00005000	0xFFFF0000
0x2000	0x1FFF	0x00002000	0xFFFFE000
0x2000	0x2FFF	0x00002000	0xFFFFD000
0x2000	0x3FFF	0x00002000	0xFFFFC000
0x2000	0x4FFF	0x00002000	0xFFFF8000
0x2000	0x5FFF	0x00002000	0xFFFF8000
0x2000	0x6FFF	0x00002000	0xFFFF8000
0x2000	0x7FFF	0x00002000	0xFFFF8000
0x2000	0x8FFF	0x00002000	0xFFFF0000
0x2000	0x9FFF	0x00002000	0xFFFF0000

Table 4-12: Example Settings for Address Space and PRBS Masks (Cont'd)

SADDR	EADDR	PRBS_SADDR_MASK_POS	PRBS_EADDR_MASK_POS
0x2000	0xAFFF	0x00002000	0xFFFF0000
0x2000	0xBFFF	0x00002000	0xFFFF0000
0x2000	0xCFFF	0x00002000	0xFFFF0000
0x2000	0xDFFF	0x00002000	0xFFFF0000
0x2000	0xEFFF	0x00002000	0xFFFF0000
0x2000	0xFFFF	0x00002000	0xFFFF0000

Traffic Generator Signal Description

Traffic generator signals are described in [Table 4-13](#).

Table 4-13: Traffic Generator Signal Descriptions

Signal Name	Direction	Description
clk_i	Input	This signal is the clock input.
memc_init_done	Input	This is the input status signal from the Memory Controller to indicate that it is ready accept traffic.
manual_clear_error	Input	Input signal to clear error flag.
memc_cmd_addr_o[31:0]	Output	Start address for current transaction.
memc_cmd_en_o	Output	This active-High signal is the write-enable signal for the Command FIFO.
memc_cmd_full_i	Input	This connects to inversion of app_rdy of Memory Controller. When this input signal is asserted, TG continues to assert the memc_cmd_en_o, memc_cmd_addr_o value and memc_cmd_instr until the memc_cmd_full_i is deasserted.
memc_cmd_instr[2:0]	Output	Command code for current instruction. Command Write: 3'b000 Command Read: 3'b001
memc_rd_data_i[DWIDTH – 1:0]	Input	Read data value returning from memory.
memc_rd_empty_i	Input	This active-High signal is the empty flag for the Read Data FIFO in Memory Controller. It indicates there is no valid data in the FIFO.
memc_rd_en_o	Output	This signal is only used in MCB-like interface.
memc_wr_data_o[DWIDTH – 1:0]	Output	Write data value to be loaded into Write Data FIFO in Memory Controller.
memc_wr_en_o	Output	This active-High signal is the write enable for the Write Data FIFO. It indicates that the value on memc_wr_data is valid.
memc_wr_full_i	Input	This active-High signal is the full flag for the Write Data FIFO from Memory Controller. When this signal is High, TG holds the write data value and keeps assertion of memc_wr_en until the memc_wr_full_i goes Low.
qdr_wr_cmd_o	Output	This signal is only used to send write commands to the QDR II+ user interface.

Table 4-13: Traffic Generator Signal Descriptions (Cont'd)

Signal Name	Direction	Description
vio_modify_enable	Input	Allow vio_xxxx_mode_value to alter traffic pattern.
vio_data_mode_value[3:0]	Input	<p>Valid settings for this signal are:</p> <ul style="list-style-type: none"> 0x0: Reserved. 0x1: FIXED – 32 bits of fixed_data as defined through fixed_data_i inputs. 0x2: ADDRESS – 32 bits address as data. Data is generated based on the logical address space. If a design has a 256-bit user data bus, each write beat in the user bus would have a 256/8 address increment in byte boundary. If the starting address is 1,300, the data is 1,300, followed by 1,320 in the next cycle. To simplify the logic, the user data pattern is a repeat of the increment of the address value Bits[31:0]. 0x3: HAMMER – All 1s are on DQ pins during the rising edge of DQS, and all 0s are on the DQ pins during the falling edge of DQS, except the VICTIM line as defined in the parameter "SEL_VICTIM_LINE." This option is only valid if parameter DATA_PATTERN = "DGEN_HAMMER" or "DGEN_ALL." 0x4: SIMPLE8 – Simple 8 data pattern that repeats every 8 words. The patterns can be defined by the "simple_datax" inputs. 0x5: WALKING1s – Walking 1s are on the DQ pins. The starting position of 1 depends on the address value. This option is only valid if the parameter DATA_PATTERN = "DGEN_WALKING" or "DGEN_ALL." 0x6: WALKING0s – Walking 0s are on the DQ pins. The starting position of 0 depends on the address value. This option is only valid if the parameter DATA_PATTERN = "DGEN_WALKING0" or "DGEN_ALL." 0x7: PRBS – A 32-stage LFSR generates random data and is seeded by the starting address. This option is only valid if the parameter DATA_PATTERN = "DGEN_PRBS" or "DGEN_ALL." 0x9: SLOW HAMMER – This is the slow MHz hammer data pattern. 0xA: PHY_CALIB pattern – 0xFF, 00, AA, 55, 55, AA, 99, 66. This mode only generates READ commands at address zero. This is only valid in the Virtex®-7 family.
vio_addr_mode_value[2:0]	Input	<p>Valid settings for this signal are:</p> <ul style="list-style-type: none"> 0x1: FIXED address mode. The address comes from the fixed_addr_i input bus. With FIXED address mode, the data_mode is limited to the fixed_data_input. No PRBS data pattern is generated. 0x2: PRBS address mode (Default). The address is generated from the internal 32-bit LFSR circuit. The seed can be changed through the cmd_seed input bus. 0x3: SEQUENTIAL address mode. The address is generated from the internal address counter. The increment is determined by the user interface port width.

Table 4-13: Traffic Generator Signal Descriptions (Cont'd)

Signal Name	Direction	Description
vio_instr_mode_value[3:0]	Input	Valid settings for this signal are: <ul style="list-style-type: none"> • 0x1: Command type (read/write) as defined by fixed_instr_i. • 0x2: Random read/write commands. • 0xE: Write only at address zero. • 0xF: Read only at address zero.
vio_bl_mode_value[3:0]	Input	Valid settings for this signal are: <ul style="list-style-type: none"> • 0x1: Fixed burst length as defined in the fixed_bl_i inputs. • 0x2: The user burst length is generated from the internal PRBS generator. Each burst value defines the number of back-to-back commands that are generated.
vio_fixed_instr_value	Input	Valid settings are: <ul style="list-style-type: none"> • 0x0: Write instruction • 0x1: Read instruction
vio_fixed_bl_value	Input	Valid settings are 1 to 256.
vio_pause_traffic	Input	Pause traffic generation on-the-fly.
vio_data_mask_gen	Input	This mode is only used if the data mode pattern is address as data. If this is enabled, a random memc_wr_mask is generated after the memory pattern has been filled in memory. The write data byte lane is jammed with 8'hFF if the corresponding memc_write_mask is asserted.
cmp_data[DWIDTH – 1:0]	Output	Expected data to be compared with read back data from memory.
cmp_data_valid	Output	Compare data valid signal.
cmp_error	Output	This compare error flag asserts whenever cmp_data is not the same as the readback data from memory.
error	Output	This signal is asserted when the readback data is not equal to the expected value.
error_status[n:0]	Output	This signal latches these values when the error signal is asserted: <ul style="list-style-type: none"> • [31:0]: Read start address • [37:32]: Read burst length • [39:38]: Reserved • [40]: mcb_cmd_full • [41]: mcb_wr_full • [42]: mcb_rd_empty • [64 + (DWIDTH – 1):64]: expected_cmp_data • [64 + (2 × DWIDTH – 1):64 + DWIDTH]: read_data
simple_data0[31:0]	Input	User-defined simple data 0 for simple 8 repeat data pattern.
simple_data1[31:0]	Input	User-defined simple data 1 for simple 8 repeat data pattern.
simple_data2[31:0]	Input	User-defined simple data 2 for simple 8 repeat data pattern.
simple_data3[31:0]	Input	User-defined simple data 3 for simple 8 repeat data pattern.

Table 4-13: Traffic Generator Signal Descriptions (Cont'd)

Signal Name	Direction	Description
simple_data4[31:0]	Input	User-defined simple data 4 for simple 8 repeat data pattern.
simple_data5[31:0]	Input	User-defined simple data 5 for simple 8 repeat data pattern.
simple_data6[31:0]	Input	User-defined simple data 6 for simple 8 repeat data pattern.
simple_data7[31:0]	Input	User-defined simple data 7 for simple 8 repeat data pattern.
fixed_data_i[31:0]	Input	User-defined fixed data pattern.
fixed_instr_i[2:0]	Input	User-defined fixed command pattern. 000: Write command 001: Read command
fixed_bl_i[5:0]	Input	User-defined fixed burst length. Each burst value defines the number of back to back commands that are generated.

Memory Initialization and Traffic Test Flow

After power-up, the Init Memory Control block directs the traffic generator to initialize the memory with the selected data pattern through the memory initialization procedure.

Memory Initialization

1. The `data_mode_i` input is set to select the data pattern (for example, `data_mode_i[3:0] = 0010` for the address as the data pattern).
2. The `start_addr_i` input is set to define the lower address boundary.
3. The `end_addr_i` input is set to define the upper address boundary.
4. The `bl_mode_i` is set to 01 to get the burst length from the `fixed_bl_i` input.
5. The `fixed_bl_i` input is set to either 16 or 32.
6. The `instr_mode_i` is set to 0001 to get the instruction from the `fixed_instr_i` input.
7. The `fixed_instr_i` input is set to the "WR" command value of the memory device.
8. The `addr_mode_i` is set to 11 for the sequential address mode to fill up the memory space.
9. The `mode_load_i` is asserted for one clock cycle.

When the memory space is initialized with the selected data pattern, the Init Memory Control block instructs the traffic generator to begin running traffic through the traffic test flow procedure (by default, the `addr_mode_i`, `instr_mode_i`, and `bl_mode_i` inputs are set to select PRBS mode).

Traffic Test Flow

1. The `addr_mode_i` input is set to the desired mode (PRBS is the default).

2. The `cmd_seed_i` and `data_seed_i` input values are set for the internal PRBS generator. This step is not required for other patterns.
3. The `instr_mode_i` input is set to the desired mode (PRBS is the default).
4. The `bl_mode_i` input is set to the desired mode (PRBS is the default).
5. The `data_mode_i` input should have the same value as in the memory pattern initialization stage detailed in [Memory Initialization](#).
6. The `run_traffic_i` input is asserted to start running traffic.
7. If an error occurs during testing (for example, the read data does not match the expected data), the error bit is set until reset is applied.
8. Upon receiving an error, the `error_status` bus latches the values defined in [Table 4-13, page 563](#).

With some modifications, the example design can be changed to allow `addr_mode_i`, `instr_mode_i`, and `bl_mode_i` to be changed dynamically when `run_traffic_i` is deasserted. However, after changing the setting, the memory initialization steps need to be repeated to ensure that the proper pattern is loaded into the memory space.

Note:

- When the chip select option is disabled, the simulation test bench always ties the memory model chip select bit(s) to zero for proper operation.
- When the data mask option is disabled, the simulation test bench always ties the memory model data mask bit(s) to zero for proper operation.

Setting Up for Simulation

The Xilinx UNISIM library must be mapped into the simulator. The test bench provided with the example design supports these pre-implementation simulations:

- The test bench, along with vendor's memory model used in the example design
- The RTL files of the Memory Controller and the PHY core, created by the MIG tool

The QuestaSim, Vivado Simulator, IES, and VCS simulation tools are used for verification of the MIG IP core at each software release. Script files to run simulations with IES and VCS simulators are generated in MIG generated output. Simulations using QuestaSim and Vivado simulators can be done through the Vivado Tcl Console commands or in the Vivado IDE.



IMPORTANT: *Other simulation tools can be used for MIG IP core simulation but are not specifically verified by Xilinx.*

Simulation Flow Using IES and VCS Script Files

To run the simulation, go to this directory:

```
<project_dir>/<Component_Name>_example/<component  
name>_example.srcs/sim_1/imports/sim
```

For a project created with the name set as `project_1` and the Component Name entered in Vivado IDE as `mig_7series_0`, go to the directory as follows:

```
project_1/mig_7series_0_example/mig_7series_0_example.srcs/sim_1/im  
ports/sim
```

IES and VCS simulation scripts are meant to be executed only in Linux operating systems.

The `ies_run.sh` and `vcs_run.sh` files are the executable files for running simulations using IES and VCS simulators respectively. Library files should be added to the `ies_run.sh` and `vcs_run.sh` files respectively. See the `readme.txt` file for details regarding simulations using IES and VCS.

Simulation Flow Using Vivado Simulator

1. In the **Open IP Example Design** Vivado project, under **Flow Navigator**, select **Simulation Settings** (Figure 4-39).

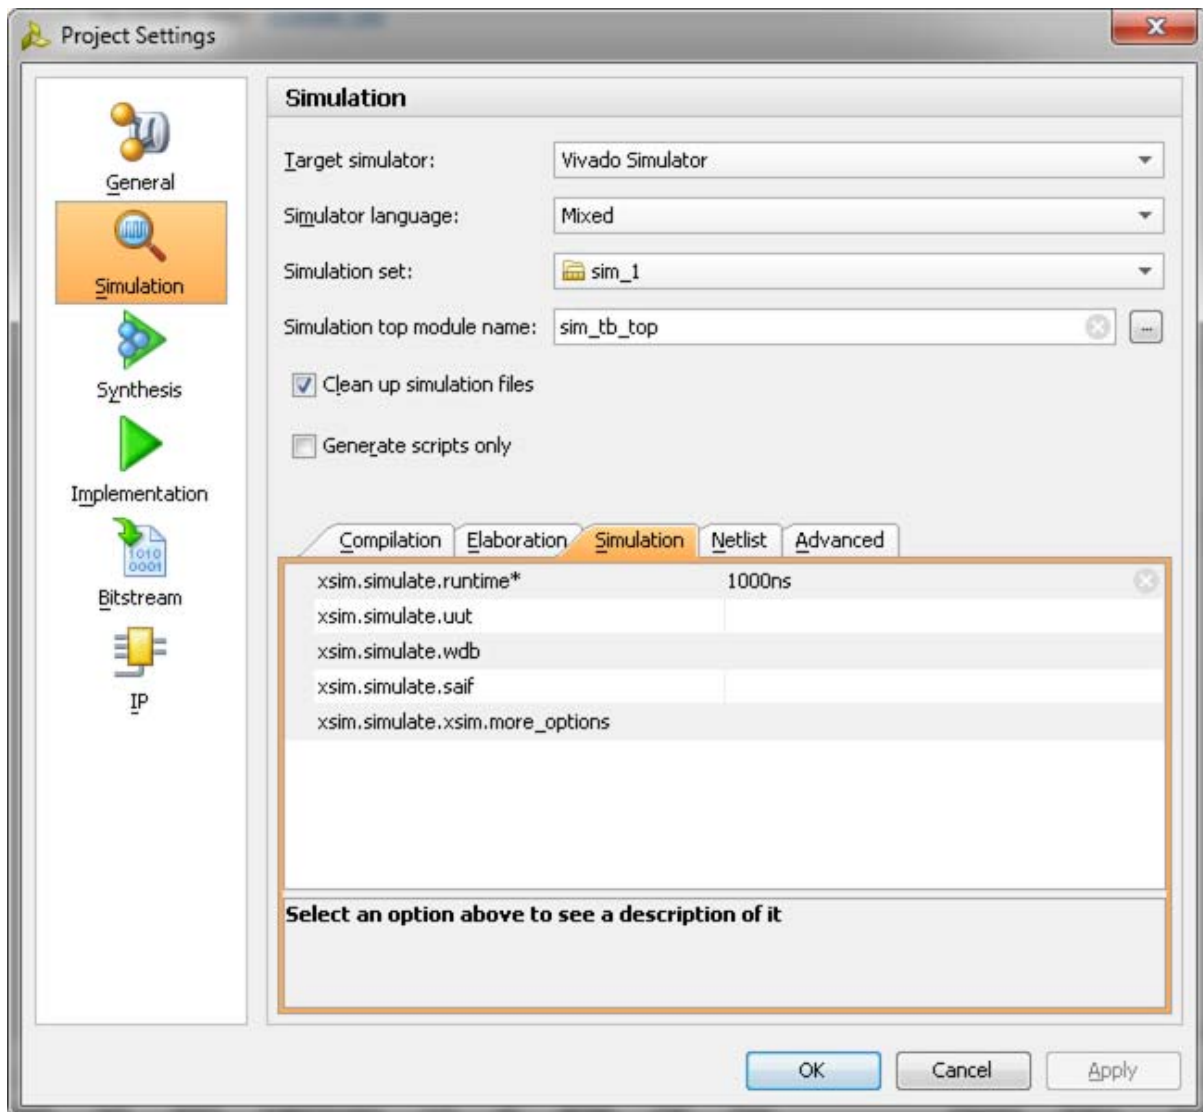


Figure 4-39: Simulation with Vivado Simulator

2. Under the **Simulation** tab as shown in Figure 4-39, set the `xsim.simulate.runtime` as 1 ms (there are simulation RTL directives which stop the simulation after a certain period of time, which is less than 1 ms). Apply the settings and select **OK**.

3. In the **Flow Navigator** window, select **Run Simulation** and select **Run Behavioral Simulation** as shown in Figure 4-40.

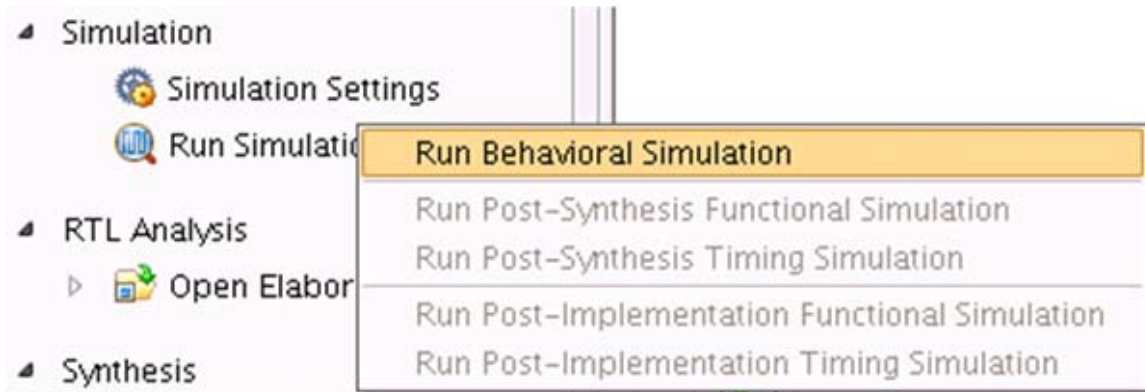


Figure 4-40: Run Behavioral Simulation

Simulation Flow Using QuestaSim

1. In the **Open IP Example Design** Vivado project, under **Flow Navigator** select **Simulation Settings**.
2. Select **Target simulator** as QuestaSim/ModelSim.
 - a. Browse to the **Compiled libraries location** and set the path on **Compiled libraries location** option.
 - b. Under the **Simulation** tab, set the `modelsim.simulate.runtime` to 1 ms (there are simulation RTL directives which stop the simulation after certain period of time, which is less than 1 ms), set `modelsim.simulate.vsim.more_options` to `-novopt` as shown in Figure 4-39.
3. Apply the settings and select **OK**.

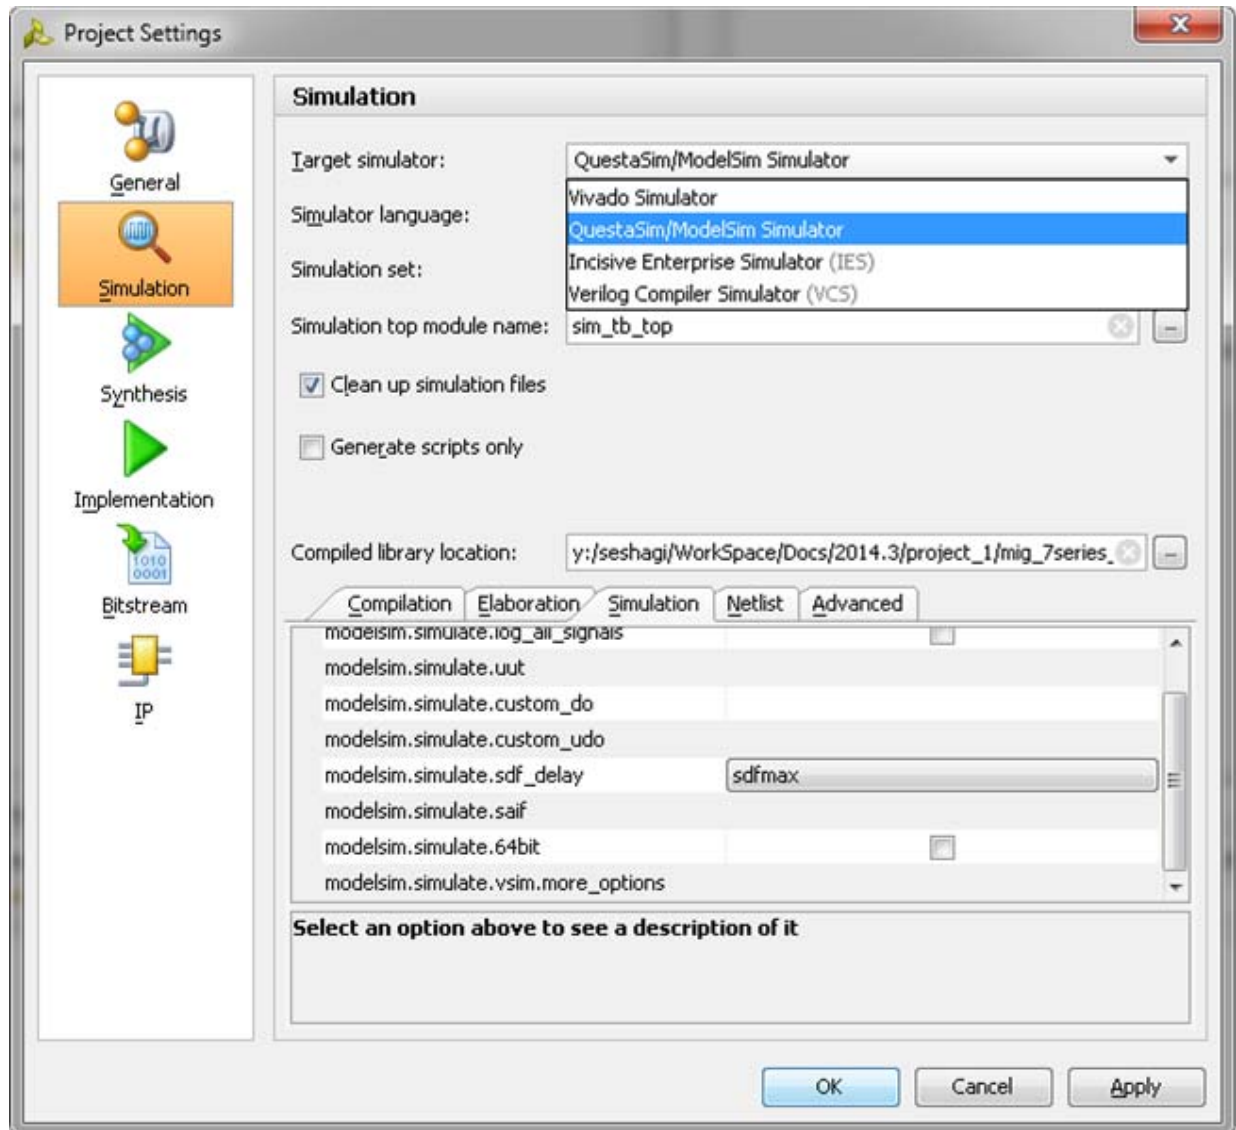


Figure 4-41: Simulation with QuestaSim

4. In the **Flow Navigator** window, select **Run Simulation** and select **Run Behavioral Simulation** as shown in [Figure 4-40](#).
5. Vivado invokes QuestaSim and simulations are run in the QuestaSim tool. For more information, see the *Vivado Design Suite User Guide: Logic Simulation* (UG900) [[Ref 8](#)].

Simulation Flow Using VCS

1. In the **Open IP Example Design Vivado** project, under **Flow Navigator** select **Simulation Settings**.
2. Select **Target simulator** as Verilog Compiler Simulator (VCS).
 - a. Browse to the **Compiled libraries location** and set the path on **Compiles libraries location** option.

- b. Under the **Compilation** tab, set the `vcs.compile.vlogan.more_options` to `-sverilog`.
 - c. Under the **Simulation** tab, set the `vcs.simulate.runtime` to 1 ms (there are simulation RTL directives which stop the simulation after a certain period of time which is less than 1 ms) as shown in Figure 4-42.
3. Apply the settings and select **OK**.

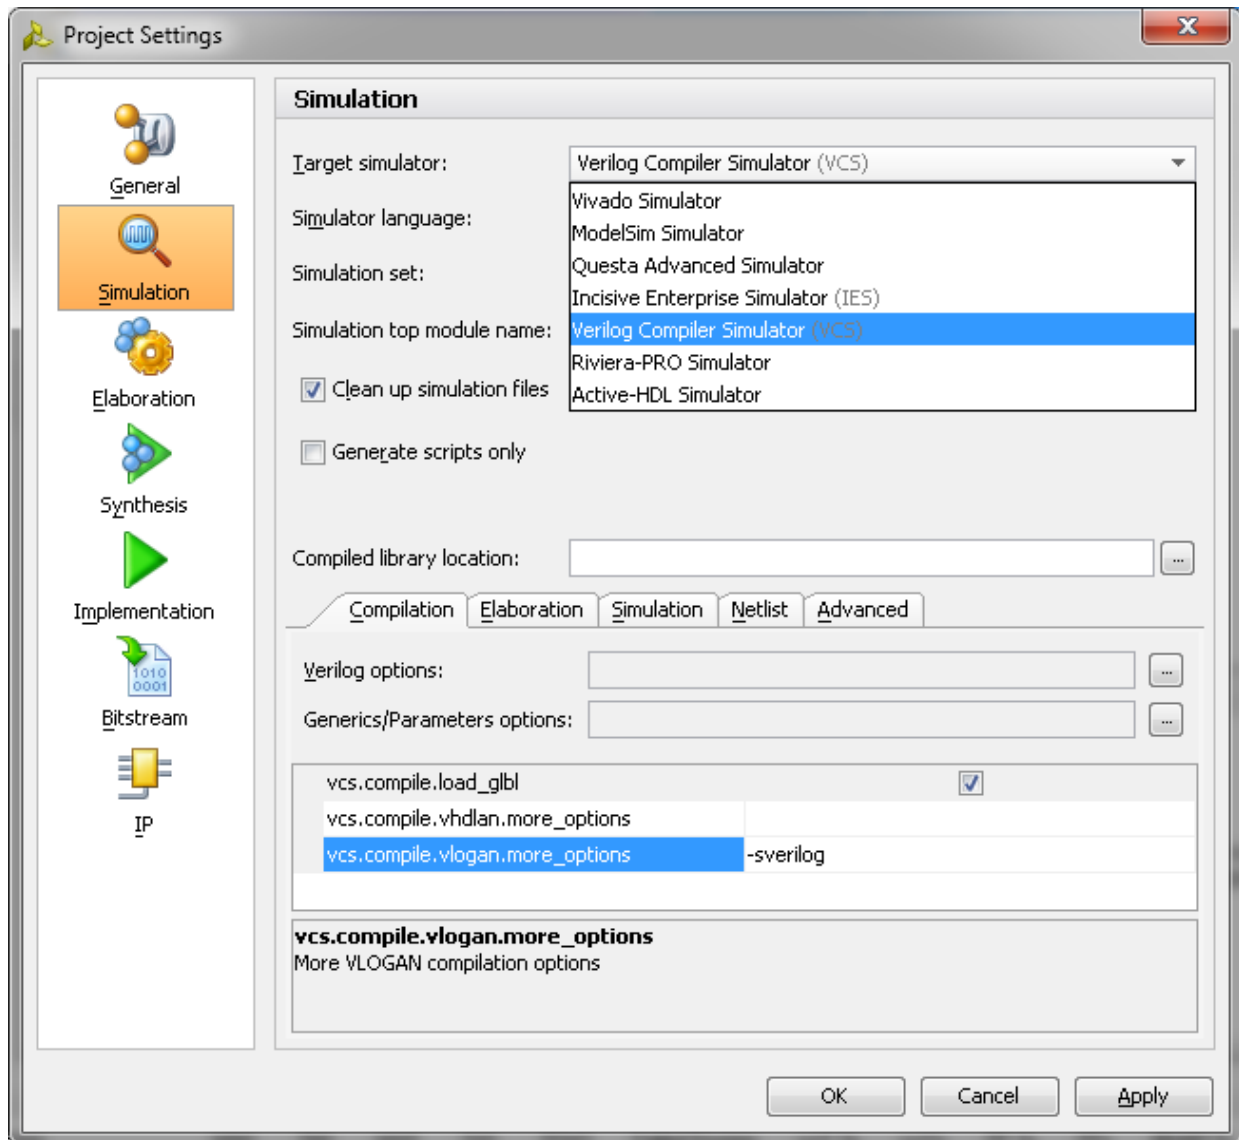


Figure 4-42: Simulation with VCS

4. In the **Flow Navigator** window, select **Run Simulation** and select **Run Behavioral Simulation** as shown in Figure 4-40.
5. Vivado invokes VCS and simulations are run in the VCS tool. For more information, see the *Vivado Design Suite User Guide: Logic Simulation* (UG900) [Ref 8].

Simulation Flow Using IES

1. In the **Open IP Example Design Vivado** project, under **Flow Navigator** select **Simulation Settings**.
2. Select **Target simulator** as Incisive Enterprise Simulator (IES).
 - a. Browse to the **Compiled libraries location** and set the path on **Compiles libraries location** option.
 - b. Under the **Compilation** tab, set the `ies.compile.ncvlog.more_options` to `-sv`.
 - c. Under the **Elaboration** tab, set the `ies.elaborate.ncelab.more_options` to `-namemap_mixgen`.
 - d. Under the **Simulation** tab, set the `ies.simulate.runtime` to 1 ms (there are simulation RTL directives which stop the simulation after certain period of time which is less than 1 ms) as shown in [Figure 4-43](#).

3. Apply the settings and select **OK**.

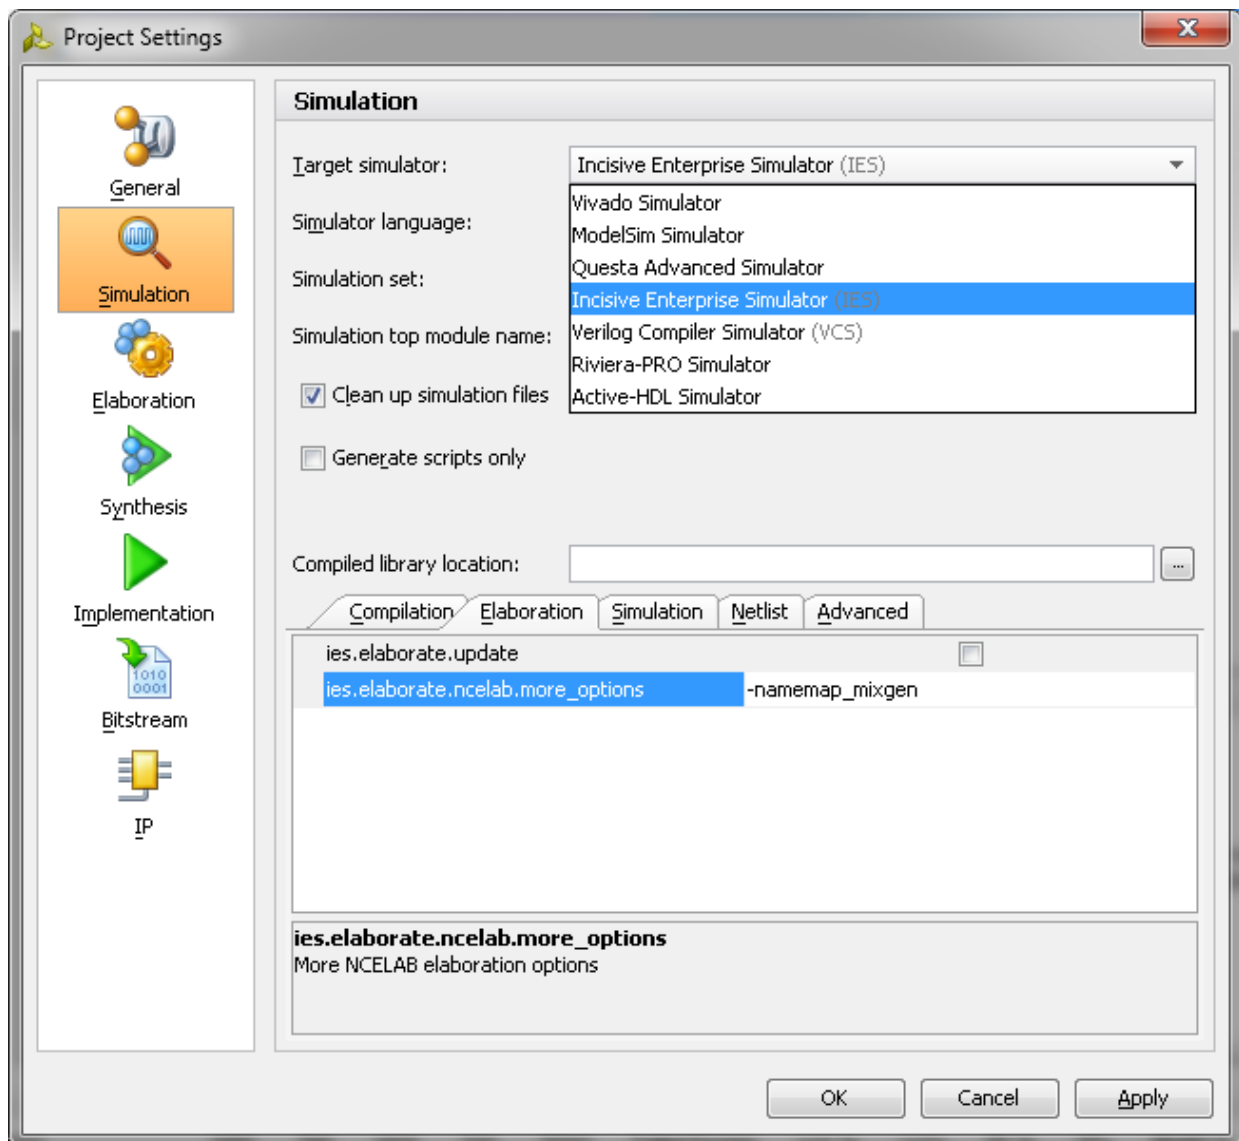


Figure 4-43: Simulation with IES


4. In the **Flow Navigator** window, select **Run Simulation** and select **Run Behavioral Simulation** as shown in Figure 4-40.
5. Vivado invokes IES and simulations are run in the IES tool. For more information, see the *Vivado Design Suite User Guide: Logic Simulation* (UG900) [Ref 8].

Core Architecture

This section describes the architecture of the 7 series FPGAs memory interface solutions core, providing an overview of the core modules and interfaces.

Overview

The 7 series FPGAs memory interface solutions core is shown in [Figure 4-44](#).

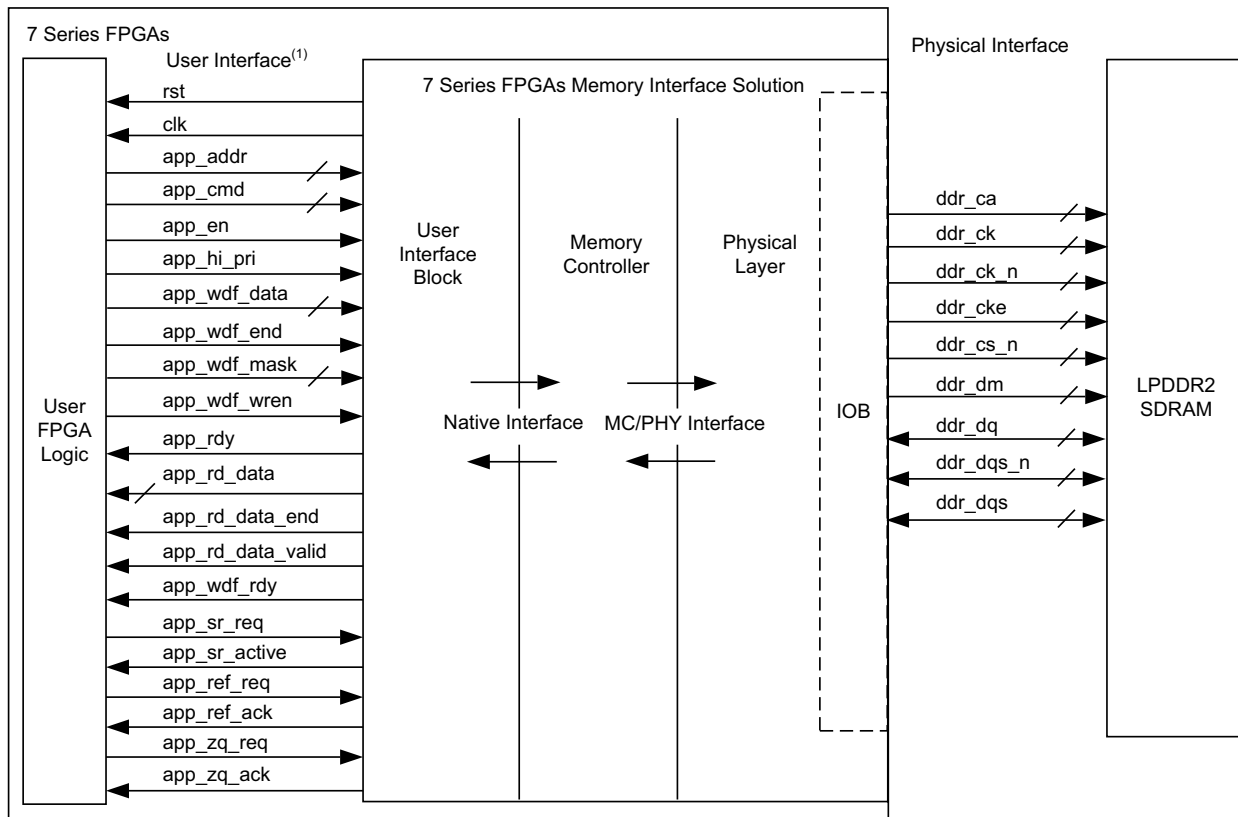

1. System clock (`sys_clk_p` and `sys_clk_n/sys_clk_i`), Reference clock (`clk_ref_p` and `clk_ref_n/clk_ref_i`), and system reset (`sys_rst_n`) port connections are not shown in block diagram.

Figure 4-44: 7 Series FPGAs Memory Interface Solution

User FPGA Logic

The user FPGA logic block shown in [Figure 4-44](#) is any FPGA design that requires to be connected to an external LPDDR2 SDRAM. The user FPGA logic connects to the Memory Controller through the user interface. An example user FPGA logic is provided with the core.

User Interface Block and User Interface

The UI block presents the UI to the user FPGA logic block. It provides a simple alternative to the native interface by presenting a flat address space and buffering read and write data.

Memory Controller and Native Interface

The front end of the Memory Controller (MC) presents the native interface to the UI block. The native interface allows the user design to submit memory read and write requests and provides the mechanism to move data from the user design to the external memory device, and vice versa. The backend of the Memory Controller connects to the physical interface and handles all the interface requirements to that module. The Memory Controller also provides a reordering option that reorders received requests to optimize data throughput and latency.

PHY and the Physical Interface

The front end of the PHY connects to the Memory Controller. The backend of the PHY connects to the external memory device. The PHY handles all memory device signal sequencing and timing.

IDELAYCTRL

An IDELAYCTRL is required in any bank that uses IDELAYs. IDELAYs are associated with the data group (DQ). Any bank/clock region that uses these signals require an IDELAYCTRL.

The MIG tool instantiates one IDELAYCTRL and then uses the IODELAY_GROUP attribute (see the `iodelay_ctrl.v` module). Based on this attribute, the Vivado tool properly replicates IDELAYCTRLs as needed within the design.

The IDELAYCTRL reference frequency should be set to 200 MHz. Based on the IODELAY_GROUP attribute that is set, the Vivado tool replicates the IDELAYCTRLs for each region where the IDELAY blocks exist. When a user creates a multicontroller design on their own, each MIG output has the component instantiated with the primitive. This violates the rules for IDELAYCTRLs and the usage of the IODELAY_GRP attribute. IDELAYCTRLs need to have only one instantiation of the component with the attribute set properly, and allow the tools to replicate as needed.

User Interface

The UI is shown in [Table 4-14](#) and connects to an FPGA user design to allow access to an external memory device.

Table 4-14: User Interface

Signal	Direction	Description
app_addr[ADDR_WIDTH – 1:0]	Input	This input indicates the address for the current request.
app_cmd[2:0]	Input	This input selects the command for the current request.
app_en	Input	This is the active-High strobe for the app_addr[], app_cmd[2:0], and app_hi_pri inputs.
app_rdy	Output	This output indicates that the UI is ready to accept commands. If the signal is deasserted when app_en is enabled, the current app_cmd and app_addr must be retried until app_rdy is asserted.
app_hi_pri	Input	This active-High input elevates the priority of the current request.
app_rd_data [APP_DATA_WIDTH – 1:0]	Output	This provides the output data from read commands.
app_rd_data_end	Output	This active-High output indicates that the current clock cycle is the last cycle of output data on app_rd_data[].
app_rd_data_valid	Output	This active-High output indicates that app_rd_data[] is valid.
app_wdf_data [APP_DATA_WIDTH – 1:0]	Input	This provides the data for write commands.
app_wdf_end	Input	This active-High input indicates that the current clock cycle is the last cycle of input data on app_wdf_data[].
app_wdf_mask [APP_MASK_WIDTH – 1:0]	Input	This provides the mask for app_wdf_data[].
app_wdf_rdy	Output	This output indicates that the write data FIFO is ready to receive data. Write data is accepted when app_wdf_rdy = 1'b1 and app_wdf_wren = 1'b1.
app_wdf_wren	Input	This is the active-High strobe for app_wdf_data[].
app_ref_req	Input	This active-High input requests that a refresh command be issued to the DRAM.
app_ref_ack	Output	This active-High output indicates that the Memory Controller has sent the requested refresh command to the PHY interface.
app_zq_req	Input	This active-High input requests that a ZQ calibration command be issued to the DRAM.
app_zq_ack	Output	This active-High output indicates that the Memory Controller has sent the requested ZQ calibration command to the PHY interface.
ui_clk	Output	This UI clock must be a half or quarter of the DRAM clock.
init_calib_complete	Output	PHY asserts init_calib_complete when calibration is finished.
ui_clk_sync_rst	Output	This is the active-High UI reset.

app_addr[ADDR_WIDTH – 1:0]

This input indicates the address for the request currently being submitted to the UI. The UI aggregates all the address fields of the external SDRAM and presents a flat address space to you.

app_cmd[2:0]

This input specifies the command for the request currently being submitted to the UI. The available commands are shown in [Table 4-15](#).

Table 4-15: Commands for app_cmd[2:0]

Operation	app_cmd[2:0] Code
Read	001
Write	000

app_en

This input strobes in a request. You must apply the desired values to app_addr[], app_cmd[2:0], and app_hi_pri, and then assert app_en to submit the request to the UI. This initiates a handshake that the UI acknowledges by asserting app_rdy.

app_hi_pri

This input indicates that the current request is a high priority.

app_wdf_data[APP_DATA_WIDTH – 1:0]

This bus indicates which bytes of app_wdf_data[] are written to the external memory and which bytes remain in their current state. The bytes are masked by setting a value of 1 to the corresponding bits in app_wdf_mask. For example, if the application data width is 256, the mask width takes a value of 32. The least significant byte [7:0] of app_wdf_data is masked using Bit[0] of app_wdf_mask and the most significant byte [255:248] of app_wdf_data is masked using Bit[31] of app_wdf_mask. Hence if you have to mask the last DWORD, that is, bytes 0, 1, 2, and 3 of app_wdf_data, the app_wdf_mask should be set to 32'h0000_000F.

app_wdf_end

This input indicates that the data on the app_wdf_data[] bus in the current cycle is the last data for the current request.

app_wdf_mask[APP_MASK_WIDTH – 1:0]

This bus indicates which bits of `app_wdf_data[]` are written to the external memory and which bits remain in their current state.

app_wdf_wren

This input indicates that the data on the `app_wdf_data[]` bus is valid.

app_rdy

This output indicates to you whether the request currently being submitted to the UI is accepted. If the UI does not assert this signal after `app_en` is asserted, the current request must be retried. The `app_rdy` output is not asserted if:

- PHY/Memory initialization is not yet completed
- All the bank machines are occupied (can be viewed as the command buffer being full)
 - A read is requested and the read buffer is full
 - A write is requested and no write buffer pointers are available
- A periodic read is being inserted

app_rd_data[APP_DATA_WIDTH – 1:0]

This output contains the data read from the external memory.

app_rd_data_end

This output indicates that the data on the `app_rd_data[]` bus in the current cycle is the last data for the current request.

app_rd_data_valid

This output indicates that the data on the `app_rd_data[]` bus is valid.

app_wdf_rdy

This output indicates that the write data FIFO is ready to receive data. Write data is accepted when both `app_wdf_rdy` and `app_wdf_wren` are asserted.

app_ref_req

When asserted, this active-High input requests that the Memory Controller send a refresh command to the DRAM. It must be pulsed for a single cycle to make the request and then deasserted at least until the `app_ref_ack` signal is asserted to acknowledge the request and indicate that it has been sent.

app_ref_ack

When asserted, this active-High input acknowledges a refresh request and indicates that the command has been sent from the Memory Controller to the PHY.

app_zq_req

When asserted, this active-High input requests that the Memory Controller send a ZQ calibration command to the DRAM. It must be pulsed for a single cycle to make the request and then deasserted at least until the `app_zq_ack` signal is asserted to acknowledge the request and indicate that it has been sent.

app_zq_ack

When asserted, this active-High input acknowledges a ZQ calibration request and indicates that the command has been sent from the Memory Controller to the PHY.

ui_clk_sync_rst

This is the reset output from the UI which is in synchronous with `ui_clk`.

ui_clk

This is the output clock from the UI. It must be half the frequency of the clock going out to the external SDRAM.

init_calib_complete

The PHY asserts `init_calib_complete` when calibration is finished. The application has no need to wait for `init_calib_complete` before sending commands to the Memory Controller.

User Interface Block

The UI block presents the UI to a user design. It provides a simple alternative to the native interface. The UI block:

- Buffers read and write data
- Reorders read return data to match the request order
- Presents a flat address space and translates it to the addressing required by the SDRAM

Native Interface

The native interface connects to an FPGA user design to allow access to an external memory device.

Command Request Signals

The native interface provides a set of signals that request a read or write command from the Memory Controller to the memory device. These signals are summarized in [Table 4-16](#).

Table 4-16: Native Interface Command Signals

Signal	Direction	Description
accept	Output	This output indicates that the memory interface accepts the request driven on the last cycle.
bank[2:0]	Input	This input selects the bank for the current request.
bank_mach_next[]	Output	This output is reserved and should be left unconnected.
cmd[2:0]	Input	This input selects the command for the current request.
col[COL_WIDTH – 1:0]	Input	This input selects the column address for the current request.
data_buf_addr[7:0]	Input	This input indicates the data buffer address where the Memory Controller: Locates data while processing write commands. Places data while processing read commands.
hi_priority	Input	This input is reserved and should be connected to logic 0.
rank[]	Input	This input is reserved and should be connected to logic 0.
row[ROW_WIDTH – 1:0]	Input	This input selects the row address for the current request.
use_addr	Input	The user design strobes this input to indicate that the request information driven on the previous state is valid.

The bank, row, and column comprise a target address on the memory device for read and write operations. Commands are specified using the `cmd[2:0]` input to the core. The available read and write commands are shown in [Table 4-17](#).

Table 4-17: Memory Interface Commands

Operation	cmd[2:0] Code
Memory read	000
Memory write	001
Reserved	All other codes

accept

This signal indicates to the user design whether or not a request is accepted by the core. When the accept signal is asserted, the request submitted on the last cycle is accepted, and the user design can either continue to submit more requests or go idle. When the accept signal is deasserted, the request submitted on the last cycle was not accepted and must be retried.

use_addr

The user design asserts the `use_addr` signal to strobe the request that was submitted to the native interface on the previous cycle.

data_buf_addr

The user design must contain a buffer for data used during read and write commands. When a request is submitted to the native interface, the user design must designate a location in the buffer for when the request is processed. For write commands, `data_buf_addr` is an address in the buffer containing the source data to be written to the external memory. For read commands, `data_buf_addr` is an address in the buffer that receives read data from the external memory. The core echoes this address back when the requests are processed.

Write Command Signals

The native interface has signals that are used when the Memory Controller is processing a write command (Table 4-18). These signals connect to the control, address, and data signals of a buffer in the user design.

Table 4-18: Native Interface Write Command Signals

Signal	Direction	Description
<code>wr_data[2 × nCK_PER_CLK × PAYLOAD_WIDTH – 1:0]</code>	Input	This is the input data for write commands.
<code>wr_data_addr [DATA_BUF_ADDR_WIDTH – 1:0]</code>	Output	This output provides the base address for the source data buffer for write commands.
<code>wr_data_mask[2 × nCK_PER_CLK × DATA_WIDTH/8 – 1:0]</code>	Input	This input provides the byte enable for the write data.

Table 4-18: Native Interface Write Command Signals (*Cont'd*)

Signal	Direction	Description
wr_data_en	Output	This output indicates that the memory interface is reading data from a data buffer for a write command.
wr_data_offset[0:0]	Output	This output provides the offset for the source data buffer for write commands.

wr_data

This bus is the data that needs to be written to the external memory. This bus can be connected to the data output of a buffer in the user design.

wr_data_addr

This bus is an echo of data_buf_addr when the current write request is submitted. The wr_data_addr bus can be combined with the wr_data_offset signal and applied to the address input of a buffer in the user design.

wr_data_mask

This bus is the byte enable (data mask) for the data currently being written to the external memory. The byte to the memory is written when the corresponding wr_data_mask signal is deasserted.

wr_data_en

When asserted, this signal indicates that the core is reading data from the user design for a write command. This signal can be tied to the chip select of a buffer in the user design.

wr_data_offset

This bus is used to step through the data buffer when the burst length requires more than a single cycle to complete. This bus, in combination with rd_data_addr, can be applied to the address input of a buffer in the user design.

Read Command Signals

The native interface provides a set of signals used when the Memory Controller is processing a read command (Table 4-19). These signals are similar to those for processing write commands, except that they transfer data from the memory device to a buffer in the user design.

Table 4-19: Native Interface Read Command Signals

Signal	Direction	Description
<code>rd_data[2 × nCK_PER_CLK × PAYLOAD_WIDTH – 1:0]</code>	Output	This is the output data from read commands.
<code>rd_data_addr[DATA_BUF_ADDR_WIDTH – 1:0]</code>	Output	This output provides the base address of the destination buffer for read commands.
<code>rd_data_en</code>	Output	This output indicates that valid read data is available on the <code>rd_data</code> bus.
<code>rd_data_offset[1:0]</code>	Output	This output provides the offset for the destination buffer for read commands.

`rd_data`

This bus is the data that was read from the external memory. It can be connected to the data input of a buffer in the user design.

`rd_data_addr`

This bus is an echo of `data_buf_addr` when the current read request is submitted. This bus can be combined with the `rd_data_offset` signal and applied to the address input of a buffer in the user design.

`rd_data_en`

This signal indicates when valid read data is available on `rd_data` for a read request. It can be tied to the chip select and write enable of a buffer in the user design.

`rd_data_offset`

This bus is used to step through the data buffer when the burst length requires more than a single cycle to complete. This bus can be combined with `rd_data_addr` and applied to the address input of a buffer in the user design.

Native Interface Maintenance Command Signals

Table 4-20 lists the native interface maintenance command signals.

Table 4-20: Native Interface Maintenance Command Signals

Signal	Direction	Description
<code>app_sr_req</code>	Input	This input is reserved and should be tied to 0.
<code>app_sr_active</code>	Output	This output is reserved.
<code>app_ref_req</code>	Input	This active-High input requests that a refresh command be issued to the DRAM.
<code>app_ref_ack</code>	Output	This active-High output indicates that the Memory Controller has sent the requested refresh command to the PHY interface.

Table 4-20: Native Interface Maintenance Command Signals (Cont'd)

Signal	Direction	Description
app_zq_req	Input	This active-High input requests that a ZQ calibration command be issued to the DRAM.
app_zq_ack	Output	This active-High output indicates that the Memory Controller has sent the requested ZQ calibration command to the PHY interface.

app_ref_req

When asserted, this active-High input requests that the Memory Controller send a refresh command to the DRAM. It must be pulsed for a single cycle to make the request and then deasserted at least until the `app_ref_ack` signal is asserted to acknowledge the request and indicate that it has been sent.

app_ref_ack

When asserted, this active-High input acknowledges a refresh request and indicates that the command has been sent from the Memory Controller to the PHY.

app_zq_req

When asserted, this active-High input requests that the Memory Controller send a ZQ calibration command to the DRAM. It must be pulsed for a single cycle to make the request and then deasserted at least until the `app_zq_ack` signal is asserted to acknowledge the request and indicate that it has been sent.

app_zq_ack

When asserted, this active-High input acknowledges a ZQ calibration request and indicates that the command has been sent from the Memory Controller to the PHY.

Clocking Architecture

The PHY design requires that a MMCM module be used to generate various clocks, and both global and local clock networks are used to distribute the clock throughout the design. The PHY also requires one PLL in the same bank as the PLL. This MMCM compensates for the insertion delay of the BUFG to the PHY.

The clock generation and distribution circuitry and networks drive blocks within the PHY that can be divided roughly into four separate, general functions:

- Internal (FPGA) logic
- Write path (output) I/O logic
- Read path (input) and delay I/O logic
- IDELAY reference clock (200 MHz)

One MMCM and one PLL are required for the PHY. The MMCM is used to generate the clocks for most of the internal logic, the frequency reference clocks to the phasers, and a synchronization pulse required for keeping PHY control blocks synchronized in multi-I/O bank implementations.

For LPDDR2 SDRAM clock frequency range of 200 MHz to 333 MHz, one of the phaser frequency reference clocks runs at the same frequency as the memory clock and the second frequency reference clock must be either 2x or 4x the memory clock frequency such that it meets the range requirement of 400 MHz. The two phaser frequency reference clocks must be generated by the same MMCM so they are in phase with each other. The block diagram of the clocking architecture is shown in [Figure 4-45](#).

The default setting for the MMCM multiply (M) and divide (D) values is for the system clock input frequency to be equal to the memory clock frequency. This 1:1 ratio is not required. The MMCM input divider (D) can be any value listed in the *7 Series FPGAs Clocking Resources User Guide* (UG472) [\[Ref 10\]](#) as long as the MMCME2_ADV operating conditions are met and the other constraints listed here are observed. The MMCM multiply (M) value must be between 1 and 16 inclusive. The MMCM output driver (O) for the memory clock must be 2. The MMCM VCO frequency range must be kept in the range specified in the silicon data sheet. The sync_pulse must be 1/16 of the mem_refclk frequency and must have a duty cycle of 1/16 or 6.25%. For information on physical placement of the MMCM and the System Clock CCIO input, see [Design Guidelines](#), [page 631](#).

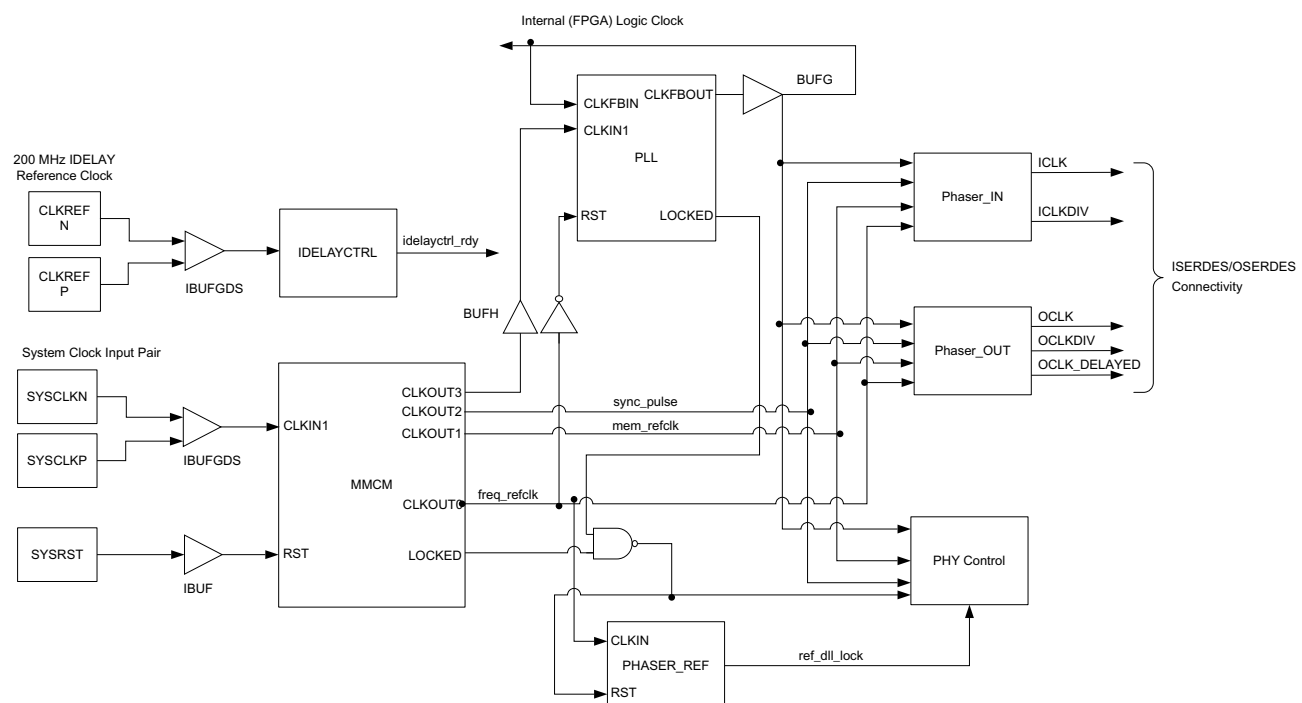


Figure 4-45: Clocking Architecture

The details of the ISERDES/OSERDES connectivity are shown in [Figure 4-50](#) and [Figure 4-52](#).

Internal (FPGA) Logic Clock

The internal FPGA logic is clocked by a global clocking resource at a half frequency of the LPDDR2 SDRAM clock frequency. This MMCM also outputs the high-speed LPDDR2 memory clock.

Write Path (Output) I/O Logic Clock

The output path comprising both data and controls is clocked by PHASER_OUT. The PHASER_OUT provides synchronized clocks for each byte group to the OUT_FIFOs and to the OSERDES/ODDR. The PHASER_OUT generates a byte clock (OCLK), a divided byte clock (OCLKDIV), and a delayed byte clock (OCLK_DELAYED) for its associated byte group. These clocks are generated directly from the Frequency Reference clock and are in phase with each other. The byte clock is the same frequency as the Frequency Reference clock and the divided byte clock is half the frequency of the Frequency Reference clock. OCLK_DELAYED is used to clock the DQS ODDR to achieve the required 90° phase offset between the write DQS and its associated DQ bits.

The PHASER_OUT also drives the signaling required to generate DQS during writes, the DQS and DQ 3-state associated with the data byte group, and the Read Enable for the OUT_FIFO of the byte group. The clocking details of the address/control and the write paths using PHASER_OUT are shown in [Figure 4-50](#) and [Figure 4-52](#).

Read Path (Input) I/O Logic Clock

The input read datapath is clocked by the PHASER_IN block. The PHASER_IN block provides synchronized clocks for each byte group to the IN_FIFOs and to the IDDR/ISERDES. The PHASER_IN block generates two delayed clocks for LPDDR2 SDRAM data captures: read byte clock (ICLK) and read divided byte clock (ICLKDIV). ICLK is the delayed version of the frequency reference clock. ICLKDIV is used to capture data into the first rank of flip-flops in the ISERDES. ICLKDIV is aligned to ICLK and is the parallel transfer clock for the last rank of flip-flops in the ISERDES. ICLKDIV is also used as the write clock for the IN_FIFO associated with the byte group. The clocking details of the read path using PHASER_IN is shown in [Figure 4-52](#).

IDELAY Reference Clock

A 200 MHz IDELAY clock must be supplied to the IDELAYCTRL module. The IDELAYCTRL module continuously calibrates the IDELAY elements in the I/O region to account for varying environmental conditions. The IP core assumes an external clock signal is driving the IDELAYCTRL module. If a PLL clock drives the IDELAYCTRL input clock, the PLL lock signal needs to be incorporated in the `rst_tmp_idelay` signal inside the `IDELAY_CTRL.v` module. This ensures that the clock is stable before being used.

Memory Controller

In the core default configuration, the Memory Controller (MC) resides between the UI block and the physical layer. This is depicted in Figure 4-46.

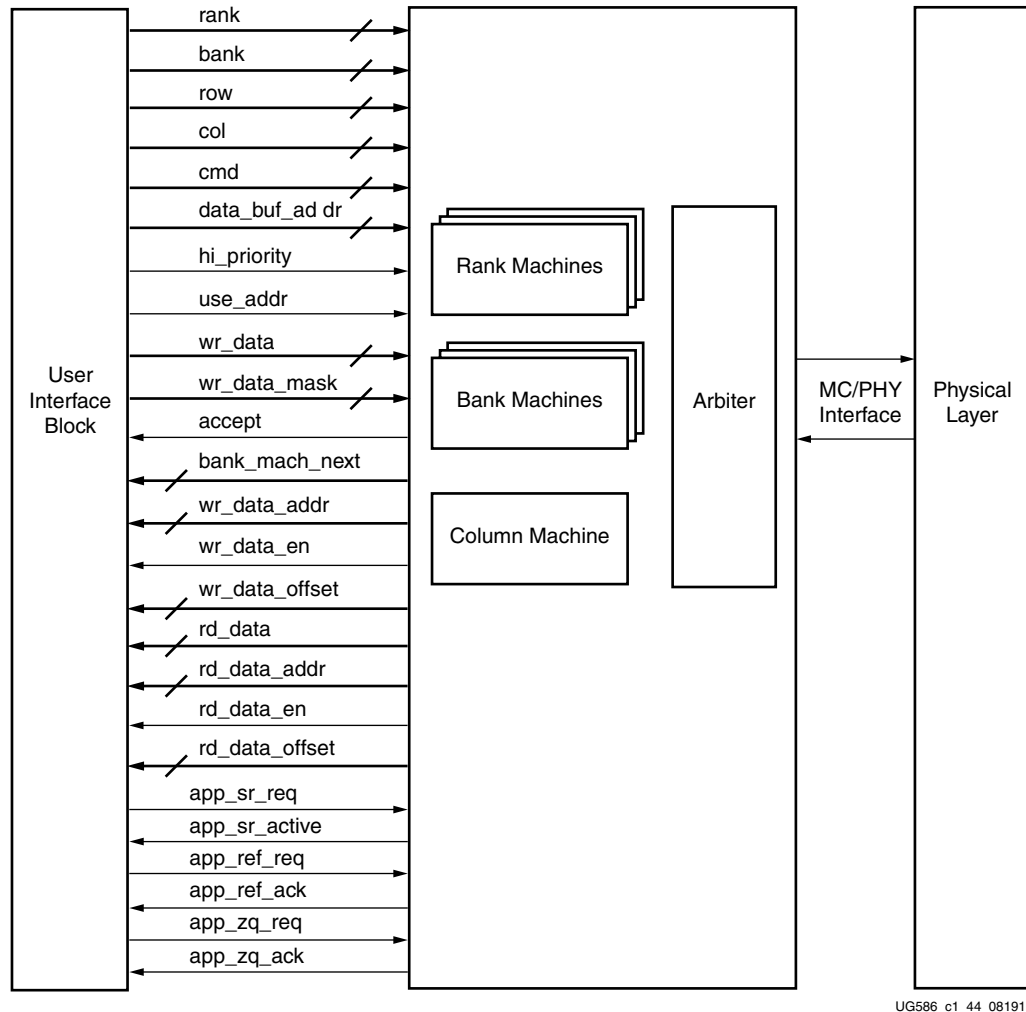


Figure 4-46: Memory Controller

The Memory Controller is the primary logic block of the memory interface. It receives requests from the UI and stores them in a logical queue. Requests are optionally reordered to optimize system throughput and latency.

The Memory Controller block is organized as four main pieces:

- Configurable number of “bank machines”
- Configurable number of “rank machines”
- Column machine
- Arbitration block

Bank Machines

Most of the Memory Controller logic resides in the bank machines. A given bank machine manages a single DRAM bank at any given time. However, bank machine assignment is dynamic, so it is not necessary to have a bank machine for each physical bank. The number of banks can be configured to trade off between area and performance. This is discussed in greater detail in the [Precharge Policy](#) section.

The duration of a bank machine assignment to a particular DRAM bank is coupled to user requests rather than the state of the target DRAM bank. When a request is accepted, it is assigned to a bank machine. When a request is complete, the bank machine is released and is made available for assignment to another request. Bank machines issue all the commands necessary to complete the request.

On behalf of the current request, a bank machine must generate row commands and column commands to complete the request. Row and column commands are independent but must adhere to DRAM timing requirements.

The following simplified example illustrates this concept. Consider the case when the Memory Controller and DRAM are idle when a single request arrives. The bank machine at the head of the pool:

1. Accepts your request
2. Activates the target row
3. Issues the column (read or write) command
4. Precharges the target row
5. Returns to the idle pool of bank machines

Similar functionality applies when multiple requests arrive targeting different rows or banks.

Now consider the case when a request arrives targeting an open DRAM bank, managed by an already active bank machine. The already active bank machine recognizes that the new request targets the same DRAM bank and skips the precharge step ([step 4](#)). The bank machine at the head of the idle pool accepts the new user request and skips the activate step ([step 2](#)).

Finally, when a request arrives in between both a previous and subsequent request all to the same target DRAM bank, the controller skips both the activate ([step 2](#)) and precharge ([step 4](#)) operations.

A bank machine precharges a DRAM bank as soon as possible unless another pending request targets the same bank. This is discussed in greater detail in the [Precharge Policy](#) section.

Column commands can be reordered for the purpose of optimizing memory interface throughput. The ordering algorithm nominally ensures data coherence. The reordering feature is explained in greater detail in the [Reordering](#) section.

Rank Machines

The rank machines correspond to DRAM ranks. Rank machines monitor the activity of the bank machines and track rank or device-specific timing parameters. For example, a rank machine monitors the number of activate commands sent to a rank within a time window. After the allowed number of activates have been sent, the rank machine generates an inhibit signal that prevents the bank machines from sending any further activates to the rank until the time window has shifted enough to allow more activates. Rank machines are statically assigned to a physical DRAM rank.

Column Machine

The single column machine generates the timing information necessary to manage the DQ data bus. Although there can be multiple DRAM ranks, because there is a single DQ bus, all the columns in all DRAM ranks are managed as a single unit. The column machine monitors commands issued by the bank machines and generates inhibit signals back to the bank machines so that the DQ bus is utilized in an orderly manner.

Arbitration Block

The arbitration block receives requests to send commands to the DRAM array from the bank machines. Row commands and column commands are arbitrated independently. For each command opportunity, the arbiter block selects a row and a column command to forward to the physical layer. The arbitration block implements a round-robin protocol to ensure forward progress.

Reordering

DRAM accesses are broken into two quasi-independent parts, row commands and column commands. Each request occupies a logical queue entry, and each queue entry has an associated bank machine. These bank machines track the state of the DRAM rank or bank it is currently bound to, if any.

If necessary, the bank machine attempts to activate the proper rank, bank, or row on behalf of the current request. In the process of doing so, the bank machine looks at the current state of the DRAM to decide if various timing parameters are met. Eventually, all timing parameters are met and the bank machine arbitrates to send the activate. The arbitration is done in a simple round-robin manner. Arbitration is necessary because several bank machines might request to send row commands (activate and precharge) at the same time.

Not all requests require an activate. If a preceding request has activated the same rank, bank, or row, a subsequent request might inherit the bank machine state and avoid the precharge/activate penalties.

After the necessary rank, bank, or row is activated and the RAS to CAS delay timing is met, the bank machine tries to issue the CAS-READ or CAS-WRITE command. Unlike the row command, all requests issue a CAS command. Before arbitrating to send a CAS command, the bank machine must look at the state of the DRAM, the state of the DQ bus, priority, and ordering. Eventually, all these factors assume their favorable states and the bank machine arbitrates to send a CAS command. In a manner similar to row commands, a round-robin arbiter uses a priority scheme and selects the next column command.

The round-robin arbiter itself is a source of reordering. Assume for example that an otherwise idle Memory Controller receives a burst of new requests while processing a refresh. These requests queue up and wait for the refresh to complete. After the DRAM is ready to receive a new activate, all waiting requests assert their arbitration requests simultaneously. The arbiter selects the next activate to send based solely on its round-robin algorithm, independent of request order. Similar behavior can be observed for column commands.

The controller supports three ordering modes:

- **STRICT** – In this mode the controller always issues commands to the memory in the exact order received at the native interface. This mode can be useful in situations that do not benefit from reordering and the lowest latency is desired. Because the read data comes back in order, the user interface layer might not be needed thus reducing latency. This mode is also useful for debugging.
- **NORM** – In this mode the controller reorders reads but not writes as needed to improve efficiency. All write requests are issued in the request order relative to all other write requests, and requests within a given rank-bank retire in order. This ensures that it is not possible to observe the result of a later write before an earlier write completes.

Note: This reordering is only visible at the native interface. The user interface reorders the read requests back into the original request order.

- **RELAXED** – This is the most efficient mode of the controller. Writes and reads can be reordered as needed for maximum efficiency between rank-bank queues. Thus in this mode it is possible to observe the reordering of writes. However, this behavior is not observable at the user interface layer because the requests are retired in order within a rank-bank and the user interface layer returns the read requests in order. Therefore the RELAXED mode is recommended for use with the user interface layer.

Note: This option is not selectable in the MIG GUI. To enable, generate the design with the synthesis options "Global" in the **Generate Output Products** settings. After generating the design, the design top-level RTL file should be edited and the ORDERING parameter should be changed to "RELAXED."

Precharge Policy

The controller implements an aggressive precharge policy. The controller examines the input queue of requests as each transaction completes. If no requests are in the queue for a currently open bank/row, the controller closes it to minimize latency for requests to other rows in the bank. Because the queue depth is equal to the number of bank machines, greater efficiency can be obtained by increasing the number of bank machines (nBANK_MACHS).

As this number is increased, FPGA logic timing becomes more challenging. In some situations, the overall system efficiency can be greater with an increased number of bank machines and a lower memory clock frequency. Simulations should be performed with the target design command behavior to determine the optimum setting.

Note: The overall read latency of the MIG 7 series LPDDR2 core is dependent on how the Memory Controller is configured, but most critically on the target traffic/access pattern and the number of commands already in the pipeline before the read command is issued. Read latency is measured from the point where the read command is accepted by the user or native interface. Simulation should be run to analyze read latency.

PHY

The PHY provides a physical interface to an external LPDDR2 SDRAM. The PHY generates the signal timing and sequencing required to interface to the memory device. It contains the clock-, address-, and control-generation logic, write and read datapaths, and state logic for initializing the SDRAM after power-up. In addition, the PHY contains calibration logic to perform timing training of the read and write datapaths to account for system static and dynamic delays.

The PHY is provided as a single HDL codebase for LPDDR2 SDRAMs. The MIG tool customizes the SDRAM type and numerous other design-specific parameters through top-level HDL parameters and constraints contained in a XDC file.

Overall PHY Architecture

The 7 series FPGA PHY is composed of dedicated blocks and soft calibration logic. The dedicated blocks are structured adjacent to one another with back-to-back interconnects to minimize the clock and datapath routing necessary to build high-performance physical layers. Dedicated clock structures within an I/O bank referred to as byte group clocks help minimize the number of loads driven by the byte group clock drivers. Byte group clocks are driven by phaser blocks. The phaser blocks (PHASER_IN and PHASER_OUT) are multi-stage programmable delay line loops that can dynamically track DQS signal variation and provide precision phase adjustment.

Each 7 series FPGA I/O bank has dedicated blocks comprising a PHY control block, four PHASER_IN and PHASER_OUT blocks, four IN/OUT_FIFOs, IOLOGIC (ISERDES, OSERDES, ODDR, IDELAY), and IOBs. Four byte groups exist in an I/O bank, and each byte group contains the PHASER_IN and PHASER_OUT, IN_FIFO and OUT_FIFO, and twelve IOLOGIC and IOB blocks. Ten of the twelve IOIs in a byte group are used for DQ and DM bits, and the other two IOIs are used to implement differential DQS signals. Figure 4-47 shows the dedicated blocks available in a single I/O bank. A single PHY control block communicates with all four PHASER_IN and PHASER_OUT blocks within the I/O bank.

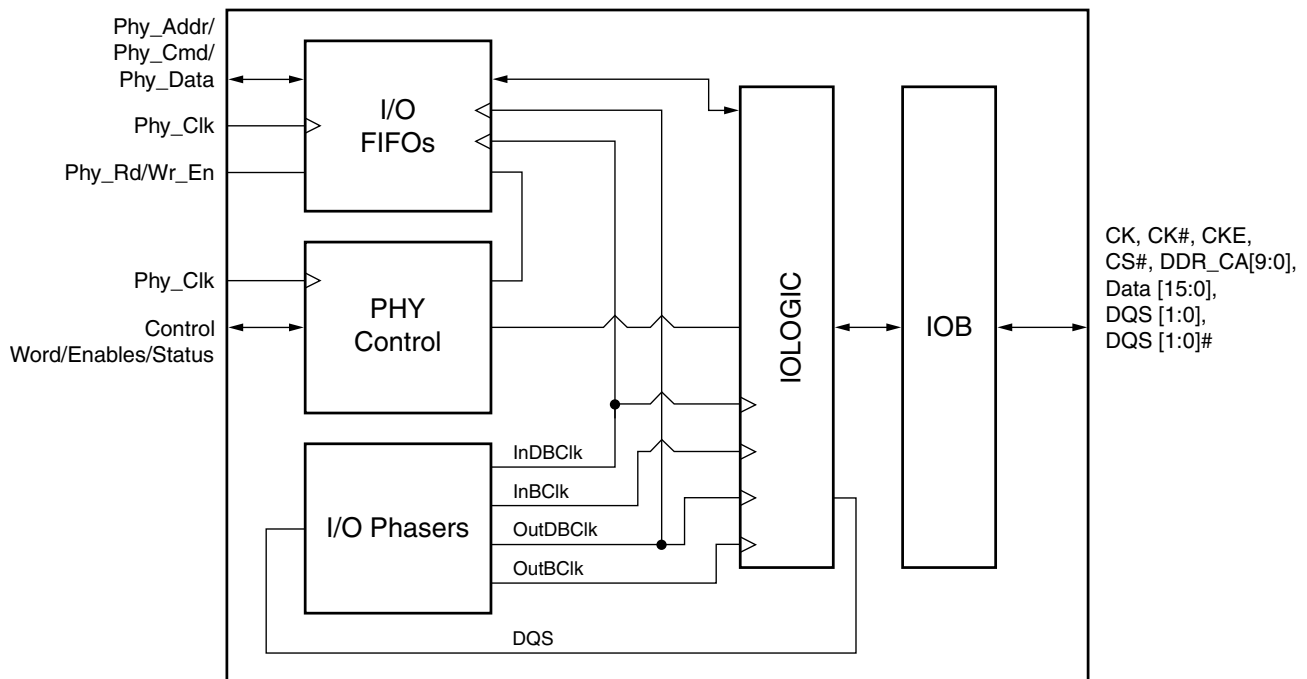


Figure 4-47: Single Bank LPDDR2 PHY Block Diagram

The Memory Controller and calibration logic communicate with this dedicated PHY in the slow frequency clock domain, which is either a divided by 4 or divided by 2 version of the LPDDR2 memory clock. A block diagram of the PHY design is shown in Figure 4-48.

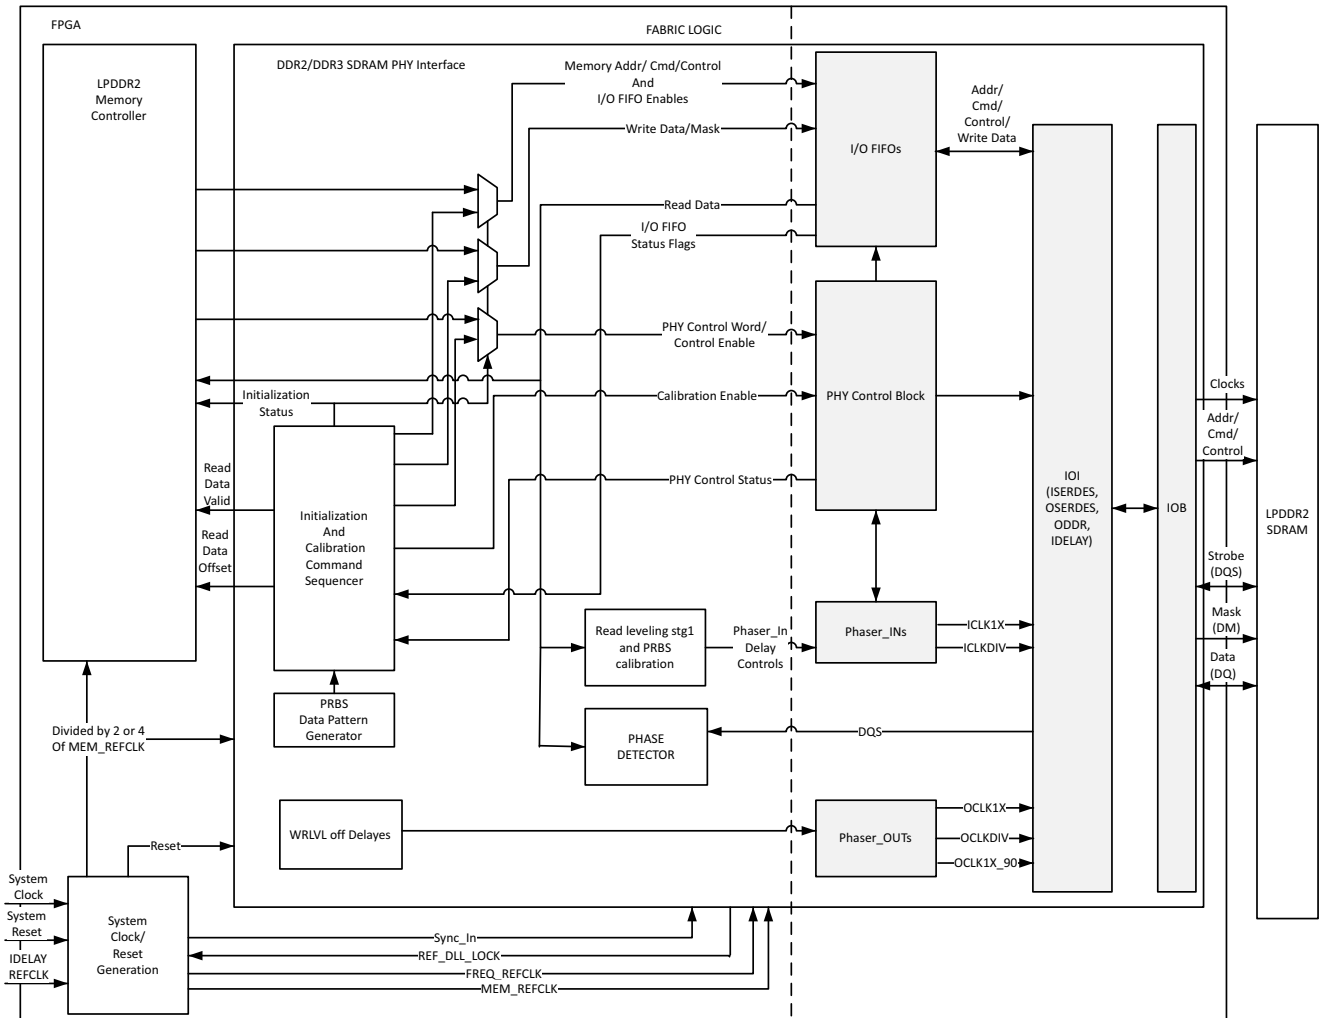


Figure 4-48: PHY Block Diagram

Memory Initialization and Calibration Sequence

After deassertion of system reset, the PHY performs the required power-on initialization sequence for the memory. This is followed by several stages of timing calibration for both the write and read datapaths. After calibration is complete, the PHY indicates that initialization is finished, and the controller can begin issuing commands to the memory.

Figure 4-49 shows the overall flow of memory initialization and the different stages of calibration.

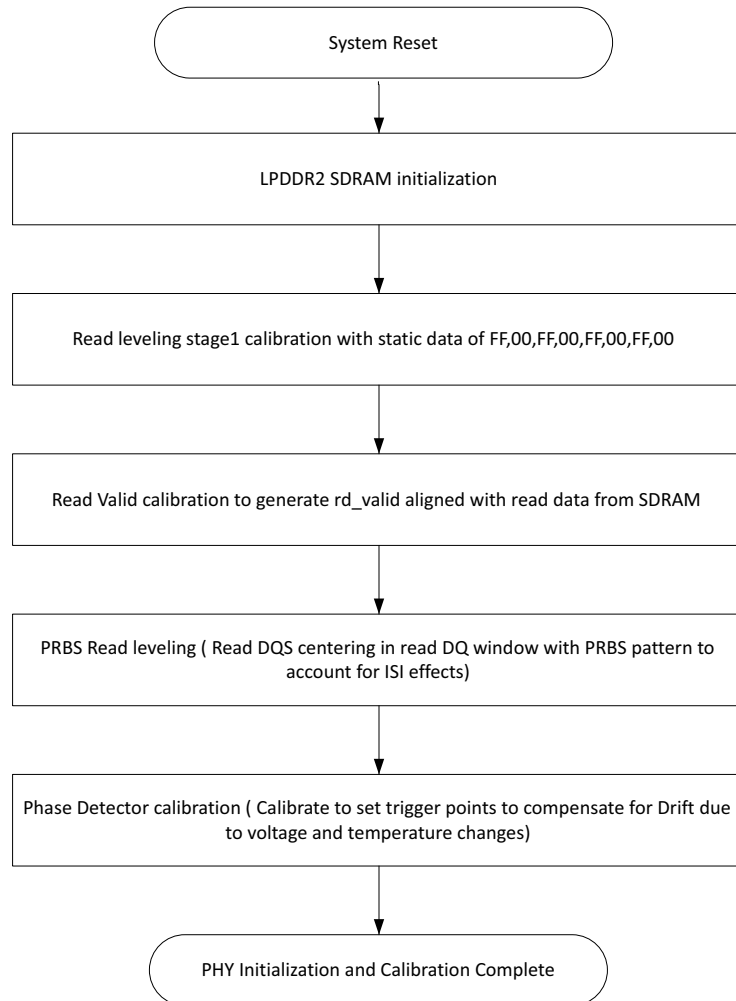


Figure 4-49: **PHY Overall Initialization and Calibration Sequence**

The calibration stages in [Figure 4-49](#) correspond to these sections:

- [Memory Initialization, page 604](#)
- [Read Leveling, page 604](#)
- [Read Valid Calibration, page 607](#)
- [PRBS Read Leveling, page 607](#)
- [Phase Detector, page 608](#)

I/O Architecture

Each 7 series FPGA I/O bank has dedicated blocks comprising a PHY control block, four PHASER_IN and PHASER_OUT blocks, four IN/OUT_FIFOs, ISERDES, OSERDES, ODDR, IDELAY, and IOBs. A single PHY control block communicates with all four PHASER_IN and PHASER_OUT blocks within the I/O bank.

PHY Control Block

The PHY control block is the central block that manages the flow of data and control information between the FPGA logic and the dedicated PHY. This includes control over the flow of address, command, and data between the IN/OUT_FIFOs and ISERDES/OSERDES, and control of the PHASER_IN and PHASER_OUT blocks. The PHY control block receives control words from the calibration logic or the Memory Controller at the slow frequency (1/2 the frequency of the LPDDR2 SDRAM clock) PHY_Clk rate and processes the control words at the LPDDR2 SDRAM clock rate (CK frequency).

The calibration logic or the Memory Controller initiates a LPDDR2 SDRAM command sequence by writing address, command, and data (for write commands) into the IN/OUT_FIFOs and simultaneously or subsequently writes the PHY control word to the PHY control block. The PHY control word defines a set of actions that the PHY control block does to initiate the execution of a LPDDR2 SDRAM command.

The PHY control block provides the control interfaces to the byte group blocks within its I/O bank. When multi-I/O bank implementations are required, each PHY control block within a given I/O bank controls the byte group elements in that bank. This requires that the PHY control blocks stay in phase with their adjacent PHY control blocks. The center PHY control block is configured to be the master controller for a three I/O bank implementation. For two bank implementations, either PHY control block can be designated the master.

The PHY control interface is used by the calibration logic or the Memory Controller to write PHY control words to the PHY. The signals in this interface are synchronous to the PHY_Clk and are listed in [Table 4-21](#). This is a basic FIFO style interface. Control words are written into the control word FIFO on the rising edge of PHY_Clk when PHY_Ctl_WrEn is High and PHY_Ctl_Full is Low. For multi-I/O bank PHYs, the same control word must be written into each PHY control block for proper operation.

Table 4-21: PHY Control Interface

Signal	Direction	Description
PHY_Clk	Input	This is the PHY interface clock for the control word FIFO. PHY control word signals are captured on the rising edge of this clock.
PHY_Ctl_Wr_N	Input	This active-Low signal is the write enable signal for the control word FIFO. A control word is written into the control word FIFO on the rising edge of PHY_Clk, when this signal is active.
PHY_Ctl_Wd[31:0]	Input	This is the PHY control word described in Table 4-22 .
PHY_Ctl_Full	Output	This active-High output is the full flag for the control word FIFO. It indicates that the FIFO cannot accept anymore control words and blocks writes to the control word FIFO.
PHY_Ctl_AlmostFull	Output	This active-High output is the almost full flag for the control word FIFO. It indicates that the FIFO can accept no more than one additional control word as long as the PHY_Ctl_Full signal is inactive.
PHY_Ctl_Ready	Output	This active-High output becomes set when the PHY control block is ready to start receiving commands.

The PHY control word is broken down into several fields, as shown in [Table 4-22](#).

Table 4-22: PHY Control Word

31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
Act Pre	Event Delay			CAS Slot		Seq		Data Offset						Reser ved		Low Index		Aux_Out				Control Offset				PHY Cmd					

- **PHY Command** – This field defines the actions undertaken by the PHY control block to manage command and data flow through the dedicated PHY. The PHY commands are:
 - Write (Wr – 0x01) – This command instructs the PHY control block to read the address, command, and data OUT_FIFOs and transfer the data read from those FIFOs to their associated IOIs.
 - Read (Rd – 0x03) – This command instructs the PHY control block to read the address, command OUT_FIFOs, and transfer the data read from those FIFOs to their associated IOIs. In addition, data read from the memory is transferred after its arrival from the data IOIs to the Data IN_FIFO.
 - Non-Data (ND – 0x04) – This command instructs the PHY control block to read the address and command OUT_FIFOs and transfer the data read from those FIFOs to their associated IOIs.
- **Control Offset** – This field is used to control when the address and command IN/OUT_FIFOs are read and transferred to the IOIs. The control offset is in units of the LPDDR2 SDRAM clock cycle.
- **Auxiliary Output** – This field is used to control when the auxiliary output signals (`Aux_Output[3:0]`) are used. Auxiliary outputs can be configured to activate during read and write commands. The timing offset and duration are controlled by the attributes described in [Table 4-23, page 598](#). These outputs are not used by the LPDDR2 interface generated by the MIG tool; they are set to 0.
- **Low Index (Bank)** – The dedicated PHY has internal counters that require this field to specify which of the eight LPDDR2 SDRAM banks to use for the data command. The MIG IP core does not use these internal counters; therefore, this field should be all zeros.
- **Reserved** – This field must always be set to 2'b00.
- **Data Offset** – This field is used to control when the data IN/OUT_FIFOs are read or written based on the PHY command. The data offset is in units of the LPDDR2 SDRAM clock cycle.
- **Seq** – This field contains a sequence number used in combination with the `Sync_In` control signal from the PLL to keep two or more PHY control blocks executing the commands read from their respective control queues in sync. Commands with a given seq value must be executed by the command parser within the PHY control block during the specific phase indicated by the Seq field.
- **CAS Slot** – The slot number being used by the Memory Controller for write/read (CAS) commands.

- **Event Delay** – The dedicated PHY has internal counters that require this field to specify the delay values loaded into these counters. The event delay is in units of LPDDR2 SDRAM clock cycles. The MIG IP core does not use these internal counters; therefore, this field should be all zeros.
- **Activate Precharge** – The dedicated PHY has internal counters that require this field to specify the type of LPDDR2 command related to the event delay counter. Valid values are:
 - 00: No action
 - 01: Activate
 - 10: Precharge
 - 11: Precharge/Activate.

The MIG IP core does not use these internal counters; therefore, this field should be all zeros.

Table 4-23: Auxiliary Output Attributes

Attribute	Type	Description
MC_AO_WRLVL_EN	Vector[3:0]	This attribute specifies whether or not the related Aux_Output is active during write leveling as specified by the PC_Enable_Calib[1] signal. For example, this attribute specifies whether ODT is active during write leveling.
WR_CMD_OFFSET_0	Vector[5:0]	This attribute specifies how long in LPDDR2 SDRAM clock cycles after the associated write command is executed that the auxiliary output becomes active. For example, this attribute ensures that the ODT signal is asserted at the correct clock cycle to meet the JEDEC ODTLon and ODTLoff specifications.
WR_DURATION_0	Vector[5:0]	This attribute specifies how long in LPDDR2 SDRAM clock cycles the auxiliary output remains active for a write command. For example, this attribute ensures that the ODT signal is asserted at the correct clock cycle to meet the JEDEC ODTLon and ODTLoff specifications.
RD_CMD_OFFSET_0	Vector[5:0]	This attribute specifies how long in LPDDR2 SDRAM clock cycles after the associated read command is executed that the auxiliary output becomes active.
RD_DURATION_0	Vector[5:0]	This attribute specifies how long in LPDDR2 SDRAM clock cycles the auxiliary output remains active for a read command.
WR_CMD_OFFSET_1	Vector[5:0]	This attribute specifies how long in LPDDR2 SDRAM clock cycles after the associated write command is executed that the auxiliary output becomes active.
WR_DURATION_1	Vector[5:0]	This attribute specifies how long in LPDDR2 SDRAM clock cycles the auxiliary output remains active for a write command.
RD_CMD_OFFSET_1	Vector[5:0]	This attribute specifies how long in LPDDR2 SDRAM clock cycles after the associated read command is executed that the auxiliary output becomes active.

Table 4-23: Auxiliary Output Attributes (Cont'd)

Attribute	Type	Description
RD_DURATION_1	Vector[5:0]	This attribute specifies how long in LPDDR2 SDRAM clock cycles the auxiliary output remains active for a read command.
WR_CMD_OFFSET_2	Vector[5:0]	This attribute specifies how long in LPDDR2 SDRAM clock cycles after the associated write command is executed that the auxiliary output becomes active.
WR_DURATION_2	Vector[5:0]	This attribute specifies how long in LPDDR2 SDRAM clock cycles the auxiliary output remains active for a write command.
RD_CMD_OFFSET_2	Vector[5:0]	This attribute specifies how long in LPDDR2 SDRAM clock cycles after the associated read command is executed that the auxiliary output becomes active.
RD_DURATION_2	Vector[5:0]	This attribute specifies how long in LPDDR2 SDRAM clock cycles the auxiliary output remains active for a read command.
WR_CMD_OFFSET_3	Vector[5:0]	This attribute specifies how long in LPDDR2 SDRAM clock cycles after the associated write command is executed that the auxiliary output becomes active.
WR_DURATION_3	Vector[5:0]	This attribute specifies how long in LPDDR2 SDRAM clock cycles the auxiliary output remains active for a write command.
RD_CMD_OFFSET_3	Vector[5:0]	This attribute specifies how long in LPDDR2 SDRAM clock cycles after the associated read command is executed that the auxiliary output becomes active.
RD_DURATION_3	Vector[5:0]	This attribute specifies how long in LPDDR2 SDRAM clock cycles the auxiliary output remains active for a read command.
CMD_OFFSET	Vector[5:0]	This attribute specifies how long in LPDDR2 SDRAM clock cycles after the associated command is executed that the auxiliary output defined by AO_TOGGLE toggles.
AO_TOGGLE	Vector[3:0]	This attribute specifies which auxiliary outputs are in toggle mode. An auxiliary output in toggle mode is inverted when its associated AO bit is set in the PHY control word after the CMD_OFFSET has expired.

The PHY control block has several counters that are not enabled because the synchronous mode is used where PHY_Clk is 1/2 the frequency of the LPDDR2 SDRAM clock frequency.

At every rising edge of PHY_Clk, a PHY control word is sent to the PHY control block with information for two memory clock cycles worth of commands and a 2-bit Seq count value. The write enable to the control FIFO is always asserted and no operation (NOP) commands are issued between valid commands in the synchronous mode of operation. The Seq count must be increased with every command sequence of four. The Seq field is used to synchronize PHY control blocks across multiple I/O banks.

The PHY control block, in conjunction with the PHASER_OUT, generates the write DQS and the DQ/DQS 3-state control signals during read and write commands.

The PHY cmd field is set based on whether the sequence of two commands has either a write, a read, or neither. The PHY cmd field is set to write if there is a write request in the command sequence. It is set to read if there is a read request in the command sequence, and it is set to non-data if there is neither a write nor a read request in the command sequence. A write and a read request cannot be issued within a sequence of two commands. The control offset field in the PHY control word defines when the command OUT_FIFOs is read out and transferred to the IOLOGIC. The data offset defines when the data OUT_FIFOs are read out with respect to the command OUT_FIFOs being read. For read commands, the data offset is set to zero. The PHY control block assumes that valid data associated with a write command is already available in the DQ OUT_FIFO when it is required to be read out.

Command Path

A command requested by the calibration logic or Memory Controller is sent out as a PHY control word to the PHY control block and a simultaneous input to the address/control/command OUT_FIFOs. Each of the address/control/command signals must have values for two memory clock cycles because each PHY_Clk cycle entails two memory clock cycles.

There are three types of commands:

- Write commands including write and write with auto precharge. The PHY command values in the PHY control word for both these write commands are the same (0x01). The difference is the address value input to the OUT_FIFO. Address bit CA[0] bit on falling edge of CK is 1 for writes with auto precharge in the address OUT_FIFOs.
- Read commands including read and read with auto precharge. The PHY command values in the PHY control word for both these read commands are the same (0x11). The difference is the address value input to the OUT_FIFO. Address bit CA[0] bit on falling edge of CK is 1 for reads with auto precharge in the address OUT_FIFOs.
- Non-Data commands including Mode Register Set, Refresh, Precharge, Precharge All Banks, Activate, No Operation, and Deselect. The PHY command values in the PHY control word for all these commands are the same (0x100). The ca value inputs to the OUT_FIFOs associated with these commands differ.

Figure 4-50 shows the block diagram of the address/control/command path. The OSERDES is used in single data rate mode because address/control/commands are DDR signals. A PHY control word is qualified with the `Phy_Ctl_Wr_N` signal and an entry to the OUT_FIFOs is qualified with the `PHY_Cmd_WrEn` signal. The FPGA logic need not issue NOP commands during long wait times between valid commands to the PHY control block because the default in the dedicated PHY for address/commands can be set to 0 or 1 as needed.

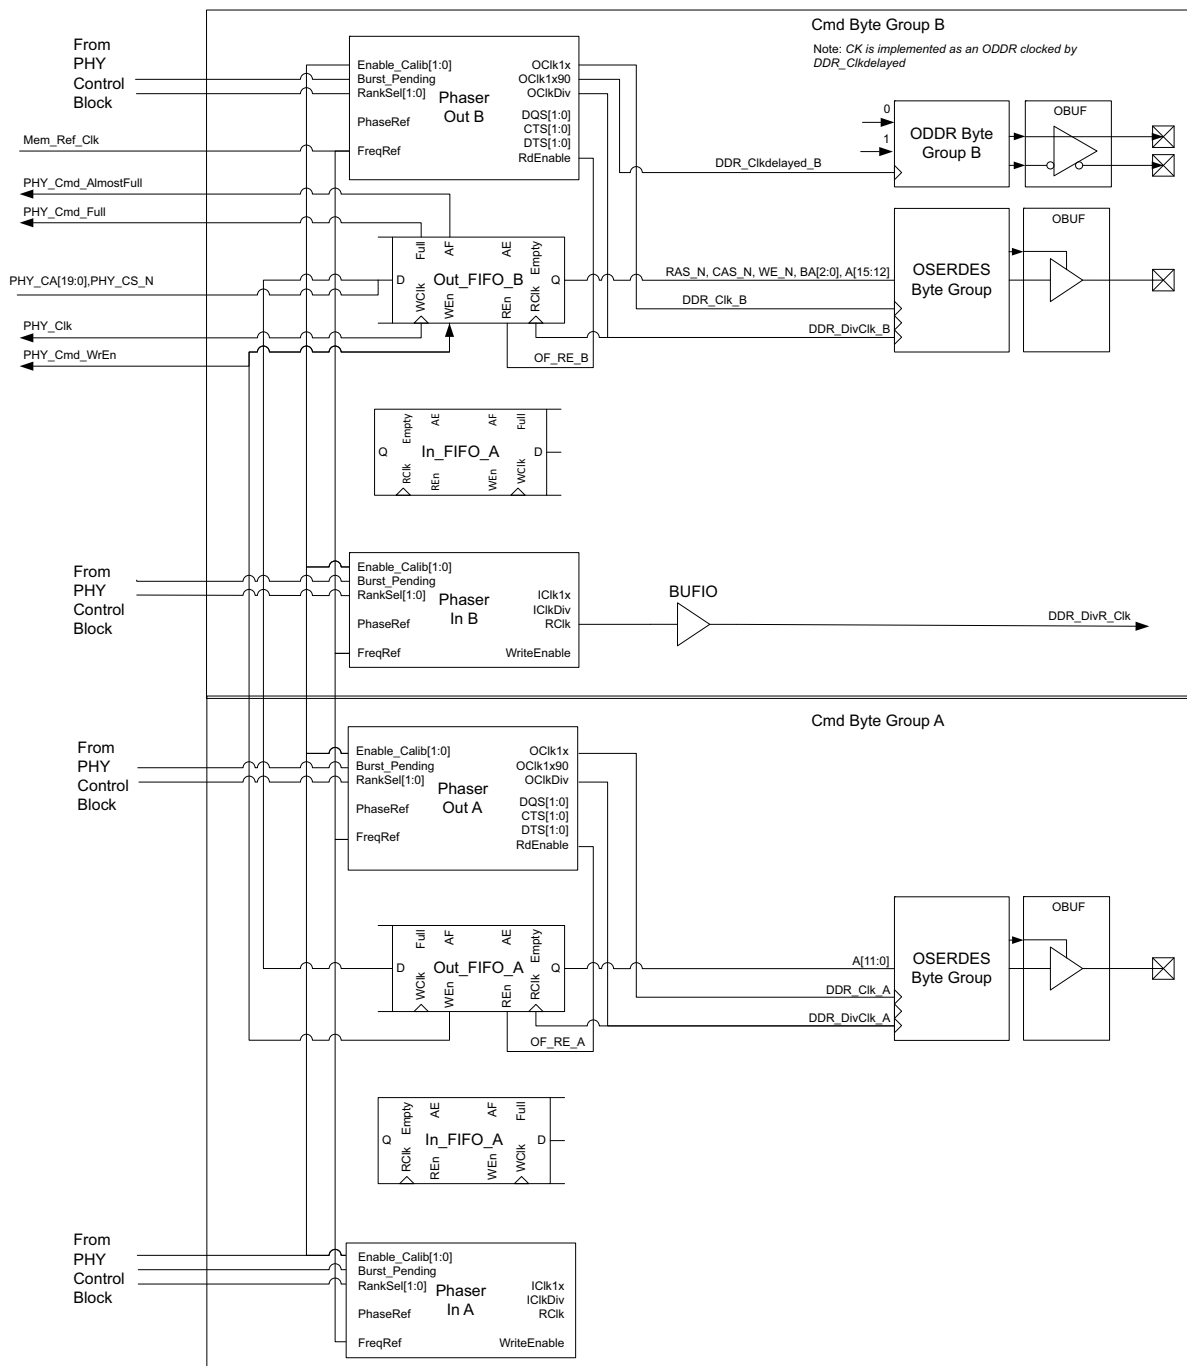


Figure 4-50: Address/Command Path Block Diagram

The timing diagram of the address/command path from the output of the OUT_FIFO to the FPGA pins is shown in Figure 4-51.

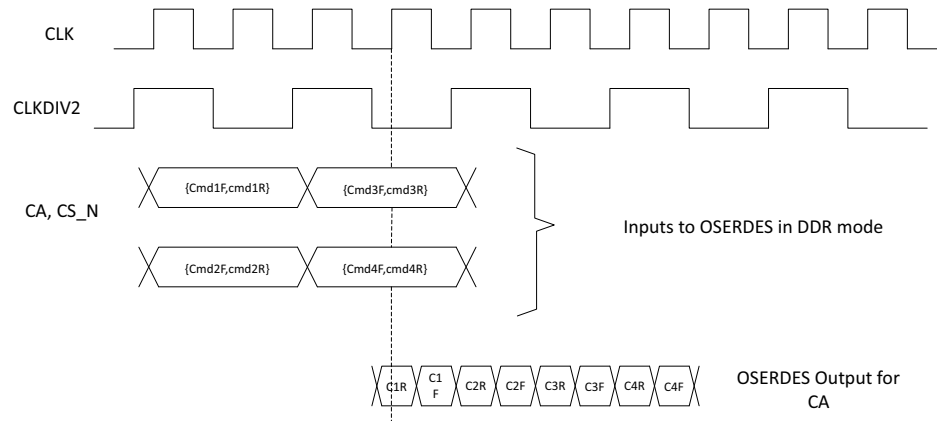


Figure 4-51: Address/Command Timing Diagram

Datapath

The datapath comprises the write and read datapaths. The datapath in the 7 series FPGA is completely implemented in dedicated logic with IN/OUT_FIFOs interfacing the FPGA logic. The IN/OUT_FIFOs provide datapath serialization/deserialization in addition to clock domain crossing, thereby allowing the FPGA logic to operate at low frequencies up to 1/2 the frequency of the LPDDR2 SDRAM clock. [Figure 4-52](#) shows the block diagram of the datapath.

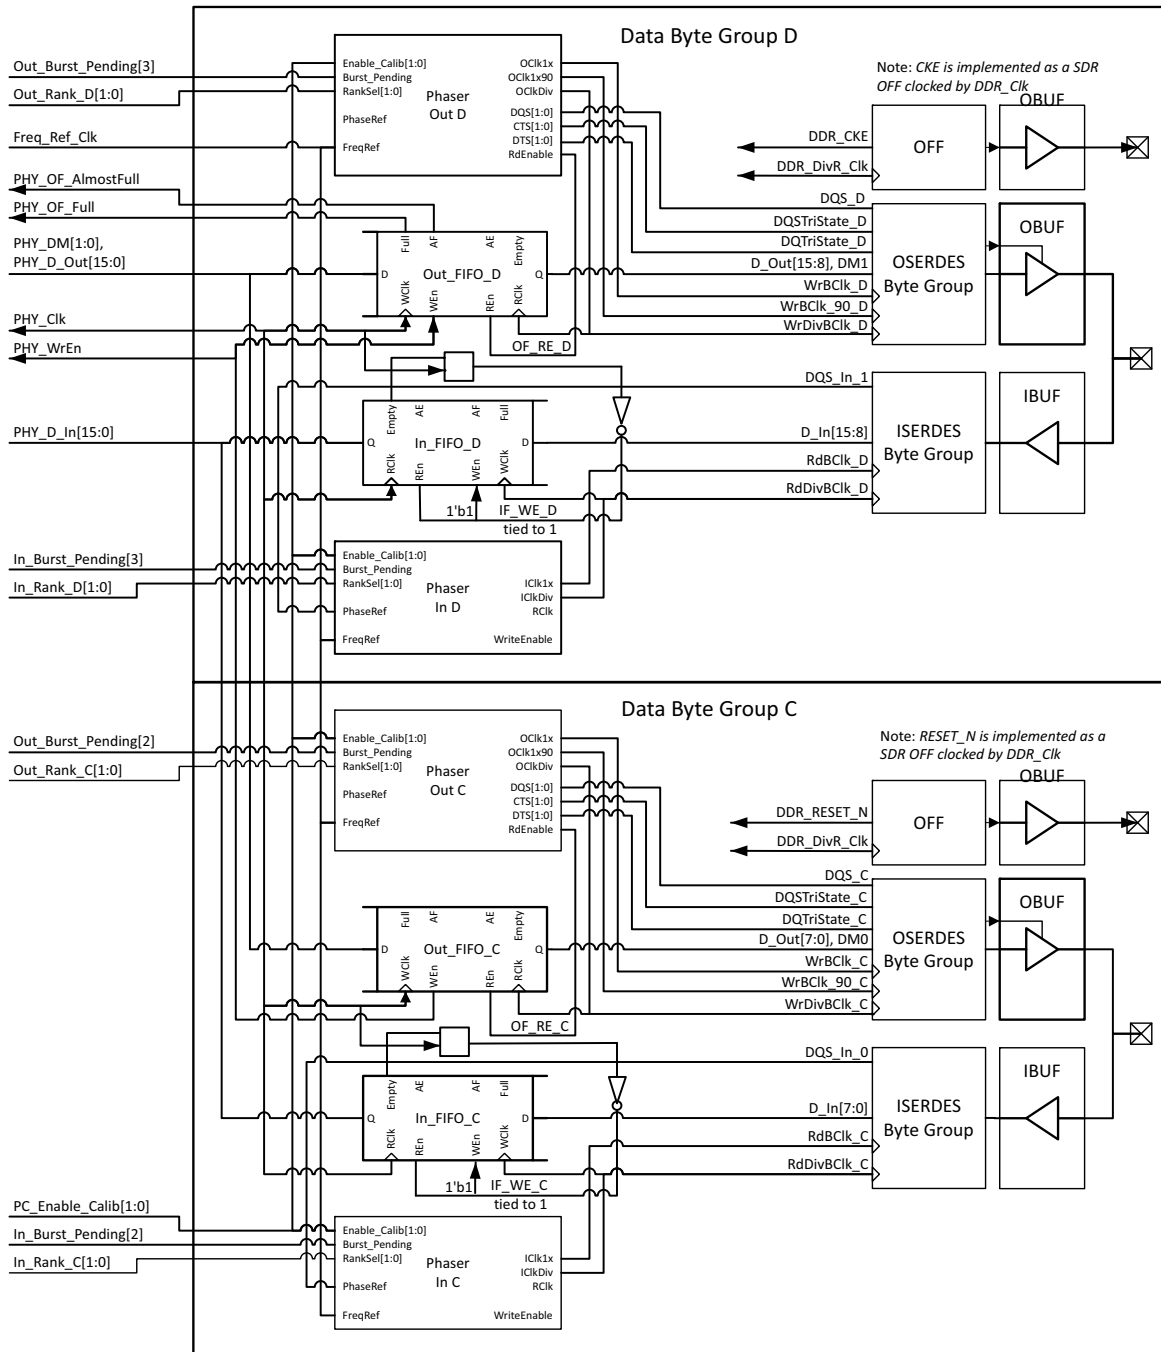


Figure 4-52: Datapath Block Diagram

Each IN/OUT_FIFO has a storage array of memory elements arranged as 10 groups eight bits wide and eight entries deep. During a write, the OUT_FIFO receives four bits of data for each DQ bit from the calibration logic or Memory Controller and writes the data into the storage array in the PHY_Clk clock domain, which is 1/2 the frequency of the LPDDR2 SDRAM clock.

The OUT_FIFO outputs the 4-bit data to the OSERDES in the OCLKDIV domain that is half the frequency of the LPDDR2 SDRAM clock. The OSERDES further serializes the 4-bit data to a serial DDR data stream in the OCLK domain. The PHASER_OUT clock output OCLK is used to clock DQ bits whereas the OCLK_DELAYED output is used to clock DQS to achieve the 90° phase offset between DQS and its associated DQ bits during writes.

The IN_FIFO shown in [Figure 4-51](#) receives 4-bit data from each DQ bit ISERDES in a given byte group and writes them into the storage array. This 4-bit parallel data is output in the PHY_Clk clock domain which is 1/2 the frequency of the LPDDR2 SDRAM clock. Each read cycle from the IN_FIFO contains half the byte data read during a burst length eight memory read transaction. Therefore, two cycles are required to get burst length eight worth of data. The data bus width input to the dedicated PHY is 4x that of the LPDDR2 SDRAM when running the FPGA logic at 1/2 the frequency of the LPDDR2 SDRAM clock.

Calibration and Initialization Stages

Memory Initialization

The PHY executes a JEDEC®-compliant LPDDR2 initialization sequence for memory following deassertion of system reset. Each LPDDR2 SDRAM has a series of mode registers, accessed through mode register write (MRW) commands. These mode registers determine various SDRAM behaviors, such as burst length, read and write CAS latency, and others. The particular bit values programmed into these registers are configurable in the PHY and determined by the values of top-level HDL parameters like BURST_MODE (BL), BURST_TYPE, CAS latency (CL), CAS write latency (CWL), write recovery for auto precharge (tWR).

Read Leveling

Read leveling stage 1 is required to center align the read strobe in the read valid data window for the first stage of capture. In strobe-based memory interfaces like LPDDR2 SDRAM, the second stage transfer requires an additional pulse which in 7 series FPGAs is provided by the PHASER_IN block. This stage of calibration uses the PHASER_IN stage 2 fine delay line to center the capture clock in the valid DQ window. The capture clock is the free-running `FREQ_REF` clock. A PHASER_IN provides two clock outputs namely `ICLK` and `ICLKDIV`. `ICLK` is the stage 2 delay output and `ICLKDIV` is the rising edge aligned divided by 2 version of `ICLK`.

The `ICLK` and `ICLKDIV` outputs of one PHASER_IN block are used to clock all the DQ ISERDES associated with one byte. The `ICLKDIV` is also the write clock for the read DQ IN_FIFOs. One PHASER_IN block is associated with a group of 12 I/Os. Each I/O bank in the 7 series FPGA has four PHASER_IN blocks, and hence four bytes for LPDDR2 SDRAM can be placed in a bank.

Implementation Details

This stage of read leveling is performed one byte at a time where each DQS is center aligned to its valid byte window. At the start of this stage, a write command is issued to a specified LPDDR2 SDRAM address location with a predefined data pattern. The write data pattern used is static pattern of FF, 00, FF, 00, FF, 00, FF, 00. This write command is followed by back-to-back read commands to continuously read data back from the same address location that was written to.

The algorithm first increments the PHASER_IN stg2 fine delay taps for all DQ bits in a byte simultaneously until an edge is detected. The STG2 fine tap are increased until a edge is found. If no edge is found then the STG2 fine taps are decreased to their initial positions.

The calibration logic reads data out of the IN_FIFO and records it for comparison. The data pattern sequence is important for this stage of calibration. No assumption is made about the initial relationship between DQS and the data window at tap 0 of the fine delay line. The algorithm then delays DQ using the IDELAY taps until a DQ window edge is detected.

An averaging algorithm is used for data window detection where data is read back over multiple cycles at the same tap value. The number of sampling cycles is set to 214. In addition to averaging, there is also a counter to track whether DQS is positioned in the unstable jitter region. A counter value of 3 means that the sampled data value was constant for three consecutive tap increments and DQS is considered to be in a stable region. The counter value is reset to 0 whenever a value different from the previous value is detected.

The next step is to increment the IDELAY tap values one tap at a time until a data mismatch is detected. The data read out of IN_FIFO after the required settling time is then compared with the recorded data at the previous tap value. This is repeated until a data mismatch is found, indicating the detection of a valid data window edge. A valid window is the number of IDELAY taps for which the stable counter value is a constant 3. This algorithm mitigates the risk of detecting a FALSE valid edge in the unstable jitter regions.

There are three possible scenarios for the initial DQS position with respect to the data window. The first valid rising edge of DQS could either be in the previous data window, in the left noise region of the current data window, or just past the left noise region inside the current data window.

The PHASER_IN fine delay line has 64 taps. (A bit time worth of taps. Tap resolution therefore changes with frequency.)

First, the PHASER_IN fine delay lines are used to find the start of right noise region. In the first two cases, right noise region would be found with PHASER_IN fine tap increments less than 64 taps. After the right noise region is found with FINE taps, proceed to use IDELAY taps to find the start of left noise region by delaying the DATA.

In the third scenario, because operating in frequencies < 400 MHz and PHASER_IN is operating in DIV2 mode, you would not be able to find the right noise region with 64 taps. Thus, assume that you are close to left noise region and bring back the PHASER_IN fine taps values to their initial position. After the PHASER_IN fine taps increments/decrements, use IDELAY taps to delay the DQ to find both the edges (third case). When both edges are detected, the final DQS tap value is computed as:

$$\text{first_edge_taps} + (\text{second_edge_taps} - \text{first_edge_taps})/2.$$

When only one edge is detected, the final DQS tap value is computed as:

$$(\text{first_edge_taps} + (31 - \text{first_edge_taps})/2)$$

Figure 4-53 shows the timing diagram for DQS center alignment in the data valid window.

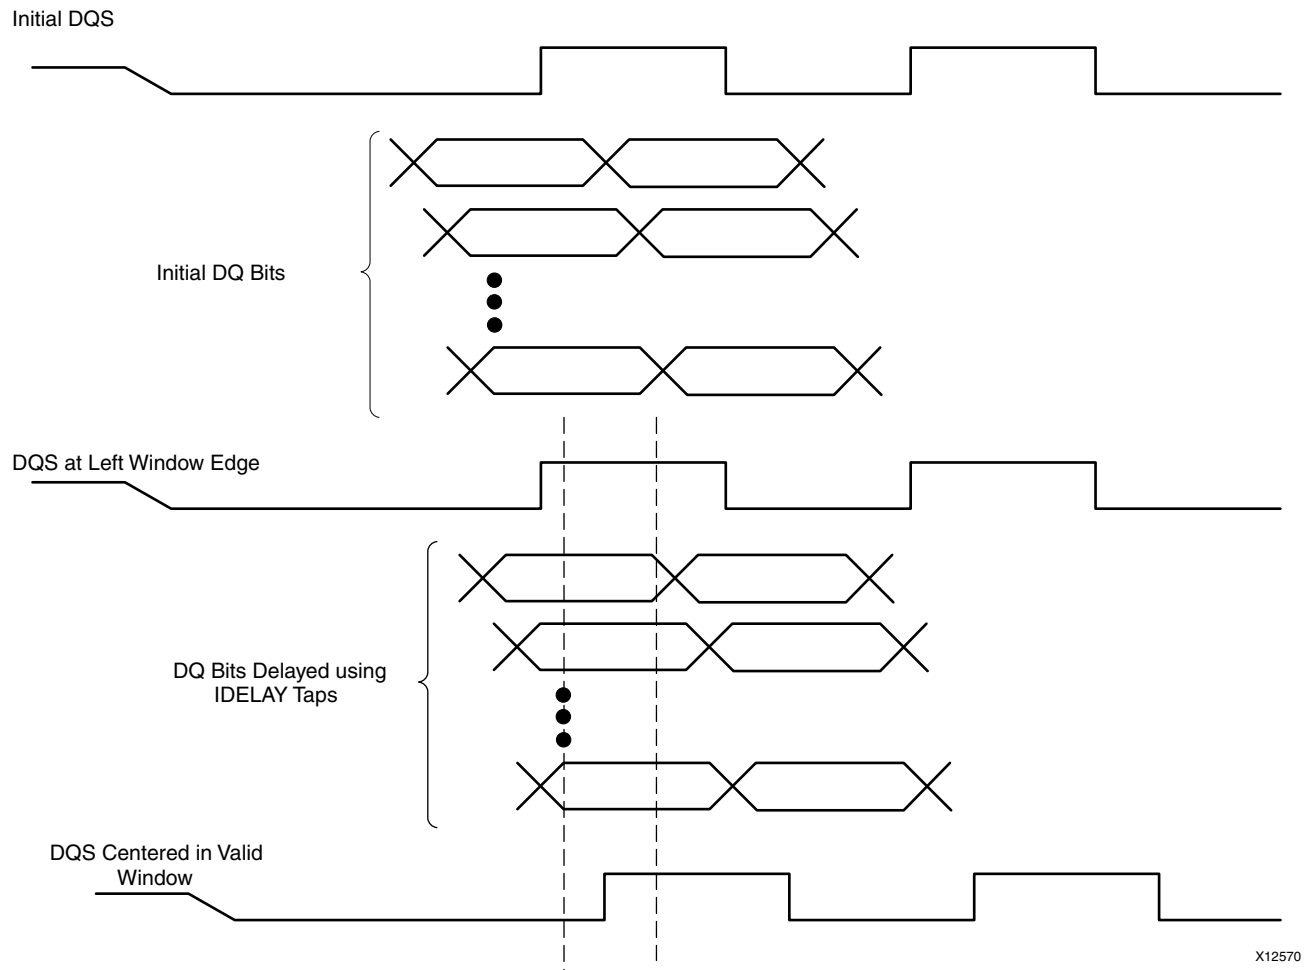


Figure 4-53: Read Leveling Stage 1 Timing Diagram

Read Valid Calibration

During read valid calibration, PHY generates delay count to align the internal Read Valid with the correct read data. In LPDDR2, WREN to IN_FIFO is tied to 1, which means it is always writing to the IN_FIFO. The RDEN is tied to inverted registered version of IF_EMPTY, which means it is always reading once and there is a single entry in IN_FIFO. This soft calibration is preformed to generate RD_VALID to validate the correct read data from the SDRAM.

During this stage, PHY perform two sets of three back-to-back writes to a particular bank, row, and incremental column address. The write data pattern written for the first set of writes is FF, FF, FF, FF, FF, FF, FF, FF and write data pattern written for the second set of writes is 55, 55, 55, 55, 55, 55, 55, 55. The data used to perform pattern matching is 55, 55, 55, 55, 55, 55, 55, 55.

During reads, PHY performs three back-to-back reads, with the first and third address used are the second column address for the first set of writes. The second address used is the second column address for the second set of writes performed earlier to SDRAM.

The Read Valid state machine waits for a read to occur and then checks if the pattern is matched. In doing so it also counts the number of cycles used to see the pattern match (correct data of 55, 55, 55, 55, 55, 55, 55, 55). If the state machine does not see a pattern match for delay count of 31, it increments the bitslip count, waits and issues another set of three reads. This process is repeated until either the correct pattern is found and read delay count is finalized or the bitslip count ≤ 3 . If the bitslip count exceeds three, it is considered a calibration failure.

The bitslip count is fed to select inputs of a MUX which shifts the read data captured from the output of ISERDESE2 and aligns it to match the entire rise and fall data in the same cycle.

PRBS Read Leveling

This stage of read calibration follows the Read Leveling calibration stage. The IDELAY tap setting determined during the Read Leveling calibration stage is used as the starting point for this stage of calibration. The PRBS read leveling stage does not change the PHASER_IN fine tap settings determined during the Read Leveling calibration stage.


A 64-bit LFSR generates a 128 long PRBS sequence that is written to the LPDDR2 SDRAM at the start of this calibration stage. This sequence is then read back continuously to determine the read data valid window. An averaging algorithm is used for data window detection where data is read back over multiple cycles at the same tap value. The number of sampling cycles is set to 36'hFFFFFFFF. The algorithm starts at the IDELAY tap setting determined during the Read Leveling calibration stage (initial tap value) and decrements one tap at time until a data mismatch is found when comparing read data with the expected data.

Note that the expected data is generated using the same 64-bit LFSR logic that was used to write the 128 long PRBS sequence to the SDRAM. The data mismatch tap value is recorded as the left edge.

The algorithm then increments to the initial tap value and edge detection begins with every increment after the initial tap value until a data mismatch is found or the tap value is 31. The algorithm then computes the center of the read data valid window based on the detected edges.

Phase Detector

In the 7 series FPGA memory interface design, read DQ is not sampled by the corresponding DQS signal. Instead, read DQ is sampled by a free-running clock operating at the same frequency as the differential SDRAM CK/CK# signals. The free-running clock has a single source for all DQ bits, but the phase of each byte capture clock output can be separately adjusted using IODELAY elements. The phase detector initially locks the phase of each byte-capture clock such that it is in phase with the corresponding DQS signal (Figure 4-54).

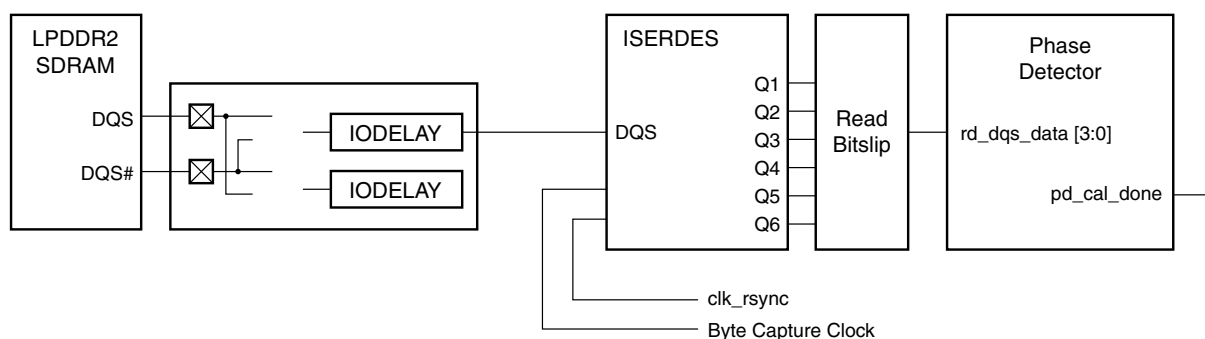

UG406_c1_51_022610

Figure 4-54: Phase Detector Block Diagram

Subsequent changes in capture timing delays after initial calibration due to voltage and temperature changes can be compensated for by maintaining the phase relationship between the byte-capture clock and the corresponding DQS. Periodic dummy reads are required from the Memory Controller to dynamically maintain phase lock between the byte-capture clock and DQS (Figure 4-55).

Periodic compensation can be accomplished by adjusting the phase of the MMCM-generated source capture clock using the fine-phase shift capability of the MMCM.

This method allows fine adjustment of the capture clocks of all bytes simultaneously but does not allow control over individual byte clock phase adjustment.

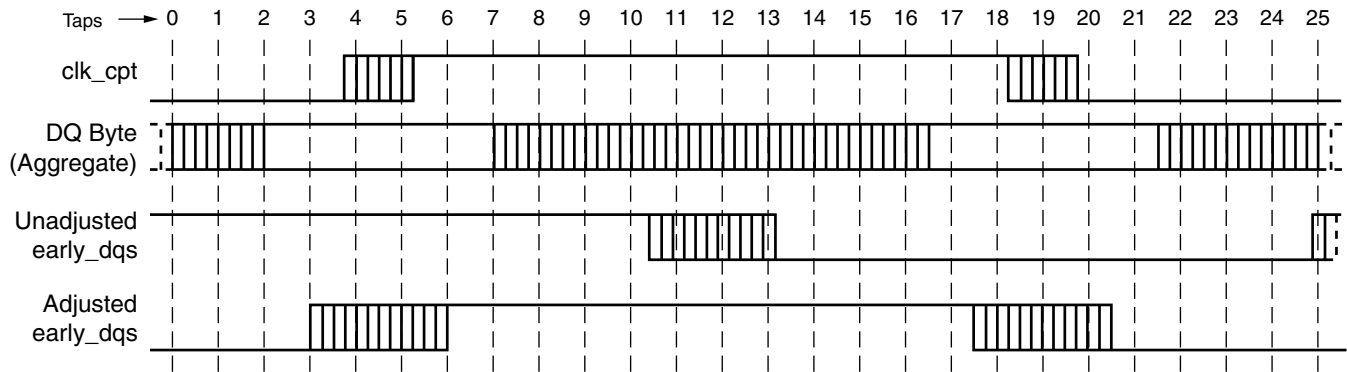


Figure 4-55: Phase Detector Timing Diagram

Memory Controller to PHY Interface

The calibration logic module constructs the PHY control word before sending it to the PHY control block during calibration. After calibration is complete, the `init_calib_complete` signal is asserted and sent to the Memory Controller to indicate that normal operation can begin. To avoid latency increase, the Memory Controller must send commands in the format required by the dedicated PHY block. As a result, the address, command, control, and data buses are multiplexed before being sent to the PHY control block. These buses are driven by the calibration module during the memory initialization and calibration stages and by the Memory Controller during normal operation. Table 4-24 describes the Memory Controller to PHY interface signals. These signals are synchronous to the FPGA logic clock.

Table 4-24: Memory Controller to Calibration Logic Interface Signals

Signal Name	Width	I/O To/From PHY	Type	Description
rst	1	Input	–	The rstdiv0 output from the infrastructure module synchronized to the PHY_Clk domain.
PHY_Clk	1	Input	–	This clock signal is 1/4 the frequency of the LPDDR2 clock.
mem_refclk	1	Input	–	This is the LPDDR2 frequency clock.
freq_refclk	1	Input	–	This signal is the same frequency as mem_refclk between 400 MHz to 933 MHz, and 1/2 or 1/4 of mem_refclk for frequencies below 400 MHz.
sync_pulse	1	Input	–	This is the synchronization pulse output by the PLL.
pll_lock	1	Input	–	The LOCKED output of the PLL instantiated in the infrastructure module.
mc_ca	$[CA_WIDTH \times 2 \times nCK_PER_CLK - 1:0]$	Input	–	mc_ca[2 × CA_WIDTH – 1:0] is the first command address in the sequence of four.

Table 4-24: Memory Controller to Calibration Logic Interface Signals (Cont'd)

Signal Name	Width	I/O To/From PHY	Type	Description
mc_cs_n	$[CS_WIDTH \times nCS_PER_RANK \times nCK_PER_CLK - 1:0]$	Input	–	mc_cs_n [CS_WIDTH – 1:0] is the cs_n associated with the first command in the sequence.
mc_cke	$[nCK_PER_CLK - 1:0]$	Input	–	mc_cke [nCK_PER_CLK – 1:0] is the CKE associated with the DRAM interface. This signal is valid when the CKE_ODT_AUX parameter is set to FALSE.
mc_wrdata	$[2 \times nCK_PER_CLK \times DQ_WIDTH - 1:0]$	Input	–	This is the write data to the dedicated PHY. It is 4x the memory DQ width.
mc_wrdata_mask	$[2 \times nCK_PER_CLK \times (DQ_WIDTH/8) - 1:0]$	Input	–	This is the write data mask to the dedicated PHY. It is 4x the memory DM width.
mc_wrdata_en	1	Input	Active-High	This signal is the WREN input to the DQ OUT_FIFO.
mc_cmd_wren	1	Input	Active-High	This signal is the write enable input of the address/command OUT_FIFOs.
mc_ctl_wren	1	Input	Active-High	This signal is the write enable input to the PHY control word FIFO in the dedicated PHY block.
mc_cmd	[2:0]	Input	–	This signal is used for PHY_Ctl_Wd configuration: 0x04: Non-data command (No column command in the sequence of commands) 0x01: Write command 0x03: Read command
mc_data_offset	[5:0]	Input	–	This signal is used for PHY_Ctl_Wd configuration: 0x00: Non-data command (No column command in the sequence of commands) CWL + COL cmd position: Write command 0x00: Read command
mc_aux_out0	[3:0]	Input	Active-High	This is the auxiliary outputs field in the PHY control word used to control ODT and CKE assertion.
mc_aux_out1	[3:0]	Input	Active-High	This is the auxiliary outputs field in the PHY control word used to control ODT and CKE assertion for four-rank interfaces.
mc_rank_cnt	[1:0]	Input	–	This is the rank accessed by the command sequence in the PHY control word.
phy_mc_ctl_full	1	Output	Active-High	Bitwise AND of all the Almost FULL flags of all the PHY Control FIFOs. The Almost FULL flag is asserted when the FIFO is one entry away from being FULL.

Table 4-24: Memory Controller to Calibration Logic Interface Signals (Cont'd)

Signal Name	Width	I/O To/From PHY	Type	Description
phy_mc_cmd_full	1	Output	Active-High	Bitwise OR of all the Almost FULL flags of all the command OUT_FIFOs. The Almost FULL flag is asserted when the FIFO is one entry away from being FULL.
phy_mc_data_full	1	Output	Active-High	Bitwise OR of all the Almost FULL flags of all the write data OUT_FIFOs. The Almost FULL flag is asserted when the FIFO is one entry away from being FULL.
phy_rd_data	$[2 \times \text{nCK_PER_CLK} \times \text{DQ_WIDTH} - 1:0]$	Output	–	This is the read data from the dedicated PHY. It is 4x the memory DQ width.
phy_rddata_valid	1	Output	Active-High	This signal is asserted when valid read data is available.
calib_rd_data_offset	$[6 \times \text{RANKS} - 1:0]$	Output	–	This signal is the calibrated read data offset value with respect to command 0 in the sequence of four commands.
init_calib_complete	1	Output	Active-High	This signal is asserted after memory initialization and calibration are completed.

Notes:

1. The parameter nCK_PER_CLK defines the number of LPDDR2 SDRAM clock cycles per PHY_Clk cycle.
2. The parameter ROW_WIDTH is the number of LPDDR2 SDRAM ranks.
3. The parameter BANK_WIDTH is the number of LPDDR2 SDRAM banks.
4. The parameter CS_WIDTH is the number of LPDDR2 SDRAM cs_n signals.
5. The parameter CKE_WIDTH is the number of LPDDR2 SDRAM CKE signals.
6. The parameter DQ_WIDTH is the width of the LPDDR2 SDRAM DQ bus.

Designing with the Core

The core is bundled with an example design that can be simulated. The example design can be used as a starting point for the user design or as a reference for debugging purposes.

Only supported modifications should be made to the configuration of the core. See [Customizing the Core, page 621](#) for supported configuration parameters.

Interfacing to the Core


The Memory Controller can be connected using either the UI or the native interface. The UI resembles a simple FIFO interface and always returns the data in order. The native interface offers higher performance in some situations, but is more challenging to use.

The native interface contains no buffers and returns data as soon as possible, but the return data might be out of order. The application must reorder the received data internally if the native interface is used and reordering is enabled. The following sections describe timing protocols of each interface and how they should be controlled.


User Interface

The mapping between the User Interface address bus and the physical memory row, bank and column can be configured. Depending on how the application data is organized, addressing scheme Bank- Row-Column or Row-Bank-Column can be chosen to optimize controller efficiency. These addressing schemes are shown in Figure 4-56 and Figure 4-57.

User Address

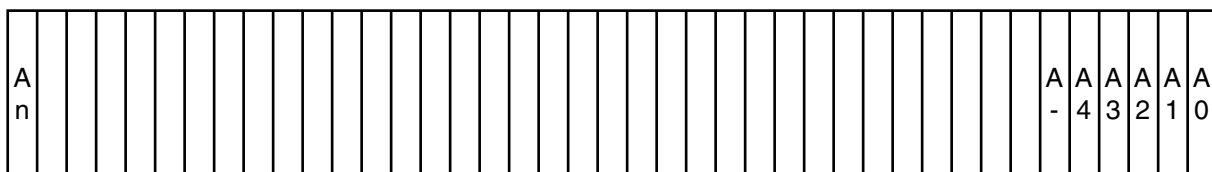


Memory

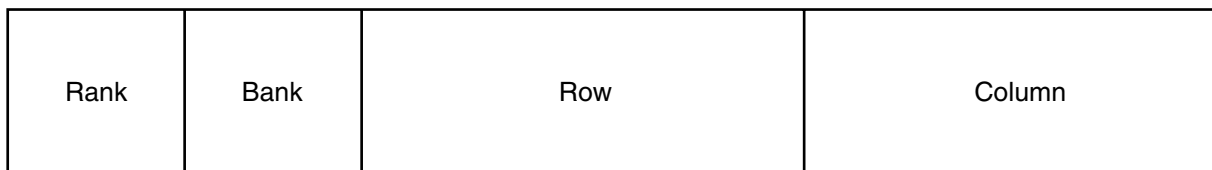


UG586_c1_61_091410

Figure 4-56: Memory Address Mapping for Bank-Row-Column Mode in UI Module

User Address

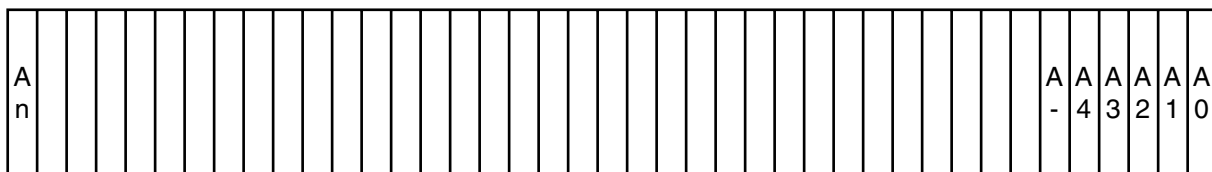

Memory

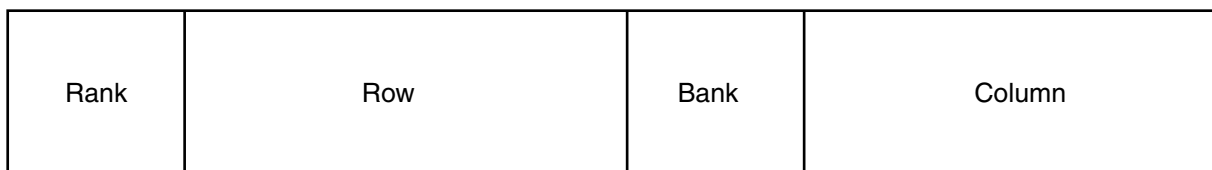

UG586_c1_61a_012411

Figure 4-57: Memory Address Mapping for Row-Bank-Column Mode in UI Module

Figure 4-56 and Figure 4-57 show that the address map is controlled by the string parameter MEM_ADDR_ORDER. This parameter can take the following values:

- **BANK_ROW_COLUMN** – Address map is as shown in Figure 4-56.
- **ROW_BANK_COLUMN** – Address map is as shown in Figure 4-57.
- **TG_TEST** – Address map is used for testing purpose only. It enables the address remap to test address access to different portions of the DRAM. It remaps the address as explained in the following examples. The remap is done within the UI portion of the controller.

Note: The row width, column width, and bank width value settings are assumed for the following examples:

- **Row Width** – 15
- **Bank Width** – 3
- **Column Width** – 10

Example (1) – When the selected option in the MIG GUI is BANK_ROW_COLUMN and the address to the controller is mapped accordingly.

Original Mapping of the Address Bits																												
BANK Address Bits			ROW Address Bits															COLUMN Address Bits										
27	26	25	24	23	22	21	20	19	18	17	16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0	
B2	B1	B0	R14	R13	R12	R11	R10	R9	R8	R7	R6	R5	R4	R3	R2	R1	R0	C9	C8	C7	C6	C5	C4	C3	C2	C1	C0	
Remapped Address with TG_TEST																												
BANK Address Bits			ROW Address Bits															COLUMN Address Bits										
27	26	25	24	23	22	21	20	19	18	17	16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0	
R0	C9	C8	R4	R3	B2	B1	B0	R14	R13	R12	R11	R10	R9	R8	C7	C6	C5	R2	R1	R7	R6	R5	C4	C3	C2	C1	C0	

Example (2) – When the selected option in the MIG GUI is ROW_BANK_COLUMN and the address to the controller is mapped accordingly.

Original Mapping of the Address Bits																											
ROW Address Bits															BANK Address Bits			COLUMN Address Bits									
27	26	25	24	23	22	21	20	19	18	17	16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
R14	R13	R12	R11	R10	R9	R8	R7	R6	R5	R4	R3	R2	R1	R0	B2	B1	B0	C9	C8	C7	C6	C5	C4	C3	C2	C1	C0

Original Mapping of the Address Bits																											
Remapped Address with TG_TEST																											
ROW Address Bits														BANK Address Bits				COLUMN Address Bits									
27	26	25	24	23	22	21	20	19	18	17	16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
R0	C9	C8	R4	R3	B2	B1	B0	R14	R13	R12	R11	R10	R9	R8	C7	C6	C5	R2	R1	R7	R6	R5	C4	C3	C2	C1	C0

Command Path

When the user logic `app_en` signal is asserted and the `app_rdy` signal is asserted from the UI, a command is accepted and written to the FIFO by the UI. The command is ignored by the UI whenever `app_rdy` is deasserted. The user logic needs to hold `app_en` High along with the valid command and address values until `app_rdy` is asserted as shown in Figure 4-58.

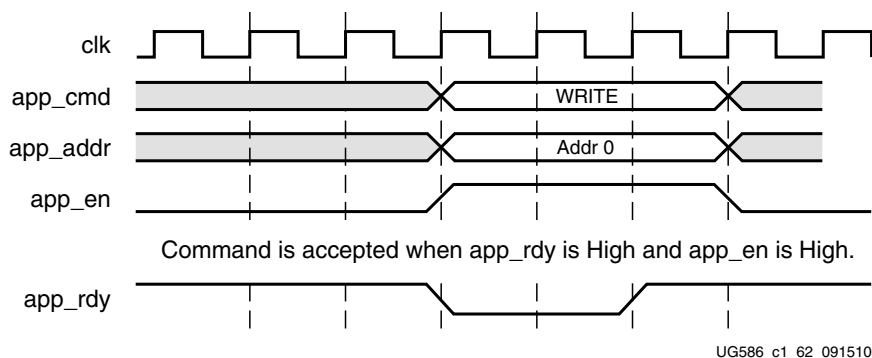


Figure 4-58: UI Command Timing Diagram with `app_rdy` Asserted

A non back-to-back write command can be issued as shown in Figure 4-59. This figure depicts three scenarios for the `app_wdf_data`, `app_wdf_wren`, and `app_wdf_end` signals, as follows:

1. Write data is presented along with the corresponding write command (second half of BL8).
2. Write data is presented before the corresponding write command.
3. Write data is presented after the corresponding write command, but should not exceed the limitation of two clock cycles.

For write data that is output after the write command has been registered, as shown in Note 3, the maximum delay is two clock cycles.

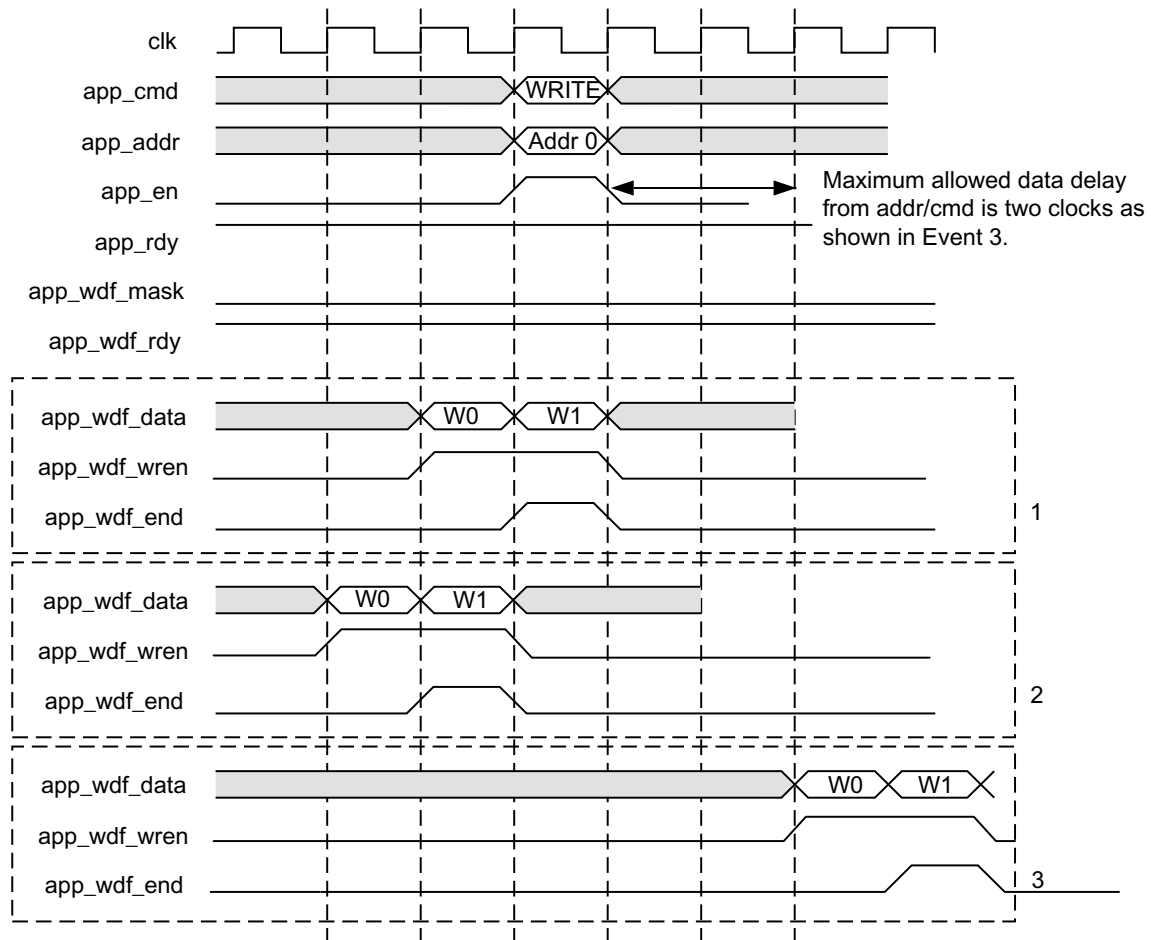


Figure 4-59: UI Interface Write Timing Diagram (Memory Burst Type = BL8)

Write Path

The write data is registered in the write FIFO when `app_wdf_wren` is asserted and `app_wdf_rdy` is High (Figure 4-60). If `app_wdf_rdy` is deasserted, the user logic needs to hold `app_wdf_wren` and `app_wdf_end` High along with the valid `app_wdf_data` value until `app_wdf_rdy` is asserted. The `app_wdf_mask` signal can be used to mask out the bytes to write to external memory.

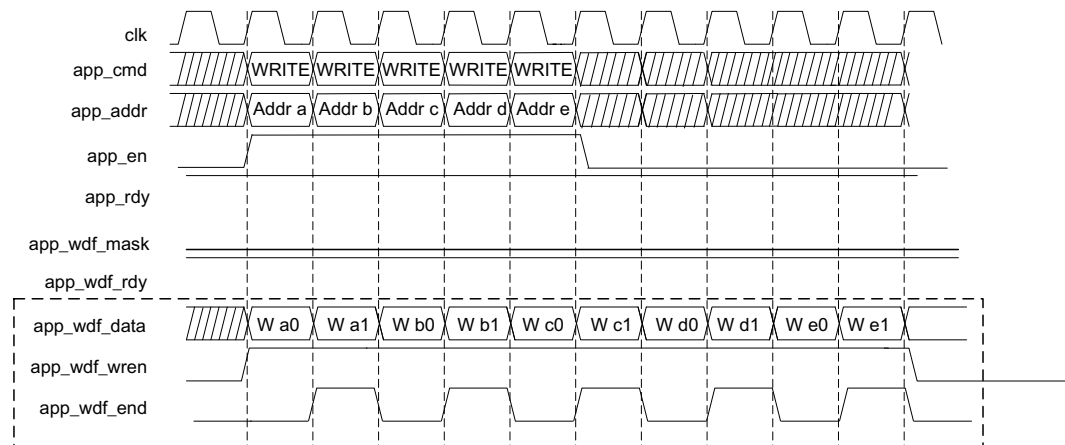


Figure 4-60: UI Interface Back-to-Back Write Commands Timing Diagram (Memory Burst Type = BL8)

As shown in Figure 4-59, the maximum delay for a single write between the write data and the associated write command is two clock cycles. When issuing back-to-back write commands, there is no maximum delay between the write data and the associated back-to-back write command, as shown in Figure 4-61.

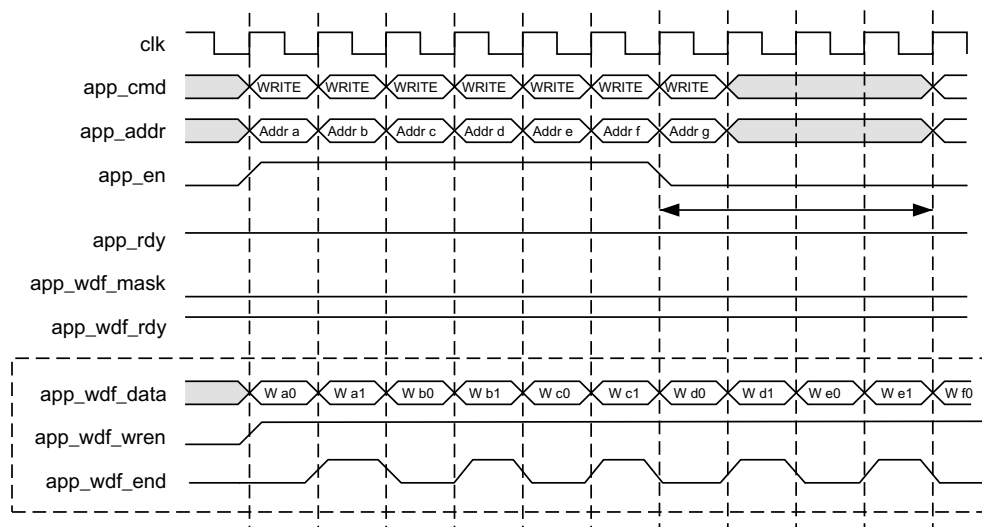


Figure 4-61: UI Interface Back-to-Back Write Commands Timing Diagram (Memory Burst Type = BL8)

The `app_wdf_end` signal must be used to indicate the end of a memory write burst. For memory burst types of eight, the `app_wdf_end` signal must be asserted on the second write data word.

The map of the application interface data to the DRAM output data can be explained with an example.

For a 2:1 Memory Controller, the User Interface clock to DRAM clock ratio is 2:1. For an 8-bit wide memory interface, the User Interface data width is 32-bit wide ($8 \times 2 \times 2 = \text{mem_data_width} \times \text{nck_per_clk} \times \text{ddr_rate}$). To perform a BL8 transaction, write data at the application interface must be provided in two clock cycles. The `app_wdf_end` signal is asserted for the second data as shown in Figure 4-62. In this case, the application data provided in the first cycle is 0000_0405 (Hex), and the data provided in the last cycle is 0000_080A (Hex). This is for a BL8 transaction.

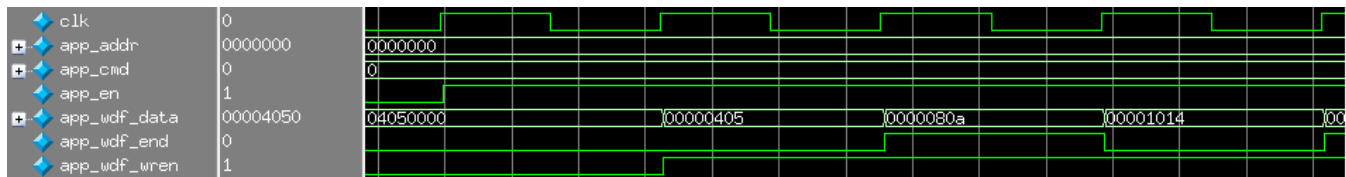


Figure 4-62: Data at the Application Interface for 2:1 Mode

Figure 4-63 shows the corresponding data at the DRAM interface.



Figure 4-63: Data at the DRAM Interface for 2:1 Mode

Read Path

The read data is returned by the UI in the requested order and is valid when `app_rd_data_valid` is asserted (Figure 4-64 and Figure 4-65). The `app_rd_data_end` signal indicates the end of each read command burst.

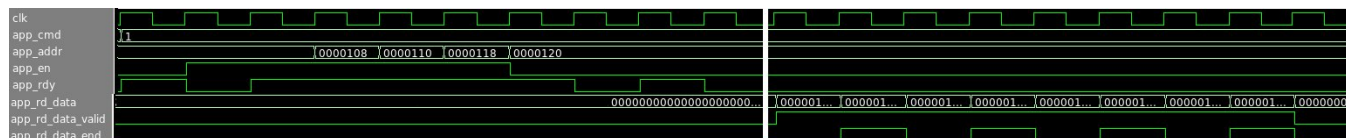


Figure 4-64: UI Interface Read Timing Diagram (Memory Burst Type = BL8)

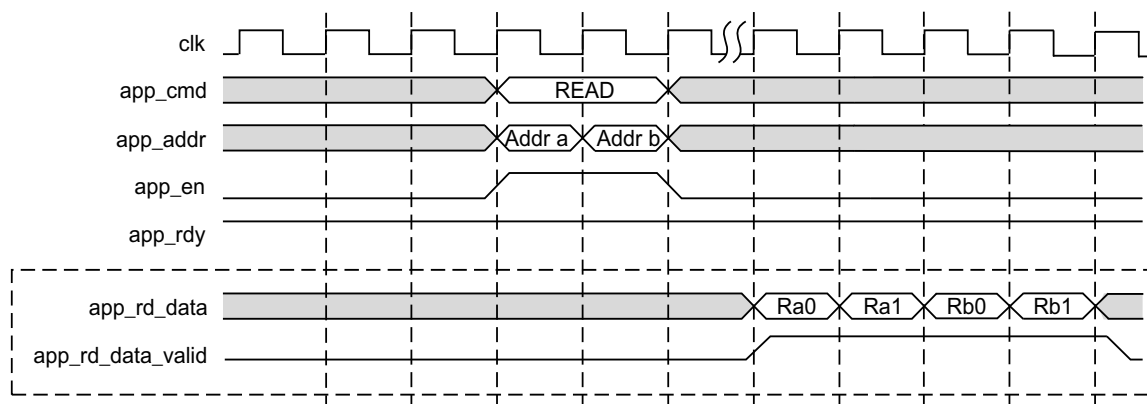


Figure 4-65: UI Interface Read Timing Diagram (Memory Burst Type = BL4 or BL8)

In Figure 4-65, the read data returned is always in the same order as the requests made on the address/control bus.

User ZQ

For user-controlled ZQ calibration, the Memory Controller managed maintenance should be disabled by setting the tZQI parameter to 0.

To request a ZQ command, `app_zq_req` is strobed for one cycle. When the Memory Controller sends the command to the PHY, it strobes `app_zq_ack` for one cycle, after which another request can be sent. Figure 4-66 illustrates the interface.

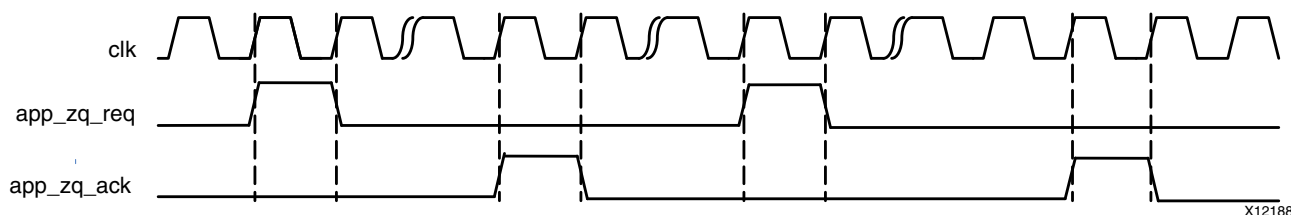


Figure 4-66: User ZQ Interface

A user ZQ operation can be performed any time provided the handshake defined above is followed. There are no additional interfacing requirements with respect to other commands. However, pending requests affect when the operation goes out. The Memory Controller fulfills all pending data requests before issuing the ZQ command.

Timing parameters must be considered for each pending request when determining when to strobe `app_zq_req` to achieve the desired interval if precision timing is desired. To account for the worst case, subtract tRCD, CL, the data transit time and tRP for each bank machine to ensure that all transactions can complete before the target tZQI expires.

Equation 4-1 shows the ZQ request interval maximum.

$$(tZQI - (tRCD + ((CL + 4) \times tCK) + tRP) \times nBANK_MACHS) \quad \text{Equation 4-1}$$

A user ZQ should be issued immediately following calibration to establish a time baseline for determining when to send subsequent requests.

Native Interface

The native interface protocol is shown in Figure 4-67.

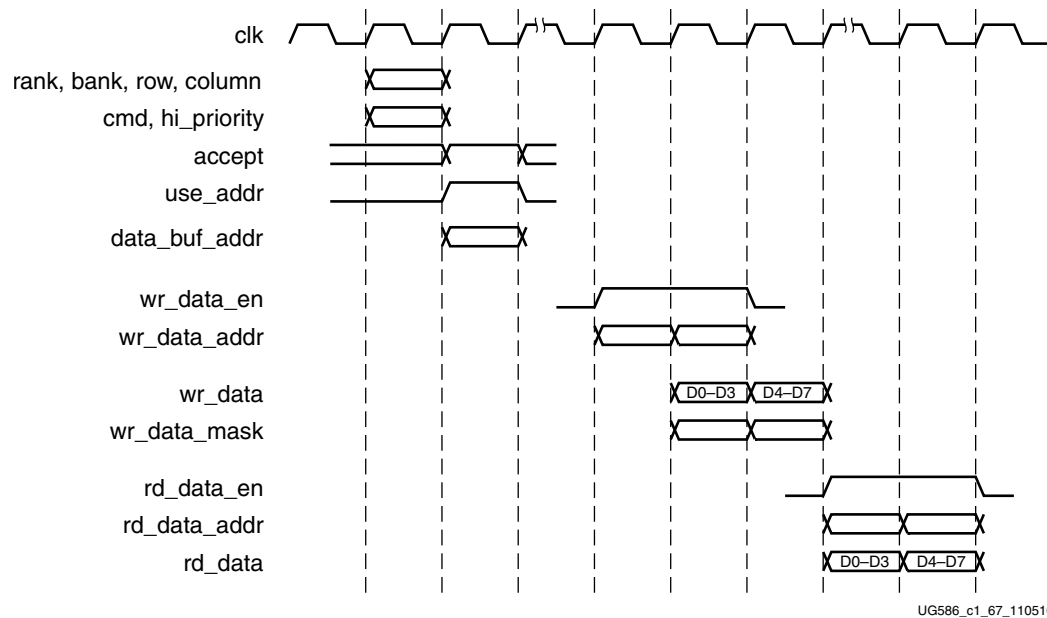


Figure 4-67: Native Interface Protocol

Requests are presented to the native interface as an address and a command. The address is composed of the bank, row, and column inputs. The command is encoded on the cmd input.

The address and command are presented to the native interface one state before they are validated with the `use_addr` signal. The memory interface indicates that it can accept the request by asserting the `accept` signal. Requests are confirmed as accepted when `use_addr` and `accept` are both asserted in the same clock cycle. If `use_addr` is asserted but `accept` is not, the request is not accepted and must be repeated. This behavior is shown in Figure 4-68.

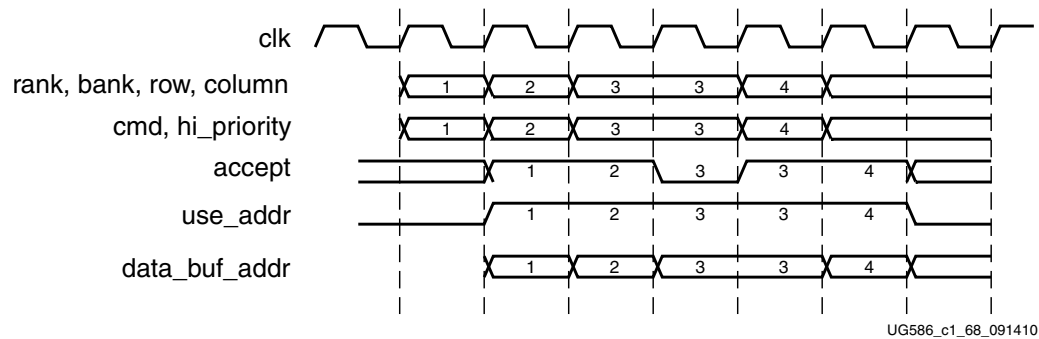


Figure 4-68: Native Interface Flow Control

In Figure 4-68, requests 1 and 2 are accepted normally. The first time request 3 is presented, accept is driven Low, and the request is not accepted. The user design retries request 3, which is accepted on the next attempt. Request 4 is subsequently accepted on the first attempt.

The data_buf_addr bus must be supplied with requests. This bus is an address pointer into a buffer that exists in the user design. It tells the core where to locate data when processing write commands and where to place data when processing read commands. When the core processes a command, the core echoes data_buf_addr back to the user design through wr_data_addr for write commands and rd_data_addr for read commands. This behavior is shown in Figure 4-69. Write data must be supplied in the same clock cycle that wr_data_en is asserted.

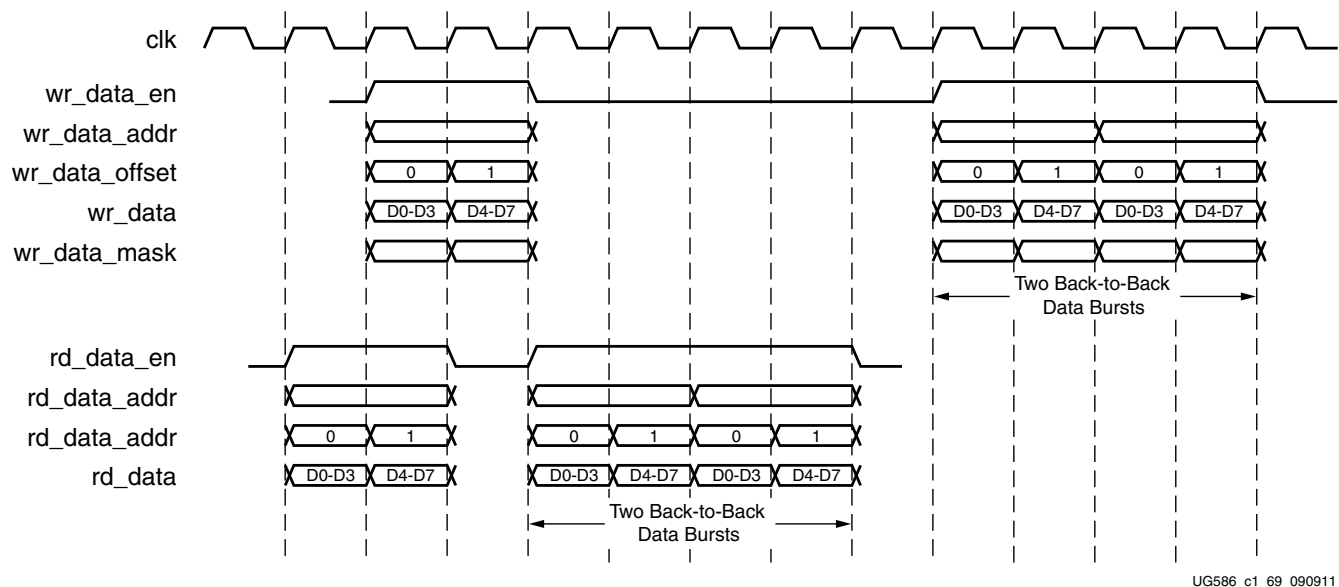


Figure 4-69: Command Processing

Transfers can be isolated with gaps of non-activity, or there can be long bursts with no gaps. The user design can identify when a request is being processed and when it finishes by monitoring the rd_data_en and wr_data_en signals. When the rd_data_en signal is asserted, the Memory Controller has completed processing a read command request.

Similarly, when the `wr_data_en` signal is asserted, the Memory Controller is processing a write command request.

When NORM ordering mode is enabled, the Memory Controller reorders received requests to optimize throughput between the FPGA and memory device. The data is returned to the user design in the order processed, not the order received. The user design can identify the specific request being processed by monitoring `rd_data_addr` and `wr_data_addr`. These fields correspond to the `data_buf_addr` supplied when the user design submits the request to the native interface. Both of these scenarios are depicted in [Figure 4-69](#).

The native interface is implemented such that the user design must submit one request at a time and, thus, multiple requests must be submitted in a serial fashion. Similarly, the core must execute multiple commands to the memory device one at a time. However, due to pipelining in the core implementation, read and write requests can be processed in parallel at the native interface.

User ZQ

See [User ZQ](#) for the UI. The feature is identical in the native interface.

Customizing the Core

The 7 series FPGAs memory interface solution supports several configurations for LPDDR2 SDRAM devices. The specific configuration is defined by Verilog parameters in the top-level of the core. As per the OOC flow, none of the parameter values are passed down to the user design RTL file from the example design top RTL file. So, any design related parameter change is not reflected in the user design logic. The MIG tool should be used to regenerate a design when parameters need to be changed. The parameters set by the MIG tool are summarized in [Table 4-25](#) to [Table 4-27](#).

Table 4-25: 7 Series FPGA Memory Solution Configuration Parameters

Parameter	Description	Options
REFCLK_FREQ ⁽¹⁾	This is the reference clock frequency for IDELAYCTRLs. This can be set to 200.0 for any speed grade device. For more information, see the IDELAYE2 (IDELAY) and ODELAYE2 (ODELAY) Attribute Summary table in the <i>7 Series FPGAs SelectIO™ Resources User Guide</i> [Ref 2]. This parameter should not be changed.	200.0
SIM_BYPASS_INIT_CAL ⁽²⁾	This is the calibration procedure for simulation. "OFF" is not supported in simulation. "OFF" must be used for hardware implementations. "FAST" enables a fast version of read and write leveling. "SIM_FULL" enables full calibration but skips the power-up initialization delay. "SIM_INIT_CAL_FULL" enables full calibration including the power-up delays.	"OFF" "FAST" "SIM_FULL"
nCK_PER_CLK	This is the number of memory clocks per clock. This parameter should not be changed.	2
nCS_PER_RANK	This is the number of unique CS outputs per rank for the PHY.	1, 2
DQS_CNT_WIDTH	This is the number of bits required to index the DQS bus and is given by $\text{ceil}(\log_2(\text{DQS_WIDTH}))$.	
ADDR_WIDTH	This is the memory address bus width. It is equal to RANK_WIDTH + BANK_WIDTH + ROW_WIDTH + COL_WIDTH.	
BANK_WIDTH	This is the number of memory bank address bits.	This option is based on the selected memory device.
CS_WIDTH	This is the number of unique CS outputs to memory.	This option is based on the selected MIG tool configuration.
CK_WIDTH	This is the number of CK/CK# outputs to memory.	This option is based on the selected MIG tool configuration.
CKE_WIDTH	This is the number of CKE outputs to memory.	This option is based on the selected MIG tool configuration.
COL_WIDTH	This is the number of memory column address bits.	This option is based on the selected memory device.
RANK_WIDTH	This is the number of bits required to index the RANK bus.	This parameter value is 1 for both Single and Dual rank devices.
ROW_WIDTH	This is the DRAM component address bus width.	This option is based on the selected memory device.
DM_WIDTH	This is the number of data mask bits.	DQ_WIDTH/8

Table 4-25: 7 Series FPGA Memory Solution Configuration Parameters (Cont'd)

Parameter	Description	Options
DQ_WIDTH	This is the memory DQ bus width.	This parameter supports DQ widths from 8 to a maximum of 72 in increments of 8. The available maximum DQ width is frequency dependent on the selected memory device.
DQS_WIDTH	This is the memory DQS bus width.	DQ_WIDTH/8
BURST_MODE	This is the memory data burst length.	LPDDR2: "8"
BM_CNT_WIDTH	This is the number of bits required to index a bank machine and is given by $\text{ceil}(\log_2(\text{nBANK_MACHS}))$.	
ADDR_CMD_MODE	This parameter is used by the controller to calculate timing on the memory addr/cmd bus. This parameter should not be changed.	"1T"
ORDERING ⁽³⁾	This option reorders received requests to optimize data throughput and latency.	<p>"NORM": Allows the Memory Controller to reorder read but not write commands to the memory.</p> <p>"RELAXED": Allows the Memory Controller to reorder commands to the memory for maximum efficiency. Strong ordering is not preserved at the native interface in this mode.</p> <p>"STRICT": Forces the Memory Controller to execute commands in the exact order received.</p>
STARVE_LIMIT	This sets the number of times a read request can lose arbitration before the request declares itself high priority. The actual number of lost arbitrations is $\text{STARVE_LIMIT} \times \text{nBANK_MACHS}$.	1, 2, 3, ... 10
IODELAY_GRP ⁽⁴⁾	This is an ASCII character string to define an IDELAY group used in a memory design. This is used by the Vivado tools to group all instantiated IDELAYs into the same bank. Unique names must be assigned when multiple IP cores are implemented on the same FPGA.	Default: "IODELAY_MIG"
PAYLOAD_WIDTH	This is the actual DQ bus used for user data.	PAYLOAD_WIDTH = DATA_WIDTH
DEBUG_PORT	This option enables debug signals/control.	"ON" "OFF"
TCQ	This is the clock-to-Q delay for simulation purposes.	(The value is in picoseconds.)
tCK	This is the memory tCK clock period (ps).	The value, in picoseconds, is based on the selected frequency in the MIG tool.
DIFF_TERM_SYSCLOCK	"TRUE," "FALSE"	Differential termination for system clock input pins.

Table 4-25: 7 Series FPGA Memory Solution Configuration Parameters (Cont'd)

Parameter	Description	Options
DIFF_TERM_REFCLK	"TRUE," "FALSE"	Differential termination for IDELAY reference clock input pins.

Notes:

1. The lower limit (maximum frequency) is pending characterization.
2. Core initialization during simulation can be greatly reduced by using SIM_BYPASS_INIT_CAL. Three simulation modes are supported. Setting SIM_BYPASS_INIT_CAL to FAST causes write leveling and read calibration to occur on only one bit per memory device. This is then used across the remaining data bits. Setting SIM_BYPASS_INIT_CAL to SIM_INIT_CAL_FULL causes complete memory initialization and calibration sequence occurs on all byte groups. SIM_BYPASS_INIT_CAL should be set to SIM_INIT_CAL_FULL for simulations only. SIM_BYPASS_INIT_CAL should be set to OFF for implementation, or the core does not function properly.
3. When set to NORM or RELAXED, ORDERING enables the reordering algorithm in the Memory Controller. When set to STRICT, request reordering is disabled, which might limit throughput to the external memory device. However, it can be helpful during initial core integration because requests are processed in the order received; the user design does not need to keep track of which requests are pending and which requests have been processed.
4. This parameter is prefixed with the module name entered in MIG during design generation. If the design is generated with the module name as mig_7series_0, then IODELAY_GRP parameter name is mig_7series_0_IODELAY_MIG.

The parameters listed in Table 4-26 depend on the selected memory clock frequency, memory device, memory configuration, and FPGA speed grade. The values for these parameters are integrated in the memc_ui_top IP core and should not be modified in the top-level.



RECOMMENDED: Xilinx strongly recommends that the MIG tool be rerun for different configurations.

Table 4-26: Embedded 7 Series FPGAs Memory Solution Configuration Parameters

Parameter	Description	Options
tFAW	This is the minimum interval of four active commands.	This value, in picoseconds, is based on the device selection in the MIG tool.
tRRD	This is the ACTIVE-to-ACTIVE minimum command period.	This value, in picoseconds, is based on the device selection in the MIG tool.
tRAS	This is the minimum ACTIVE-to-PRECHARGE period for memory.	This value, in picoseconds, is based on the device selection in the MIG tool.
tRCD	This is the ACTIVE-to-READ or -WRITE command delay.	This value, in picoseconds, is based on the device selection in the MIG tool.
tREFI	This is the average periodic refresh interval for memory.	This value, in picoseconds, is based on the device selection in the MIG tool.
tRFC	This is the REFRESH-to-ACTIVE or REFRESH-to-REFRESH command interval.	This value, in picoseconds, is based on the device selection in the MIG tool.

Table 4-26: Embedded 7 Series FPGAs Memory Solution Configuration Parameters (Cont'd)

Parameter	Description	Options
tRP	This is the PRECHARGE command period.	This value, in picoseconds, is based on the device selection in the MIG tool.
tRTP	This is the READ-to-PRECHARGE command delay.	This value, in picoseconds, is based on the device selection in the MIG tool.
tWTR	This is the WRITE-to-READ command delay.	This value, in picoseconds, is based on the device selection in the MIG tool.
tZQI	This is the ZQ short calibration interval. This value is system dependent and should be based on the expected rate of change of voltage and temperature in the system. Consult the memory vendor for more information on ZQ calibration.	This value is set in nanoseconds. Set to 0, if you manage this function.
tZQCS	This is the timing window to perform the ZQCS command in DDR3 SDRAM.	This value, in CK, is based on the device selection in the MIG tool.
nAL	This is the additive latency in memory clock cycles.	0
CL	This is the read CAS latency. The available option is frequency dependent in the MIG tool.	LPDDR2: 3, 4, 5, 6
CWL	This is the write CAS latency. The available option is frequency dependent in the MIG tool.	
BURST_TYPE	This is an option for the ordering of accesses within a burst.	"Sequential" "Interleaved"
RST_ACT_LOW	Active-Low or active-High reset. This is set to 1 when System Reset Polarity option is selected as active-Low and set to 0 when the option is selected as active-High.	0, 1
IBUF_LPWR_MODE	This option enables or disables the low-power mode for the input buffers.	"ON" "OFF"
IDELAY_HP_MODE	This option enables or disables the IDELAY high-performance mode.	"ON" "OFF"
DATA_IO_IDLE_PWRDWN	This option is set to ON valid when I/O Power reduction option is enabled.	"ON," "OFF"

Table 4-26: Embedded 7 Series FPGAs Memory Solution Configuration Parameters (Cont'd)

Parameter	Description	Options
SYSCLK_TYPE	This parameter indicates whether the system uses single-ended system clocks, differential system clocks, or is driven from an internal clock (No Buffer). Based on the selected CLK_TYPE, the clocks must be placed on the correct input ports. For differential clocks, sys_clk_p/sys_clk_n must be used. For single-ended clocks, sys_clk_i must be used. For the No Buffer option, sys_clk_i, which appears in port list, needs to be driven from an internal clock.	DIFFERENTIAL SINGLE_ENDED NO_BUFFER
REFCLK_TYPE	This parameter indicates whether the system uses single-ended reference clocks, differential reference clocks, is driven from an internal clock (No Buffer), or can connect system clock inputs only (Use System Clock). Based on the selected CLK_TYPE, the clocks must be placed on the correct input ports. For differential clocks, clk_ref_p/clk_ref_n must be used. For single-ended clocks, clk_ref_i must be used. For the No Buffer option, clk_ref_i, which appears in the port list, needs to be driven from an internal clock. For the Use System Clock option, clk_ref_i is connected to the system clock in the user design top module.	DIFFERENTIAL SINGLE_ENDED NO_BUFFER USE_SYSTEM_CLOCK
CLKIN_PERIOD	Input clock period.	
CLKFBOUT_MULT	PLL voltage-controlled oscillator (VCO) multiplier. This value is set by the MIG tool based on the frequency of operation.	
CLKOUT0_DIVIDE, CLKOUT1_DIVIDE, CLKOUT2_DIVIDE, CLKOUT3_DIVIDE	VCO output divisor for PLL outputs. This value is set by the MIG tool based on the frequency of operation.	
DIVCLK_DIVIDE	PLLE2 VCO divisor. This value is set by the MIG tool based on the frequency of operation.	
USE_DM_PORT	This is the enable data mask option used during memory write operations.	0 = Disable 1 = Enable
CK_WIDTH	This is the number of CK/CK# outputs to memory.	
DQ_CNT_WIDTH	This is ceil(log2(DQ_WIDTH)).	
DRAM_TYPE	This is the supported memory standard for the Memory Controller.	LPDDR2
DRAM_WIDTH	This is the DQ bus width per DRAM component.	

Table 4-26: Embedded 7 Series FPGAs Memory Solution Configuration Parameters (Cont'd)

Parameter	Description	Options
nBANK_MACHS	This is the number of bank machines. A given bank machine manages a single DRAM bank at any given time.	2, 3, 4, 5, 6, 7, 8
DATA_BUF_ADDR_WIDTH	This is the bus width of the request tag passed to the Memory Controller. This parameter is set to 4. This parameter should not be changed.	4
RANKS	This is the number of ranks.	
DATA_WIDTH	This parameter determines the write data mask width and depends on whether or not ECC is enabled.	DATA_WIDTH = DQ_WIDTH
APP_DATA_WIDTH	This UI_INTFC parameter specifies the payload data width in the UI.	APP_DATA_WIDTH = 2 × nCK_PER_CLK × PAYLOAD_WIDTH
APP_MASK_WIDTH	This UI_INTFC parameter specifies the payload mask width in the UI.	
USER_REFRESH	This parameter indicates if you manage refresh commands. Can be set for either the User or Native interface.	"ON," "OFF"

Table 4-27 contains parameters set up by the MIG tool based on the pinout selected. When making pinout changes, Xilinx recommends rerunning the MIG tool to set up the parameters properly. See [Bank and Pin Selection Guides for LPDDR2 Designs](#), page 631.

Mistakes to the pinout parameters can result in non-functional simulation, an unroutable design, and/or trouble meeting timing. These parameters are used to set up the PHY and route all the necessary signals to and from it. The following parameters are calculated based on selected Data and Address/Control byte groups. These parameters do not consider the system signals selection (that is, system clock, reference clock and status signals).

Table 4-27: LPDDR2 SDRAM Memory Interface Solution Pinout Parameters

Parameter	Description	Example
BYTE_LANES_B0, BYTE_LANES_B1, BYTE_LANES_B2	Defines the byte lanes being used in a given I/O bank. A 1 in a bit position indicates a byte lane is used, and a 0 indicates unused. This parameter varies based on the pinout and should not be changed manually in generated design.	Ordering of bits from MSB to LSB is T0, T1, T2, and T3 byte groups. 4'b1101: For a given bank, three byte lanes are used and one byte lane is not used.

Table 4-27: LPDDR2 SDRAM Memory Interface Solution Pinout Parameters (Cont'd)

Parameter	Description	Example
DATA_CTL_B0, DATA_CTL_B1, DATA_CTL_B2	Defines mode of use of byte lanes in a given I/O bank. A 1 in a bit position indicates a byte lane is used for data, and a 0 indicates it is used for address/control. This parameter varies based on the pinout and should not be changed manually in generated design.	4'b1100: With respect to the BYTE_LANE example, two byte lanes are used for Data and one for Address/Control.
PHY_0_BITLANES, PHY_1_BITLANES, PHY_2_BITLANES	12-bit parameter per byte lane used to determine which I/O locations are used to generate the necessary PHY structures. This parameter is provided as per bank. Except CK/CK# pins, all Data and Address/Control pins are considered for this parameter generation. DQS pins are excluded when used for DQS pins in data byte groups. One of the unused pins where Data byte group is allocated should be set to 1 which is used for DQS0_MAP (DQS still allocated to DQS I/O only and extra bit is used internally in the PHY). This parameter varies based on the pinout and should not be changed manually in generated design.	This parameter denotes for all byte groups of a selected bank. All 12 bits are denoted for a byte lane. For example, this parameter is 48'hFFE_FFF_000_DF6 for one bank. 12'hDF6 (12'b1101_1111_0110): bit lines 0, 3, and 9 are not used, the rest of the bits are used.
CK_BYTE_MAP	Bank and byte lane location information for the CK/CK#. An 8-bit parameter is provided per pair of signals. <ul style="list-style-type: none"> [7:4] – Bank position. Values of 0, 1, or 2 are supported [3:0] – Byte lane position within a bank. Values of 0, 1, 2, and 3 are supported. This parameter varies based on the pinout and should not be changed manually in generated design.	Upper-most Data or Address/Control byte group selected bank is referred to as Bank 0 in parameters notation. Numbering of banks is 0, 1, and 2 from top to bottom. Byte groups T0, T1, T2, and T3 are numbered in parameters as 3, 2, 1 and 0, respectively. 144'h00_00_00_00_00_00_00_00_00_00_00_00_00_00_00_00_00_00_03: This parameter is denoted for 18 clock pairs with 8 bits for each clock pin. In this case, only one clock pair is used. Ordering of parameters is from MSB to LSB (that is, CK[0]/ CK#[0] corresponds to LSB 8 bits of the parameter). 8'h13: CK/CK# placed in bank 1, byte lane 3. 8'h20: CK/CK# placed in bank 2, byte lane 0.

Table 4-27: LPDDR2 SDRAM Memory Interface Solution Pinout Parameters (Cont'd)

Parameter	Description	Example
ADDR_MAP	<p>Bank and byte lane position information for the address. 12-bit parameter provided per pin.</p> <ul style="list-style-type: none"> [11:8] – Bank position. Values of 0, 1, or 2 are supported [7:4] – Byte lane position within a bank. Values of 0, 1, 2, or 3 are supported. [3:0] – Bit position within a byte lane. Values of [0, 1, 2, . . . , A, B] are supported. <p>This parameter varies based on the pinout and should not be changed manually in generated design.</p>	<p>Upper-most Data or Address/Control byte group selected bank is referred to as Bank 0 in parameters notation. Numbering of banks is 0, 1, and 2 from top to bottom.</p> <p>Byte groups T0, T1, T2, and T3 are numbered in parameters as 3, 2, 1 and 0, respectively.</p> <p>Bottom-most pin in a byte group is referred as “0” in MAP parameters. Numbering is counted from 0 to 9 from bottom-most pin to top pin with in a byte group by excluding DQS I/Os. DQS_N and DQS_P pins of the byte group are numbered as A and B, respectively.</p> <p>192'h000_000_039_038_037_036_035_034_033_032_031_029_028_027_026_02B: This parameter is denoted for Address width of 16 with 12 bits for each pin. In this case the Address width is 14 bits. Ordering of parameters is from MSB to LSB (that is, ADDR[0] corresponds to the 12 LSBs of the parameter. One important change w.r.t DDR3/DDR2 designs is that LPDDR2 have only 10 bits available for Address mapping in byte lane. The reason for that is in LPDDR2, the CA is DDR.</p> <p>12'h235: Address pin placed in bank 2, byte lane 3, at location 5.</p>
CS_MAP	<p>Bank and byte lane position information for the chip select. See the ADDR_MAP description. This parameter varies based on the pinout and should not be changed manually in generated design.</p>	<p>See the ADDR_MAP example.</p>
DQS_BYTE_MAP	<p>Bank and byte lane position information for the strobe. See the CK_BYTE_MAP description. This parameter varies based on the pinout and should not be changed manually in generated design.</p>	<p>See the CK_BYTE_MAP example.</p>
DATA0_MAP, DATA1_MAP, DATA2_MAP, DATA3_MAP, DATA4_MAP, DATA5_MAP, DATA6_MAP, DATA7_MAP, DATA8_MAP	<p>Bank and byte lane position information for the data bus. See the ADDR_MAP description. This parameter varies based on the pinout and should not be changed manually in generated design.</p>	<p>See the ADDR_MAP example.</p>

Table 4-27: LPDDR2 SDRAM Memory Interface Solution Pinout Parameters (Cont'd)

Parameter	Description	Example
MASK0_MAP	Bank and byte lane position information for the data mask. See the ADDR_MAP description. This parameter varies based on the pinout and should not be changed manually in generated design.	See the ADDR_MAP example.
DQS0_MAP	Bank and byte lane position information for the DQS of respective data lanes. This parameter varies based on the pinout and should not be changed manually in generated design.	See the DQS_MAP example.
ADDR_0_BITLANES, ADDR_1_BITLANES, ADDR_2_BITLANES	12-bit parameter per byte lane used to determine which I/O locations are used to generate the necessary PHY structures. This parameter is provided as per bank where Address/Control are selected. Except CK/CK# and Data pins, only the Address/Control pins are considered for this parameter generation. DQS pins are excluded when used for CK/CK# in command/address byte group. This parameter varies based on the pinout and should not be changed manually in generated design.	See the PHY_0_BIT_LANES example.

Design Guidelines

Guidelines for LPDDR2 SDRAM designs are covered in this section.

For general PCB routing guidelines, see [Appendix A, General Memory Routing Guidelines](#).

LPDDR2 SDRAM

This section describes guidelines for LPDDR2 SDRAM designs, including bank selection, pin allocation, pin assignments, termination, I/O standards, and trace lengths.

Design Rules

Memory types, memory parts, and data widths are restricted based on the selected FPGA, FPGA speed grade, and the design frequency. The final frequency ranges are subject to characterization results.

Pin Assignments

The MIG tool generates pin assignments for a memory interface based on physical layer rules.

Bank and Pin Selection Guides for LPDDR2 Designs

Xilinx 7 series FPGAs are designed for very high-performance memory interfaces, and certain rules must be followed to use the LPDDR2 SDRAM physical layer. Xilinx 7 series FPGAs have dedicated logic for each DQS byte group. Four DQS byte groups are available in each 50-pin bank. Each byte group consists of a clock-capable I/O pair for the DQS and 10 associated I/Os.

In a typical LPDDR2 configuration, 8 of these 10 I/Os are used for the DQS: one is used for the data mask (DM), and the remaining one is used for DQS sampling. However, there would not be any physical connect on this pin because it would be internally used to capture the DQS for the phase detector.

Xilinx 7 series FPGAs have dedicated clock routing for high-speed synchronization that is routed vertically within the I/O banks. Thus, LPDDR2 memory interfaces must be arranged in the banks vertically and not horizontally. In addition, the maximum height is three banks.

The MIG tool, when available, should be used to generate a pinout for a 7 series LPDDR2 interface. The MIG tool follows these rules:

- DQS signals for a byte group must be connected to a designated DQS CC pair in the bank.
- DQ signals and a DM signal must be connected to the byte group pins associated with the corresponding DQS.
- Control (CA, CS_N, CKE) and address lines must be connected to byte groups not used for the data byte groups.
- All address/control byte groups must be in the same I/O bank. Address/control byte groups cannot be split between banks.
- The address/control byte groups must be in the middle I/O bank of interfaces that span three I/O banks.
- CK must be connected to a DQS pair in one of the control byte groups. These pins are generated for each component and a maximum of four ports/pairs only are allowed due to I/O pin limitations. Only one CK pair must be connected for one byte group. CK pairs are generated for each component, and a maximum of four pairs only are allowed due to I/O pin limitations. This varies based on **Memory Clock Selection** in the **Memory Options** page in the MIG GUI. Except CK/CK#, any of the Address/Control pin should not be allocated to DQS.
- CS_N pins are generated for each component and a maximum of four ports/pairs only are allowed due to I/O pin limitations.
- Only one CKE port is generated.
- VRN and VRP are used for the digitally controlled impedance (DCI) reference for banks that support DCI. DCI cascade is permitted.
- The interface must be arranged vertically.
- No more than three banks can be used for a single interface. All the banks chosen must be consequent.
- The system clock input must be in the same column as the memory interface. The system clock input is recommended to be in the address/control bank, when possible



RECOMMENDED: *Although the MIG allows system clock selection to be in different super logic regions (SLRs), it is not recommended due to the additional clock jitter in this topology.*

- Devices implemented with SSI technology have SLRs. Memory interfaces cannot span across SLRs. Ensure that this rule is followed for the part chosen and for any other pin-compatible parts that can also be used.

Bank Sharing Among Controllers

No unused part of a bank used in a memory interface is permitted to be shared with another memory interface. The dedicated logic that controls all the FIFOs and phasers in a bank is designed to only operate with a single memory interface and cannot be shared with other memory interfaces.

Pin Swapping

- Pins can be freely swapped within each byte group (data and address/control), except for the DQS pair which must be on a clock-capable DQS pair and the CK , which must be on a clock-capable DQS pair.
- Byte groups (data and address/control) can be freely swapped with each other.
- Pins in the address/control byte groups can be freely swapped within and between their byte groups.
- No other pin swapping is permitted.

Internal V_{REF}

Internal V_{REF} can only be used for data rates of 800 Mb/s or below.

System Clock, MMCM Location, and Constraints

The MMCM is required to be in the bank that supplies the clock to the memory to meet the specified interface performance. The system clock input is also strongly recommended to be in this bank. The MIG tool follows these two rules whenever possible. The exception is a 16-bit interface in a single bank where there might not be pins available for the clock input. In this case, the clock input needs to come from an adjacent bank through the frequency backbone to the MMCM. The system clock input to the MMCM must come from clock capable I/O.

The system clock input can only be used for an interface in the same column. The system clock input cannot be driven from another column. The additional PLL or MMCM and clock routing required for this induces too much additional jitter.

Unused outputs from the MMCM can be used as clock outputs. Only the settings for these outputs can be changed. Settings related to the overall MMCM behavior and the used outputs must not be disturbed.

A MMCM cannot be shared among interfaces.

See [Clocking Architecture, page 585](#) for information on allowed MMCM parameters.

Configuration

The XDC contains timing, pin, and I/O standard information. The `sys_clk` constraint sets the operating frequency of the interface and is set through the MIG GUI. The MIG GUI must be rerun if this needs to be altered, because other internal parameters are affected. For example:

```
create_clock -period 1.875 [get_ports sys_clk_p]
```

The `clk_ref` constraint sets the frequency for the IDELAY reference clock, which is typically 200 MHz. For example:

```
create_clock -period 5 [get_ports clk_ref_p]
```

The I/O standards are set appropriately for the LPDDR2 interface with HSUL_12, as appropriate. If system clock (`sys_clk*`) and I/O delay reference clock (`clk_ref*`) are allocated in LPDDR2 memory interface allocated bank, then the I/O Standards would need to be DIFF_HSLU_12 or HSUL_12 depending on whether these clocks are differential or single-ended. If these clocks are placed outside the LPDDR2 interface banks, then the I/O Standards are LVDS_25 or LVCMOS25 (depending on whether these clocks are differential or single-ended). These standards can be changed, as required, for the system configuration. These signals are brought out to the top-level for system connection:

- **sys_rst** – This is the main system reset (asynchronous).
- **init_calib_complete** – This signal indicates when the internal calibration is done and that the interface is ready for use.
- **tg_compare_error** – This signal is generated by the example design traffic generator, if read data does not match the write data.

These signals are all set to LVCMOS25 and can be altered as needed for the system design. They can be generated and used internally instead of being brought out to pins.

A 16-bit wide interface might need to have the system clock in a bank above or below the bank with the address/control and data. In this case, the MIG tool puts an additional constraint in the XDC. An example is shown here:

```
set_property CLOCK_DEDICATED_ROUTE BACKBONE [get_nets sys_clk_p]
set_property CLOCK_DEDICATED_ROUTE BACKBONE [get_pins -hierarchical *pll*CLKIN1]
```

This results in a warning listed during PAR. This warning can be ignored.

WARNING:Place:1402 - A clock IOB/PLL clock component pair have been found that are not placed at an optimal clock IOB/PLL site pair. The clock IOB component <sys_clk_p> is placed at site <IOB_X1Y76>. The corresponding PLL component <u_backb16/u_ddr2_infrastructure/plle2_i> is placed at site <PLLE2_ADV_X1Y2>. The clock I/O can use the fast path between the IOB and the PLL if the IOB is placed on a Clock Capable IOB site that has dedicated fast path to PLL sites within the same clock region. You might want to analyze why this issue exists and correct it. This is normally an ERROR

but the `CLOCK_DEDICATED_ROUTE` constraint was applied on `COMP.PIN` `<sys_clk_p.PAD>` allowing your design to continue. This constraint disables all clock placer rules related to the specified `COMP.PIN`. The use of this override is highly discouraged as it might lead to very poor timing results. It is recommended that this error condition be corrected in the design.

Do not drive user clocks through the I/O clocking backbone from the region(s) containing the MIG generated memory interface to CMT blocks in adjacent regions due to resource limitations. For more information, see the *7 Series FPGAs Clocking Resources User Guide* (UG472) [Ref 10].

The MIG tool sets the `VCCAUX_IO` constraint based on the data rate and voltage input selected. The generated XDC has additional constraints as needed. For example:

```
# PadFunction: IO_L13P_T2_MRCC_34
set_property VCCAUX_IO NORMAL [get_ports {lpddr2_dq[0]}]
set_property SLEW FAST [get_ports {lpddr2_dq[0]}]
set_property IOSTANDARD HSUL_12 [get_ports {lpddr2_dq[0]}]
set_property PACKAGE_PIN AJ11 [get_ports {lpddr2_dq[0]}]

# PadFunction: IO_L13N_T2_MRCC_34
set_property VCCAUX_IO NORMAL [get_ports {lpddr2_dq[1]}]
set_property SLEW FAST [get_ports {lpddr2_dq[1]}]
set_property IOSTANDARD HSUL_12 [get_ports {lpddr2_dq[1]}]
set_property PACKAGE_PIN AK11 [get_ports {lpddr2_dq[1]}]
```

For more information, see the *Xilinx Timing Constraints User Guide* (UG612) [Ref 15].

For LPDDR2 SDRAM interfaces that have the memory system input clock (`sys_clk_p/sys_clk_n`) placed on CCIO pins within one of the memory banks, MIG assigns the `DIFF_HSUL_12` I/O standard ($V_{CCO} = 1.2V$) to the CCIO pins.

Termination

These rules apply to termination for LPDDR2 SDRAM:

- Simulation (using IBIS or other) is highly recommended. The loading of command address and control (`CS_N`) signals depends on various factors, such as speed requirements, and termination topology. Loading can be a limiting factor in reaching a performance target.
- If termination is used, unidirectional signals should be terminated with a resistor to V_{TT} at the load. A split termination to V_{CCO} and GND can be used, but takes more power. Bidirectional signals might need termination at both ends of the signal.
- If termination is used, differential signals should be terminated with a differential termination at the load. Bidirectional signals might need termination at both ends of the signal.

- If used, all termination must be placed as close to the load as possible. The termination can be placed before or after the load provided that the termination is placed within a small distance of the load pin. The allowable distance can be determined by simulation.
- The **CKE** signal should be pulled down during memory initialization with a 4.7 k Ω resistor connected to GND.
- **DM** should be pulled to GND if **DM** is not driven by the FPGA (for scenarios where the data mask is not used or is disabled).
- LPDDR2 does not have a GUI option to configure the SDRAM output drive strength like DDR2/DDR3. For LPDDR2, use the default setting of 40 Ω for output drive strength.

I/O Standards

These rules apply to the I/O standard selection for LPDDR2 SDRAMs:

- Designs generated by the MIG tool use the HSUL_12 and DIFF_HSUL_12 standards for all bidirectional I/O (**DQ**, **DQS**) in the High-Performance banks.
- The HSUL_12 and DIFF_HSUL_12 standards are used for unidirectional outputs, such as control/address and forward memory clocks.

Trace Lengths

The trace lengths described in this section are for high-speed operation. The package delay should be included when determining the effective trace length. Different parts in the same package have different internal package skew values. Derate the minimum period appropriately in the **MIG Controller Options** page when different parts in the same package are used.

One method to determine the delay is to use the L and C values for each pin from the IBIS models. The delay value is determined as the square root of ($L \times C$).

Another method is to generate the package lengths using Vivado Design Suite. The following commands generate a **csv** file that contains the package delay values for every pin of the device under consideration.

```
link_design -part <part_number>
write_csv <file_name>
```

For example, to obtain the package delay information for the 7 series FPGA XC7K160T-FF676, this command should be issued:

```
link_design -part xc7k160tffg676
write_csv flight_time
```

This generates a file named **flight_time.csv** in the current directory with package trace delay information for each pin. While applying specific trace-matching guidelines for the LPDDR2 SDRAM interface, this additional package delay term should be considered for the

overall electrical propagation delay. Different die in the same package might have different delays for the same package pin. If this is expected, the values should be averaged appropriately to decrease the maximum possible performance for the target device.

These rules indicate the maximum electrical delays between LPDDR2 SDRAM signals:

- The maximum electrical delay between any DQ or DM and its associated DQS/DQS# must be $\leq \pm 15$ ps.
- The maximum electrical delay between any address and control signals and the corresponding CK/CK# must be $\leq \pm 25$ ps, with 15 ps being the optimum target.
- The maximum electrical delay between any DQS/DQS# and CK/CK# must be $< \pm 25$ ps.

Clocking

The 7 series FPGA MIG LPDDR2 SDRAM design has two clock inputs, the reference clock and the system clock. The reference clock drives the IODELAYCTRL components in the design, while the system clock input is used to create all MIG design clocks that are used to clock the internal logic, the frequency reference clocks to the phasers, and a synchronization pulse required for keeping PHY control blocks synchronized in multi-I/O bank implementations. For more information on clocking architecture, see [Clocking Architecture, page 585](#).

The MIG tool allows you to input the Memory Clock Period and then lists available Input Clock Periods that follow the supported clocking guidelines. Based on these two clock periods selections, the generated MIG core appropriately sets the MMCM parameters. The MIG tool enables automatic generation of all supported clocking structures. For information on how to use the MIG tool to set up the desired clocking structure including input clock placement, input clock frequency, and IODELAYCTRL `ref_clk` generation, see [Creating 7 Series FPGA LPDDR2 SDRAM Memory Controller Block Design, page 528](#).

Input Clock Guidelines



IMPORTANT: *The input system clock cannot be generated internally.*

- MMCM Guidelines
 - CLKFBOUT_MULT_F (M) must be between 1 and 16 inclusive.
 - DIVCLK_DIVIDE (D, Input Divider) can be any value supported by the MMCME2 parameter.
 - CLKOUT_DIVIDE (O, Output Divider) must be 2 for 400 MHz and up operation and 4 for below 400 MHz operation.

- The above settings must ensure the minimum MMCM VCO frequency (FVCOMIN) is met. For specifications, see the appropriate DC and Switching Characteristics Data Sheet. The *7 Series FPGAs Clocking Resources User Guide* (UG472) [Ref 10] includes the equation for calculating FVCO.
- The relationship between the input period and the memory period is $\text{InputPeriod} = (\text{MemoryPeriod} \times M) / (D \times D1)$.
- The clock input (`sys_clk`) can be input on any CCIO in the column where the memory interface is located; this includes CCIO in banks that do not contain the memory interface, but must be in the same column as the memory interface. The MMCM must be located in the bank containing the clock sent to the memory. To route the input clock to the memory interface MMCM, the CMT backbone must be used. With the MIG implementation, one spare interconnect on the backbone is available that can be used for this purpose.
 - MIG versions 1.4 and later allow this input clocking setup and properly drive the CMT backbone.
 - `CLOCK_DEDICATED_ROUTE = BACKBONE` constraint is used to implement CMT backbone, following warning message is expected. It can be ignored safely.

WARNING: [Place 30-172] Sub-optimal placement for a clock-capable IO pin and PLL pair. The flow will continue as the `CLOCK_DEDICATED_ROUTE` constraint is set to `BACKBONE`.

```
u_mig_7series_0/c0_u_clk_ibuf/diff_input_clk.u_ibufg_sys_clk (IBUFDS.0) is locked
to IOB_X0Y176
u_mig_7series_0/c0_u_infrastructure/mmcm2_i (MMCME2_ADV.CLKIN1) is locked to
MMCME2_ADV_X0Y1
u_mig_7series_0/c1_u_infrastructure/mmcm2_i (MMCME2_ADV.CLKIN1) is locked to
MMCME2_ADV_X0Y5
.....
```

- For LPDDR2 SDRAM interfaces that have the memory system input clock (`sys_clk`) placed on CCIO pins within one of the memory banks, MIG assigns the `DIFF_HSUL_12` I/O standard (`VCCO = 1.2V`) to the CCIO pins. Because the same differential input receiver is used for both `DIFF_HSUL_12` and LVDS inputs, an LVDS clock source can be connected directly to the `DIFF_HSTL_I` CCIO pins.
- It is acceptable to have differential inputs such as LVDS and LVDS_25 in I/O banks that are powered at voltage levels other than the nominal voltages required for the outputs of those standards (1.8V for LVDS outputs, and 2.5V for LVDS_25 outputs). However, these criteria must be met:
 - a. The optional internal differential termination is not used (`DIFF_TERM = FALSE`, which is the default value).

Note: This might require manually changing `DIFF_TERM` parameter located in the top-level module or setting this in the UCF or XDC.
 - b. The differential signals at the input pins meet the VIN requirements in the Recommended Operating Conditions table of the specific device family data sheet.

- c. The differential signals at the input pins meet the VIDIFF (min) requirements in the corresponding LVDS or LVDS_25 DC specifications tables of the specific device family data sheet.

One way to accomplish the above criteria is to use an external circuit that both AC-couples and DC-biases the input signals. The figure shows an example circuit for providing an AC-coupled and DC-biased circuit for a differential clock input. R_{DIFF} provides the 100Ω differential receiver termination because the internal DIFF_TERM is set to FALSE. To maximize the input noise margin, all R_{BIAS} resistors should be the same value, essentially creating a VICM level of V_{CCO}/2. Resistors in the 10k to 100 kΩ range are recommended. The typical values for the AC coupling capacitors C_{AC} are in the range of 100 nF. All components should be placed physically close to the FPGA inputs.

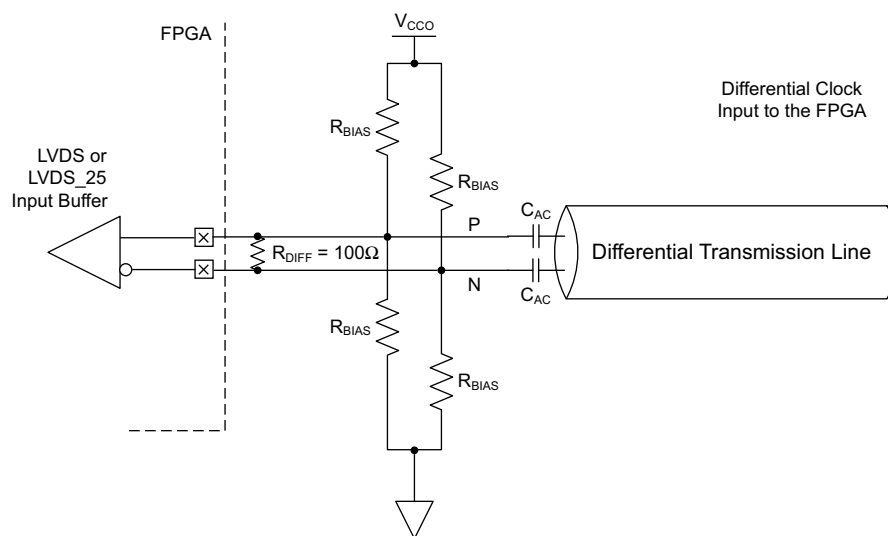


Figure 4-70: Example Circuit for AC-Coupled and DC-Biased Differential Clock Input

Note: The last set of guidelines on differential LVDS inputs are added within the LVDS and LVDS_25 (Low Voltage Differential Signaling) section of the *7 Series SelectIO Resources User Guide* (UG471) [Ref 2] in the next release of the document.

These guidelines are irrespective of Package, Column (HR/HP), or I/O Voltage.

Sharing sys_clk between Controllers

MIG 7 series FPGA designs require `sys_clk` to be in the same I/O bank column as the memory interface to minimize jitter.

- **Interfaces Spanning I/O Columns** – A single `sys_clk` input cannot drive memory interfaces spanning multiple I/O columns. The input clock input must be in the same column as the memory interface to drive the MMCM using the CMT Backbone, which minimizes jitter.

- **Interfaces in Single I/O Column** – If the memory interfaces are entirely contained within the same I/O column, a common `sys_clk` can be shared among the interfaces. The `sys_clk` can be input on any CCIO in the column where the memory interfaces are located. This includes CCIO in banks that do not contain the memory interfaces, but must be in the same column as the memory interfaces.

Information on Sharing BUFG Clock (`phy_clk`)

The MIG 7 series LPDDR2 SDRAM design includes a PLL which outputs the `phy_clk` on a BUFG route. It is not possible to share this clock amongst multiple controllers to synchronize the user interfaces. This is not allowed because the timing from the FPGA logic to the PHY Control block must be controlled. This is not possible when the clock is shared amongst multiple controllers. The only option for synchronizing user interfaces amongst multiple controllers is to create an asynchronous FIFO for clock domain transfer.

Information on Sync_Pulse

The MIG 7 series LPDDR2 SDRAM design includes one MMCM that generates the necessary design clocks. One of these outputs is the `sync_pulse`. The sync pulse clock is 1/16 of the `mem_refclk` frequency and must have a duty cycle distortion of 1/16 or 6.25%. This clock is distributed across the low skew clock backbone and keeps all PHASER_IN/_OUT and PHY_Control blocks in sync with each other. The signal is sampled by the `mem_refclk` in both the PHASER_INs/_OUTs and PHY_Control blocks. The phase, frequency, and duty cycle of the `sync_pulse` is chosen to provide the greatest setup and hold margin across PVT.

LPDDR2 Pinout Examples

Table 4-28 shows an example of a 16-bit LPDDR2 interface contained within one bank. This example is for a component interface using a 1 Gb x16 part. If x8 components are used or a higher density part is needed that would require more address pins, these options are possible:

- An additional bank can be used.
- `RESET_N` can be moved to another bank as long as timing is met. External timing for this signal is not critical and a level shifter can be used.
- DCI cascade can be used to free up the `VRN/VRP` pins if another bank is available for the DCI master.



TIP: Termination is not required for LPDDR2 memory interfaces. For more information, contact your memory vendor. The termination guidelines can be used in case termination is required.

Internal V_{REF} is used in this example.

Table 4-28: 16-Bit LPDDR2 Interface Contained in One Bank

Bank	Signal Name	Byte Group	I/O Type	I/O Number	Special Designation
1	VRP	–	SE	49	–
1	DQ15	D_11	P	48	–
1	DQ14	D_10	N	47	–
1	DQ13	D_09	P	46	–
1	DQ12	D_08	N	45	–
1	DQS1_P	D_07	P	44	DQS-P
1	DQS1_N	D_06	N	43	DQS-N
1	DQ11	D_05	P	42	–
1	DQ10	D_04	N	41	–
1	DQ9	D_03	P	40	–
1	DQ8	D_02	N	39	–
1	DM1	D_01	P	38	–
1	–	D_00	N	37	–
1	DQ7	C_11	P	36	–
1	DQ6	C_10	N	35	–
1	DQ5	C_09	P	34	–
1	DQ4	C_08	N	33	–
1	DQS0_P	C_07	P	32	DQS-P
1	DQS0_N	C_06	N	31	DQS-N
1	DQ3	C_05	P	30	–
1	DQ2	C_04	N	29	–
1	DQ1	C_03	P	28	CCIO-P
1	DQ0	C_02	N	27	CCIO-N
1	DM0	C_01	P	26	CCIO-P
1	–	C_00	N	25	–
1	RAS_N	B_11	P	24	CCIO-P
1	–	B_10	N	23	–
1	–	B_09	P	22	–
1	–	B_08	N	21	–
1	CK_P	B_07	P	20	DQS-P
1	CK_N	B_06	N	19	DQS-N
1	–	B_05	P	18	–
1	–	B_04	N	17	–
1	CS_N	B_03	P	16	–

Table 4-28: 16-Bit LPDDR2 Interface Contained in One Bank (Cont'd)

Bank	Signal Name	Byte Group	I/O Type	I/O Number	Special Designation
1	–	B_02	N	15	–
1	CKE	B_01	P	14	–
1	A12	B_00	N	13	–
1	–	A_11	P	12	–
1	–	A_10	N	11	–
1	A9	A_09	P	10	–
1	A8	A_08	N	9	–
1	A7	A_07	P	8	DQS-P
1	A6	A_06	N	7	DQS-N
1	A5	A_05	P	6	–
1	A4	A_04	N	5	–
1	A3	A_03	P	4	–
1	A2	A_02	N	3	–
1	A1	A_01	P	2	–
1	A0	A_00	N	1	–
1	VRN	–	SE	0	–

CLOCK_DEDICATED_ROUTE Constraints

System Clock

If the SRCC/MRCC I/O pin and PLL are not allocated in the same bank, the CLOCK_DEDICATED_ROUTE constraint must be set to BACKBONE. LPDDR2 SDRAM manages these constraints for designs generated with the **System Clock** option selected as **Differential/Single-Ended** (at **FPGA Options > System Clock**).

If the design is generated with the **System Clock** option selected as **No Buffer** (at **FPGA Options > System Clock**), the CLOCK_DEDICATED_ROUTE constraints based on the SRCC/MRCC I/O and PLL allocation needs to be handled manually for the IP flow. LPDDR2 SDRAM does not generate clock constraints in the XDC file for the **No Buffer** configurations. You must take care of the clock constraints for the **No Buffer** configurations in the IP flow.

Reference Clock

If the SRCC/MRCC I/O pin and MMCM are not allocated in the same bank, the CLOCK_DEDICATED_ROUTE constraint is set to FALSE. Reference clock is a 200 MHz clock source used to drive IODELAY CTRL logic (through an additional MMCM). This clock is not utilized, CLOCK_DEDICATE_ROUTE (as they are limited in number), hence the FALSE value is

set. LPDDR2 SDRAM manages these constraints for designs generated with the **System Clock** option selected as **Differential/Single-Ended** (at **FPGA Options > System Clock**).

If the design is generated with the **System Clock** option selected as **No Buffer** (at **FPGA Options > System Clock**), the CLOCK_DEDICATED_ROUTE constraints based on SRCC/MRCC I/O and MMCM allocation needs to be handled manually for the IP flow. LPDDR2 SDRAM does not generate clock constraints in the XDC file for the **No Buffer** configurations. You must take care of the clock constraints for the **No Buffer** configurations in the IP flow.

Multicontroller Design

Introduction

This chapter describes the specifications (including the supported features and unsupported features) and pinout rules for multicontroller designs.

The supported and unsupported features are:

- Supports up to eight controllers
 - Multi-interface support includes the combination of all memory interfaces as DDR3 SDRAM (Native only), QDR II+ SRAM, and RLDRAM II up to total of eight controllers. Multi-interface support with the DDR3 SDRAM AXI interface combined with other memory interfaces is not supported.
 - Multicontroller for DDR3 SDRAM (AXI only) interface is supported up to eight independent controllers. Multicontroller support combining DDR3 SDRAM Native and AXI interface designs is not supported.
- Banks selected for one of the controllers are not allowed for other controllers; that is, across the same memory interfaces and different memory interfaces.
- Memory options (frequency, data width, etc.) and all other options remain the same as for single controller options.
- Sharing of banks across two different controllers is not allowed.
- Rules for all memory interfaces (DDR3 SDRAM, QDR II+ SRAM, and RLDRAM II) remain the same as for single controller designs.



IMPORTANT: *Memory Interface Solutions v4.0 only supports the Vivado® Design Suite. The ISE® Design Suite is not supported in this version.*

Using MIG in the Vivado Design Suite

This section provides the steps to generate the Memory Interface Generator (MIG) IP core using the Vivado Design Suite and run implementation.

1. Start the Vivado Design Suite (see [Figure 5-1](#)).

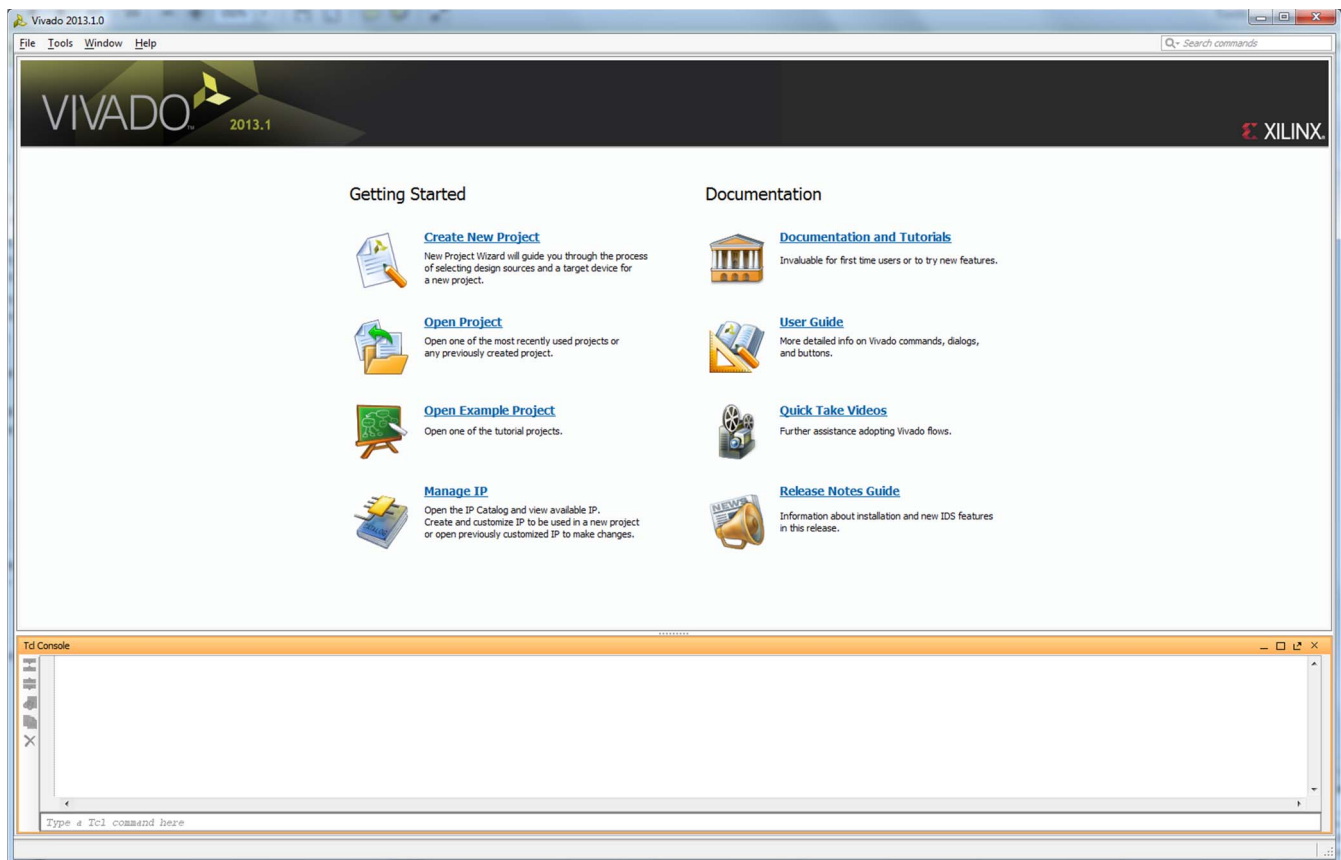


Figure 5-1: Vivado Design Suite

2. To create a new project, click the **Create New Project** option shown in [Figure 5-1](#) to open the page as shown in [Figure 5-2](#).

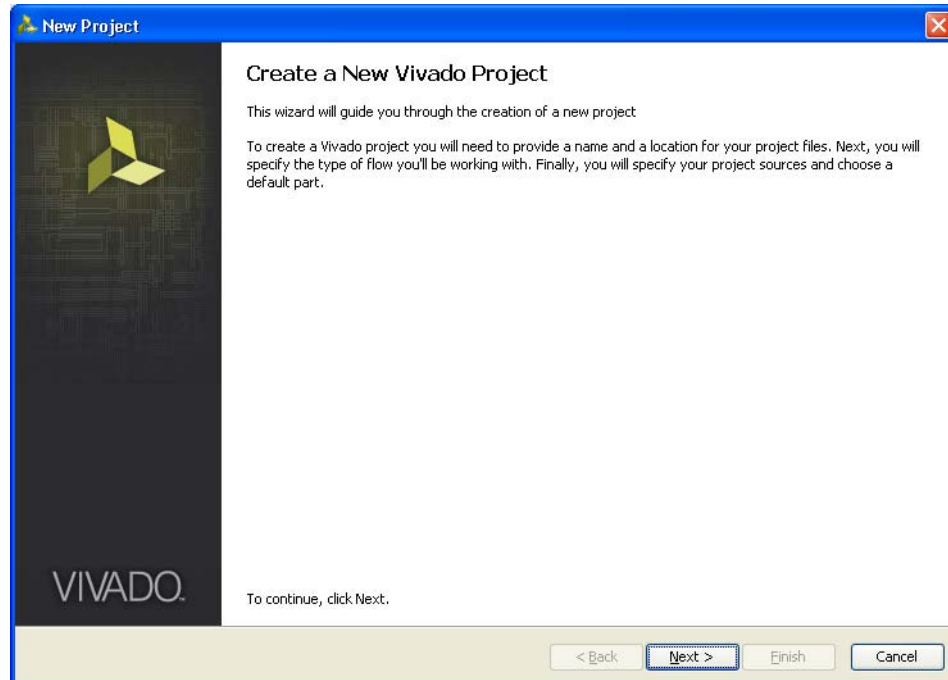


Figure 5-2: Create a New Vivado Tool Project

3. Click **Next** to proceed to the **Project Name** page (Figure 5-3). Enter the **Project Name** and **Project Location**. Based on the details provided, the project is saved in the directory.

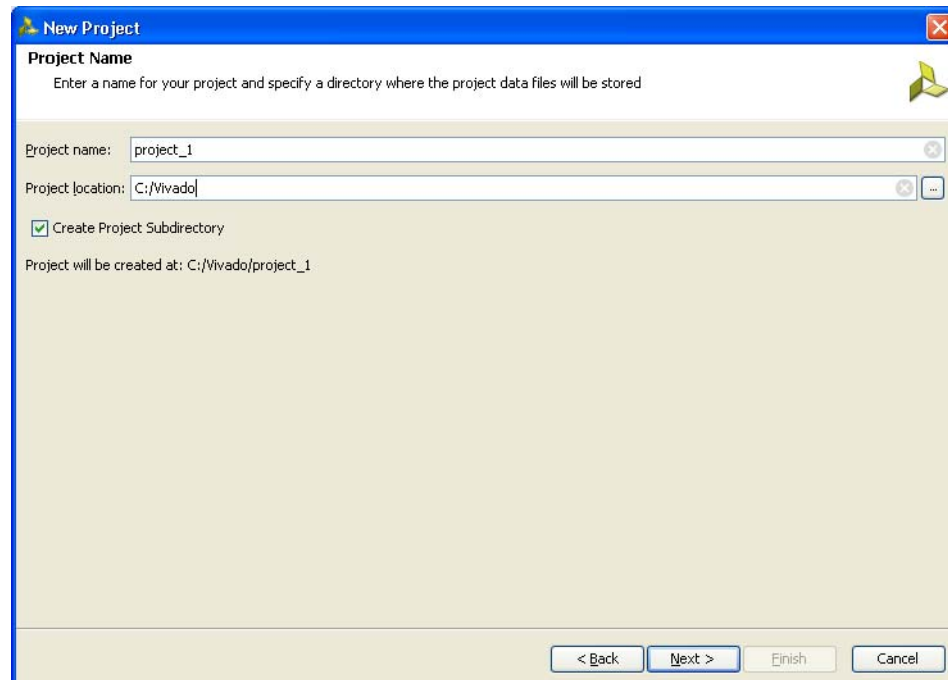


Figure 5-3: Project Name

- Click **Next** to proceed to the **Project Type** page (Figure 5-4). Select the **Project Type** as **RTL Project** because MIG deliverables are RTL files.

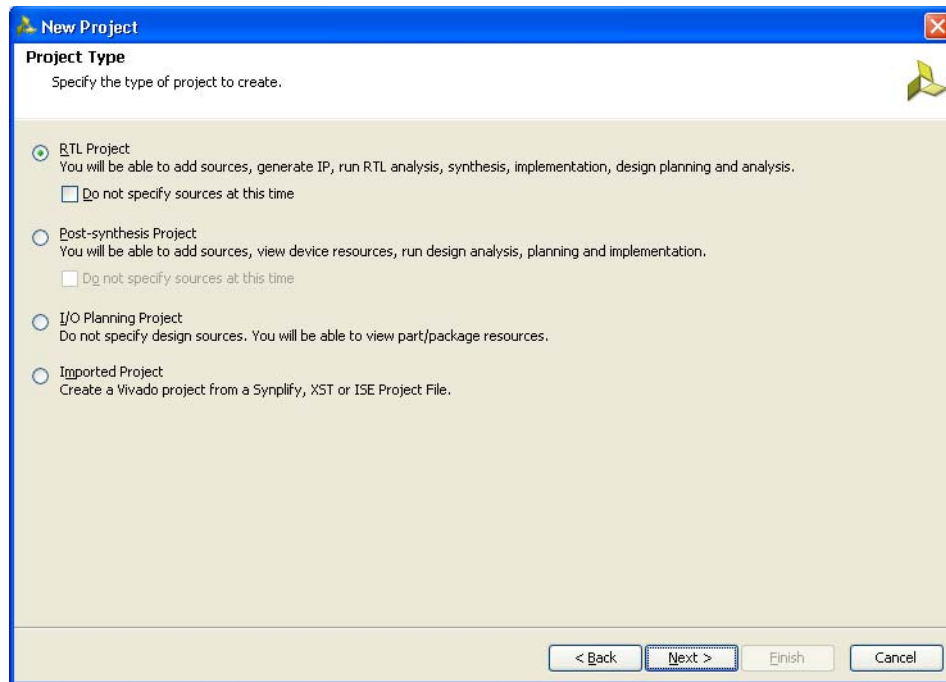


Figure 5-4: Project Type

- Click **Next** to proceed to the **Add Sources** page (Figure 5-5). RTL files can be added to the project in this page. If the project was not created earlier, proceed to the next page.

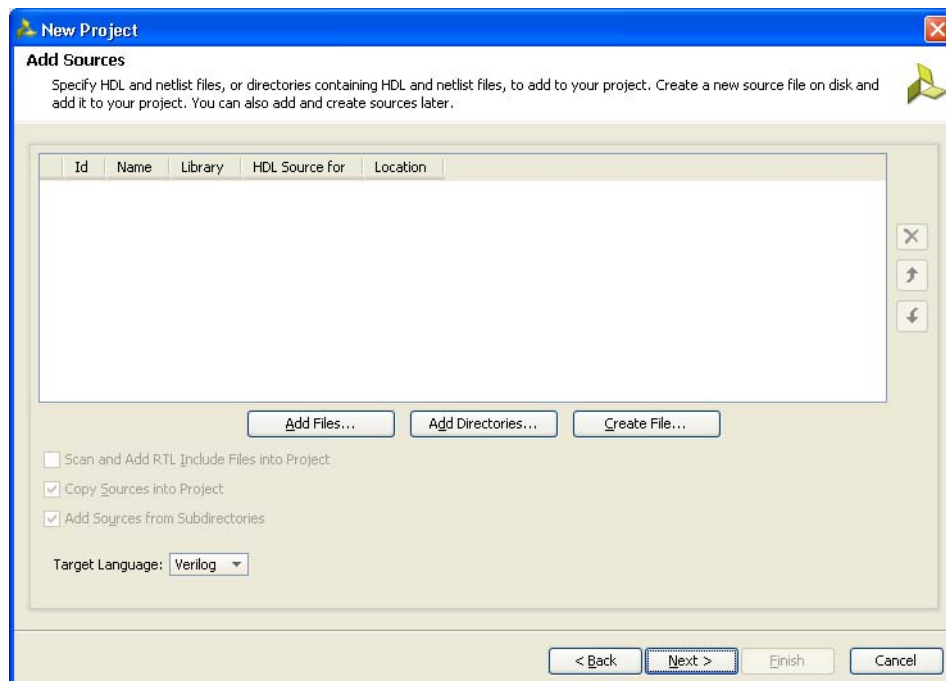


Figure 5-5: Add Sources

6. Click **Next** to open the **Add Existing IP (Optional)** page (Figure 5-6). If the IP is already created, the XCI file generated by the IP can be added to the project and the previous created IP files are automatically added to the project. If the IP was not created earlier, proceed to the next page.

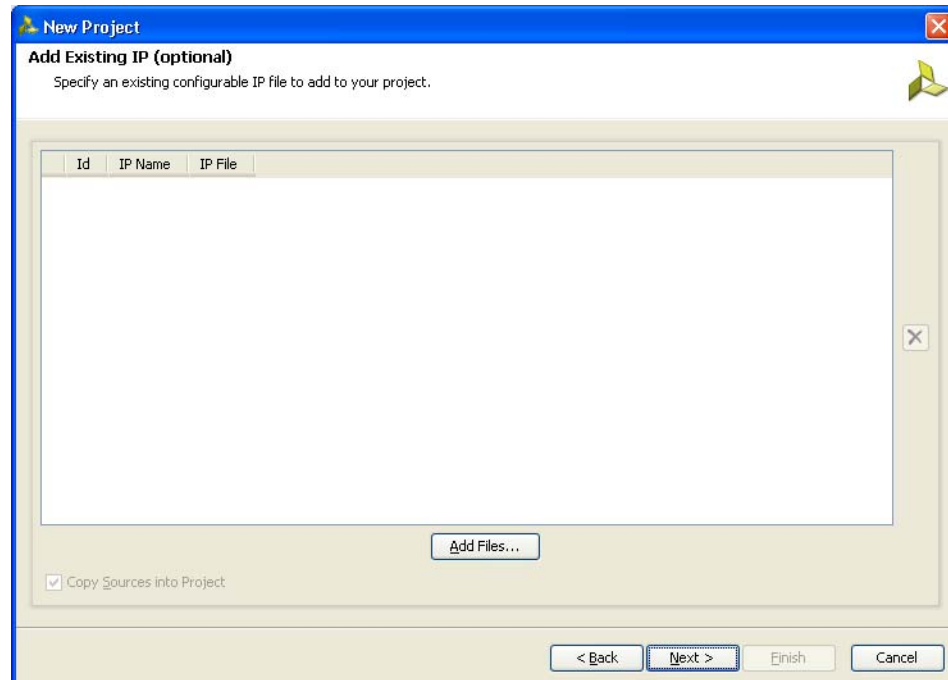


Figure 5-6: Add Existing IP (Optional)

7. Click **Next** to open the **Add Constraints (Optional)** page (Figure 5-7). If the constraints file exists in the repository, it can be added to the project. Proceed to the next page if the constraints file does not exist.

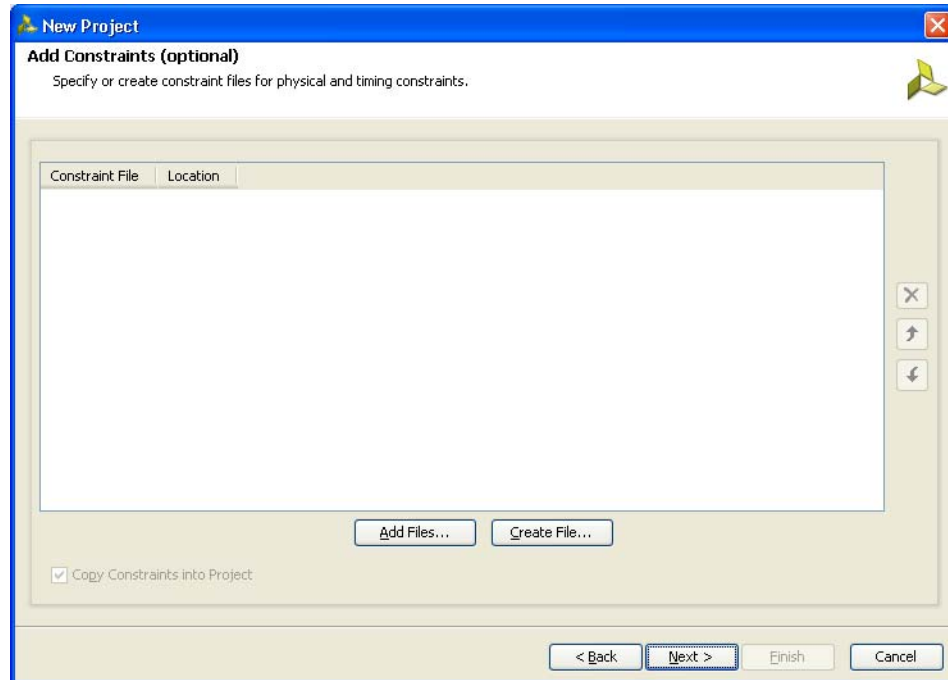


Figure 5-7: Add Constraints (Optional)

8. Click **Next** to proceed to the **Default Part** page (Figure 5-8) where the device that needs to be targeted can be selected. The **Default Part** page appears as shown in Figure 5-8.

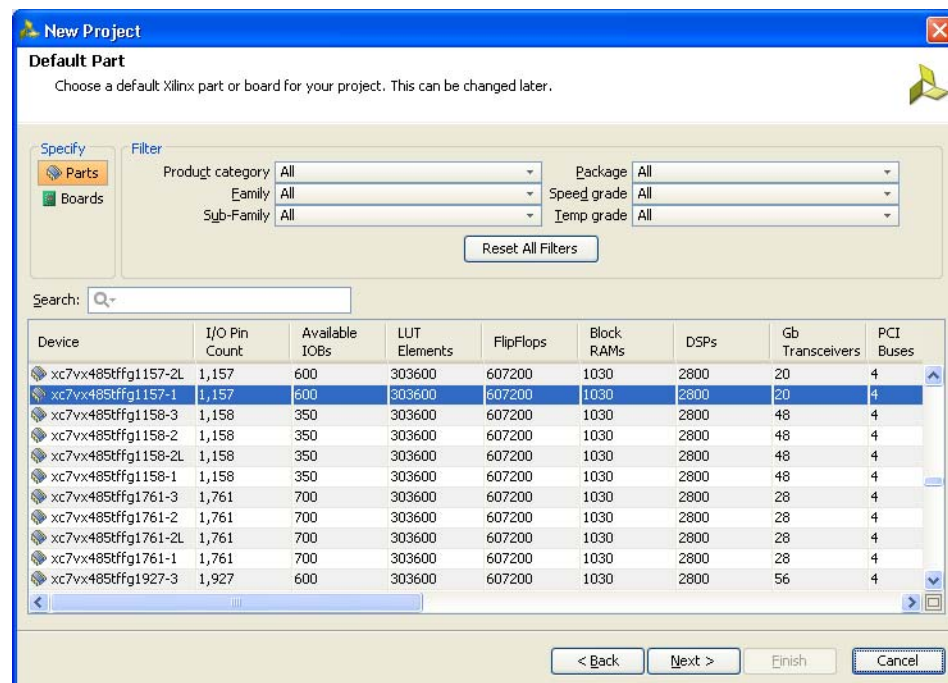


Figure 5-8: Default Part (Default Window)

Select the target **Family**, **Package**, and **Speed Grade**. The valid devices are displayed in the same page, and the device can be selected based on the targeted device (Figure 5-9).

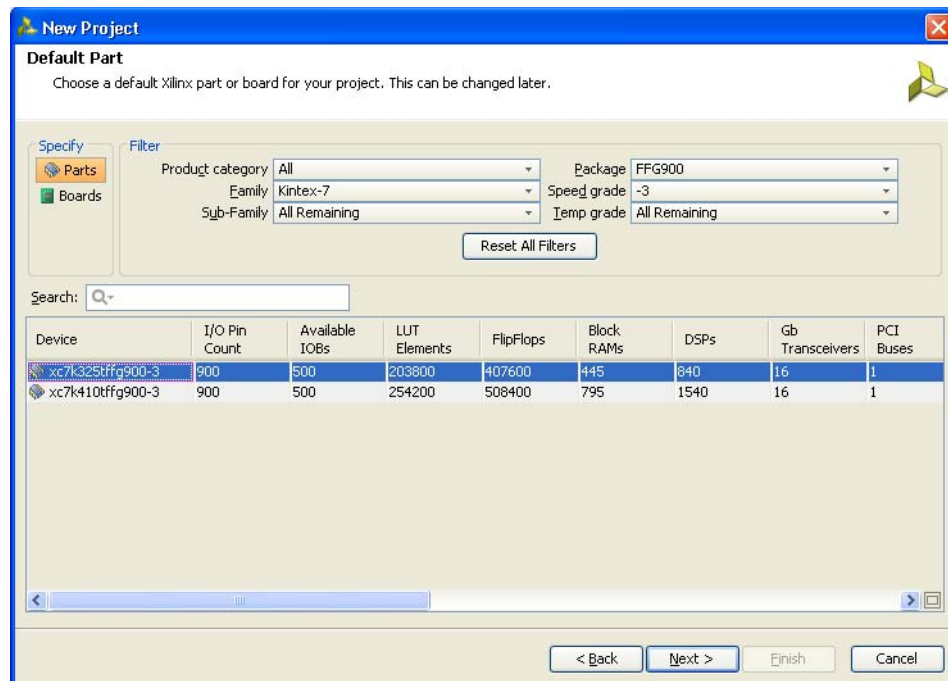


Figure 5-9: Default Part (Customized Window)

Apart from selecting the parts by using the **Parts** option, parts can be selected by choosing the **Boards** option, which brings up the evaluation boards supported by Xilinx® (Figure 5-10). With this option, designs can be targeted for the various evaluation boards. If the XCI file of an existing IP was selected in an earlier step, the same part should be selected here.

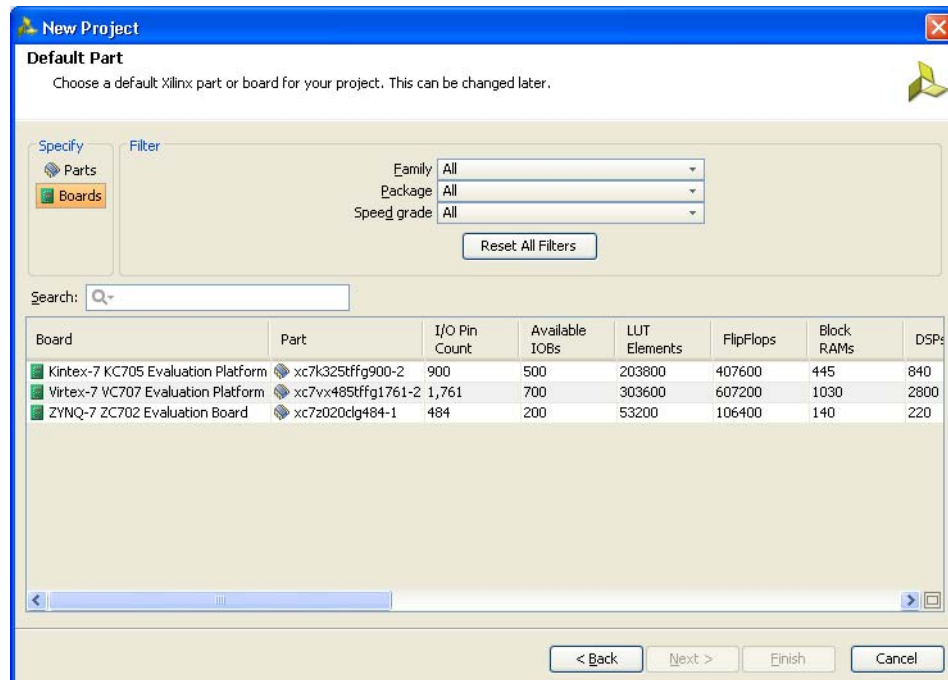


Figure 5-10: Default Part Boards Option

- Click **Next** to open the **New Project Summary** page (Figure 5-11). This includes the summary of selected project details.

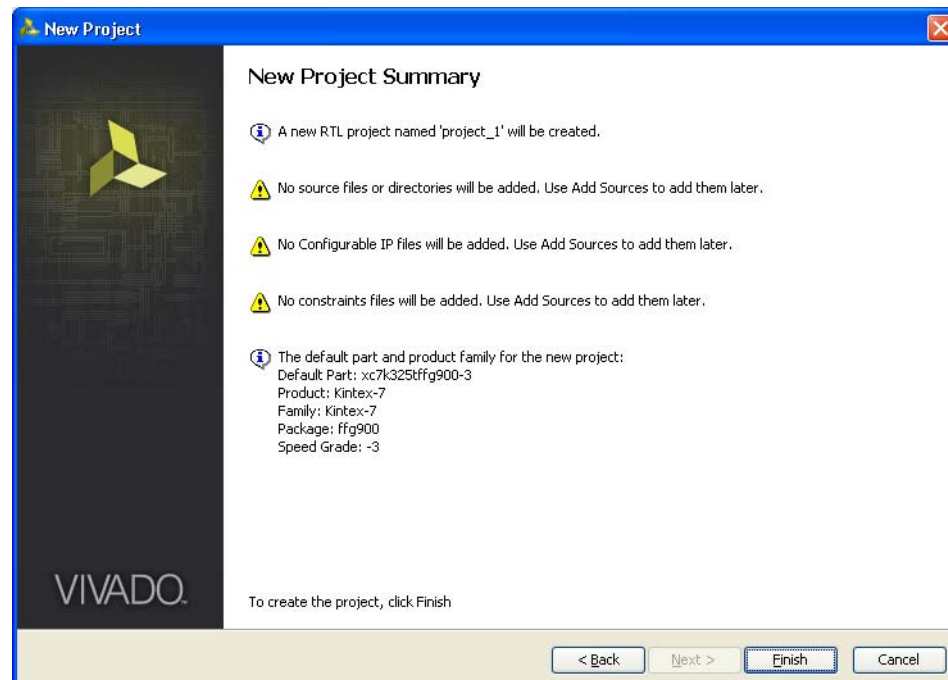


Figure 5-11: New Project Summary

- Click **Finish** to complete the project creation.

11. Click **IP Catalog** on the **Project Manager** window to open the IP catalog window. The Vivado IP catalog window appears on the right side panel (see Figure 5-12).
12. The MIG tool exists in the **Memories & Storage Elements > Memory Interface Generators** section of the IP catalog window (Figure 5-12) or you can search from the Search tool bar for the string "MIG."

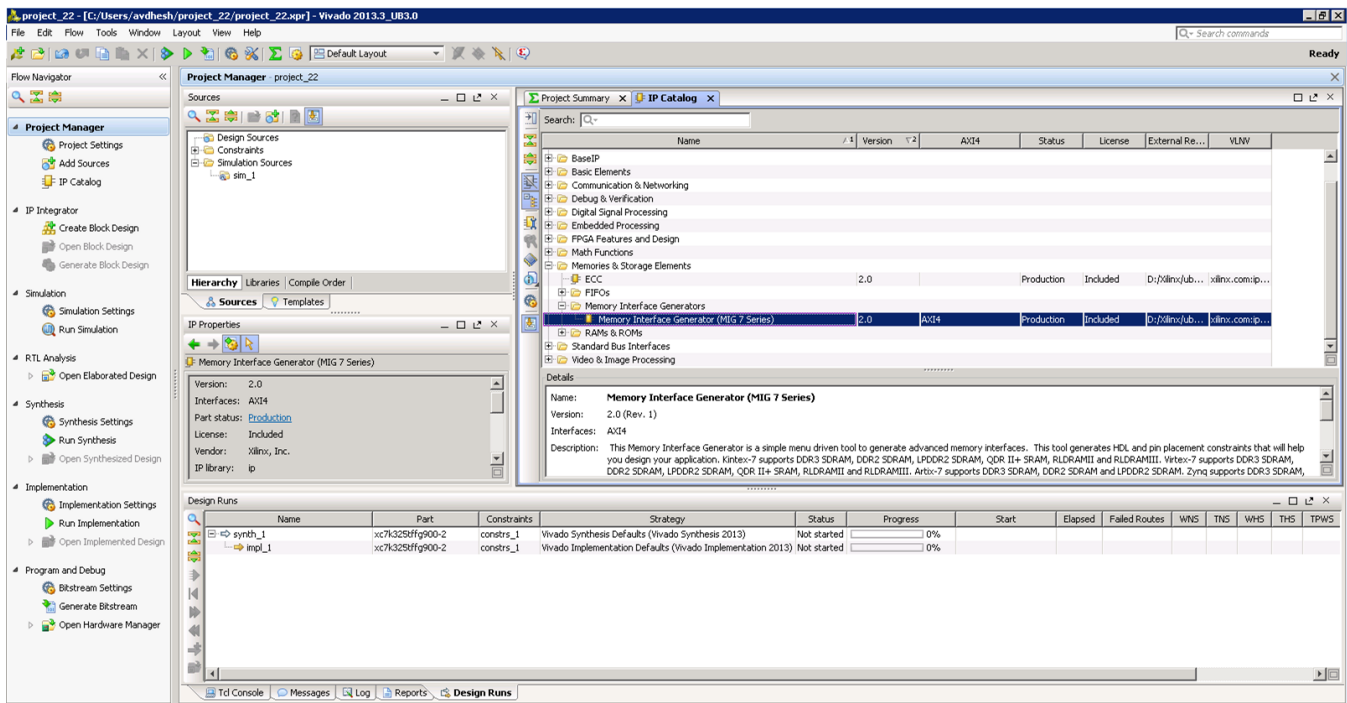


Figure 5-12: IP Catalog Window – Memory Interface Generator

13. Select **MIG 7 Series** to open the MIG tool (Figure 5-13).

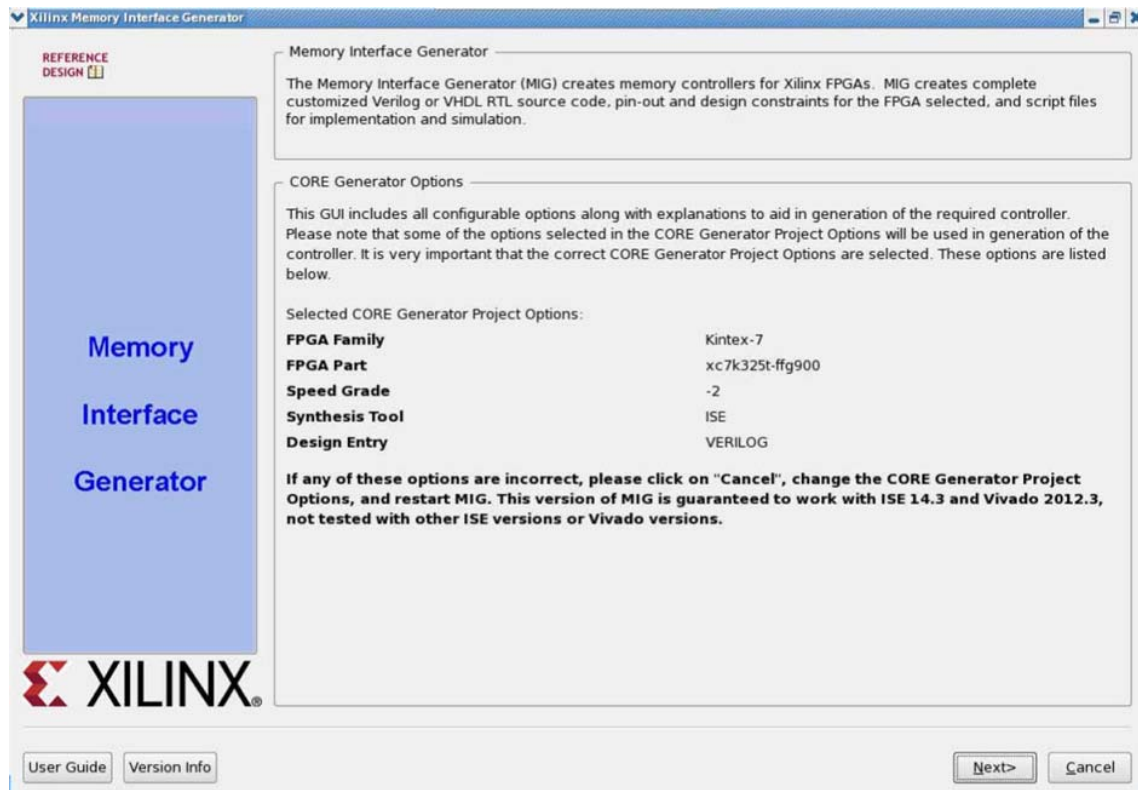


Figure 5-13: 7 Series FPGAs Memory Interface Generator FPGA Front Page

Customizing and Generating the Core



CAUTION! The Windows operating system has a 260-character limit for path lengths, which can affect the Vivado tools. To avoid this issue, use the shortest possible names and directory locations when creating projects, defining IP or managed IP projects, and creating block designs.

Multiple Controllers

Select the number of controllers from the **MIG Output Options** page (Figure 5-14). The number of controllers that can be accommodated varies based on the number of banks available in the device and depends on the memory interface configuration chosen (that is, the selected data width and number of banks).

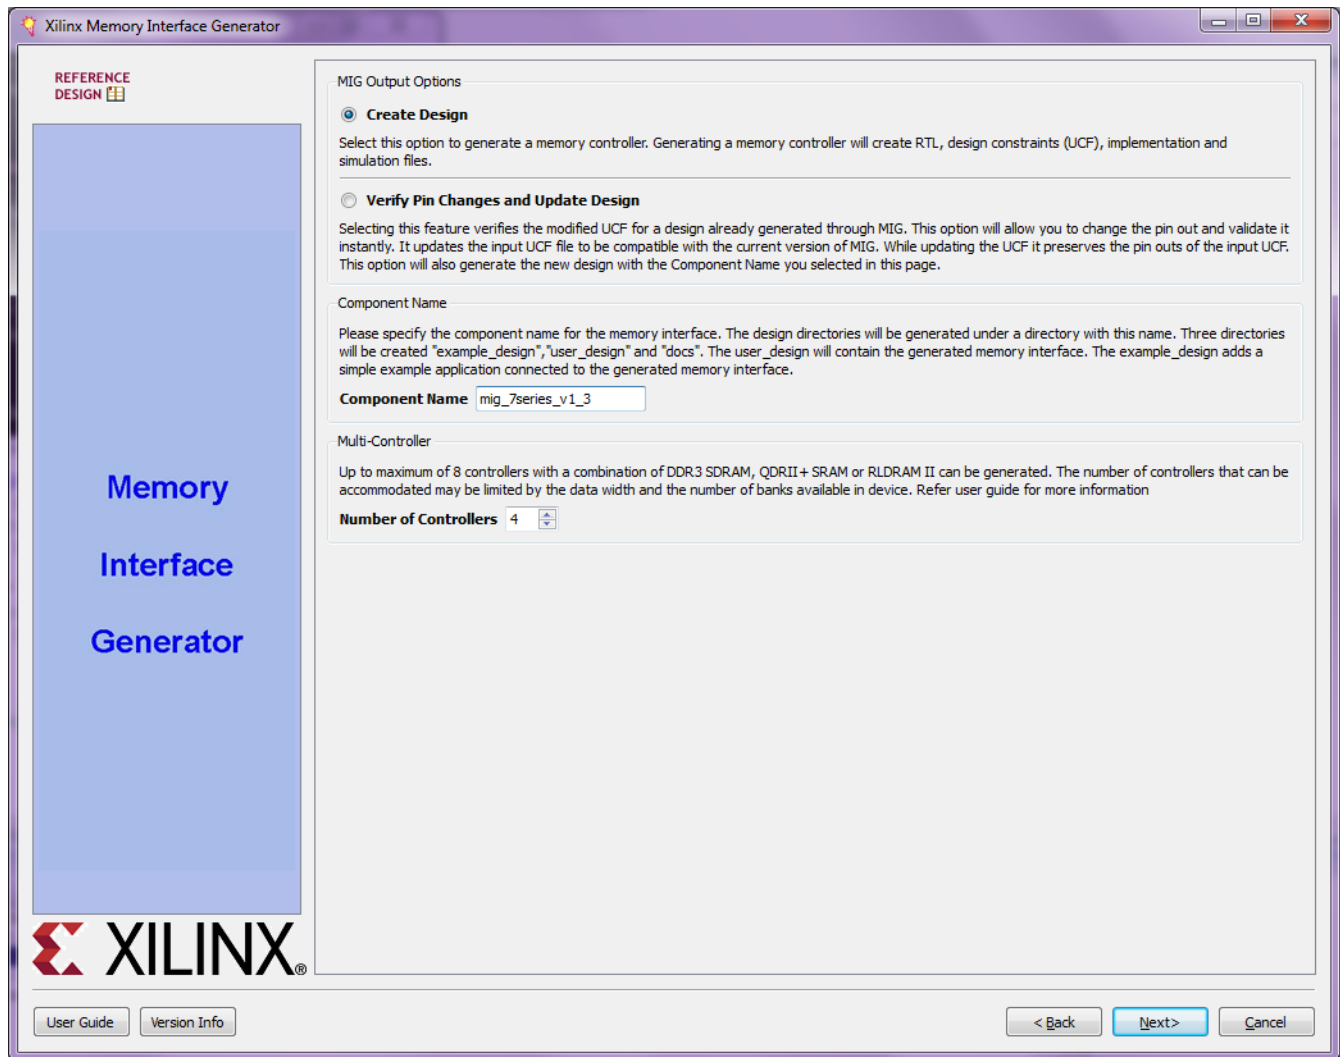


Figure 5-14: MIG Output Options Page

Creating 7 Series FPGA Multicontroller Block Design

Memory Selection

Memory interface selection is different for a multicontroller design compared with a single controller design. Select the number of controllers for each memory interface on the **Memory Selection** page (Figure 5-15).

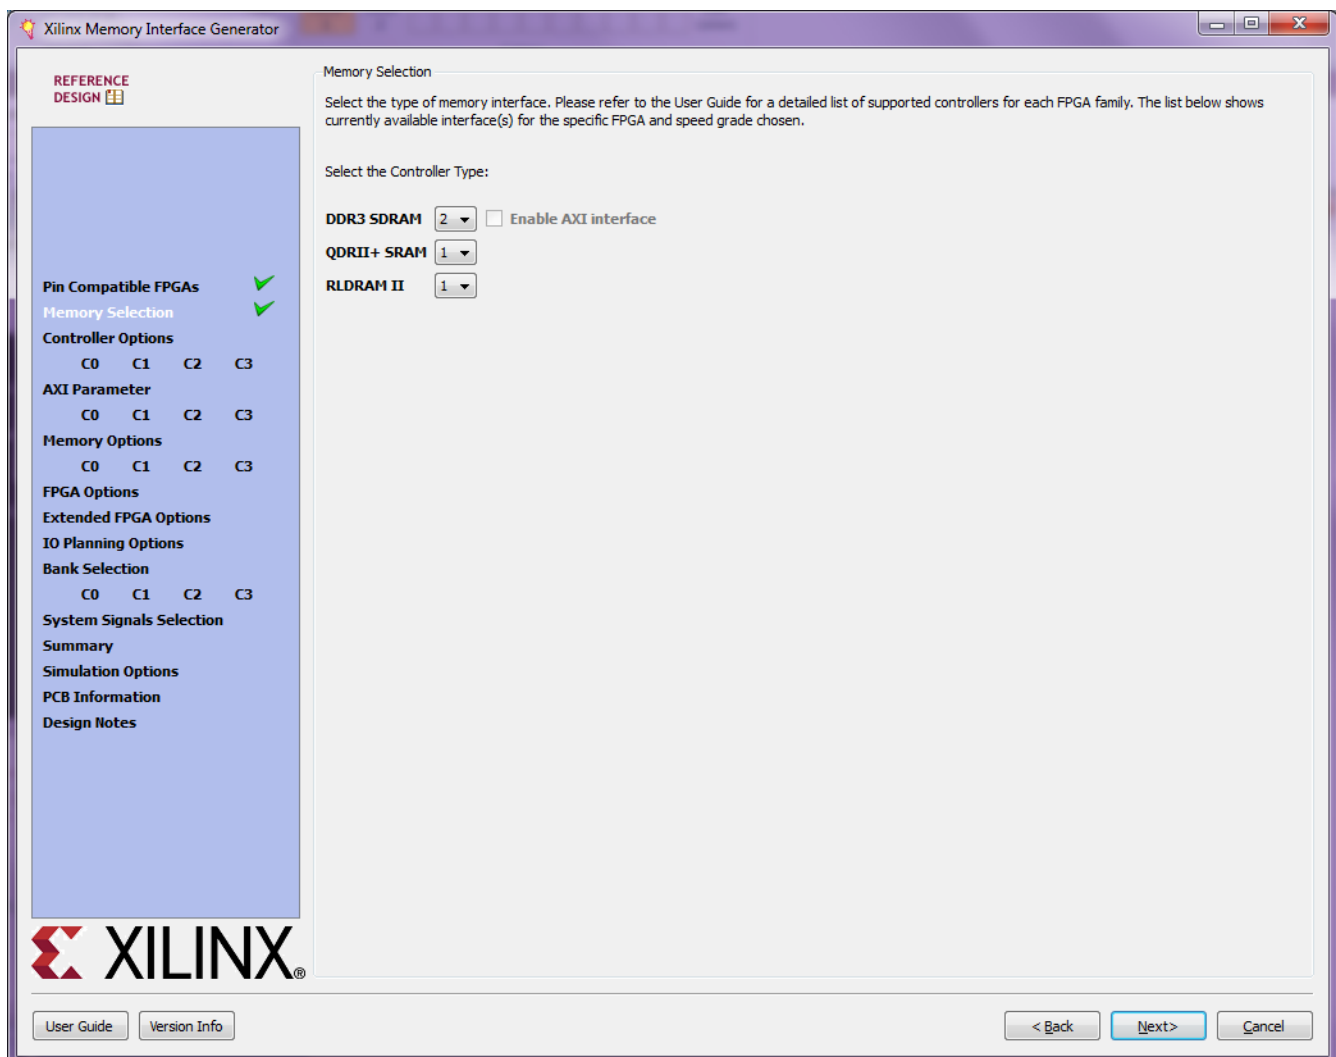


Figure 5-15: Memory Selection Page

FPGA Options

The Debug option can be selected for one controller only. Debug logic is generated for the selected controller (Figure 5-16).

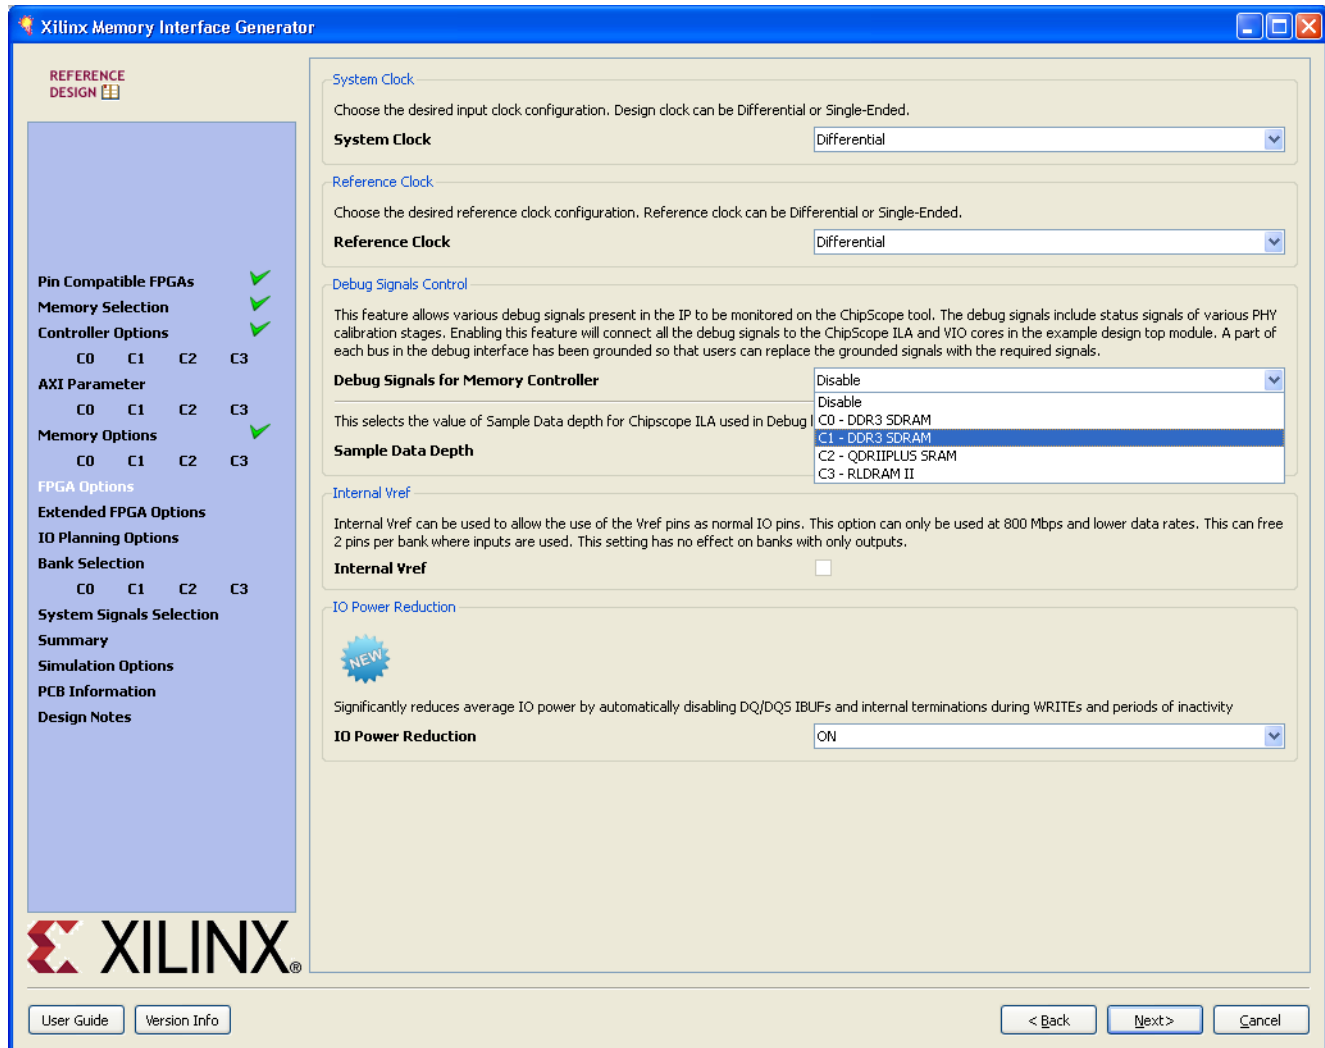


Figure 5-16: FPGA Options Page

Extended FPGA Options Page

Figure 5-17 shows the **Extended FPGA Options** page for a multicontroller design with all three memory interfaces chosen.

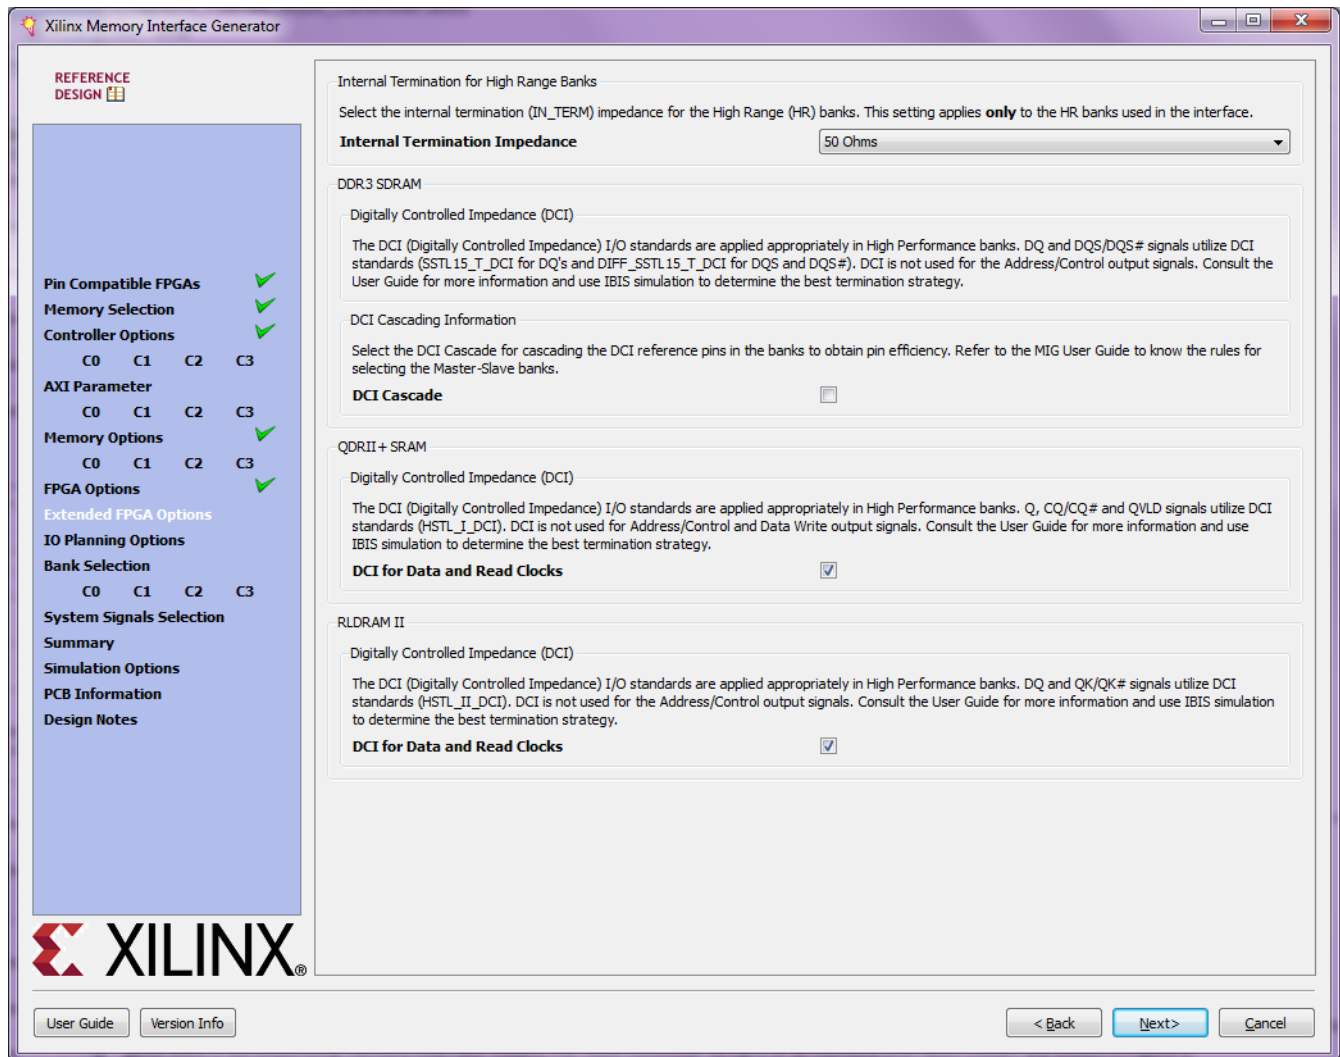


Figure 5-17: Extended FPGA Options Page

System Clock Pins Selection

Select the system clock pins on the **System Pins Selection** page. System clock pins can be selected for each controller; this varies based on the number of controllers (Figure 5-18).

System Clock Pin Selection
The **sys_clk** is used as the system clock for the memory interface. This signal should be connected to a low jitter external clock source via a differential (P/N) pair for best performance. This signal should be in the address/control bank, but may be placed in an adjacent bank if there are not enough pins available such as when fitting a 16 bit interface in a single bank.

	Signal Name	Bank Number	Pin Number
1	c0_sys_clk_p/n	39	J13/H13(CC_P/N)
2	c1_sys_clk_p/n	38	K19/J18(CC_P/N)
3	c2_sys_clk_p/n	36	K24/K25(CC_P/N)
4	c3_sys_clk_p/n	18	V35/V36(CC_P/N)

Figure 5-18: System Clock Pins Selection Page

System Clock Sharing

The criteria for sharing a system clock pin is as follows:

- System clock pins can be shared across the controllers when the input frequency is the same for the controllers.
- Pins can be shared across the controllers as long as the memory interface chosen banks are in the same column.



RECOMMENDED: Although the MIG allows system clock selection to be in different super logic regions (SLRs), it is not recommended due to the additional clock jitter in this topology.

- One CCIO port can drive any number of PLLs and there is no restriction on maximum number of PLLs that a system clock pin can drive. So the same pin can be used for any number of controllers.
- MIG validates the rules after clicking **Next** and following the selection for System Clock pins is done.
- Selecting the same pin indicates the same pin is shared across the controllers.
- One PLL and one MMCM are needed for each controller regardless of system clock pin is shared or not. System clock pin can only be shared and no other resources (PLL or MMCM) are shared across controllers.

Vivado Integrated Design Flow for MIG

1. After clicking **Generate**, the **Generate Output Products** window appears. This window has the **Out-of-Context Settings** as shown in Figure 5-19.

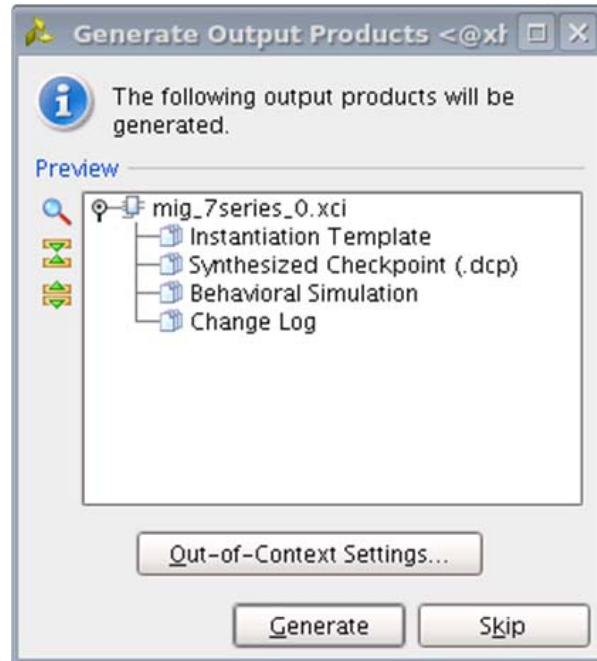


Figure 5-19: **Generate Output Products Window**

2. Click **Out-of-Context Settings** to configure generation of synthesized checkpoints. To enable the **Out-of-Context** flow, enable the check box. To disable the **Out-of-Context** flow, disable the check box. The default option is **Enable** as shown in [Figure 5-20](#).

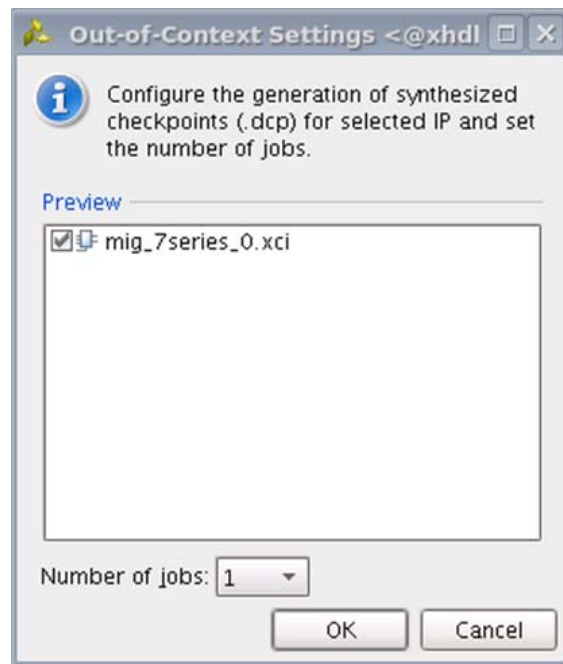


Figure 5-20: **Out-of-Context Settings Window**

3. MIG designs comply with "Hierarchical Design" flow in Vivado. For more information, see the *Vivado Design Suite User Guide: Hierarchical Design* (UG905) [\[Ref 5\]](#) and the *Vivado Design Suite Tutorial: Hierarchical Design* (UG946) [\[Ref 6\]](#).
4. After generating the MIG design, the project window appears as shown in [Figure 5-21](#).

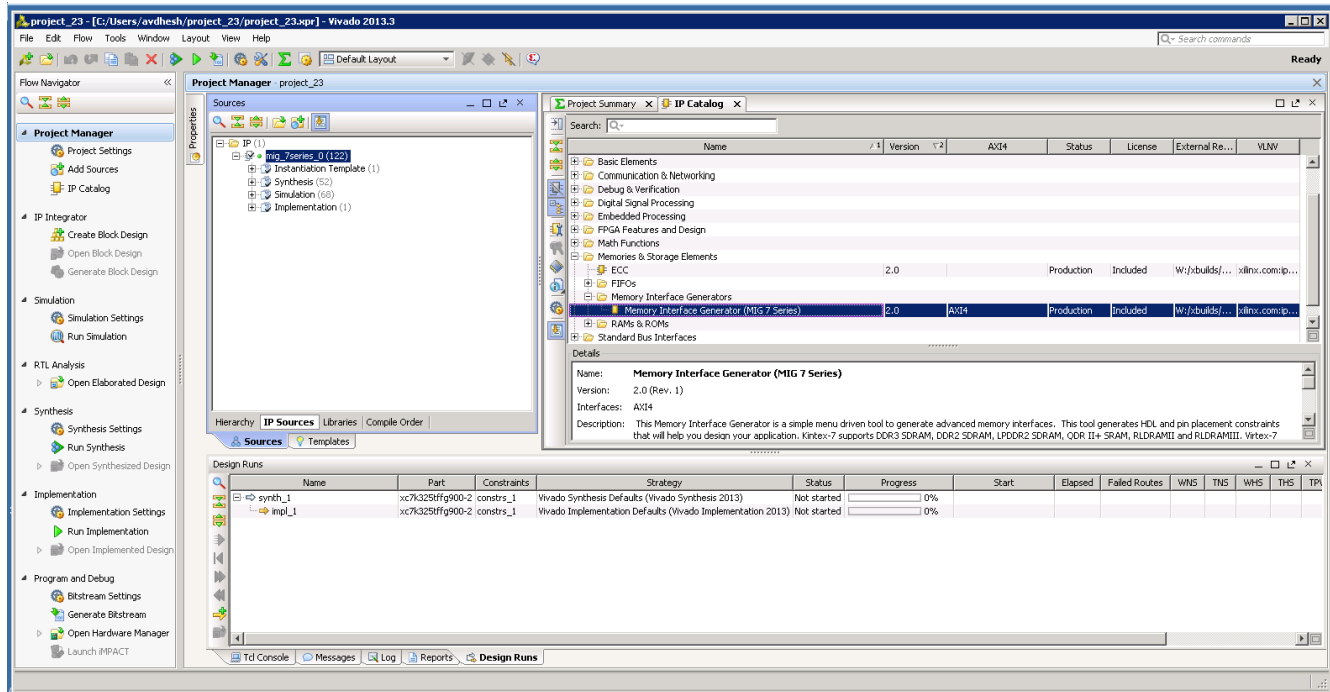


Figure 5-21: Vivado Tool Project Window (After IP Generation)

- After project creation, the XCI file is added to the Project Hierarchy. The same view also displays the module hierarchies of the user design. The list of HDL and XDC files is available in the **IP Sources** view in the **Sources** window. Double-clicking on any module or file opens the file in the Vivado Editor. These files are read only.

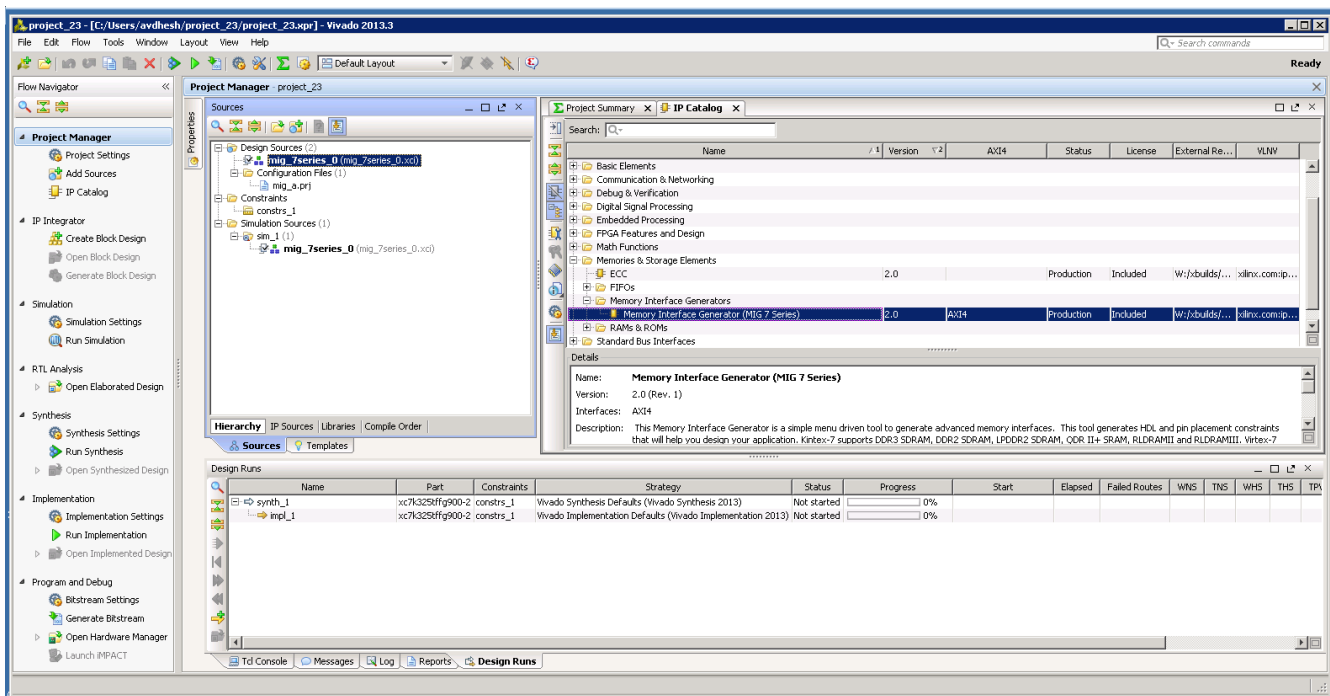


Figure 5-22: Vivado Tool Project Sources Window

Design generation from MIG can be generated using the **Create Design** flow or the **Verify Pin Changes** and **Update Design** flow. There is no difference between the flow when generating the design from the MIG tool. Irrespective of the flow by which designs are generated from the MIG tool, the XCI file is added to the Vivado project. The implementation flow is the same for all scenarios because the flow depends on the XCI file added to the project.

6. All MIG generated user design RTL and XDC files are automatically added to the project. If files are modified and you wish to regenerate them, right-click the XCI file and select **Generate Output Products** (Figure 5-23).

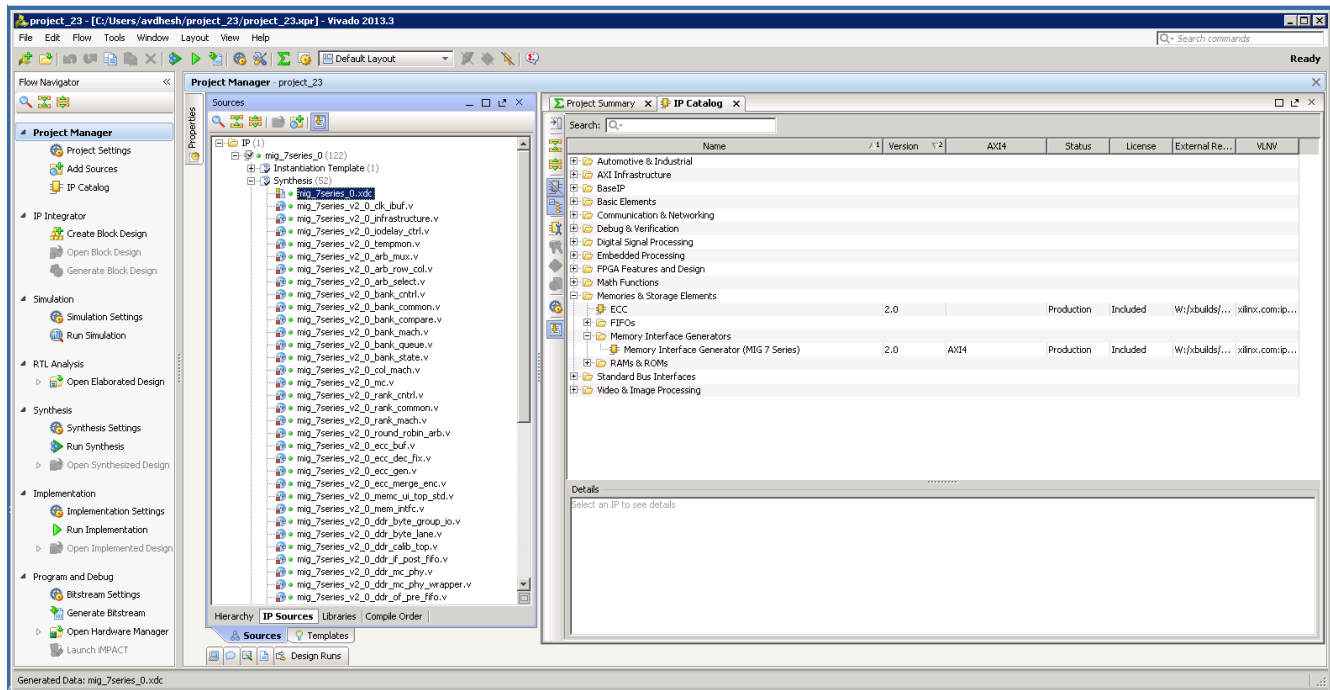


Figure 5-23: Generate RTL and Constraints

7. Clicking **Generate Output Products** option brings up the **Manage Outputs** window (Figure 5-24).

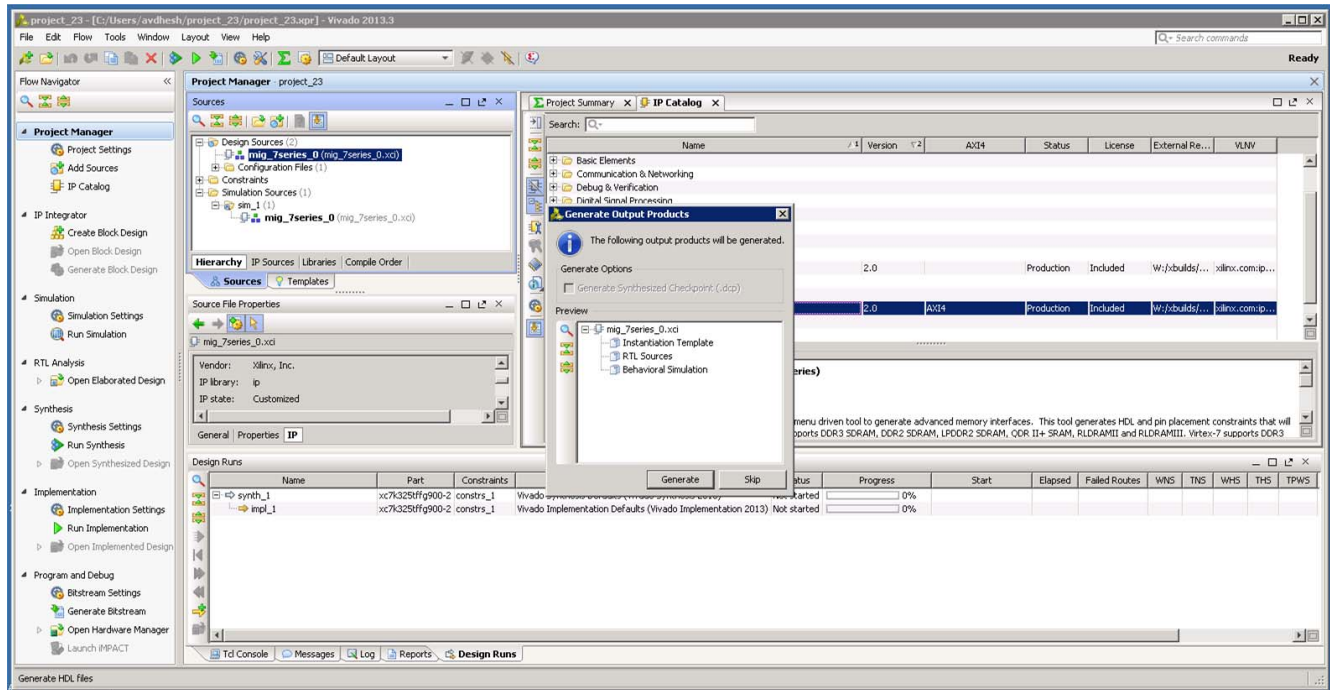


Figure 5-24: Generate Window

8. All user-design RTL files and constraints files (XDC files) can be viewed in the **Sources > Libraries** tab (Figure 5-25).

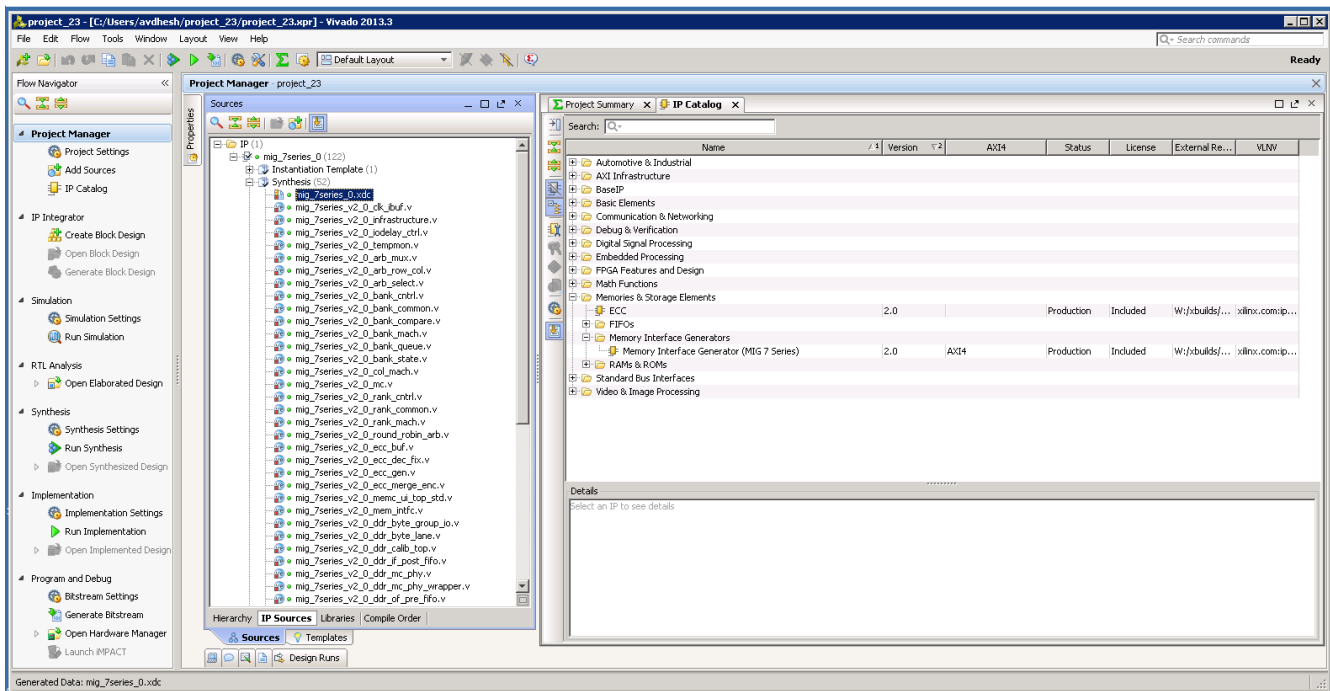


Figure 5-25: Vivado Project – RTL and Constraints Files

9. The Vivado Design Suite supports **Open IP Example Design** flow. To create the example design using this flow right-click the IP in the **Source Window**, as shown in Figure 5-26 and select.

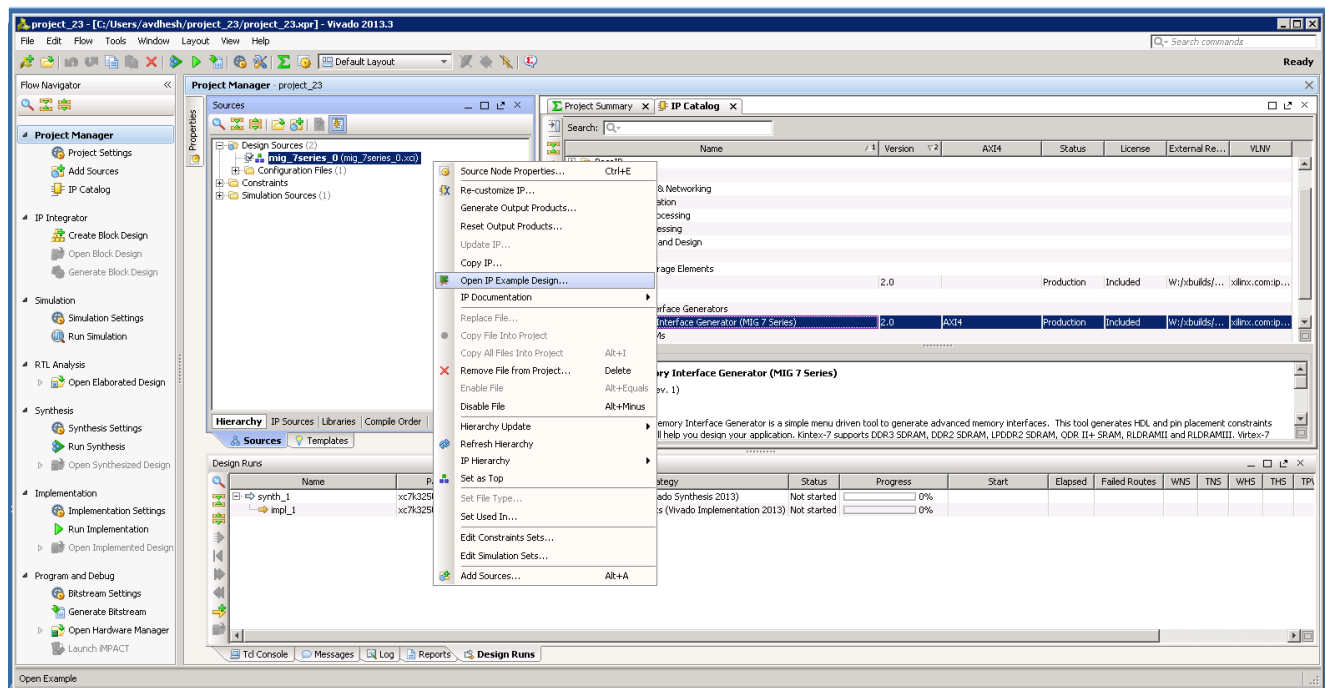


Figure 5-26: Open IP Example Design

10. This option creates a new Vivado project. Selecting the menu brings up a dialog box, which guides you to the directory for a new design project. Select a directory (or use the defaults) and click **OK**.

This launches a new Vivado project with all example design files and a copy of the IP. This project has `example_top` as the Implementation top directory, and `sim_tb_top` as the Simulation top directory, as shown in Figure 5-27.

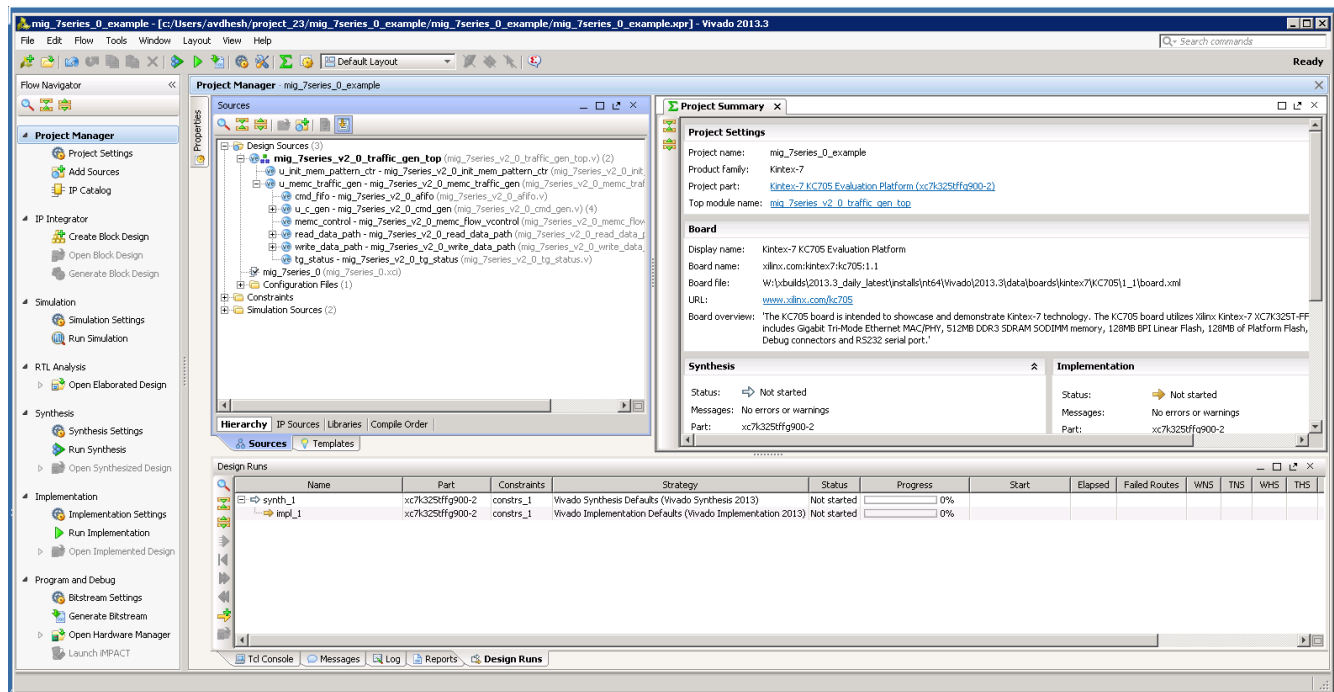


Figure 5-27: Example Design Project

- Click **Generate Bitstream** under **Project Manager > Program and Debug** to generate the BIT file for the generated design.

The `<project directory>/<project directory>.runs/ impl_1` directory includes all report files generated for the project after running the implementation. It is also possible to run the simulation in this project.

- Recustomization of the MIG IP core can be done by using the **Recustomize IP** option. It is not recommended to recustomize the IP in the `example_design` project. The correct solution is to close the `example_design` project, go back to original project and customize there. Right-click the XCI file and click **Recustomize IP** (Figure 5-28) to open the MIG GUI and regenerate the design with the preferred options.


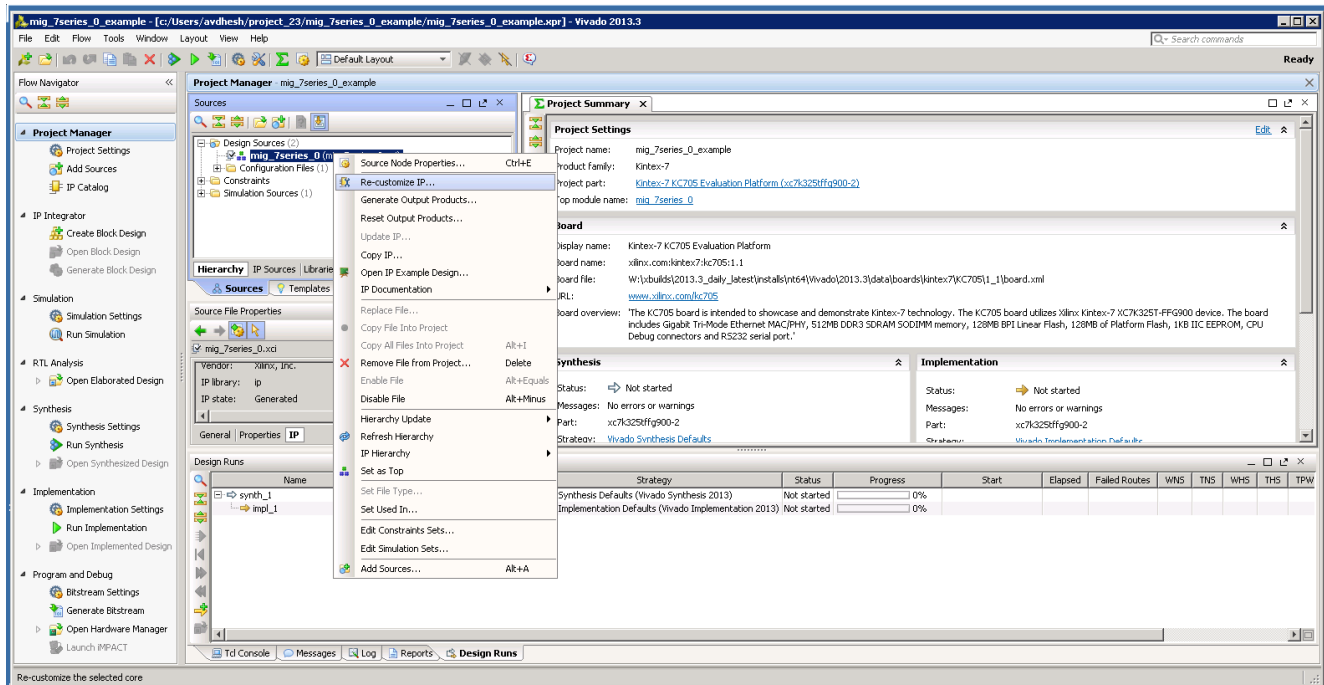


Figure 5-28: Recustomize IP

Invoking the MIG tool from the Vivado Design Suite is the same as with single controller designs. See the appropriate memory interface chapter in this document for more information. The MIG GUI pages that are different for multicontroller designs are explained in this chapter.

Directory Structure

The MIG output directory structure is slightly different for the user design RTL folder compared with the single controller design. The user design RTL folder contains the subfolders for each memory interface, and related RTL files are generated in the corresponding memory interface folders. All chosen memory interfaces for multicontroller designs are shown here.

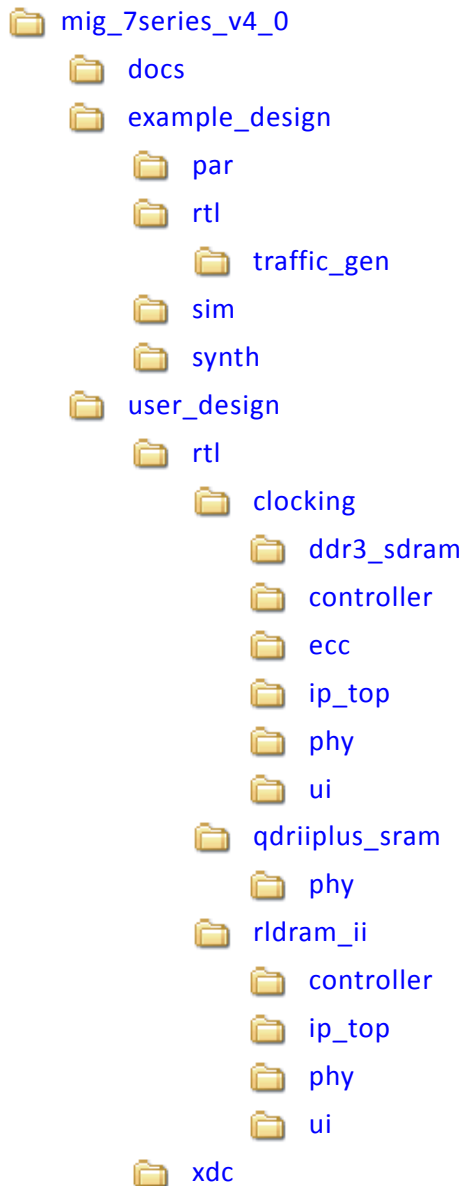

Upgrading the ISE/CORE Generator MIG Core in Vivado

To upgrade the previous version of the Memory Interface Generator (MIG) IP cores which are generated using either ISE® or CORE Generator™, tools cannot be upgraded in a direct manner similar to other IPs. Here is the process to upgrade the ISE/CORE Generator MIG core in Vivado®.

1. This requires the `mig.prj` file of the MIG core generated using ISE or CORE Generator.
2. Invoke Vivado with the same FPGA part settings that the earlier core is generated with.
3. Apply the following command in the Tcl Console of Vivado to create the IP:

```
create_ip -name mig_7series -version <latest version> -vendor xilinx.com -library ip  
-module_name <component_name>
```

For example,

```
create_ip -name mig_7series -version 4.0 -vendor xilinx.com -library ip -module_name  
mig_7series_0
```

4. Apply the following command to generate the core with the previous MIG project settings:

```
set_property CONFIG.XML_INPUT_FILE {<absolute path of the old core mig.prj>}  
[get_ips <ip_name>]
```

For example,

```
set_property CONFIG.XML_INPUT_FILE  
{/proj/mig/users/coregen_core/mig_7series_v4_0/mig.prj} [get_ips mig_7series_0]
```

5. You can see the core created in the Hierarchy.

General Memory Routing Guidelines

1. Include package delay in routing constraints when determining signal trace lengths. When minimum and maximum values are available for the package delay, use the midpoint between the minimum and maximum values.
2. DQ and DQS signals in the same byte should be routed in the same layer from FPGA to DRAM, except in the breakout areas.
3. For fly-by routing, address, command, control, and clock signals can be routed on different layers but each signal needs to be routed consistently in one layer across all DRAMs. Any signal layer switching via needs to have one ground via within a 50 mil perimeter range.
4. Ensure the memory ODT settings match transmission line impedance.
5. ck as shown in [Figure A-1](#).


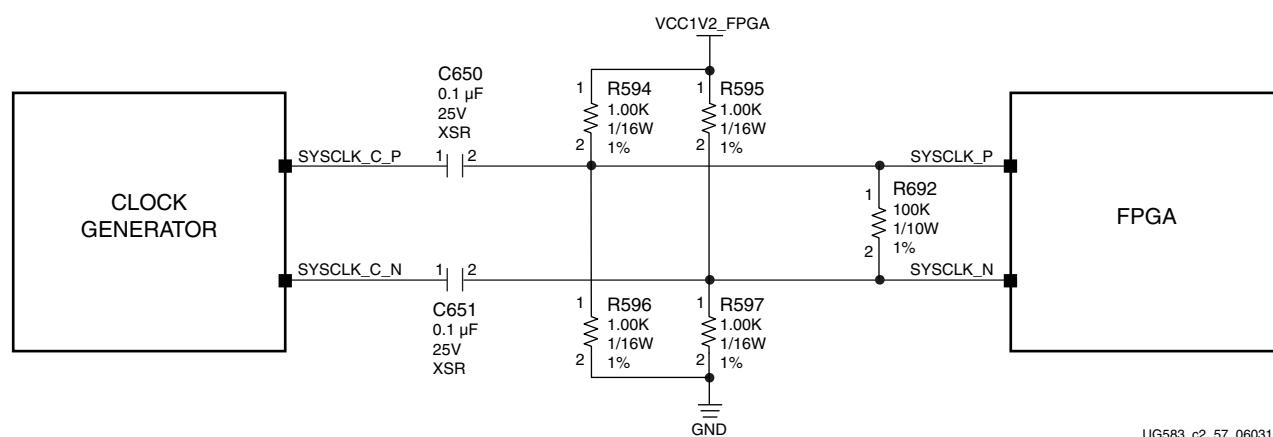


Figure A-1: System Clock

6. Signal lines must be routed over a solid reference plane. Avoid routing over voids (Figure A-2).

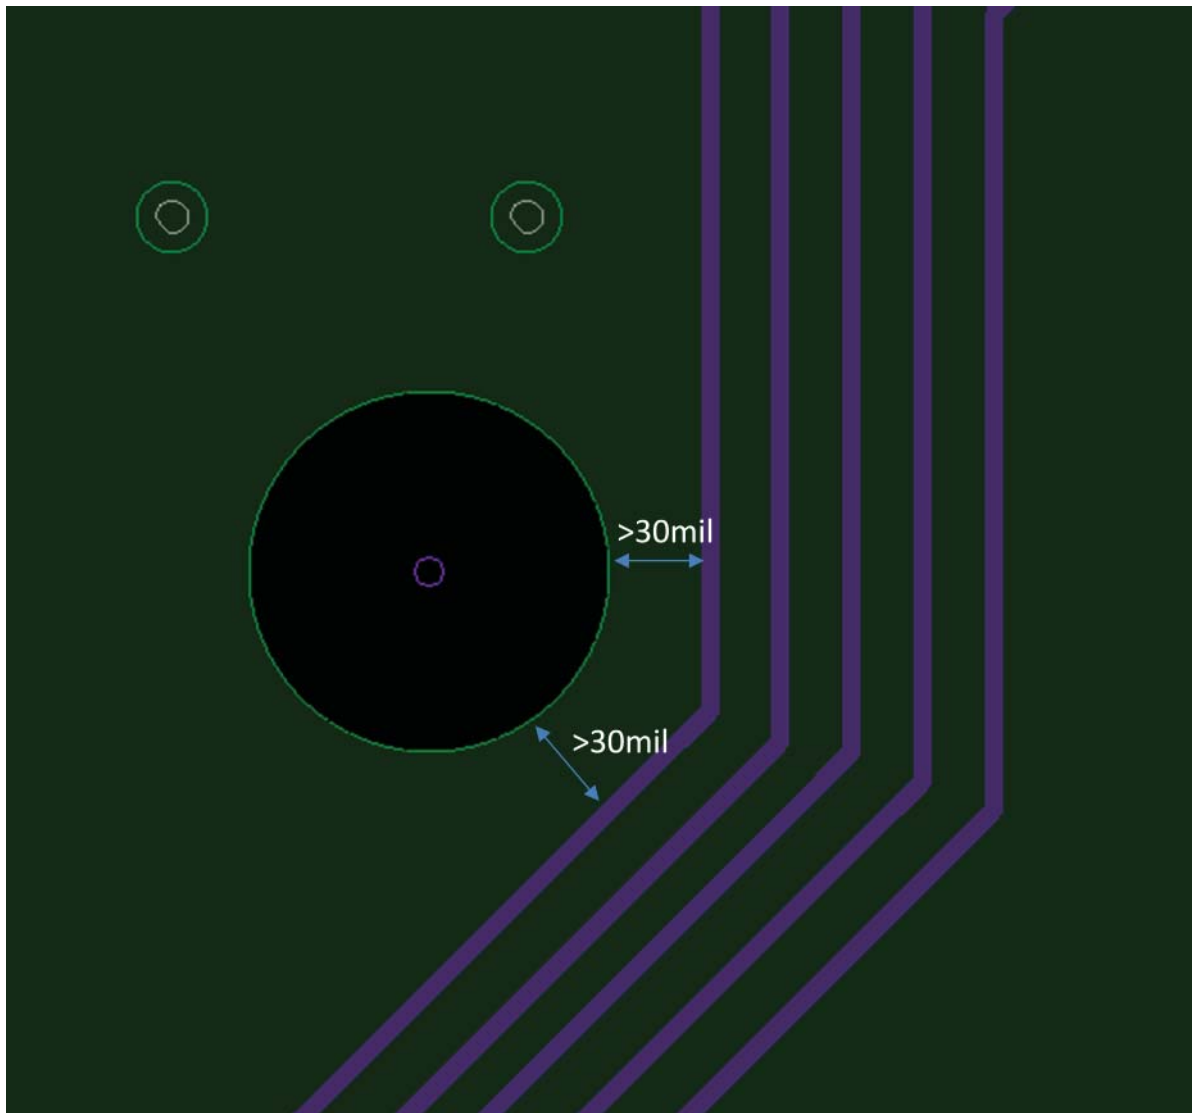

UG583_c2_13_050614

Figure A-2: Signal Routing Over Solid Reference Plane

7. Avoid routing over reference plane splits (Figure A-3).

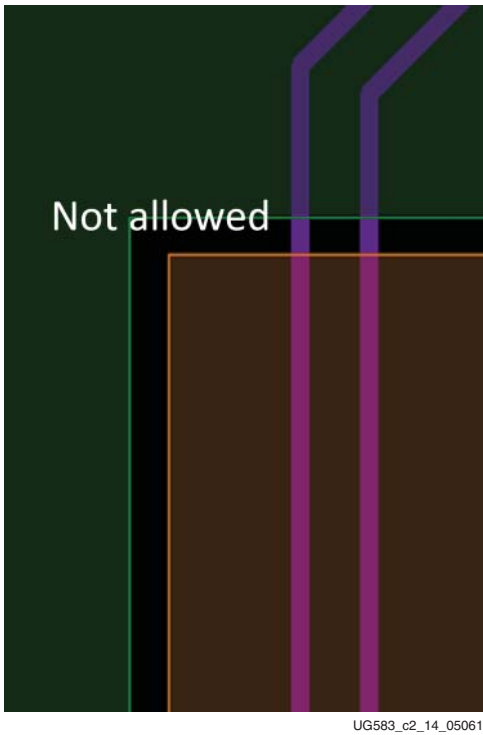


Figure A-3: Signal Routing Over Reference Plane Split

8. Keep the routing at least 30 mils away from the reference plane and void edges with the exception of breakout regions (Figure A-2).

9. In the breakout region, route signal lines in the middle of the via void aperture. Avoid routing at the edge of via voids (Figure A-4).


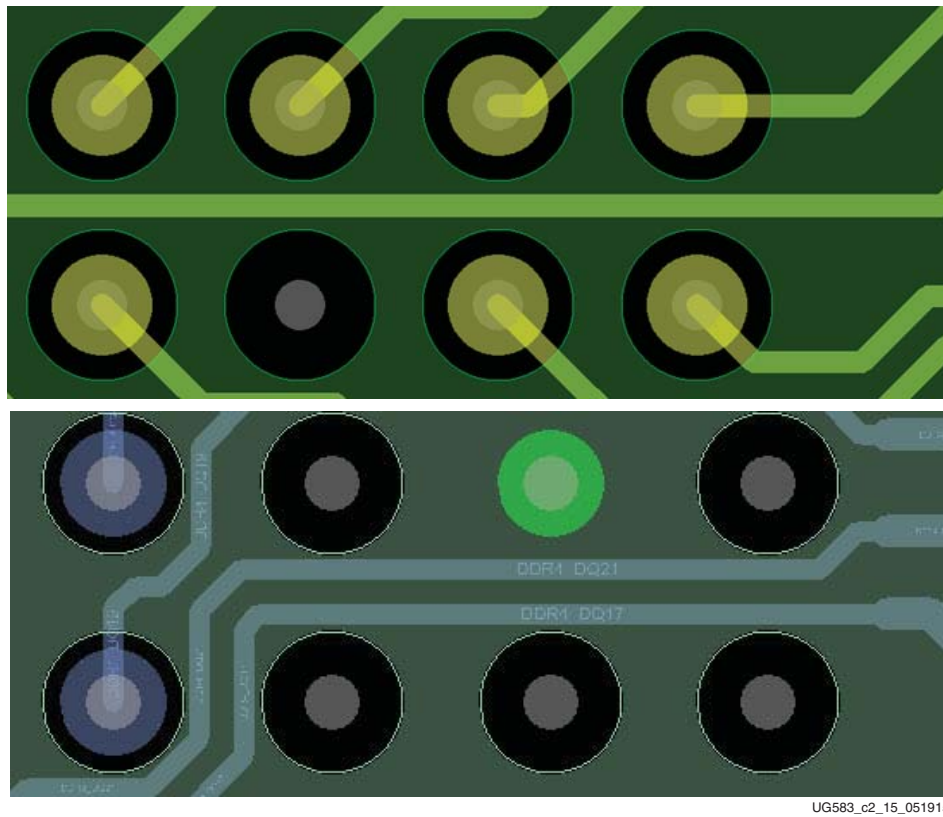


Figure A-4: Breakout Region Routing

10. Use chevron-style routing to allow for ground stitch vias (Figure A-5).

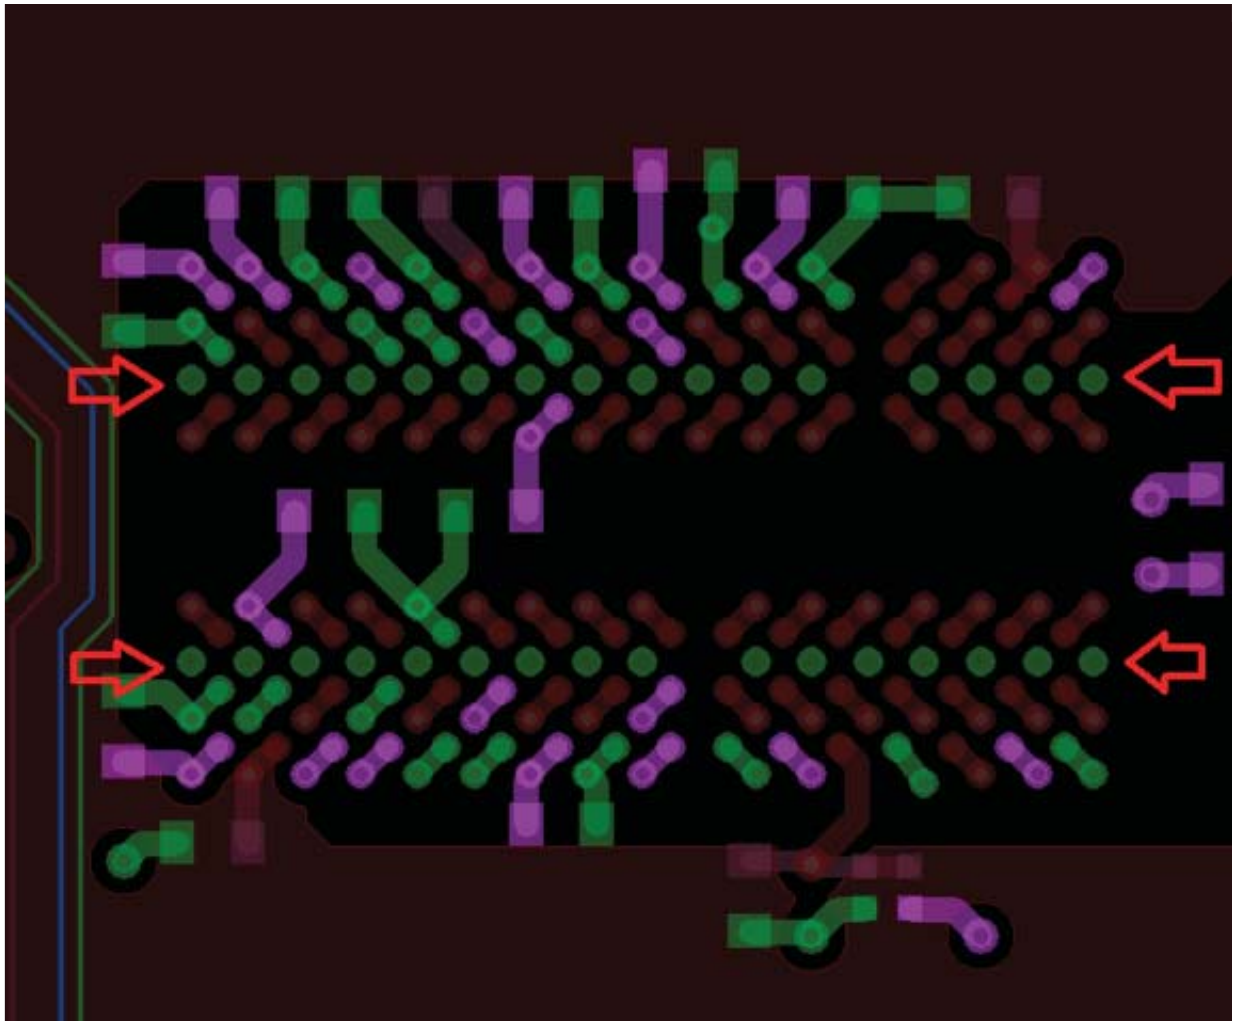

UG583_c2_16_050614

Figure A-5: Example of Ground Stitching

11. Add ground vias as much as possible around the edges of the device and inside the device to make a better ground return path for signals and power, especially corners. Corner or edge balls are generally less populated as grounds.

12. For ADDR/CMD/CTRL V_{TT} termination, every four termination resistors should be accompanied by one 1.0 μF capacitor, physically interleaving among resistors, as shown in Figure A-6.

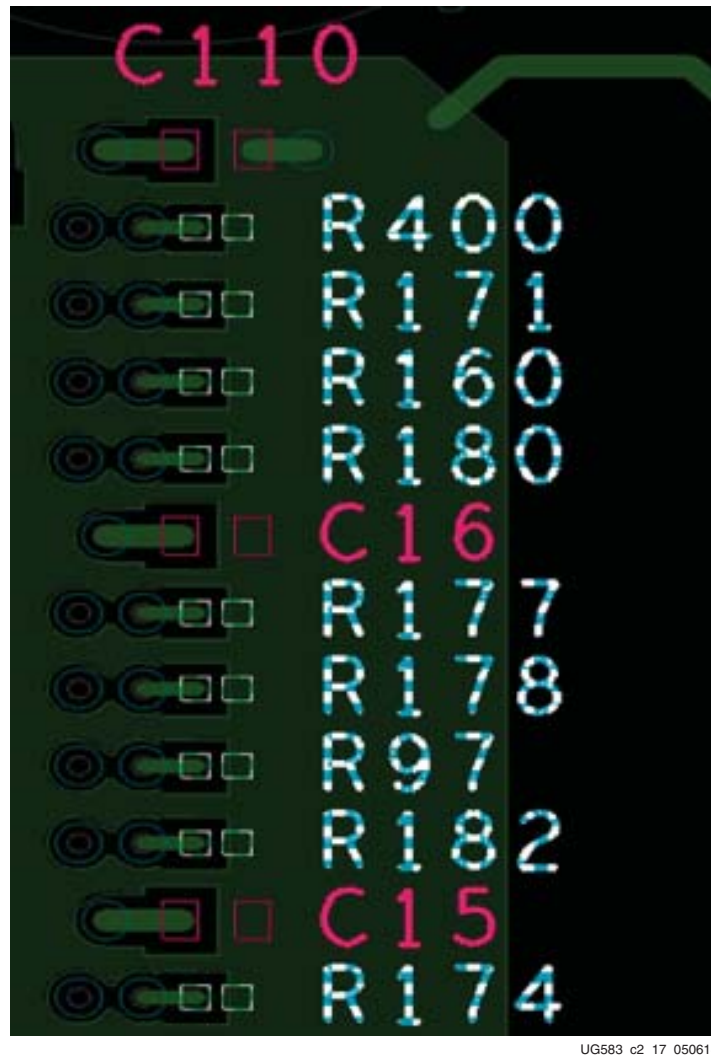


Figure A-6: Example of V_{TT} Termination Placement

13. To optimize the signal routing, the recommendation for one component placement is shown in [Figure A-7](#).


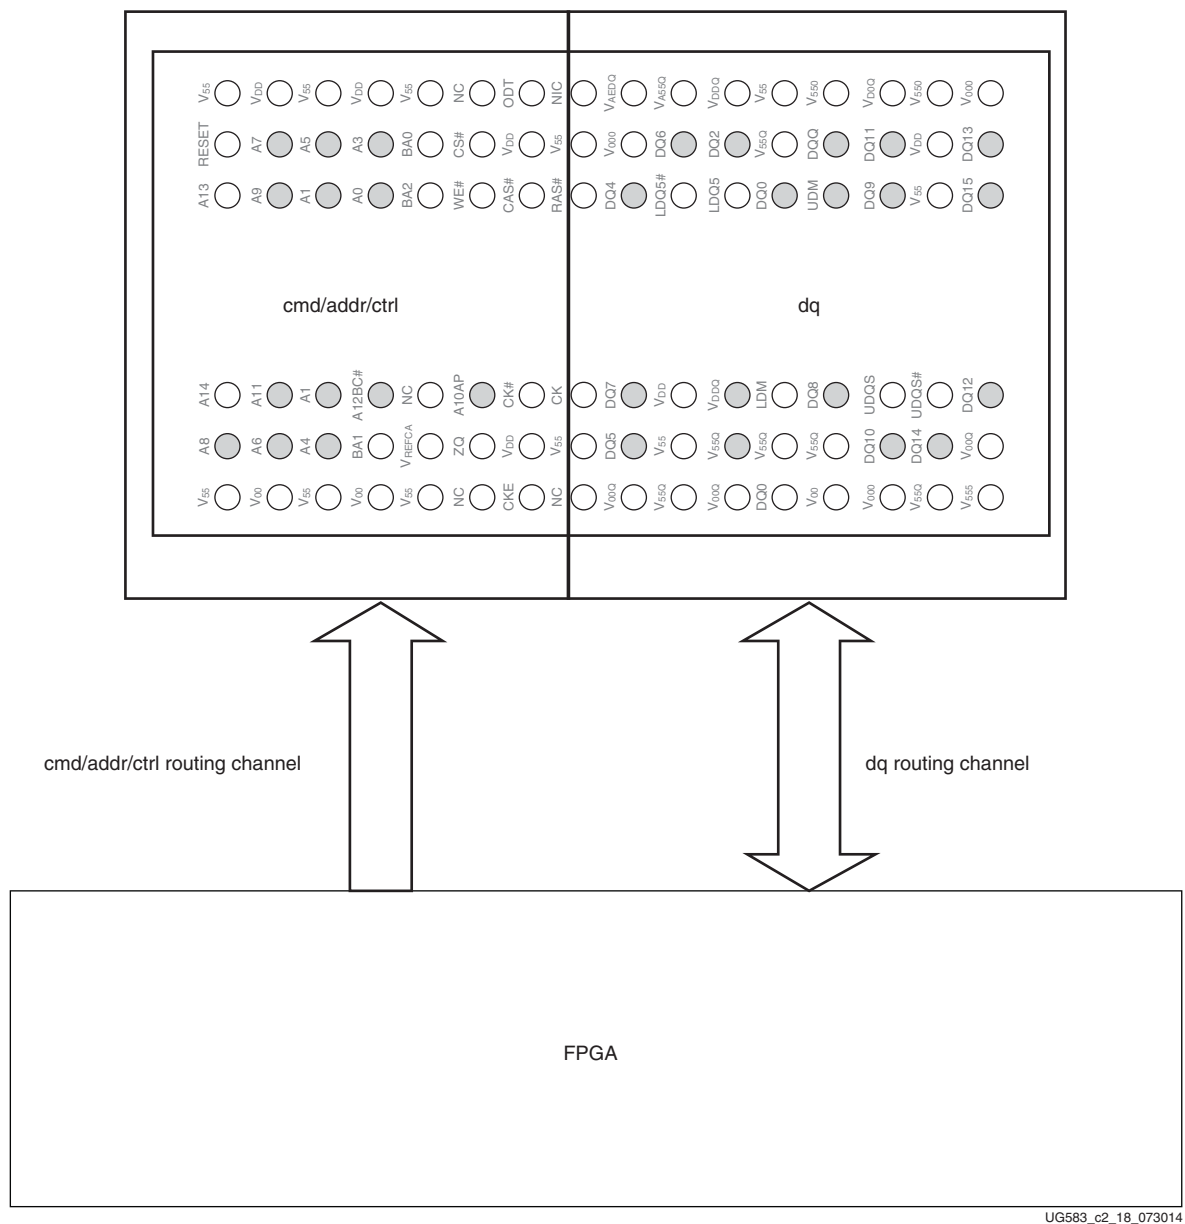


Figure A-7: Component Placement Recommendations for One Component

For five components, the recommendation is shown in [Figure A-8](#).

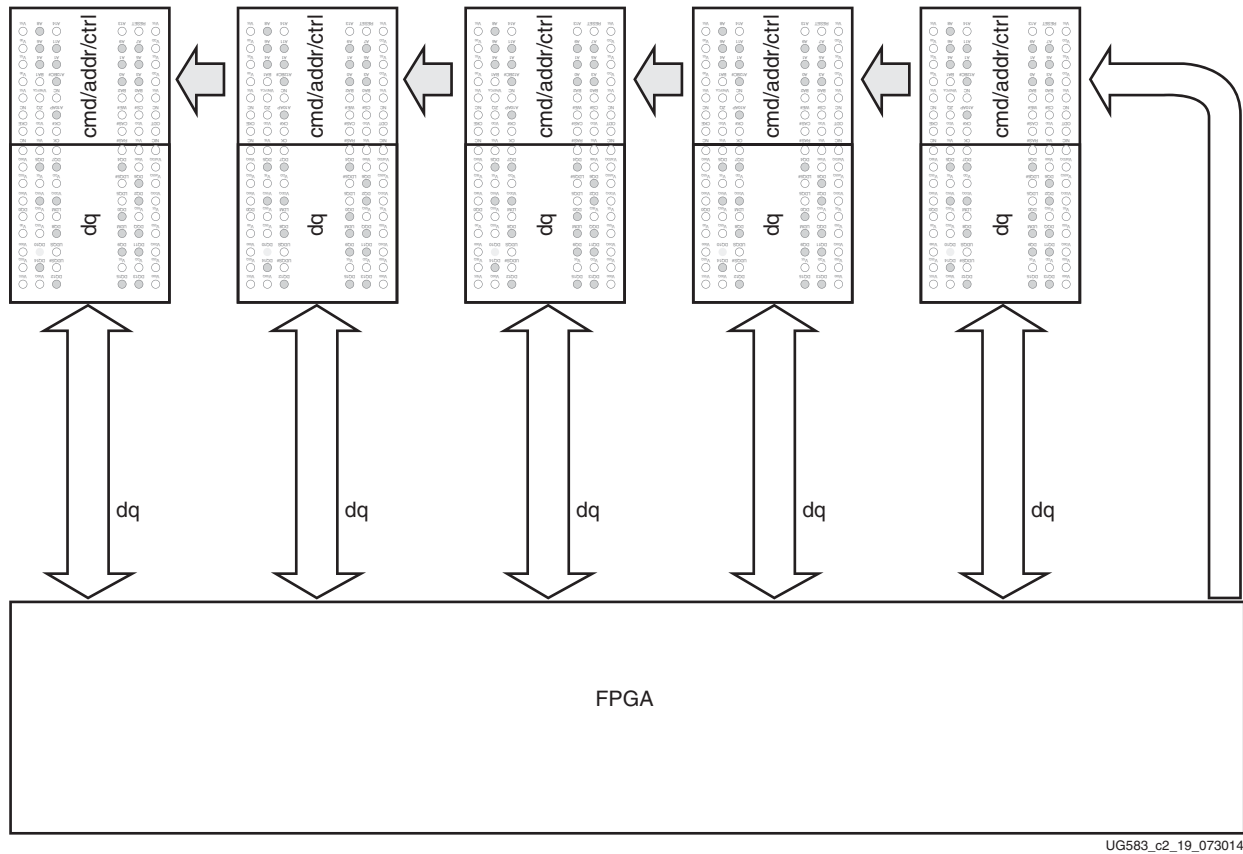

UG583_c2_19_073014

Figure A-8: Component Placement Recommendations for Five Components

Additional Resources and Legal Notices

Xilinx Resources

For support resources such as Answers, Documentation, Downloads, and Forums, see [Xilinx Support](#).

References

Unless otherwise noted, IP references are for the product documentation page. These references provide supplemental information useful for this document:

1. *Zynq-7000 All Programmable SoC and 7 Series Devices Memory Interface Solutions Data Sheet* ([DS176](#))
2. *7 Series FPGAs SelectIO™ Resources User Guide* ([UG471](#))
3. *7 Series FPGAs Packaging and Pinout Specification* ([UG475](#))
4. [ARM® AMBA® Specifications](#)
5. *Vivado® Design Suite User Guide: Hierarchical Design* ([UG905](#))
6. *Vivado Design Suite Tutorial: Hierarchical Design* ([UG946](#))
7. *Vivado Design Suite User Guide: Designing with IP* ([UG896](#))
8. *Vivado Design Suite User Guide: Logic Simulation* ([UG900](#))
9. *Embedded System Tools Reference Manual* ([UG111](#))
10. *7 Series FPGAs Clocking Resources User Guide* ([UG472](#))
11. *XADC Wizard v2.4 LogiCORE IP Product Guide* ([PG091](#))
12. *7 Series FPGAs PCB Design and Pin Planning Guide* ([UG483](#))
13. [7 Series FPGAs Data Sheets](#)
14. *DDR2-533 Memory Design Guide For Two-DIMM Unbuffered Systems*. Micron Technology, Inc., ([TN-47-01](#))
15. *Xilinx Timing Constraints User Guide* ([UG612](#))

16. *Vivado Design Suite User Guide: Programming and Debugging* ([UG908](#))
 17. *Command Line Tools User Guide, COMPLIB* ([UG628](#))
 18. *Synthesis and Simulation Design Guide* ([UG626](#))
 19. [PlanAhead™ Design Analysis tool](#)
 20. *Virtex®-5 FPGA ML561 Memory Interfaces Development Board User Guide* ([UG199](#))
 21. JESD79-3E, *DDR3 SDRAM Standard*, JEDEC® Solid State Technology Association
 22. "Improving DDR SDRAM Efficiency with a Reordering Controller", XCELL Journal Issue 69
 23. *AXI Multi-Ported Memory Controller* ([XAPP739](#))
 24. *ISE® to Vivado Design Suite Migration Guide* ([UG911](#))
-

Please Read: Important Legal Notices

The information disclosed to you hereunder (the "Materials") is provided solely for the selection and use of Xilinx products. To the maximum extent permitted by applicable law: (1) Materials are made available "AS IS" and with all faults, Xilinx hereby DISCLAIMS ALL WARRANTIES AND CONDITIONS, EXPRESS, IMPLIED, OR STATUTORY, INCLUDING BUT NOT LIMITED TO WARRANTIES OF MERCHANTABILITY, NON-INFRINGEMENT, OR FITNESS FOR ANY PARTICULAR PURPOSE; and (2) Xilinx shall not be liable (whether in contract or tort, including negligence, or under any other theory of liability) for any loss or damage of any kind or nature related to, arising under, or in connection with, the Materials (including your use of the Materials), including for any direct, indirect, special, incidental, or consequential loss or damage (including loss of data, profits, goodwill, or any type of loss or damage suffered as a result of any action brought by a third party) even if such damage or loss was reasonably foreseeable or Xilinx had been advised of the possibility of the same. Xilinx assumes no obligation to correct any errors contained in the Materials or to notify you of updates to the Materials or to product specifications. You may not reproduce, modify, distribute, or publicly display the Materials without prior written consent. Certain products are subject to the terms and conditions of Xilinx's limited warranty, please refer to Xilinx's Terms of Sale which can be viewed at <http://www.xilinx.com/legal.htm#tos>; IP cores may be subject to warranty and support terms contained in a license issued to you by Xilinx. Xilinx products are not designed or intended to be fail-safe or for use in any application requiring fail-safe performance; you assume sole risk and liability for use of Xilinx products in such critical applications, please refer to Xilinx's Terms of Sale which can be viewed at <http://www.xilinx.com/legal.htm#tos>.

© Copyright 2011–2016 Xilinx, Inc. Xilinx, the Xilinx logo, Artix, ISE, Kintex, Spartan, Virtex, Vivado, Zynq, and other designated brands included herein are trademarks of Xilinx in the United States and other countries. AMBA, AMBA Designer, ARM, ARM1176JZ-S, CoreSight, Cortex, and PrimeCell are trademarks of ARM in the EU and other countries. All other trademarks are the property of their respective owners.